

SHOP MANUAL

FORD

SERIES 1000-1600

Tractor serial number and engine serial number are stamped on vehicle identification plate located on left side of clutch housing.

INDEX (By Starting Paragraph)

BRAKES	
Adjust	63
R&R and Overhaul	64
CLUTCH	
Adjust	46
Clutch Shaft	50
R&R and Overhaul	48
COOLING SYSTEM	
Radiator	41
Thermostat	40
Water pump	42
DIESEL FUEL SYSTEM	
Filters	27
Glow Plugs	39
Injection Pump	29, 30
Injection Pump Drive Gear	28
Nozzles	32
DIFFERENTIAL	
Adjustment	57
Overhaul	58
Remove and Reinstall	56
DIFFERENTIAL LOCK	59
ELECTRICAL SYSTEM	
Alternator	43
Regulator	44
Starter	45
ENGINE	
Cam Followers	24
Camshaft, Bearings and Tappets	24
Connecting Rods and Bearings	21
Connecting Rod and Piston Removal	17
Crankshaft and Bearings	22
Cylinder Head	7
Engine Removal	6
Injection Timing	29
ENGINE CONT.	
Main Bearings	22
Oil Pressure Relief Valve	26
Oil Pump	25
Pistons and Cylinders	19
Piston Pins	20
Piston Rings	18
Rocker Arms	11
Timing Gear Cover	12
Timing Gears	13
Valves and Seats	8
Valve Guides	9
Valve Springs	10
Valve Clearance Adjustment	11A
Valve Timing	14, 15, 16
FINAL DRIVE	
Overhaul	61, 62
Remove and Reinstall	60
FRONT SYSTEM	
Axle	1
Front Support	4
Steering Gear	5
Steering Knuckles	3
Tie Rods and Toe-in	2
HYDRAULIC SYSTEM	
Adjustment	69, 70, 71
Control Valve	75, 76
Lubrication	66
Pump	72, 73
Lift Cover and Rockshaft	78, 79
POWER TAKE-OFF	65
TRANSMISSION	
Overhaul	54
Remove and Reinstall	51