

# Focus Wiring Diagrams

## Table of Contents

### Group 1 – General Information

#### General Information

|                         |             |
|-------------------------|-------------|
| Table of Contents       | 100-00-00-1 |
| Systems Overview        | 100-00-01-1 |
| Index                   | 100-00-02-1 |
| Introduction            | 100-00-03-1 |
| Symbols                 | 100-00-04-1 |
| Wiring Harness Overview | 100-00-06-1 |

### Group 2 – Chassis

#### Brake System

|                                      |              |
|--------------------------------------|--------------|
| Anti-Lock Control                    | 206-09A-00-1 |
| Anti-Lock Control – Stability Assist | 206-09C-00-1 |

#### Steering System

|                |             |
|----------------|-------------|
| Power Steering | 211-02-00-1 |
|----------------|-------------|

### Group 3 – Powertrain

#### Engine

|                                                             |              |
|-------------------------------------------------------------|--------------|
| Engine Cooling – 1.6L (Z6)                                  | 303-03A-00-1 |
| Engine Cooling – 1.8/2.0L Duratec-HE (MI4)                  | 303-03B-00-1 |
| Engine Cooling – 2.0L Duratorq-TDCi (DW) Diesel             | 303-03C-00-1 |
| Fuel Charging and Controls – 1.6L (Z6)                      | 303-04A-00-1 |
| Fuel Charging and Controls – 1.8/2.0L Duratec-HE (MI4)      | 303-04B-00-1 |
| Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel | 303-04C-00-1 |
| Starting System – 1.6L (Z6)                                 | 303-06A-00-1 |
| Starting System – 1.8/2.0L Duratec-HE (MI4)                 | 303-06B-00-1 |
| Starting System – 2.0L Duratorq-TDCi (DW) Diesel            | 303-06C-00-1 |
| Engine Ignition – 1.6L (Z6)                                 | 303-07A-00-1 |
| Engine Ignition – 1.8/2.0L Duratec-HE (MI4)                 | 303-07B-00-1 |
| Glow Plug System – 2.0L Duratorq-TDCi (DW) Diesel           | 303-07C-00-1 |

|                                                             |              |
|-------------------------------------------------------------|--------------|
| Electronic Engine Controls – 1.6L (Z6)                      | 303-14A-00-1 |
| Electronic Engine Controls – 1.8/2.0L Duratec-HE (MI4)      | 303-14B-00-1 |
| Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel | 303-14C-00-1 |
| Automatic Transmission                                      | 307-01-00-1  |
| Manual Transmission – manual transmission (MPS6)            | 308-00-00-1  |
| Speed Control                                               | 310-03-00-1  |

### Group 4 – Electrical

#### Climate Control System

|                                 |              |
|---------------------------------|--------------|
| Heating and Ventilation         | 412-02A-00-1 |
| Air Conditioning – without EATC | 412-03-00-1  |
| Air Conditioning – with EATC    | 412-03-00-6  |

#### Instrumentation and Warning Systems

|                                                          |              |
|----------------------------------------------------------|--------------|
| Instrument Cluster and Panel Illumination                | 413-00-00-1  |
| Instrument Cluster                                       | 413-01-00-1  |
| Horn                                                     | 413-06-00-1  |
| Clock                                                    | 413-07-00-1  |
| Parking Aid                                              | 413-13-00-1  |
| Generator and Regulator – 1.6L (Z6)                      | 414-02A-00-1 |
| Generator and Regulator – 1.8/2.0L Duratec-HE (MI4)      | 414-02B-00-1 |
| Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel | 414-02C-00-1 |

#### Audio Systems

|            |             |
|------------|-------------|
| Audio Unit | 415-01-00-1 |
| Speakers   | 415-03-00-1 |

#### Lighting

|                                                |              |
|------------------------------------------------|--------------|
| Exterior Lighting – Headlamps                  | 417-01-00-1  |
| Exterior Lighting – Headlamp leveling          | 417-01-00-3  |
| Exterior Lighting – Stop Lamps                 | 417-01-00-9  |
| Exterior Lighting – Turn Signal Lamps          | 417-01-00-13 |
| Exterior Lighting – Position and Parking Lamps | 417-01-00-21 |
| Exterior Lighting – Licence plate illumination | 417-01-00-23 |
| Exterior Lighting – Fog lamps                  | 417-01-00-25 |

|                                     |              |
|-------------------------------------|--------------|
| Exterior Lighting – Reversing lamps | 417-01-00-27 |
| Interior Lighting                   | 417-02-00-1  |

**Electrical Distribution**

|                               |             |
|-------------------------------|-------------|
| Module Communications Network | 418-00-00-1 |
|-------------------------------|-------------|

**Electronic Feature Group**

|                                             |              |
|---------------------------------------------|--------------|
| Anti-Theft – Active                         | 419-01A-00-1 |
| Anti-Theft – Passive                        | 419-01B-00-1 |
| Multifunction Electronic Control<br>Modules | 419-10-00-1  |

|                          |
|--------------------------|
| Group 5 – Body and Paint |
|--------------------------|

**Chassis**

|                                                                  |              |
|------------------------------------------------------------------|--------------|
| Rear View Mirrors                                                | 501-09-00-1  |
| Seating                                                          | 501-10-00-1  |
| Glass, Frames and Mechanisms – with front power windows          | 501-11-00-1  |
| Glass, Frames and Mechanisms – with front and rear power windows | 501-11-00-3  |
| Glass, Frames and Mechanisms – Heated rear window                | 501-11-00-19 |

|                                                                  |              |
|------------------------------------------------------------------|--------------|
| Glass, Frames and Mechanisms – Heated power mirrors              | 501-11-00-21 |
| Instrument Panel and Console                                     | 501-12-00-1  |
| Handles, Locks, Latches and Entry Systems – with central locking | 501-14-00-1  |
| Handles, Locks, Latches and Entry Systems – with double locking  | 501-14-00-21 |
| Wipers and Washers                                               | 501-16-00-1  |
| Roof Opening Panel                                               | 501-17-00-1  |
| Safety Belt System                                               | 501-20A-00-1 |
| Supplemental Restraint System                                    | 501-20B-00-1 |

|                                      |
|--------------------------------------|
| Group 7 – General Wiring Information |
|--------------------------------------|

|                            |             |
|----------------------------|-------------|
| Fuse and Relay Information | 700-01-00-1 |
| Power Distribution         | 700-02-00-1 |
| Fuse Details               | 700-03-00-1 |
| Ground Distribution        | 700-04-00-1 |
| Component Location Charts  | 700-05-00-1 |
| Component Location Views   | 700-06-00-1 |
| Connector Views            | 700-07-00-1 |

The illustrations, technical information, data and descriptive text in this issue, to the best of our knowledge, were correct at the time of going to print. The right to make changes at any time, without notice, is reserved as part of Ford's policy of continuous development and improvement.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

Published by Ford Motor Company Ltd/Ford Werke AG.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, photocopying, recording, translating or by other means without prior written permission of Ford Motor Company Ltd/Ford Werke AG.

© Ford Motor Company Ltd/Ford Werke AG 2004

# Systems Overview

02/2008  
100-00-01-1  
2008.25  
Focus

Engine Cooling – 1.6L (Z6)  
303-03A-00-1

Engine Cooling – 1.8/2.0L Duratec-HE (MI4)  
303-03B-00-1

Engine Cooling – 2.0L Duratorq-TDCi (DW) Diesel  
303-03C-00-1

Fuel Charging and Controls – 1.6L (Z6)  
303-04A-00-1

Fuel Charging and Controls – 1.8/2.0L Duratec-HE (MI4)  
303-04B-00-1

Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel  
303-04C-00-1

Starting System – 1.6L (Z6)  
303-06A-00-1

Starting System – 1.8/2.0L Duratec-HE (MI4)  
303-06B-00-1

Starting System – 2.0L Duratorq-TDCi (DW) Diesel  
303-06C-00-1

Engine Ignition – 1.6L (Z6)  
303-07A-00-1

Engine Ignition – 1.8/2.0L Duratec-HE (MI4)  
303-07B-00-1

Glow Plug System – 2.0L Duratorq-TDCi (DW) Diesel  
303-07C-00-1

Wipers and Washers  
501-16-00-1

Electronic Engine Controls – 1.6L (Z6)  
303-14A-00-1

Electronic Engine Controls – 1.8/2.0L Duratec-HE (MI4)  
303-14B-00-1

Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel  
303-14C-00-1

Automatic Transmission  
307-01-00-1

Manual Transmission – manual transmission (MPS6)  
308-00-00-1

Speed Control  
310-03-00-1

Generator and Regulator  
414-02A-00-1

Generator and Regulator – 1.8/2.0L Duratec-HE (MI4)  
414-02B-00-1

Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel  
414-02C-00-1

Parking Aid  
413-13-00-1

Exterior Lighting – Fog lamps  
417-01-00-25

Exterior Lighting – Headlamps  
417-01-00-1

Exterior Lighting – Headlamp leveling  
417-01-00-3

Exterior Lighting – Turn Signal Lamps  
417-01-00-13

Exterior Lighting – Position and Parking Lamps  
417-01-00-21

Heating and Ventilation  
412-02A-00-1

Air Conditioning – without EATC  
412-03-00-1

Air Conditioning – with EATC  
412-03-00-6

Instrument Cluster and Panel Illumination  
413-00-00-1

Instrument Cluster  
413-01-00-1

Horn  
413-06-00-1

Clock  
413-07-00-1

Audio Unit  
415-01-00-1

Speakers  
415-03-00-1

Module Communications Network  
418-00-00-1

Anti-Theft – Active  
419-01A-00-1

Anti-Theft – Passive  
419-01B-00-1

Multifunction Electronic Control Modules  
419-10-00-1

Instrument Panel and Console  
501-12-00-1

Safety Belt System  
501-20A-00-1

Supplemental Restraint System  
501-20B-00-1

Interior Lighting  
417-02-00-1

Roof Opening Panel  
501-17-00-1

Glass, Frames and Mechanisms – Heated rear window  
501-11-00-19

Rear View Mirrors  
501-09-00-1

Glass, Frames and Mechanisms – Heated power mirrors  
501-11-00-3

Anti-Lock Control  
206-09A-00-1

Anti-Lock Control – Stability Assist  
206-09C-00-1

Power Steering  
211-02-00-1

Exterior Lighting – Stop Lamps  
417-01-00-9

Exterior Lighting – Turn Signal Lamps  
417-01-00-13

Exterior Lighting – Position and Parking Lamps  
417-01-00-21

Exterior Lighting – Licence plate illumination  
417-01-00-23

Exterior Lighting – Fog lamps  
417-01-00-25

Exterior Lighting – Reversing lamps  
417-01-00-27

Parking Aid  
413-13-00-1


Seating  
501-10-00-1

Glass, Frames and Mechanisms – with front power windows  
501-11-00-1

Glass, Frames and Mechanisms – with front and rear power windows  
501-11-00-3

Handles, Locks, Latches and Entry Systems – with central locking  
501-14-00-1

Handles, Locks, Latches and Entry Systems – with double locking  
501-14-00-21

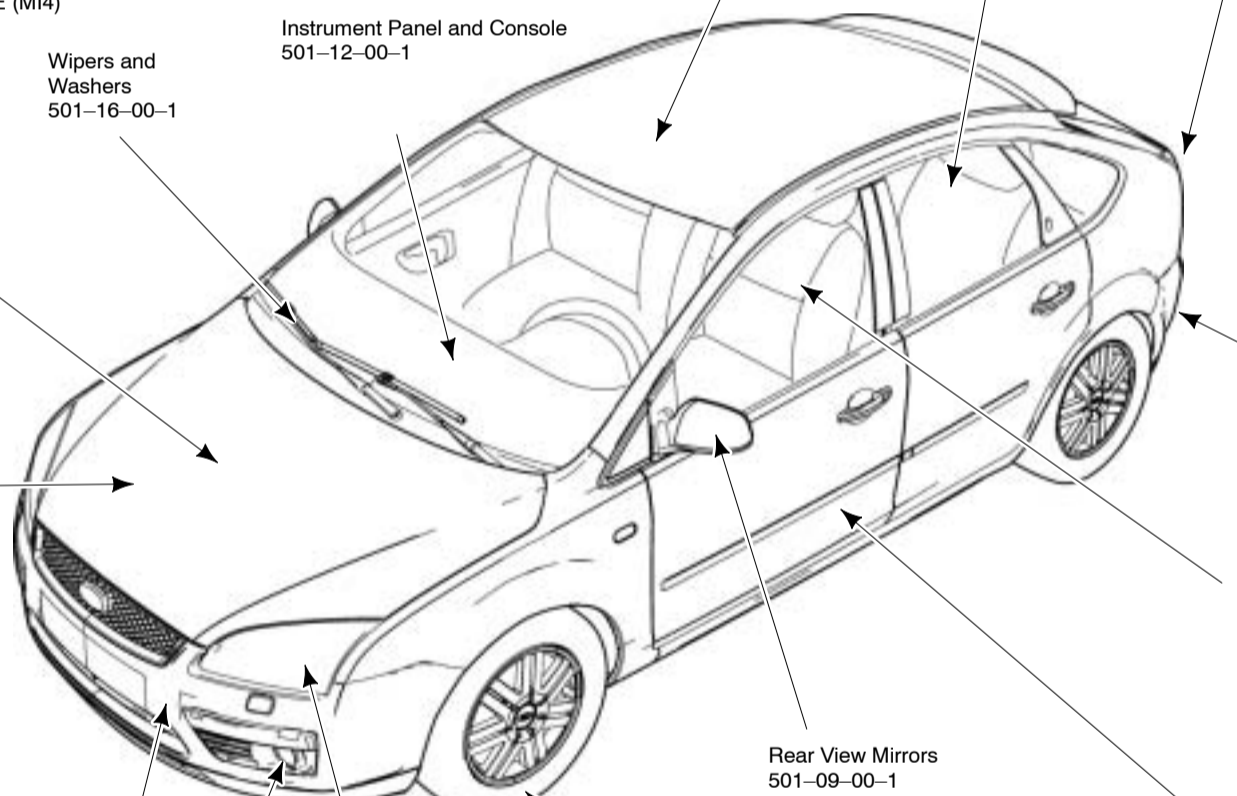

|                                                 |               |
|-------------------------------------------------|---------------|
| A/C Compressor clutch, Y16 .....                | 412-03-00-14  |
| A/C Compressor clutch, Y16 .....                | 412-03-00-15  |
| A/C Compressor clutch, Y16 .....                | 412-03-00-16  |
| A/C Compressor clutch, Y16 .....                | 412-03-00-17  |
| A/C Compressor clutch, Y16 .....                | 412-03-00-3   |
| A/C Compressor clutch, Y16 .....                | 412-03-00-4   |
| A/C Compressor clutch, Y16 .....                | 412-03-00-5   |
| A/C Compressor clutch, Y16 .....                | 412-03-00-6   |
| A/C high-pressure switch, N126 .....            | 412-03-00-16  |
| A/C high-pressure switch, N126 .....            | 412-03-00-5   |
| A/C low-pressure switch, N246 .....             | 412-03-00-14  |
| A/C low-pressure switch, N246 .....             | 412-03-00-15  |
| A/C low-pressure switch, N246 .....             | 412-03-00-16  |
| A/C low-pressure switch, N246 .....             | 412-03-00-17  |
| A/C low-pressure switch, N246 .....             | 412-03-00-3   |
| A/C low-pressure switch, N246 .....             | 412-03-00-4   |
| A/C low-pressure switch, N246 .....             | 412-03-00-5   |
| A/C low-pressure switch, N246 .....             | 412-03-00-6   |
| A/C pressure sensor, B308 .....                 | 303-03A-00-1  |
| A/C pressure sensor, B308 .....                 | 303-03B-00-1  |
| A/C pressure sensor, B308 .....                 | 303-03B-00-2  |
| A/C pressure sensor, B308 .....                 | 303-03C-00-2  |
| A/C pressure sensor, B308 .....                 | 303-14A-00-5  |
| A/C pressure sensor, B308 .....                 | 303-14B-00-2  |
| A/C pressure sensor, B308 .....                 | 303-14B-00-8  |
| A/C pressure sensor, B308 .....                 | 412-03-00-14  |
| A/C pressure sensor, B308 .....                 | 412-03-00-15  |
| A/C pressure sensor, B308 .....                 | 412-03-00-17  |
| A/C pressure sensor, B308 .....                 | 412-03-00-3   |
| A/C pressure sensor, B308 .....                 | 412-03-00-4   |
| A/C pressure sensor, B308 .....                 | 412-03-00-6   |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-14  |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-15  |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-16  |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-17  |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-3   |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-4   |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-5   |
| A/C Wide Open Throttle (WOT) relay, K32 .....   | 412-03-00-6   |
| ABS module, A7 .....                            | 206-09A-00-1  |
| Accelerator pedal position sensor, B129 .....   | 303-14B-00-12 |
| Accelerator pedal position sensor, B129 .....   | 303-14B-00-6  |
| Accelerator pedal position sensor, B129 .....   | 303-14C-00-16 |
| Accelerator pedal position sensor, B129 .....   | 303-14C-00-7  |
| Adaptive front lighting module, A379 .....      | 417-01-00-4   |
| Adaptive front lighting module, A379 .....      | 417-01-00-6   |
| Air Conditioning – with EATC .....              | 412-03-00-6   |
| Air Conditioning – without EATC .....           | 412-03-00-1   |
| Air temperature door motor, LH side, M100 ..... | 412-03-00-11  |

|                                                |               |
|------------------------------------------------|---------------|
| Air temperature door motor, RH side, M101      | 412-03-00-11  |
| Antenna, A151                                  | 413-07-00-1   |
| Antenna, A151                                  | 413-07-00-2   |
| Antenna, A151                                  | 415-01-00-1   |
| Antenna, A151                                  | 415-01-00-6   |
| Antenna, A151                                  | 415-01-00-7   |
| Anti-Lock Control                              | 206-09A-00-1  |
| Anti-Lock Control – Stability Assist           | 206-09C-00-1  |
| Anti-Theft – Active                            | 419-01A-00-1  |
| Anti-Theft – Passive                           | 419-01B-00-1  |
| Anti-theft alarm horn, H5                      | 419-01A-00-1  |
| Audio Unit                                     | 415-01-00-1   |
| Automatic Transmission                         | 307-01-00-1   |
| Auxiliary IN, D81                              | 415-01-00-4   |
| Auxiliary IN, D81                              | 415-01-00-5   |
| Auxiliary IN, D81                              | 415-01-00-6   |
| Auxiliary IN, D81                              | 415-01-00-7   |
| Barometric Absolute Pressure (BAP) sensor, B70 | 303-14A-00-5  |
| Battery Junction Box (BJB), P93                | 412-03-00-3   |
| Battery Junction Box (BJB), P93                | 412-03-00-4   |
| Battery Junction Box (BJB), P93                | 412-03-00-5   |
| Battery Junction Box (BJB), P93                | 412-03-00-6   |
| Battery Junction Box (BJB), P93                | 700-02-00-1   |
| Battery Junction Box (BJB), P93                | 700-03-00-1   |
| Battery, O1                                    | 414-02B-00-1  |
| Battery, O1                                    | 414-02B-00-2  |
| Battery, O1                                    | 414-02C-00-1  |
| Battery, O1                                    | 700-02-00-1   |
| Battery, O1                                    | 700-04-00-1   |
| Blower motor relay, K14                        | 412-02A-00-1  |
| Blower motor relay, K14                        | 412-03-00-1   |
| Blower motor relay, K14                        | 412-03-00-8   |
| Blower motor resistor, R21                     | 412-02A-00-1  |
| Blower motor resistor, R21                     | 412-03-00-1   |
| Blower motor, M3                               | 412-02A-00-1  |
| Blower motor, M3                               | 412-03-00-1   |
| Blower motor, M3                               | 412-03-00-8   |
| Boost pressure sensor, B108                    | 303-14C-00-14 |
| Boost pressure sensor, B108                    | 303-14C-00-5  |
| Brake fluid level switch, N1                   | 413-01-00-2   |
| Brake pedal position switch, N82               | 206-09A-00-1  |
| Brake pedal position switch, N82               | 206-09C-00-1  |
| Brake pedal position switch, N82               | 310-03-00-2   |
| Brake pedal position switch, N82               | 413-01-00-11  |
| Brake pedal position switch, N82               | 413-01-00-12  |
| Brake pressure switch, N249                    | 308-00-00-2   |
| Buzzer, H9                                     | 413-13-00-1   |
| Buzzer, H9                                     | 413-13-00-2   |
| Camshaft position sensor, B41                  | 303-07A-00-1  |

|                                                                             |               |
|-----------------------------------------------------------------------------|---------------|
| Camshaft position sensor, B41 .....                                         | 303-07B-00-1  |
| Camshaft position sensor, B41 .....                                         | 303-14A-00-3  |
| Camshaft position sensor, B41 .....                                         | 303-14C-00-15 |
| Camshaft position sensor, B41 .....                                         | 303-14C-00-6  |
| Catalyst monitor sensor, B192 .....                                         | 303-14A-00-4  |
| Catalyst monitor sensor, B192 .....                                         | 303-14B-00-1  |
| Catalyst monitor sensor, B192 .....                                         | 303-14B-00-7  |
| CD changer, A144 .....                                                      | 415-01-00-4   |
| CD changer, A144 .....                                                      | 415-01-00-5   |
| Central Junction Box (CJB), P91 .....                                       | 700-02-00-1   |
| Central Junction Box (CJB), P91 .....                                       | 700-03-00-2   |
| Central Junction Box (CJB), P91 .....                                       | 700-03-00-34  |
| Cigar lighter, front, R42 .....                                             | 501-12-00-1   |
| Clock .....                                                                 | 413-07-00-1   |
| Clock spring, P13 .....                                                     | 310-03-00-1   |
| Clock spring, P13 .....                                                     | 413-06-00-1   |
| Clock spring, P13 .....                                                     | 501-20B-00-3  |
| Clutch pedal position switch, N81 .....                                     | 303-14A-00-3  |
| Clutch pedal position switch, N81 .....                                     | 303-14B-00-12 |
| Clutch pedal position switch, N81 .....                                     | 303-14B-00-6  |
| Clutch pedal position switch, N81 .....                                     | 303-14C-00-16 |
| Clutch pedal position switch, N81 .....                                     | 303-14C-00-7  |
| Clutch pedal position switch, N81 .....                                     | 310-03-00-2   |
| Clutch pedal position switch, N81 .....                                     | 413-01-00-11  |
| Clutch pedal position switch, N81 .....                                     | 413-01-00-12  |
| Component Location Charts .....                                             | 700-05-00-1   |
| Component Location Views .....                                              | 700-06-00-1   |
| Connector Views .....                                                       | 700-07-00-1   |
| Cooling fan module, A118 .....                                              | 303-03A-00-1  |
| Cooling fan module, A118 .....                                              | 303-03B-00-1  |
| Cooling fan module, A118 .....                                              | 303-03B-00-2  |
| Cooling fan module, A118 .....                                              | 303-03C-00-1  |
| Cooling fan module, A118 .....                                              | 303-03C-00-2  |
| Crankshaft position sensor, B43 .....                                       | 303-07A-00-1  |
| Crankshaft position sensor, B43 .....                                       | 303-07B-00-1  |
| Crankshaft position sensor, B43 .....                                       | 303-07B-00-2  |
| Crankshaft position sensor, B43 .....                                       | 303-14A-00-3  |
| Crankshaft position sensor, B43 .....                                       | 303-14B-00-3  |
| Crankshaft position sensor, B43 .....                                       | 303-14B-00-9  |
| Crankshaft position sensor, B43 .....                                       | 303-14C-00-14 |
| Crankshaft position sensor, B43 .....                                       | 303-14C-00-5  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-1   |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-11  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-12  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-14  |
| Data Link Connector (DLC), D20 .....                                        | 418-00-00-2   |
| Defrost mode actuator, M210 .....                                           | 412-03-00-13  |
| Diesel particulate filter differential pressure feedback sensor, B189 ..... | 303-14C-00-15 |
| Diesel particulate filter differential pressure feedback sensor, B189 ..... | 303-14C-00-8  |

|                                                    |              |
|----------------------------------------------------|--------------|
| Discharge temperature sensor, floor, LH side, B304 | 412-03-00-10 |
| Discharge temperature sensor, floor, RH side, B305 | 412-03-00-10 |
| Discharge temperature sensor, panel, LH side, B306 | 412-03-00-10 |
| Discharge temperature sensor, panel, RH side, B307 | 412-03-00-10 |
| Door control module, driver, A351                  | 419-01A-00-3 |
| Door control module, driver, A351                  | 419-01A-00-5 |
| Door control module, driver, A351                  | 419-01A-00-7 |
| Door control module, driver, A351                  | 501-11-00-11 |
| Door control module, driver, A351                  | 501-11-00-15 |
| Door control module, driver, A351                  | 501-11-00-3  |
| Door control module, driver, A351                  | 501-11-00-7  |
| Door control module, driver, A351                  | 501-14-00-16 |
| Door control module, driver, A351                  | 501-14-00-26 |
| Door control module, driver, A351                  | 501-14-00-36 |
| Door control module, driver, A351                  | 501-14-00-6  |
| Door control module, LH side rear, A353            | 419-01A-00-7 |
| Door control module, LH side rear, A353            | 501-11-00-13 |
| Door control module, LH side rear, A353            | 501-11-00-17 |
| Door control module, LH side rear, A353            | 501-11-00-5  |
| Door control module, LH side rear, A353            | 501-11-00-9  |
| Door control module, LH side rear, A353            | 501-14-00-18 |
| Door control module, LH side rear, A353            | 501-14-00-28 |
| Door control module, LH side rear, A353            | 501-14-00-38 |
| Door control module, LH side rear, A353            | 501-14-00-8  |
| Door control module, passenger, A352               | 419-01A-00-3 |
| Door control module, passenger, A352               | 419-01A-00-5 |
| Door control module, passenger, A352               | 419-01A-00-7 |
| Door control module, passenger, A352               | 501-11-00-12 |
| Door control module, passenger, A352               | 501-11-00-16 |
| Door control module, passenger, A352               | 501-11-00-4  |
| Door control module, passenger, A352               | 501-11-00-8  |
| Door control module, passenger, A352               | 501-14-00-17 |
| Door control module, passenger, A352               | 501-14-00-27 |
| Door control module, passenger, A352               | 501-14-00-37 |
| Door control module, passenger, A352               | 501-14-00-7  |
| Door control module, RH side rear, A354            | 419-01A-00-7 |
| Door control module, RH side rear, A354            | 501-11-00-10 |
| Door control module, RH side rear, A354            | 501-11-00-14 |
| Door control module, RH side rear, A354            | 501-11-00-18 |
| Door control module, RH side rear, A354            | 501-11-00-6  |
| Door control module, RH side rear, A354            | 501-14-00-19 |
| Door control module, RH side rear, A354            | 501-14-00-29 |
| Door control module, RH side rear, A354            | 501-14-00-39 |
| Door control module, RH side rear, A354            | 501-14-00-9  |
| Door lock unit, driver side front, A172            | 419-01A-00-2 |
| Door lock unit, driver side front, A172            | 419-01A-00-3 |
| Door lock unit, driver side front, A172            | 419-01A-00-4 |
| Door lock unit, driver side front, A172            | 419-01A-00-5 |
| Door lock unit, driver side front, A172            | 419-01A-00-6 |

|                                                  |              |
|--------------------------------------------------|--------------|
| Door lock unit, driver side front, A172 .....    | 419-01A-00-7 |
| Door lock unit, driver side front, A172 .....    | 501-14-00-1  |
| Door lock unit, driver side front, A172 .....    | 501-14-00-11 |
| Door lock unit, driver side front, A172 .....    | 501-14-00-16 |
| Door lock unit, driver side front, A172 .....    | 501-14-00-21 |
| Door lock unit, driver side front, A172 .....    | 501-14-00-26 |
| Door lock unit, driver side front, A172 .....    | 501-14-00-31 |
| Door lock unit, driver side front, A172 .....    | 501-14-00-36 |
| Door lock unit, driver side front, A172 .....    | 501-14-00-6  |
| Door lock unit, LH rear, A275 .....              | 419-01A-00-6 |
| Door lock unit, LH rear, A275 .....              | 419-01A-00-7 |
| Door lock unit, LH rear, A275 .....              | 501-14-00-18 |
| Door lock unit, LH rear, A275 .....              | 501-14-00-23 |
| Door lock unit, LH rear, A275 .....              | 501-14-00-28 |
| Door lock unit, LH rear, A275 .....              | 501-14-00-3  |
| Door lock unit, LH rear, A275 .....              | 501-14-00-33 |
| Door lock unit, LH rear, A275 .....              | 501-14-00-38 |
| Door lock unit, LH rear, A275 .....              | 501-14-00-8  |
| Door lock unit, liftgate, A333 .....             | 419-01A-00-1 |
| Door lock unit, liftgate, A333 .....             | 501-14-00-10 |
| Door lock unit, liftgate, A333 .....             | 501-14-00-14 |
| Door lock unit, liftgate, A333 .....             | 501-14-00-20 |
| Door lock unit, liftgate, A333 .....             | 501-14-00-24 |
| Door lock unit, liftgate, A333 .....             | 501-14-00-30 |
| Door lock unit, liftgate, A333 .....             | 501-14-00-34 |
| Door lock unit, liftgate, A333 .....             | 501-14-00-4  |
| Door lock unit, liftgate, A333 .....             | 501-14-00-40 |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-3 |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-5 |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-6 |
| Door lock unit, passenger side front, A173 ..... | 419-01A-00-7 |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-12 |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-17 |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-2  |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-22 |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-27 |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-32 |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-37 |
| Door lock unit, passenger side front, A173 ..... | 501-14-00-7  |
| Door lock unit, RH rear, A276 .....              | 419-01A-00-6 |
| Door lock unit, RH rear, A276 .....              | 419-01A-00-7 |
| Door lock unit, RH rear, A276 .....              | 501-14-00-19 |
| Door lock unit, RH rear, A276 .....              | 501-14-00-23 |
| Door lock unit, RH rear, A276 .....              | 501-14-00-29 |
| Door lock unit, RH rear, A276 .....              | 501-14-00-3  |
| Door lock unit, RH rear, A276 .....              | 501-14-00-33 |
| Door lock unit, RH rear, A276 .....              | 501-14-00-39 |
| Door lock unit, RH rear, A276 .....              | 501-14-00-9  |
| Driver air bag unit, A42 .....                   | 501-20B-00-3 |



|                                                                 |               |
|-----------------------------------------------------------------|---------------|
| Driver seat backrest motor, M230                                | 501-10-00-1   |
| Driver seat height motor, M158                                  | 501-10-00-1   |
| Driver seat horizontal motor, M227                              | 501-10-00-1   |
| EGR stepper motor, M251                                         | 303-14A-00-2  |
| EGR stepper motor, M251                                         | 303-14B-00-10 |
| EGR stepper motor, M251                                         | 303-14B-00-4  |
| EGR throttle actuator, M252                                     | 303-14C-00-11 |
| EGR throttle actuator, M252                                     | 303-14C-00-2  |
| Electrical Hydraulic Power Assist Steering (EHPAS) module, A357 | 211-02-00-1   |
| Electronic Automatic Temperature Control (EATC) module, A205    | 412-03-00-7   |
| Electronic Engine Controls – 1.6L (Z6)                          | 303-14A-00-1  |
| Electronic Engine Controls – 1.8/2.0L Duratec-HE (MI4)          | 303-14B-00-1  |
| Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel     | 303-14C-00-1  |
| Electronic Stability Program (ESP) module, A176                 | 206-09C-00-1  |
| Electronic Stability Program (ESP) switch, N346                 | 206-09C-00-1  |
| Electronic Throttle Control (ETC) module, A464                  | 303-14B-00-2  |
| Electronic Throttle Control (ETC) module, A464                  | 303-14B-00-8  |
| Engine compartment switch, N21                                  | 419-01A-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-03A-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-03B-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-03B-00-2  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-03C-00-1  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-03C-00-2  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-14A-00-4  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-14B-00-2  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-14B-00-8  |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-14C-00-14 |
| Engine Coolant Temperature (ECT) sensor, B10                    | 303-14C-00-5  |
| Engine Cooling – 1.6L (Z6)                                      | 303-03A-00-1  |
| Engine Cooling – 1.8/2.0L Duratec-HE (MI4)                      | 303-03B-00-1  |
| Engine Cooling – 2.0L Duratorq-TDCi (DW) Diesel                 | 303-03C-00-1  |
| Engine Ignition – 1.6L (Z6)                                     | 303-07A-00-1  |
| Engine Ignition – 1.8/2.0L Duratec-HE (MI4)                     | 303-07B-00-1  |
| Evaporative emission canister purge valve, Y1                   | 303-14A-00-3  |
| Evaporative emission canister purge valve, Y1                   | 303-14B-00-10 |
| Evaporative emission canister purge valve, Y1                   | 303-14B-00-4  |
| Exhaust Gas Recirculation (EGR) valve, Y2                       | 303-14C-00-15 |
| Exhaust Gas Recirculation (EGR) valve, Y2                       | 303-14C-00-6  |
| Exterior Lighting – Fog lamps                                   | 417-01-00-25  |
| Exterior Lighting – Headlamp leveling                           | 417-01-00-3   |
| Exterior Lighting – Headlamps                                   | 417-01-00-1   |
| Exterior Lighting – Licence plate illumination                  | 417-01-00-23  |
| Exterior Lighting – Position and Parking Lamps                  | 417-01-00-21  |
| Exterior Lighting – Reversing lamps                             | 417-01-00-27  |
| Exterior Lighting – Stop Lamps                                  | 417-01-00-9   |
| Exterior Lighting – Turn Signal Lamps                           | 417-01-00-13  |
| Exterior mirror, driver side, A355                              | 417-01-00-15  |
| Exterior mirror, driver side, A355                              | 417-01-00-16  |
| Exterior mirror, driver side, A355                              | 417-01-00-17  |

Exterior mirror, driver side, A355 ..... 417-01-00-18

Exterior mirror, driver side, A355 ..... 417-01-00-19

Exterior mirror, driver side, A355 ..... 417-01-00-20

Exterior mirror, driver side, A355 ..... 501-09-00-1

Exterior mirror, driver side, A355 ..... 501-09-00-2

Exterior mirror, driver side, A355 ..... 501-09-00-3

Exterior mirror, driver side, A355 ..... 501-09-00-5

Exterior mirror, driver side, A355 ..... 501-09-00-6

Exterior mirror, driver side, A355 ..... 501-11-00-21

Exterior mirror, passenger side, A356 ..... 417-01-00-15

Exterior mirror, passenger side, A356 ..... 417-01-00-16

Exterior mirror, passenger side, A356 ..... 417-01-00-17

Exterior mirror, passenger side, A356 ..... 417-01-00-18

Exterior mirror, passenger side, A356 ..... 417-01-00-19

Exterior mirror, passenger side, A356 ..... 417-01-00-20

Exterior mirror, passenger side, A356 ..... 501-09-00-1

Exterior mirror, passenger side, A356 ..... 501-09-00-2

Exterior mirror, passenger side, A356 ..... 501-09-00-4

Exterior mirror, passenger side, A356 ..... 501-09-00-5

Exterior mirror, passenger side, A356 ..... 501-09-00-7

Exterior mirror, passenger side, A356 ..... 501-09-00-9

Exterior mirror, passenger side, A356 ..... 501-11-00-22

F1 ..... 700-02-00-1

F1 ..... 700-03-00-1

F2 ..... 700-02-00-1

F2 ..... 700-03-00-1

F3 ..... 700-02-00-1

F3 ..... 700-02-00-2

F3 ..... 700-03-00-2

F4 ..... 700-02-00-1

F4 ..... 700-03-00-3

F6 ..... 700-02-00-1

F6 ..... 700-03-00-4

F7 ..... 700-02-00-1

F7 ..... 700-03-00-4

F8 ..... 700-02-00-1

F8 ..... 700-03-00-4

F9 ..... 700-02-00-1

F9 ..... 700-02-00-5

F9 ..... 700-02-00-6

F9 ..... 700-03-00-5

F10 ..... 700-02-00-1

F10 ..... 700-03-00-6

F10 ..... 700-03-00-7

F11 ..... 700-02-00-1

F11 ..... 700-02-00-3

F11 ..... 700-02-00-4

F11 ..... 700-02-00-8

F11 ..... 700-02-00-9

F11 ..... 700-03-00-8

F12 ..... 700-02-00-1

F12 ..... 700-02-00-8

F12 ..... 700-03-00-9

F13 ..... 700-02-00-1

F13 ..... 700-03-00-10

F19 ..... 700-02-00-3

F19 ..... 700-02-00-4

F19 ..... 700-03-00-11

F20 ..... 700-02-00-1

F20 ..... 700-03-00-12

F22 ..... 700-02-00-3

F22 ..... 700-02-00-4

F22 ..... 700-03-00-12

F24 ..... 700-02-00-1

F24 ..... 700-03-00-13

F25 ..... 700-02-00-3

F25 ..... 700-02-00-4

F25 ..... 700-02-00-8

F25 ..... 700-03-00-14

F25 ..... 700-03-00-15

F25 ..... 700-03-00-16

F26 ..... 700-02-00-1

F26 ..... 700-03-00-17

F27 ..... 700-02-00-1

F27 ..... 700-03-00-17

F28 ..... 700-03-00-17

F30 ..... 700-02-00-1

F30 ..... 700-03-00-18

F30 ..... 700-03-00-19

F31 ..... 700-02-00-1

F31 ..... 700-03-00-20

F32 ..... 700-02-00-6

F32 ..... 700-03-00-21

F33 ..... 700-02-00-5

F33 ..... 700-02-00-6

F33 ..... 700-03-00-22

F33 ..... 700-03-00-23

F33 ..... 700-03-00-24

F34 ..... 700-02-00-5

F34 ..... 700-02-00-6

F34 ..... 700-03-00-25

F34 ..... 700-03-00-26

F34 ..... 700-03-00-27

F35 ..... 700-02-00-5

F35 ..... 700-02-00-6

F35 ..... 700-03-00-28

F35 ..... 700-03-00-29

F35 ..... 700-03-00-30

F36 ..... 700-02-00-5

F36 ..... 700-02-00-6

F36 ..... 700-03-00-31

F36 ..... 700-03-00-32

F36 ..... 700-03-00-33

F100 ..... 700-02-00-3

F100 ..... 700-02-00-4

F100 ..... 700-03-00-34

F101 ..... 700-02-00-1

F101 ..... 700-03-00-3

F101 ..... 700-03-00-35

F102 ..... 700-02-00-2

F102 ..... 700-03-00-2

F102 ..... 700-03-00-36

F103 ..... 700-02-00-2

F103 ..... 700-02-00-9

F103 ..... 700-03-00-2

F103 ..... 700-03-00-36

F104 ..... 700-02-00-1

F104 ..... 700-03-00-3

F104 ..... 700-03-00-36

F105 ..... 700-02-00-1

F105 ..... 700-02-00-3

F105 ..... 700-02-00-4

F105 ..... 700-03-00-3

F105 ..... 700-03-00-37

F106 ..... 700-02-00-2

F106 ..... 700-03-00-2

F106 ..... 700-03-00-37

F107 ..... 700-02-00-2

F107 ..... 700-03-00-2

F107 ..... 700-03-00-37

F108 ..... 700-02-00-3

F108 ..... 700-02-00-4

F108 ..... 700-03-00-38

F109 ..... 700-02-00-1

F109 ..... 700-03-00-3

F109 ..... 700-03-00-39

F111 ..... 700-02-00-2

F111 ..... 700-03-00-2

F111 ..... 700-03-00-40

F112 ..... 700-02-00-1

F112 ..... 700-03-00-3

F112 ..... 700-03-00-41

F114 ..... 700-02-00-3

F114 ..... 700-02-00-4

F114 ..... 700-03-00-42

F115 ..... 700-02-00-3

F115 ..... 700-02-00-4

F115 ..... 700-03-00-42  
F116 ..... 700-02-00-8  
F116 ..... 700-03-00-43  
F117 ..... 700-02-00-9  
F117 ..... 700-03-00-44  
F118 ..... 700-02-00-1  
F118 ..... 700-03-00-3  
F118 ..... 700-03-00-45  
F120 ..... 700-02-00-1  
F120 ..... 700-03-00-3  
F120 ..... 700-03-00-45  
F122 ..... 700-02-00-3  
F122 ..... 700-02-00-4  
F122 ..... 700-03-00-46  
F124 ..... 700-02-00-9  
F124 ..... 700-03-00-47  
F125 ..... 700-02-00-9  
F125 ..... 700-03-00-48  
F127 ..... 700-02-00-8  
F127 ..... 700-03-00-49  
F129 ..... 700-02-00-2  
F129 ..... 700-03-00-2  
F129 ..... 700-03-00-50  
F131 ..... 700-02-00-1  
F131 ..... 700-03-00-3  
F131 ..... 700-03-00-51  
F132 ..... 700-02-00-3  
F132 ..... 700-02-00-4  
F132 ..... 700-03-00-52  
F133 ..... 700-02-00-2  
F133 ..... 700-03-00-2  
F133 ..... 700-03-00-53  
F134 ..... 700-02-00-2  
F134 ..... 700-03-00-2  
F134 ..... 700-03-00-53  
F135 ..... 700-02-00-2  
F135 ..... 700-03-00-2  
F135 ..... 700-03-00-54  
F136 ..... 700-02-00-8  
F136 ..... 700-03-00-54  
F137 ..... 700-02-00-1  
F137 ..... 700-03-00-3  
F137 ..... 700-03-00-55  
F138 ..... 700-02-00-3  
F138 ..... 700-02-00-4  
F138 ..... 700-02-00-5  
F138 ..... 700-03-00-56  
F138 ..... 700-03-00-57  
F138 ..... 700-03-00-58

|                                                             |               |
|-------------------------------------------------------------|---------------|
| F139                                                        | 700-03-00-59  |
| F140                                                        | 700-03-00-59  |
| F141                                                        | 700-02-00-8   |
| F141                                                        | 700-03-00-60  |
| F141                                                        | 700-03-00-61  |
| F142                                                        | 700-03-00-62  |
| F143                                                        | 700-03-00-62  |
| F1000                                                       | 700-02-00-1   |
| F1000                                                       | 700-03-00-63  |
| F1000                                                       | 700-03-00-64  |
| Fog lamp, LH front, E43                                     | 417-01-00-26  |
| Fog lamp, LH front, E43                                     | 417-01-00-27  |
| Fog lamp, RH front, E42                                     | 417-01-00-26  |
| Fog lamp, RH front, E42                                     | 417-01-00-27  |
| Footwell lamp, LH front, E61                                | 417-02-00-3   |
| Footwell lamp, RH front, E62                                | 417-02-00-3   |
| Fuel additive system module, A348                           | 303-14C-00-17 |
| Fuel additive system module, A348                           | 303-14C-00-9  |
| Fuel additive system pump module, A349                      | 303-14C-00-17 |
| Fuel additive system pump module, A349                      | 303-14C-00-9  |
| Fuel Charging and Controls – 1.6L (Z6)                      | 303-04A-00-1  |
| Fuel Charging and Controls – 1.8/2.0L Duratec-HE (M14)      | 303-04B-00-1  |
| Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel | 303-04C-00-1  |
| Fuel filler door lock motor, M90                            | 501-14-00-1   |
| Fuel filler door lock motor, M90                            | 501-14-00-11  |
| Fuel filler door lock motor, M90                            | 501-14-00-15  |
| Fuel filler door lock motor, M90                            | 501-14-00-21  |
| Fuel filler door lock motor, M90                            | 501-14-00-25  |
| Fuel filler door lock motor, M90                            | 501-14-00-35  |
| Fuel filler door lock motor, M90                            | 501-14-00-5   |
| Fuel heater relay, K69                                      | 303-04C-00-2  |
| Fuel heater relay, K69                                      | 303-04C-00-4  |
| Fuel heater, R32                                            | 303-04C-00-2  |
| Fuel heater, R32                                            | 303-04C-00-4  |
| Fuel injector 1, Y108                                       | 303-04A-00-1  |
| Fuel injector 1, Y108                                       | 303-04B-00-1  |
| Fuel injector 1, Y108                                       | 303-04B-00-2  |
| Fuel injector 1, Y108                                       | 303-04C-00-1  |
| Fuel injector 1, Y108                                       | 303-04C-00-3  |
| Fuel injector 2, Y109                                       | 303-04A-00-1  |
| Fuel injector 2, Y109                                       | 303-04B-00-1  |
| Fuel injector 2, Y109                                       | 303-04B-00-2  |
| Fuel injector 2, Y109                                       | 303-04C-00-1  |
| Fuel injector 2, Y109                                       | 303-04C-00-3  |
| Fuel injector 3, Y110                                       | 303-04A-00-1  |
| Fuel injector 3, Y110                                       | 303-04B-00-1  |
| Fuel injector 3, Y110                                       | 303-04B-00-2  |
| Fuel injector 3, Y110                                       | 303-04C-00-1  |
| Fuel injector 3, Y110                                       | 303-04C-00-3  |

|                                                  |               |
|--------------------------------------------------|---------------|
| Fuel injector 4, Y111 .....                      | 303-04A-00-1  |
| Fuel injector 4, Y111 .....                      | 303-04B-00-1  |
| Fuel injector 4, Y111 .....                      | 303-04B-00-2  |
| Fuel injector 4, Y111 .....                      | 303-04C-00-1  |
| Fuel injector 4, Y111 .....                      | 303-04C-00-3  |
| Fuel metering valve, Y165 .....                  | 303-04C-00-1  |
| Fuel metering valve, Y165 .....                  | 303-04C-00-3  |
| Fuel metering valve, Y165 .....                  | 303-14C-00-13 |
| Fuel metering valve, Y165 .....                  | 303-14C-00-4  |
| Fuel pressure solenoid valve, Y47 .....          | 303-04C-00-1  |
| Fuel pressure solenoid valve, Y47 .....          | 303-04C-00-3  |
| Fuel pressure solenoid valve, Y47 .....          | 303-14C-00-13 |
| Fuel pressure solenoid valve, Y47 .....          | 303-14C-00-4  |
| Fuel pump relay, K4 .....                        | 303-14A-00-6  |
| Fuel pump relay, K4 .....                        | 303-14B-00-11 |
| Fuel pump relay, K4 .....                        | 303-14B-00-5  |
| Fuel rail pressure transducer sensor, B225 ..... | 303-04C-00-1  |
| Fuel rail pressure transducer sensor, B225 ..... | 303-04C-00-3  |
| Fuel rail pressure transducer sensor, B225 ..... | 303-14C-00-14 |
| Fuel rail pressure transducer sensor, B225 ..... | 303-14C-00-5  |
| Fuel tank filler cap sensor, B190 .....          | 303-14C-00-17 |
| Fuel tank filler cap sensor, B190 .....          | 303-14C-00-9  |
| Fuel tank unit, A31 .....                        | 303-14A-00-6  |
| Fuel tank unit, A31 .....                        | 303-14B-00-11 |
| Fuel tank unit, A31 .....                        | 303-14B-00-5  |
| Fuel tank unit, A31 .....                        | 413-01-00-3   |
| Fuel temperature sensor, B109 .....              | 303-04C-00-1  |
| Fuel temperature sensor, B109 .....              | 303-04C-00-3  |
| Fuel temperature sensor, B109 .....              | 303-14C-00-14 |
| Fuel temperature sensor, B109 .....              | 303-14C-00-5  |
| Fuse and Relay Information .....                 | 700-01-00-1   |
| Fuse Details .....                               | 700-03-00-1   |
| G1 .....                                         | 700-02-00-1   |
| G1 .....                                         | 700-04-00-1   |
| G7 .....                                         | 700-04-00-2   |
| G8 .....                                         | 700-04-00-1   |
| G12 .....                                        | 700-04-00-3   |
| G12 .....                                        | 700-04-00-4   |
| G19 .....                                        | 700-04-00-5   |
| G20 .....                                        | 700-04-00-6   |
| G20 .....                                        | 700-04-00-7   |
| G31 .....                                        | 700-04-00-8   |
| G37 .....                                        | 700-04-00-9   |
| G39 .....                                        | 700-04-00-7   |
| G45 .....                                        | 700-04-00-10  |
| G45 .....                                        | 700-04-00-11  |
| G53 .....                                        | 700-04-00-12  |
| G53 .....                                        | 700-04-00-13  |
| G53 .....                                        | 700-04-00-14  |

|                                                                  |              |
|------------------------------------------------------------------|--------------|
| G53                                                              | 700-04-00-15 |
| G55                                                              | 700-04-00-16 |
| G56                                                              | 700-04-00-17 |
| G57                                                              | 700-04-00-18 |
| G58                                                              | 700-04-00-20 |
| G58                                                              | 700-04-00-40 |
| G60                                                              | 700-04-00-21 |
| G63                                                              | 700-04-00-22 |
| G64                                                              | 700-04-00-23 |
| G64                                                              | 700-04-00-24 |
| G68                                                              | 700-04-00-25 |
| G68                                                              | 700-04-00-26 |
| G68                                                              | 700-04-00-27 |
| G68                                                              | 700-04-00-28 |
| G68                                                              | 700-04-00-29 |
| G68                                                              | 700-04-00-30 |
| G70                                                              | 700-04-00-31 |
| G70                                                              | 700-04-00-32 |
| G72                                                              | 700-04-00-33 |
| G74                                                              | 700-04-00-34 |
| G74                                                              | 700-04-00-39 |
| G75                                                              | 700-04-00-35 |
| G75                                                              | 700-04-00-36 |
| G77                                                              | 700-04-00-37 |
| G77                                                              | 700-04-00-38 |
| G78                                                              | 700-04-00-20 |
| G78                                                              | 700-04-00-34 |
| G78                                                              | 700-04-00-39 |
| G78                                                              | 700-04-00-40 |
| Gearshift lever unit, N93                                        | 307-01-00-1  |
| Gearshift lever unit, N93                                        | 307-01-00-4  |
| Gearshift lever unit, N93                                        | 307-01-00-7  |
| Gearshift lever unit, N93                                        | 308-00-00-1  |
| Generator and Regulator – 1.6L (Z6)                              | 414-02A-00-1 |
| Generator and Regulator – 1.8/2.0L Duratec-HE (MI4)              | 414-02B-00-1 |
| Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel         | 414-02C-00-1 |
| Generator, O5                                                    | 414-02B-00-1 |
| Generator, O5                                                    | 414-02B-00-2 |
| Generator, O5                                                    | 414-02C-00-1 |
| Glass, Frames and Mechanisms – Heated power mirrors              | 501-11-00-21 |
| Glass, Frames and Mechanisms – Heated rear window                | 501-11-00-19 |
| Glass, Frames and Mechanisms – with front and rear power windows | 501-11-00-3  |
| Glass, Frames and Mechanisms – with front power windows          | 501-11-00-1  |
| Glove compartment lamp, E28                                      | 417-02-00-3  |
| Glow plug 1, P16                                                 | 303-07C-00-1 |
| Glow plug 1, P16                                                 | 303-07C-00-2 |
| Glow plug 2, P17                                                 | 303-07C-00-1 |
| Glow plug 2, P17                                                 | 303-07C-00-2 |
| Glow plug 3, P18                                                 | 303-07C-00-1 |



|                                                                        |              |
|------------------------------------------------------------------------|--------------|
| Glow plug 3, P18 .....                                                 | 303-07C-00-2 |
| Glow plug 4, P19 .....                                                 | 303-07C-00-1 |
| Glow plug 4, P19 .....                                                 | 303-07C-00-2 |
| Glow plug relay, K212 .....                                            | 303-07C-00-1 |
| Glow plug relay, K212 .....                                            | 303-07C-00-2 |
| Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel .....                | 303-07C-00-1 |
| Ground Distribution .....                                              | 700-04-00-1  |
| Handles, Locks, Latches and Entry Systems – with central locking ..... | 501-14-00-1  |
| Handles, Locks, Latches and Entry Systems – with double locking .....  | 501-14-00-21 |
| Hazard flasher switch, N49 .....                                       | 417-01-00-13 |
| Headlamp switch, N120 .....                                            | 413-00-00-1  |
| Headlamp switch, N120 .....                                            | 417-01-00-1  |
| Headlamp switch, N120 .....                                            | 417-01-00-2  |
| Headlamp switch, N120 .....                                            | 417-01-00-21 |
| Headlamp switch, N120 .....                                            | 417-01-00-22 |
| Headlamp switch, N120 .....                                            | 417-01-00-27 |
| Headlamp switch, N120 .....                                            | 417-01-00-3  |
| Headlamp switch, N120 .....                                            | 700-02-00-9  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-1  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-2  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-21 |
| Headlamp, LH side, E1 .....                                            | 417-01-00-22 |
| Headlamp, LH side, E1 .....                                            | 417-01-00-3  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-4  |
| Headlamp, LH side, E1 .....                                            | 417-01-00-4  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-1  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-2  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-21 |
| Headlamp, RH side, E7 .....                                            | 417-01-00-22 |
| Headlamp, RH side, E7 .....                                            | 417-01-00-3  |
| Headlamp, RH side, E7 .....                                            | 417-01-00-5  |
| Heated rear window relay, K1 .....                                     | 501-11-00-19 |
| Heated rear window relay, K1 .....                                     | 501-11-00-20 |
| Heated rear window relay, K1 .....                                     | 700-02-00-3  |
| Heated rear window switch, N10 .....                                   | 501-11-00-19 |
| Heated rear window switch, N10 .....                                   | 501-11-00-20 |
| Heater control module, A128 .....                                      | 412-02A-00-1 |
| Heater control module, A128 .....                                      | 412-03-00-1  |
| Heating and Ventilation .....                                          | 412-02A-00-1 |
| High mounted stop lamp, E174 .....                                     | 417-01-00-10 |
| High mounted stop lamp, E174 .....                                     | 417-01-00-11 |
| High mounted stop lamp, E174 .....                                     | 417-01-00-9  |
| Horn .....                                                             | 413-06-00-1  |
| Horn relay, K33 .....                                                  | 413-06-00-1  |
| Horn switch, N54 .....                                                 | 413-06-00-1  |
| Horn, H1 .....                                                         | 413-06-00-2  |
| Idle speed control valve, Y13 .....                                    | 303-04A-00-1 |
| Ignition coil, cylinder 1, T6 .....                                    | 303-07A-00-1 |
| Ignition coil, cylinder 1, T6 .....                                    | 303-07B-00-1 |
| Ignition coil, cylinder 1, T6 .....                                    | 303-07B-00-2 |

|                                                 |               |
|-------------------------------------------------|---------------|
| Ignition coil, cylinder 2, T7 .....             | 303-07A-00-1  |
| Ignition coil, cylinder 2, T7 .....             | 303-07B-00-1  |
| Ignition coil, cylinder 2, T7 .....             | 303-07B-00-2  |
| Ignition coil, cylinder 3, T8 .....             | 303-07A-00-1  |
| Ignition coil, cylinder 3, T8 .....             | 303-07B-00-1  |
| Ignition coil, cylinder 3, T8 .....             | 303-07B-00-2  |
| Ignition coil, cylinder 4, T9 .....             | 303-07A-00-1  |
| Ignition coil, cylinder 4, T9 .....             | 303-07B-00-1  |
| Ignition coil, cylinder 4, T9 .....             | 303-07B-00-2  |
| Ignition relay, K41 .....                       | 700-02-00-8   |
| Ignition switch, N278 .....                     | 700-02-00-3   |
| Ignition switch, N278 .....                     | 700-02-00-4   |
| Ignition transformer capacitor, U1 .....        | 303-07A-00-1  |
| In-vehicle temperature sensor, B206 .....       | 412-03-00-10  |
| Index .....                                     | 100-00-02-1   |
| Inertia Fuel Shutoff (IFS) switch, N316 .....   | 303-14A-00-6  |
| Inertia Fuel Shutoff (IFS) switch, N316 .....   | 303-14B-00-11 |
| Inertia Fuel Shutoff (IFS) switch, N316 .....   | 303-14B-00-5  |
| Inlet air control valve solenoid, Y218 .....    | 303-04A-00-1  |
| Inlet air control valve solenoid, Y218 .....    | 303-14B-00-10 |
| Inlet air control valve solenoid, Y218 .....    | 303-14B-00-4  |
| Instrument Cluster .....                        | 413-01-00-1   |
| Instrument Cluster and Panel Illumination ..... | 413-00-00-1   |
| Instrument cluster, A30 .....                   | 413-01-00-1   |
| Instrument cluster, A30 .....                   | 413-07-00-1   |
| Instrument cluster, A30 .....                   | 419-01B-00-1  |
| Instrument Panel and Console .....              | 501-12-00-1   |
| Intake Air Temperature (IAT) sensor, B213 ..... | 303-14C-00-14 |
| Intake Air Temperature (IAT) sensor, B213 ..... | 303-14C-00-5  |
| Intercooler bypass solenoid valve, Y185 .....   | 303-14C-00-8  |
| Interior lamp, front, E18 .....                 | 417-02-00-1   |
| Interior lamp, rear, E19 .....                  | 417-02-00-1   |
| Interior Lighting .....                         | 417-02-00-1   |
| Introduction .....                              | 100-00-03-1   |
| Knock sensor 1, B105 .....                      | 303-07B-00-1  |
| Knock sensor 1, B105 .....                      | 303-14B-00-3  |
| Knock sensor 2, B106 .....                      | 303-07B-00-1  |
| Knock sensor, B45 .....                         | 303-07A-00-1  |
| Knock sensor, B45 .....                         | 303-07B-00-2  |
| Knock sensor, B45 .....                         | 303-14A-00-3  |
| Knock sensor, B45 .....                         | 303-14B-00-9  |
| Licence plate lamp, LH side, E34 .....          | 417-01-00-23  |
| Licence plate lamp, LH side, E34 .....          | 417-01-00-24  |
| Licence plate lamp, LH side, E34 .....          | 417-01-00-25  |
| Licence plate lamp, RH side, E35 .....          | 417-01-00-23  |
| Licence plate lamp, RH side, E35 .....          | 417-01-00-24  |
| Licence plate lamp, RH side, E35 .....          | 417-01-00-25  |
| Licence plate lamps, E14 .....                  | 417-01-00-24  |
| Licence plate lamps, E14 .....                  | 417-01-00-25  |

|                                                             |               |
|-------------------------------------------------------------|---------------|
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-10  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-14  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-20  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-24  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-30  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-34  |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-4   |
| Liftgate/luggage compartment lid release switch, N155       | 501-14-00-40  |
| Luggage compartment lamp, E57                               | 417-02-00-2   |
| Manual Transmission – manual transmission (MPS6)            | 308-00-00-1   |
| Mass Air Flow (MAF) sensor, B22                             | 303-14C-00-12 |
| Mass Air Flow (MAF) sensor, B22                             | 303-14C-00-3  |
| Mass Air Flow/Intake Air Temperature (MAF/IAT) sensor, B433 | 303-14A-00-2  |
| Micropol antenna, A378                                      | 413-07-00-2   |
| Micropol antenna, A378                                      | 415-01-00-2   |
| Micropol antenna, A378                                      | 415-01-00-6   |
| Micropol antenna, A378                                      | 415-01-00-7   |
| Module Communications Network                               | 418-00-00-1   |
| Multifunction Electronic Control Modules                    | 419-10-00-1   |
| Neutral position switch, N152                               | 303-14A-00-2  |
| Occupancy sensor, passenger seat, B242                      | 413-01-00-5   |
| Occupancy sensor, passenger seat, B242                      | 501-20A-00-1  |
| Oil control valve, Y191                                     | 303-14A-00-3  |
| Oil pressure switch, N17                                    | 303-14A-00-2  |
| Oil pressure switch, N17                                    | 413-01-00-1   |
| Output Shaft Speed (OSS) sensor, B110                       | 307-01-00-3   |
| Output Shaft Speed (OSS) sensor, B110                       | 307-01-00-6   |
| Output Shaft Speed (OSS) sensor, B110                       | 307-01-00-9   |
| Outside air temperature sensor, B73                         | 413-01-00-2   |
| Outside air temperature sensor, B73                         | 419-10-00-3   |
| Panel/floor mode actuator, M250                             | 412-03-00-13  |
| Parking Aid                                                 | 413-13-00-1   |
| Parking aid module, A265                                    | 413-13-00-1   |
| Parking aid module, A265                                    | 413-13-00-2   |
| Parking aid module, A265                                    | 413-13-00-4   |
| Parking aid module, A265                                    | 413-13-00-5   |
| Parking aid module, A265                                    | 413-13-00-6   |
| Parking aid sensor, LH front, B309                          | 413-13-00-3   |
| Parking aid sensor, rear, centre, B336                      | 413-13-00-4   |
| Parking aid sensor, rear, centre, B336                      | 413-13-00-5   |
| Parking aid sensor, rear, centre, B336                      | 413-13-00-6   |
| Parking aid sensor, rear, outer left, B168                  | 413-13-00-4   |
| Parking aid sensor, rear, outer left, B168                  | 413-13-00-5   |
| Parking aid sensor, rear, outer left, B168                  | 413-13-00-6   |
| Parking aid sensor, rear, outer right, B171                 | 413-13-00-4   |
| Parking aid sensor, rear, outer right, B171                 | 413-13-00-5   |
| Parking aid sensor, rear, outer right, B171                 | 413-13-00-6   |
| Parking aid sensor, RH front, B301                          | 413-13-00-3   |
| Parking aid switch, front, N359                             | 413-13-00-1   |

|                                                          |               |
|----------------------------------------------------------|---------------|
| Parking brake switch, N63 .....                          | 413-01-00-2   |
| Passenger air bag unit, A43 .....                        | 501-20B-00-4  |
| Passive anti-theft system transceiver module, A102 ..... | 419-01B-00-1  |
| Post-catalyst exhaust gas temperature sensor, B188 ..... | 303-14C-00-15 |
| Post-catalyst exhaust gas temperature sensor, B188 ..... | 303-14C-00-8  |
| Power Distribution .....                                 | 700-02-00-1   |
| Power hold relay, K13 .....                              | 303-14A-00-1  |
| Power hold relay, K13 .....                              | 303-14B-00-1  |
| Power hold relay, K13 .....                              | 303-14B-00-10 |
| Power hold relay, K13 .....                              | 303-14B-00-4  |
| Power hold relay, K13 .....                              | 303-14B-00-7  |
| Power hold relay, K13 .....                              | 303-14C-00-1  |
| Power hold relay, K13 .....                              | 303-14C-00-10 |
| Power hold relay, K13 .....                              | 303-14C-00-11 |
| Power hold relay, K13 .....                              | 303-14C-00-12 |
| Power hold relay, K13 .....                              | 303-14C-00-13 |
| Power hold relay, K13 .....                              | 303-14C-00-2  |
| Power hold relay, K13 .....                              | 303-14C-00-3  |
| Power hold relay, K13 .....                              | 303-14C-00-4  |
| Power hold relay, K13 .....                              | 700-02-00-5   |
| Power hold relay, K13 .....                              | 700-02-00-6   |
| Power mirror fold switch, N279 .....                     | 501-09-00-10  |
| Power mirror fold switch, N279 .....                     | 501-09-00-5   |
| Power Steering .....                                     | 211-02-00-1   |
| Power steering pressure switch, N96 .....                | 303-14A-00-2  |
| Powertrain control module (PCM), A147 .....              | 303-04A-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-04B-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-04B-00-2  |
| Powertrain control module (PCM), A147 .....              | 303-04C-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-04C-00-3  |
| Powertrain control module (PCM), A147 .....              | 303-07A-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-07B-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-07B-00-2  |
| Powertrain control module (PCM), A147 .....              | 303-07C-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-14A-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-14B-00-1  |
| Powertrain control module (PCM), A147 .....              | 303-14C-00-1  |
| Pre-catalyst exhaust gas temperature sensor, B187 .....  | 303-14C-00-15 |
| Pre-catalyst exhaust gas temperature sensor, B187 .....  | 303-14C-00-8  |
| Pre-catalyst heated oxygen sensor (HO2S), B89 .....      | 303-14A-00-4  |
| Pre-catalyst heated oxygen sensor (HO2S), B89 .....      | 303-14B-00-1  |
| Pre-catalyst heated oxygen sensor (HO2S), B89 .....      | 303-14B-00-7  |
| Radio remote control switch, N214 .....                  | 415-01-00-3   |
| Radio remote control switch, N214 .....                  | 415-01-00-8   |
| Radio, A11 .....                                         | 413-07-00-1   |
| Radio, A11 .....                                         | 413-07-00-2   |
| Radio, A11 .....                                         | 415-01-00-1   |
| Radio, A11 .....                                         | 415-01-00-2   |
| Radio, A11 .....                                         | 415-01-00-4   |