

Mondeo Wiring Diagrams

Table of Contents

Group 1 – General Information

General Information

Table of Contents	100-00-00-1
Systems Overview	100-00-01-1
Index	100-00-02-1
Introduction	100-00-03-1
Symbols	100-00-04-1
Connector Repair Procedures	100-00-05-1
Wiring Harness Overview	100-00-06-1

Group 2 – Chassis

Brake System

Anti-Lock Control	206-09A-00-1
Anti-Lock Control – Traction Control and Stability Assist	206-09C-00-1

Group 3 – Powertrain

Engine

Engine Cooling –	
1.8L Duratec-SCi (MI4)	303-03A-00-1
Engine Cooling –	
1.8/2.0L Duratec-HE (MI4)	303-03B-00-1
Engine Cooling –	
2.5L Duratec-VE (VE6)	303-03C-00-1
Engine Cooling –	
3.0L Duratec-SE (VE6)	303-03D-00-1
Engine Cooling –	
2.0L Duratorq-DI/TDDi (Puma) Diesel, 90 HP	303-03E-00-1
Engine Cooling –	
2.0L Duratorq-TDCi (Puma) Diesel	303-03F-00-1
Engine Cooling –	
2.2L Duratorq-TDCi (Puma) Diesel	303-03G-00-1
Engine Cooling –	
3.0L Duratec-ST (VE6)	303-03H-00-1
Fuel Charging and Controls –	
1.8L Duratec-SCi (MI4)	303-04A-00-1
Fuel Charging and Controls –	
1.8/2.0L Duratec-HE (MI4)	303-04B-00-1
Fuel Charging and Controls –	
2.5L Duratec-VE (VE6)	303-04C-00-1

Fuel Charging and Controls –	
3.0L Duratec-SE (VE6)	303-04D-00-1
Fuel Charging and Controls –	
2.0L Duratorq-DI/TDDi (Puma) Diesel, 90 HP	303-04E-00-1
Fuel Charging and Controls –	
2.0L Duratorq-TDCi (Puma) Diesel	303-04F-00-1
Fuel Charging and Controls –	
2.2L Duratorq-TDCi (Puma) Diesel	303-04G-00-1
Fuel Charging and Controls –	
3.0L Duratec-ST (VE6)	303-04H-00-1
Starting System	303-06-00-1
Engine Ignition –	
1.8L Duratec-SCi (MI4)	303-07A-00-1
Engine Ignition –	
1.8/2.0L Duratec-HE (MI4)	303-07B-00-1
Engine Ignition –	
2.5L Duratec-VE (VE6)	303-07C-00-1
Engine Ignition –	
3.0L Duratec-SE (VE6)	303-07D-00-1
Glow Plug System –	
2.0L Duratorq-DI/TDDi (Puma) Diesel, 90 HP	303-07E-00-1
Glow Plug System –	
2.0L Duratorq-TDCi (Puma) Diesel,	
2.2L Duratorq-TDCi (Puma) Diesel	303-07F-00-1
Glow Plug System –	
2.2L Duratorq-TDCi (Puma) Diesel	303-07G-00-1
Engine Ignition –	
3.0L Duratec-ST (VE6)	303-07H-00-1
Electronic Engine Controls –	
1.8L Duratec-SCi (MI4)	303-14A-00-1
Electronic Engine Controls –	
1.8/2.0L Duratec-HE (MI4)	303-14B-00-1
Electronic Engine Controls –	
2.5L Duratec-VE (VE6)	303-14C-00-1
Electronic Engine Controls –	
3.0L Duratec-SE (VE6)	303-14D-00-1
Electronic Engine Controls –	
2.0L Duratorq-DI/TDDi (Puma) Diesel, 90 HP	303-14E-00-1
Electronic Engine Controls –	
2.0L Duratorq-TDCi (Puma) Diesel	303-14F-00-1
Electronic Engine Controls –	
2.2L Duratorq-TDCi (Puma) Diesel	303-14G-00-1
Electronic Engine Controls –	
3.0L Duratec-ST (VE6)	303-14H-00-1

Automatic Transmission

- Automatic Transmission –
4-speed automatic transmission
(CD4E) 307-01A-00-1
- Automatic Transmission –
5-speed automatic transmission
(5F31J) 307-01B-00-1

Fuel System

- Vehicle Speed Control 310-03-00-1

Group 4 – Electrical

Climate Control System

- Auxiliary Heating 412-02B-00-1
- Air Conditioning 412-03-00-1

Instrumentation and Warning Systems

- Instrument Cluster and
Panel Illumination 413-00-00-1
- Instrument Cluster 413-01-00-1
- Horn 413-06-00-1
- Clock 413-07-00-1
- Warning Devices 413-09-00-1
- Parking Aid – Valeo 413-13A-00-1
- Parking Aid – Bosch 413-13B-00-1

Battery and Charging System

- Generator and Regulator –
1.8L Duratec–SCi (MI4) 414-02A-00-1
- Generator and Regulator –
1.8/2.0L Duratec–HE (MI4) 414-02B-00-1
- Generator and Regulator –
2.5L Duratec–VE (VE6) 414-02C-00-1
- Generator and Regulator –
3.0L Duratec–SE (VE6) 414-02D-00-1
- Generator and Regulator –
2.0L Duratorq–DI/TDDi (Puma) Diesel,
90 HP 414-02E-00-1
- Generator and Regulator –
2.0L Duratorq–TDCi (Puma) Diesel 414-02F-00-1
- Generator and Regulator –
2.2L Duratorq–TDCi (Puma) Diesel 414-02G-00-1
- Generator and Regulator –
3.0L Duratec–ST (VE6) 414-02H-00-1

Audio Systems

- Audio Unit 415-01-00-1

- Speakers 415-03-00-1
- Video System 415-07-00-1

Lighting Systems

- Exterior Lighting – Headlamps 417-01-00-1
- Exterior Lighting – Autolamps 417-01-00-10
- Exterior Lighting –
Headlamp Leveling 417-01-00-11
- Exterior Lighting – Turn Signal and
Hazard Flasher Lamps 417-01-00-13
- Exterior Lighting – Parking Lamps . 417-01-00-19
- Exterior Lighting – Stop Lamps ... 417-01-00-27
- Exterior Lighting –
Licence plate lamps 417-01-00-35
- Exterior Lighting – Reversing Lamps 417-01-00-36
- Exterior Lighting – Fog lamps 417-01-00-44
- Exterior Lighting – Trailer socket . 417-01-00-50
- Interior Lighting 417-02-00-1
- Daytime Running Lamps 417-04-00-1

Electrical Distribution

- Module Communications Network,
Diagnostic 418-00B-00-1

Electronic Feature Group

- Anti-Theft – Active 419-01A-00-1
- Anti-Theft – Passive 419-01B-00-1
- Vehicle Route Guidance/Navigation –
Travel Pilot 419-07A-00-1
- Vehicle Route Guidance/Navigation –
DVD navigation system with
touch screen 419-07B-00-1
- Cellular Phone – without external
CD changer and video system 419-08A-00-1
- Cellular Phone –
Bluetooth voice control 419-08B-00-1
- Multifunction Electronic
Control Modules 419-10-00-1

Group 5 – Body and Paint

Body

- Rear View Mirrors 501-09-00-1
- Seating 501-10-00-1
- Glass, Frames and Mechanisms 501-11-00-1
- Instrument Panel and Console 501-12-00-1
- Handles, Locks, Latches and
Entry Systems 501-14-00-1

Wipers and Washers	501-16-00-1
Roof Opening Panel	501-17-00-1
Occupant Restraints – Active	501-20A-00-1
Occupant Restraints – Passive	501-20B-00-1

Group 7 – General Wiring Information

Fuse and Relay Information	700-01-00-1
Power Distribution	700-02-00-1
Fuse Details	700-03-00-1
Ground Distribution	700-04-00-1
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Views	700-07-00-1

Systems Overview

03/2004
100-00-01-1
2003.75
Mondeo

Engine Cooling
303-03A-00
303-03B-00
303-03C-00
303-03D-00
303-03E-00
303-03F-00
303-03G-00
303-03H-00

Fuel Charging and Controls
303-04A-00
303-04B-00
303-04C-00
303-04D-00
303-04E-00
303-04F-00
303-04G-00
303-04H-00

Starting System
303-06-00

Electronic Engine Controls
303-14A-00
303-14B-00
303-14C-00
303-14D-00
303-14E-00
303-14F-00
303-14G-00
303-14H-00

Automatic Transmission – 4-speed
automatic transmission (CD4E)
307-01A-00

Automatic Transmission – 5-speed
automatic transmission (5F31J)
307-01B-00

Vehicle Speed Control
310-03-00

Engine Ignition
303-07A-00
303-07B-00
303-07C-00
303-07D-00
303-03H-00

Glow Plug System
303-07E-00
303-07F-00
303-07G-00

Module Communications Network,
Diagnostic
418-00B-00


Multifunction Electronic Control Mod-
ules
419-10-00

Instrument Cluster
413-01-00

Horn
413-06-00

Clock/Timekeeping
413-07-01

Wipers and
Washers
501-16-00

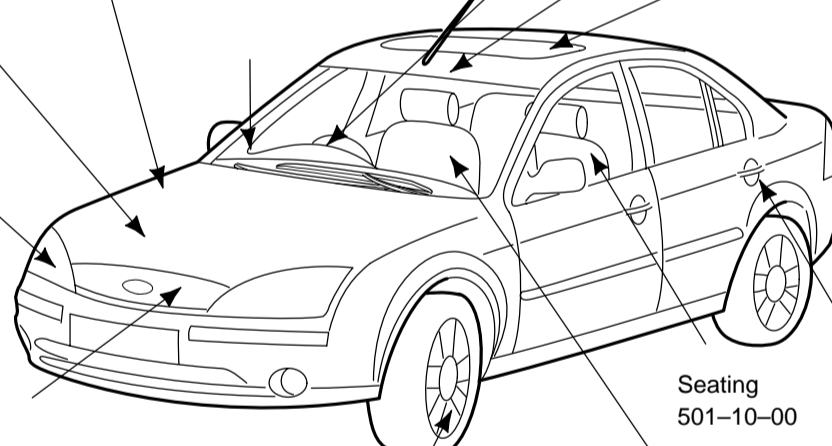

Exterior Lighting – Head-
lamps
417-01-00-1

Exterior Lighting – Head-
lamp levelling
417-01-00-11

Exterior Lighting – Turn
Signal and Hazard
Flasher Lamps
417-01-00-13

Exterior Lighting – Park-
ing Lamps
417-01-00-19

Exterior Lighting – Fog
lamps
417-01-00-36

Daytime Running Lamps
417-04-00

Exterior Lighting – Auto-
lamps
417-04-00-10

Generator and Regulator
414-02A-00
414-02B-00
414-02C-00
414-02D-00
414-02E-00
414-02F-00
414-02G-00
414-02H-00

Anti-Lock Control
206-09A-00

Anti-Lock Control – Traction
Control and Stability Assist
206-09C-00

Warning Devices
413-09-00

Audio Unit
415-01-00

Speakers
415-03-00

Video System
415-07-00

Auxiliary Heating
412-02B-00

Air Conditioning
412-03-00

Instrument Cluster and Panel Il-
lumination
413-00-00

Vehicle Route Guidance/Navigation
– DVD navigation system with
touch screen
419-07B-00

Cellular Phone – without external
CD changer and video system
419-08A-00

Cellular Phone – Bluetooth voice
control
419-08B-00

Instrument Panel and Console
501-12-00

Anti-Theft – Active
419-01A-00

Anti-Theft – Passive
419-01B-00

Vehicle Route Guidance/Navigation
– Travel Pilot
419-07A-00

Rear View Mirrors
501-09-00

Interior Lighting
417-02-00

Roof Opening
Panel
501-17-00

Exterior Lighting – Licence plate
lamps
417-01-00-31

Exterior Lighting – Stop
Lamps
417-01-00-27

Exterior Lighting – Revers-
ing Lamps
417-01-00-32

Parking Aid – Valeo
413-13A-00

Parking Aid – Bosch
413-13B-00

Seating
501-10-00

Glass, Frames and Mechan-
isms
501-11-00

Occupant Restraints – Ac-
tive
501-20A-00

Occupant Restraints – Pass-
ive
501-20B-00

Handles, Locks,
Latches and Entry Sys-
tems
501-14-00

A/C compressor clutch diode, V7	303-14A-00-10
A/C compressor clutch diode, V7	303-14B-00-17
A/C compressor clutch diode, V7	303-14C-00-11
A/C compressor clutch diode, V7	303-14D-00-10
A/C compressor clutch diode, V7	303-14H-00-11
A/C compressor clutch diode, V7	412-03-00-1
A/C compressor clutch diode, V7	412-03-00-10
A/C compressor clutch diode, V7	412-03-00-2
A/C compressor clutch diode, V7	412-03-00-3
A/C compressor clutch diode, V7	412-03-00-8
A/C compressor clutch diode, V7	412-03-00-9
A/C compressor clutch solenoid, Y31	303-14A-00-10
A/C compressor clutch solenoid, Y31	303-14B-00-17
A/C compressor clutch solenoid, Y31	303-14C-00-11
A/C compressor clutch solenoid, Y31	303-14H-00-11
A/C compressor clutch solenoid, Y31	412-03-00-1
A/C compressor clutch solenoid, Y31	412-03-00-10
A/C compressor clutch solenoid, Y31	412-03-00-2
A/C compressor clutch solenoid, Y31	412-03-00-3
A/C compressor clutch solenoid, Y31	412-03-00-8
A/C compressor clutch solenoid, Y31	412-03-00-9
A/C high-pressure switch, N126	303-14A-00-10
A/C high-pressure switch, N126	303-14B-00-17
A/C high-pressure switch, N126	303-14C-00-11
A/C high-pressure switch, N126	303-14D-00-10
A/C high-pressure switch, N126	303-14E-00-8
A/C high-pressure switch, N126	303-14F-00-6
A/C high-pressure switch, N126	303-14G-00-4
A/C high-pressure switch, N126	303-14H-00-11
A/C high-pressure switch, N126	412-03-00-1
A/C high-pressure switch, N126	412-03-00-10
A/C high-pressure switch, N126	412-03-00-2
A/C high-pressure switch, N126	412-03-00-3
A/C high-pressure switch, N126	412-03-00-8
A/C high-pressure switch, N126	412-03-00-9
A/C low-pressure switch, N246	303-14A-00-10
A/C low-pressure switch, N246	303-14B-00-17
A/C low-pressure switch, N246	303-14C-00-11
A/C low-pressure switch, N246	303-14D-00-10
A/C low-pressure switch, N246	303-14E-00-8
A/C low-pressure switch, N246	303-14F-00-6
A/C low-pressure switch, N246	303-14G-00-4
A/C low-pressure switch, N246	303-14H-00-11
A/C low-pressure switch, N246	412-03-00-1
A/C low-pressure switch, N246	412-03-00-10
A/C low-pressure switch, N246	412-03-00-2
A/C low-pressure switch, N246	412-03-00-3
A/C low-pressure switch, N246	412-03-00-8
A/C low-pressure switch, N246	412-03-00-9

A/C Wide Open Throttle (WOT) relay, K32	303-14A-00-10
A/C Wide Open Throttle (WOT) relay, K32	303-14B-00-17
A/C Wide Open Throttle (WOT) relay, K32	303-14C-00-11
A/C Wide Open Throttle (WOT) relay, K32	303-14D-00-10
A/C Wide Open Throttle (WOT) relay, K32	303-14H-00-11
A/C Wide Open Throttle (WOT) relay, K32	412-03-00-1
A/C Wide Open Throttle (WOT) relay, K32	412-03-00-10
A/C Wide Open Throttle (WOT) relay, K32	412-03-00-2
A/C Wide Open Throttle (WOT) relay, K32	412-03-00-3
A/C Wide Open Throttle (WOT) relay, K32	412-03-00-8
A/C Wide Open Throttle (WOT) relay, K32	412-03-00-9
ABS module, A7	206-09A-00-1
ABS module, A7	206-09A-00-2
Accelerator pedal position sensor, B129	303-14A-00-8
Accelerator pedal position sensor, B129	303-14E-00-4
Accelerator pedal position sensor, B129	303-14F-00-14
Accelerator pedal position sensor, B129	303-14G-00-9
Air Conditioning	412-03-00-500
Air temperature mode actuator, M249	412-03-00-12
Air temperature mode actuator, M249	412-03-00-5
Ambient air temperature sensor, B203	303-14A-00-8
Ambient air temperature sensor, B203	303-14B-00-5
Ambient air temperature sensor, B203	303-14C-00-2
Ambient air temperature sensor, B203	303-14D-00-4
Ambient air temperature sensor, B203	303-14E-00-6
Ambient air temperature sensor, B203	303-14F-00-10
Ambient air temperature sensor, B203	303-14F-00-11
Ambient air temperature sensor, B203	303-14G-00-6
Ambient air temperature sensor, B203	303-14G-00-7
Ambient air temperature sensor, B203	303-14H-00-6
Antenna, A151	415-01-00-1
Antenna, A151	415-01-00-4
Antenna, A151	415-01-00-5
Antenna, A151	419-07B-00-3
Antenna, triplex, A260	419-07A-00-1
Anti-Lock Control	206-09A-00-1
Anti-Lock Control – Traction Control and Stability Assist	206-09C-00-1
Anti-Theft – Active	419-01A-00-1
Anti-Theft – Passive	419-01B-00-1
Anti-theft alarm horn, H5	419-01A-00-2
Anti-theft alarm horn, H5	419-10-00-6
Anti-theft interior scan sensor, front, B102	419-01A-00-2
Audio control module, A369	415-01-00-8
Audio control module, A369	415-01-00-9
Audio control module, A369	419-07B-00-8
Audio Unit	415-01-00-1
Audio/navigation system control unit, A157	419-07A-00-1
Auto-dimming interior mirror, A222	501-09-00-3
Autolamps/rain sensor module, A365	417-01-00-10

Autolamps/rain sensor module, A365	501-16-00-2
Autolamps/rain sensor, B302	417-01-00-10
Autolamps/rain sensor, B302	501-16-00-3
Automatic Transmission – 4-speed automatic transmission (CD4E)	307-01A-00-1
Automatic Transmission – 5-speed automatic transmission (5F31J)	307-01B-00-1
Auxiliary electric coolant heater relay 1, K168	303-14E-00-3
Auxiliary electric coolant heater relay 1, K168	303-14F-00-7
Auxiliary electric coolant heater relay 1, K168	412-02B-00-1
Auxiliary electric coolant heater relay 2, K169	303-14E-00-3
Auxiliary electric coolant heater relay 2, K169	303-14F-00-7
Auxiliary electric coolant heater relay 2, K169	412-02B-00-1
Auxiliary Heating	412-02B-00-1
Auxiliary IN, D81	415-01-00-1
Auxiliary IN, D81	415-01-00-4
Auxiliary IN, D81	415-01-00-7
Auxiliary IN, D81	415-01-00-9
Auxiliary IN, D81	419-07A-00-5
Auxiliary IN, D81	419-07B-00-6
Auxiliary IN, D81	419-07B-00-7
Auxiliary trailer socket, D46	417-01-00-38
Auxiliary trailer socket, D46	417-01-00-43
Auxiliary trailer socket, D46	417-01-00-52
Battery backed sounder, A196	419-01A-00-2
Battery Junction Box (BJB), P93	700-02-00-1
Battery saver relay, K115	417-02-00-1
Battery saver relay, K115	700-02-00-3
Battery, O1	700-02-00-1
Battery, O1	700-04-00-1
Blower motor control module, A97	412-03-00-13
Blower motor control module, A97	412-03-00-14
Blower motor relay, K14	412-03-00-13
Blower motor relay, K14	412-03-00-14
Blower motor relay, K14	412-03-00-6
Blower motor resistor, R21	412-03-00-6
Blower motor switch, N14	412-03-00-6
Blower motor, M3	412-03-00-14
Blower motor, M3	412-03-00-6
Bluetooth voice control module, A381	415-01-00-10
Bluetooth voice control module, A381	419-08B-00-1
Bluetooth voice control module, A381	419-08B-00-2
Booster heater fuel pump, M175	412-02B-00-3
Booster heater, R50	412-02B-00-2
Booster heater, R50	412-02B-00-3
Brake booster sensor, B220	303-14A-00-12
Brake fluid level switch, N1	413-01-00-4
Brake fluid level switch, N1	413-01-00-5
Brake pedal position switch, N82	303-14A-00-12
Brake pedal position switch, N82	303-14F-00-8
Brake pedal position switch, N82	303-14F-00-9

Brake pedal position switch, N82	303-14G-00-5
Brake pedal position switch, N82	310-03-00-10
Brake pedal position switch, N82	310-03-00-2
Brake pedal position switch, N82	310-03-00-7
Brake pressure switch, N249	307-01B-00-10
Camshaft position sensor, B41	303-07B-00-1
Camshaft position sensor, B41	303-07C-00-1
Camshaft position sensor, B41	303-07D-00-1
Camshaft position sensor, B41	303-07H-00-1
Camshaft position sensor, B41	303-14A-00-11
Camshaft position sensor, B41	303-14B-00-11
Camshaft position sensor, B41	303-14B-00-12
Camshaft position sensor, B41	303-14C-00-7
Camshaft position sensor, B41	303-14D-00-6
Camshaft position sensor, B41	303-14F-00-3
Camshaft position sensor, B41	303-14F-00-5
Camshaft position sensor, B41	303-14G-00-3
Camshaft position sensor, B41	303-14H-00-10
Cargo space lamp, E87	417-02-00-1
Catalyst monitor sensor, B192	303-14A-00-7
Catalyst monitor sensor, B192	303-14B-00-5
Catalyst monitor sensor, B192	303-14C-00-3
Catalyst monitor sensor, B192	303-14D-00-3
Catalyst monitor sensor, LH side, B199	303-14H-00-4
Catalyst monitor sensor, LH side, B199	303-14H-00-5
Catalyst monitor sensor, RH side, B300	303-14H-00-4
Catalyst monitor sensor, RH side, B300	303-14H-00-5
CD changer, A144	415-01-00-6
CD changer, A144	415-01-00-7
CD changer, A144	419-07A-00-4
Cellular Phone	419-08A-00-1
Cellular phone antenna, B219	419-08A-00-1
Cellular phone microphone, A291	419-08A-00-1
Central Junction Box (CJB), P91	700-02-00-3
Cigar lighter, front, R42	501-10-00-14
Cigar lighter, front, R42	501-10-00-15
Cigar lighter, front, R42	501-12-00-1
Climate controlled seat module, LH front, A373	501-10-00-10
Climate controlled seat module, LH front, A373	501-10-00-6
Climate controlled seat module, RH front, A374	501-10-00-12
Climate controlled seat module, RH front, A374	501-10-00-8
Climate controlled seat switch, N668	501-10-00-10
Climate controlled seat switch, N668	501-10-00-11
Climate controlled seat switch, N668	501-10-00-12
Climate controlled seat switch, N668	501-10-00-13
Climate controlled seat switch, N668	501-10-00-6
Climate controlled seat switch, N668	501-10-00-7
Climate controlled seat switch, N668	501-10-00-8
Climate controlled seat switch, N668	501-10-00-9

Clock	413-07-00-1
Clock spring, P13	310-03-00-1
Clock spring, P13	310-03-00-5
Clock spring, P13	310-03-00-6
Clock spring, P13	310-03-00-9
Clock spring, P13	413-06-00-1
Clock spring, P13	501-20B-00-2
Clock, A39	413-07-00-1
Clutch pedal position switch, N81	303-14B-00-7
Clutch pedal position switch, N81	303-14C-00-4
Clutch pedal position switch, N81	303-14D-00-4
Clutch pedal position switch, N81	303-14F-00-10
Clutch pedal position switch, N81	303-14F-00-11
Clutch pedal position switch, N81	303-14G-00-6
Clutch pedal position switch, N81	303-14G-00-7
Clutch pedal position switch, N81	303-14H-00-6
Clutch pedal position switch, N81	310-03-00-2
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Repair Procedures	100-00-05-1
Connector Views	700-07-00-1
Control assembly, A141	415-07-00-3
Coolant supplement 1 heater, R79	303-14E-00-3
Coolant supplement 1 heater, R79	303-14F-00-7
Coolant supplement 1 heater, R79	412-02B-00-1
Coolant supplement 2 heater, R80	303-14E-00-3
Coolant supplement 2 heater, R80	303-14F-00-7
Coolant supplement 2 heater, R80	412-02B-00-1
Cooling fan motor, M37	303-03A-00-1
Cooling fan motor, M37	303-03B-00-1
Cooling fan motor, M37	303-03C-00-1
Cooling fan motor, M37	303-03C-00-2
Cooling fan motor, M37	303-03D-00-1
Cooling fan motor, M37	303-03E-00-1
Cooling fan motor, M37	303-03F-00-1
Cooling fan motor, M37	303-03G-00-1
Cooling fan motor, M37	303-03H-00-1
Cooling fan relay, K45	303-03A-00-1
Cooling fan relay, K45	303-03B-00-1
Cooling fan relay, K45	303-03C-00-1
Cooling fan relay, K45	303-03C-00-2
Cooling fan relay, K45	303-03D-00-1
Cooling fan relay, K45	303-03E-00-1
Cooling fan relay, K45	303-03F-00-1
Cooling fan relay, K45	303-03G-00-1
Cooling fan relay, K45	303-03H-00-1
Cooling fan resistor, R27	303-03A-00-1
Cooling fan resistor, R27	303-03B-00-1
Cooling fan resistor, R27	303-03C-00-2

Cooling fan resistor, R27	303-03H-00-1
Crankshaft position sensor, B43	303-07B-00-1
Crankshaft position sensor, B43	303-07C-00-1
Crankshaft position sensor, B43	303-07D-00-1
Crankshaft position sensor, B43	303-07H-00-1
Crankshaft position sensor, B43	303-14A-00-8
Crankshaft position sensor, B43	303-14B-00-11
Crankshaft position sensor, B43	303-14B-00-12
Crankshaft position sensor, B43	303-14C-00-7
Crankshaft position sensor, B43	303-14D-00-6
Crankshaft position sensor, B43	303-14F-00-13
Crankshaft position sensor, B43	303-14G-00-8
Crankshaft position sensor, B43	303-14H-00-10
Crash sensor, B177	501-20B-00-1
Cylinder head temperature sensor, B135	303-03E-00-1
Cylinder head temperature sensor, B135	303-03F-00-1
Cylinder head temperature sensor, B135	303-03G-00-1
Cylinder head temperature sensor, B135	303-14E-00-6
Cylinder head temperature sensor, B135	303-14F-00-10
Cylinder head temperature sensor, B135	303-14F-00-11
Cylinder head temperature sensor, B135	303-14G-00-6
Cylinder head temperature sensor, B135	303-14G-00-7
Data Link Connector (DLC), D20	418-00B-00-1
Daytime Running Lamps	417-04-00-1
Daytime Running Lamps (DRL) relay, K5	417-04-00-2
Daytime Running Lamps (DRL) relay, K5	417-04-00-4
Defrost mode actuator, M210	412-03-00-11
Defrost mode actuator, M210	412-03-00-4
Diesel particulate filter differential pressure feedback sensor, B189	303-14F-00-12
Diesel pump unit, A74	303-04E-00-1
Diesel pump unit, A74	303-14E-00-2
Diode, V33	303-03A-00-1
Diode, V33	303-03B-00-1
Diode, V33	303-03C-00-2
Diode, V33	303-03D-00-1
Diode, V33	303-03E-00-1
Diode, V33	303-03F-00-1
Diode, V33	303-03G-00-1
Diode, V33	303-03H-00-1
Diode, V33	303-04B-00-1
Diode, V33	303-04B-00-2
Diode, V33	303-14B-00-1
Diode, V33	303-14B-00-2
Diode, V33	303-14B-00-3
Diode, V33	303-14C-00-1
Diode, V33	303-14D-00-1
Diode, V33	303-14H-00-1
Discharge temperature sensor, floor, B246	412-03-00-15
Discharge temperature sensor, floor, B246	412-03-00-7

Discharge temperature sensor, panel, B247	412-03-00-15
Door ajar switch, LH front, N84	413-09-00-4
Door ajar switch, LH front, N84	413-09-00-5
Door ajar switch, LH front, N84	417-02-00-5
Door ajar switch, LH front, N84	419-01A-00-1
Door ajar switch, LH front, N84	419-10-00-6
Door ajar switch, LH front, N84	501-14-00-1
Door ajar switch, LH rear, N86	413-09-00-4
Door ajar switch, LH rear, N86	413-09-00-5
Door ajar switch, LH rear, N86	417-02-00-5
Door ajar switch, LH rear, N86	419-01A-00-1
Door ajar switch, LH rear, N86	419-10-00-6
Door ajar switch, LH rear, N86	501-14-00-1
Door ajar switch, RH front, N85	413-09-00-4
Door ajar switch, RH front, N85	413-09-00-5
Door ajar switch, RH front, N85	417-02-00-5
Door ajar switch, RH front, N85	419-01A-00-1
Door ajar switch, RH front, N85	419-10-00-6
Door ajar switch, RH front, N85	501-14-00-1
Door ajar switch, RH rear, N87	413-09-00-4
Door ajar switch, RH rear, N87	413-09-00-5
Door ajar switch, RH rear, N87	417-02-00-5
Door ajar switch, RH rear, N87	419-01A-00-1
Door ajar switch, RH rear, N87	419-10-00-6
Door ajar switch, RH rear, N87	501-14-00-1
Door lock unit, driver side front, A172	419-01A-00-3
Door lock unit, driver side front, A172	501-14-00-3
Door lock unit, LH rear, A275	501-14-00-2
Door lock unit, passenger side front, A173	501-14-00-3
Door lock unit, RH rear, A276	501-14-00-2
Driver air bag unit, A42	501-20B-00-2
Driver safety belt retractor pretensioner, A225	501-20A-00-2
Driver seat backrest motor, M230	501-10-00-2
Driver seat front height motor, M229	501-10-00-2
Driver seat height motor, M158	501-10-00-1
Driver seat horizontal motor, M227	501-10-00-2
Driver seat rear height motor, M228	501-10-00-2
DVD player, A433	415-07-00-1
DVD player, A433	415-07-00-2
DVD player, A433	415-07-00-4
EEC Diode, V13	303-04A-00-1
EEC Diode, V13	303-04B-00-1
EEC Diode, V13	303-04B-00-2
EEC Diode, V13	303-14A-00-1
EEC Diode, V13	303-14A-00-2
EEC Diode, V13	303-14B-00-1
EEC Diode, V13	303-14B-00-2
EEC Diode, V13	303-14B-00-3
EEC Diode, V13	303-14C-00-1

EEC Diode, V13	303-14D-00-1
EEC Diode, V13	303-14H-00-1
EEC Diode, V13	700-02-00-4
EEC Diode, V13	700-02-00-5
EEC Diode, V13	700-02-00-6
EEC Diode, V13	700-02-00-7
EEC Diode, V13	700-02-00-8
EGR stepper motor, M251	303-14A-00-4
EGR stepper motor, M251	303-14B-00-10
EGR stepper motor, M251	303-14B-00-9
EGR throttle actuator, M252	303-14F-00-4
EGR valve actuator, M254	303-14E-00-1
EGR valve actuator, M254	303-14F-00-1
EGR valve actuator, M254	303-14F-00-2
EGR valve actuator, M254	303-14G-00-1
EGR valve actuator, M254	303-14G-00-2
Electronic Automatic Temperature Control (EATC) module, A205	412-03-00-11
Electronic Engine Controls – 1.8/2.0L Duratec-HE (MI4)	303-14B-00-1
Electronic Engine Controls – 1.8L Duratec-SCi (MI4)	303-14A-00-1
Electronic Engine Controls – 2.0L Duratorq-DI/TDDi (Puma) Diesel	303-14E-00-1
Electronic Engine Controls – 2.0L Duratorq-TDCi (Puma) Diesel	303-14F-00-1
Electronic Engine Controls – 2.2L Duratorq-TDCi (Puma) Diesel	303-14G-00-1
Electronic Engine Controls – 2.5L Duratec-VE (VE6)	303-14C-00-1
Electronic Engine Controls – 3.0L Duratec-SE (VE6)	303-14D-00-1
Electronic Engine Controls – 3.0L Duratec-ST (VE6)	303-14H-00-1
Electronic Stability Program (ESP) module, A176	206-09C-00-1
Electronic thermostat, B248	303-14A-00-1
Electronic thermostat, B248	303-14A-00-2
Electronic thermostat, B248	303-14B-00-13
Electronic throttle body, A364	303-14A-00-11
Engine compartment switch, N21	419-01A-00-2
Engine Coolant Temperature (ECT) sensor, B10	303-03A-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-03B-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-03C-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-03C-00-2
Engine Coolant Temperature (ECT) sensor, B10	303-03H-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-14A-00-8
Engine Coolant Temperature (ECT) sensor, B10	303-14B-00-6
Engine Coolant Temperature (ECT) sensor, B10	303-14C-00-5
Engine Coolant Temperature (ECT) sensor, B10	303-14D-00-5
Engine Coolant Temperature (ECT) sensor, B10	303-14H-00-7
Engine Cooling – 1.8/2.0L Duratec-HE (MI4)	303-03B-00-1
Engine Cooling – 1.8L Duratec-SCi (MI4)	303-03A-00-1
Engine Cooling – 2.0L Duratorq-DI/TDDi (Puma) Diesel	303-03E-00-1
Engine Cooling – 2.0L Duratorq-TDCi (Puma) Diesel	303-03F-00-1
Engine Cooling – 2.2L Duratorq-TDCi (Puma) Diesel	303-03G-00-1
Engine Cooling – 2.5L Duratec-VE (VE6)	303-03C-00-1
Engine Cooling – 3.0L Duratec-SE (VE6)	303-03D-00-1
Engine Cooling – 3.0L Duratec-ST (VE6)	303-03H-00-1

Engine Ignition – 1.8/2.0L Duratec–HE (MI4)	303-07B-00-1
Engine Ignition – 1.8L Duratec–SCi (MI4)	303-07A-00-1
Engine Ignition – 2.5L Duratec–VE (VE6)	303-07C-00-1
Engine Ignition – 3.0L Duratec–SE (VE6)	303-07D-00-1
Engine Ignition – 3.0L Duratec–ST (VE6)	303-07H-00-1
Engine RPM sensor, B251	303-14E-00-6
ESP deactivation switch, N373	206-09C-00-3
ESP disable and tailgate/decklid release switch, N389	206-09C-00-3
ESP disable and tailgate/decklid release switch, N389	419-01A-00-3
Evaporative emission canister purge valve, Y1	303-14A-00-1
Evaporative emission canister purge valve, Y1	303-14A-00-2
Evaporative emission canister purge valve, Y1	303-14B-00-1
Evaporative emission canister purge valve, Y1	303-14B-00-2
Evaporative emission canister purge valve, Y1	303-14C-00-1
Evaporative emission canister purge valve, Y1	303-14D-00-1
Evaporative emission canister purge valve, Y1	303-14H-00-1
Exhaust gas recirculation (EGR) valve position sensor, B136	303-14E-00-5
Exhaust gas recirculation (EGR) valve position sensor, B136	303-14F-00-10
Exhaust gas recirculation (EGR) valve position sensor, B136	303-14F-00-11
Exhaust gas recirculation (EGR) valve position sensor, B136	303-14G-00-6
Exhaust gas recirculation (EGR) valve position sensor, B136	303-14G-00-7
Exterior Lighting – Autolamps	417-01-00-10
Exterior Lighting – Fog lamps	417-01-00-46
Exterior Lighting – Headlamp Leveling	417-01-00-11
Exterior Lighting – Headlamps	417-01-00-1
Exterior Lighting – Licence plate lamps	417-01-00-35
Exterior Lighting – Parking Lamps	417-01-00-19
Exterior Lighting – Reversing lamps	417-01-00-36
Exterior Lighting – Stop Lamps	417-01-00-27
Exterior Lighting – Trailer socket	417-01-00-52
Exterior Lighting – Turn Signal and Hazard Flasher Lamps	417-01-00-13
Exterior mirror, driver side, A355	501-09-00-1
Exterior mirror, driver side, A355	501-11-00-8
Exterior mirror, passenger side, A356	501-09-00-1
Exterior mirror, passenger side, A356	501-11-00-8
F1	700-02-00-1
F1	700-03-00-1
F2	700-02-00-1
F2	700-02-00-22
F2	700-02-00-23
F2	700-02-00-24
F2	700-02-00-25
F2	700-03-00-1
F3	700-03-00-2
F4	700-03-00-3
F5	700-03-00-3
F6	700-03-00-3
F7	700-02-00-3
F7	700-03-00-4

F8	700-02-00-4
F8	700-02-00-5
F8	700-02-00-6
F8	700-02-00-7
F8	700-02-00-8
F8	700-02-00-9
F8	700-03-00-5
F8	700-03-00-6
F8	700-03-00-7
F9	700-02-00-4
F9	700-02-00-5
F9	700-02-00-6
F9	700-02-00-7
F9	700-02-00-8
F9	700-02-00-9
F9	700-03-00-8
F10	700-02-00-4
F10	700-02-00-5
F10	700-02-00-6
F10	700-02-00-7
F10	700-02-00-8
F10	700-03-00-9
F11	700-02-00-11
F11	700-03-00-10
F13	700-02-00-11
F13	700-03-00-10
F15	700-02-00-11
F15	700-03-00-10
F16	700-02-00-14
F16	700-02-00-15
F16	700-02-00-16
F16	700-02-00-17
F16	700-03-00-11
F17	700-02-00-4
F17	700-02-00-5
F17	700-02-00-6
F17	700-02-00-7
F17	700-02-00-9
F17	700-03-00-12
F18	700-02-00-14
F18	700-02-00-15
F18	700-02-00-16
F18	700-02-00-17
F18	700-03-00-13
F20	700-02-00-10
F20	700-03-00-14
F21	700-02-00-16
F21	700-02-00-17
F21	700-02-00-21

F21	700-03-00-14
F22	700-02-00-10
F22	700-03-00-15
F22	700-03-00-16
F23	700-02-00-10
F23	700-03-00-15
F23	700-03-00-16
F24	700-02-00-10
F24	700-03-00-17
F25	700-02-00-10
F25	700-03-00-17
F26	700-02-00-11
F26	700-03-00-18
F27	700-02-00-11
F27	700-03-00-19
F27	700-03-00-20
F28	700-02-00-8
F28	700-02-00-12
F28	700-02-00-13
F28	700-02-00-21
F28	700-03-00-21
F29	700-02-00-11
F29	700-03-00-21
F30	700-02-00-8
F30	700-02-00-11
F30	700-03-00-22
F30	700-03-00-23
F31	700-02-00-11
F31	700-03-00-22
F31	700-03-00-23
F32	700-02-00-8
F32	700-03-00-22
F32	700-03-00-23
F33	700-02-00-4
F33	700-02-00-9
F33	700-03-00-23
F33	700-03-00-24
F37	700-02-00-4
F37	700-02-00-5
F37	700-02-00-6
F37	700-02-00-7
F37	700-02-00-8
F37	700-03-00-25
F37	700-03-00-26
F37	700-03-00-27
F37	700-03-00-28
F37	700-03-00-29
F37	700-03-00-30
F40	700-02-00-4

F40	700-02-00-5
F40	700-02-00-6
F40	700-02-00-7
F40	700-02-00-8
F40	700-02-00-9
F40	700-03-00-31
F40	700-03-00-32
F40	700-03-00-33
F40	700-03-00-34
F40	700-03-00-35
F41	700-02-00-9
F41	700-03-00-36
F42	700-02-00-4
F42	700-02-00-5
F42	700-02-00-6
F42	700-02-00-7
F42	700-02-00-8
F42	700-02-00-9
F42	700-03-00-37
F42	700-03-00-38
F42	700-03-00-39
F42	700-03-00-40
F42	700-03-00-41
F42	700-03-00-42
F42	700-03-00-43
F42	700-03-00-44
F60	700-02-00-3
F60	700-03-00-45
F61	700-02-00-3
F61	700-03-00-46
F62	700-02-00-1
F62	700-02-00-22
F62	700-02-00-24
F62	700-02-00-25
F62	700-03-00-47
F63	700-02-00-21
F63	700-03-00-48
F63	700-03-00-49
F64	700-02-00-21
F64	700-03-00-50
F64	700-03-00-51
F64	700-03-00-52
F64	700-03-00-53
F65	700-02-00-3
F65	700-03-00-54
F66	700-02-00-3
F66	700-03-00-54
F67	700-02-00-1
F67	700-02-00-5

F67	700-02-00-6
F67	700-02-00-7
F67	700-02-00-8
F67	700-03-00-55
F67	700-03-00-56
F67	700-03-00-57
F67	700-03-00-58
F67	700-03-00-59
F67	700-03-00-60
F68	700-02-00-1
F68	700-02-00-3
F68	700-03-00-61
F69	700-02-00-12
F69	700-02-00-13
F69	700-03-00-62
F69	700-03-00-63
F70	700-02-00-3
F70	700-03-00-64
F71	700-02-00-3
F71	700-03-00-65
F71	700-03-00-66
F71	700-03-00-67
F71	700-03-00-68
F72	700-02-00-3
F72	700-03-00-69
F72	700-03-00-70
F73	700-02-00-3
F73	700-03-00-71
F74	700-02-00-3
F74	700-03-00-72
F74	700-03-00-73
F74	700-03-00-74
F75	700-02-00-3
F75	700-03-00-75
F75	700-03-00-76
F76	700-03-00-77
F76	700-03-00-78
F77	700-02-00-1
F77	700-03-00-77
F77	700-03-00-78
F78	700-02-00-1
F78	700-03-00-79
F79	700-02-00-26
F80	700-02-00-1
F80	700-03-00-79
F81	700-02-00-1
F81	700-03-00-80
F82	700-02-00-1
F82	700-03-00-81

F82	700-03-00-82
F83	700-02-00-1
F83	700-03-00-83
F85	700-02-00-3
F85	700-03-00-84
F86	700-02-00-3
F86	700-03-00-84
F87	700-02-00-3
F88	700-02-00-1
F88	700-02-00-14
F88	700-02-00-15
F88	700-02-00-16
F88	700-02-00-17
F88	700-02-00-18
F88	700-02-00-19
F88	700-03-00-85
F88	700-03-00-86
F89	700-02-00-1
F89	700-03-00-85
F89	700-03-00-86
F90	700-02-00-1
F90	700-02-00-27
F90	700-03-00-87
F91	700-02-00-1
F91	700-03-00-88
F91	700-03-00-89
F91	700-03-00-90
F92	700-02-00-1
F92	700-03-00-91
F92	700-03-00-92
F93	700-02-00-1
F93	700-03-00-93
F94	700-02-00-1
F94	700-02-00-26
F94	700-03-00-94
F95	700-02-00-14
F95	700-02-00-15
F95	700-02-00-16
F95	700-02-00-17
F95	700-03-00-95
F96	700-02-00-14
F96	700-02-00-15
F96	700-02-00-16
F96	700-02-00-17
F96	700-03-00-95
F97	700-02-00-21
F97	700-03-00-96
F98	700-03-00-97
F99	700-02-00-3

F99	700-03-00-98
F99	700-03-00-99
F102	700-02-00-1
F102	700-03-00-100
F200	700-03-00-74
F200	700-03-00-101
F201	700-03-00-73
F201	700-03-00-74
F201	700-03-00-101
Fog lamp, LH front, E43	417-01-00-46
Fog lamp, LH front, E43	417-01-00-49
Fog lamp, RH front, E42	417-01-00-46
Fog lamp, RH front, E42	417-01-00-49
Footwell lamp, LH front, E61	417-02-00-3
Footwell lamp, RH front, E62	417-02-00-3
Front dome lamp, E63	417-02-00-2
Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)	303-04B-00-1
Fuel Charging and Controls – 1.8L Duratec–SCi (MI4)	303-04A-00-1
Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel	303-04E-00-1
Fuel Charging and Controls – 2.0L Duratorq–TDCi (Puma) Diesel	303-04F-00-1
Fuel Charging and Controls – 2.2L Duratorq–TDCi (Puma) Diesel	303-04G-00-1
Fuel Charging and Controls – 2.5L Duratec–VE (VE6)	303-04C-00-1
Fuel Charging and Controls – 3.0L Duratec–SE (VE6)	303-04D-00-1
Fuel Charging and Controls – 3.0L Duratec–ST (VE6)	303-04H-00-1
Fuel control valve, Y190	303-14A-00-3
Fuel injector 1, Y108	303-04A-00-1
Fuel injector 1, Y108	303-04B-00-1
Fuel injector 1, Y108	303-04B-00-2
Fuel injector 1, Y108	303-04C-00-1
Fuel injector 1, Y108	303-04D-00-1
Fuel injector 1, Y108	303-04F-00-1
Fuel injector 1, Y108	303-04G-00-1
Fuel injector 1, Y108	303-04H-00-1
Fuel injector 2, Y109	303-04A-00-1
Fuel injector 2, Y109	303-04B-00-1
Fuel injector 2, Y109	303-04B-00-2
Fuel injector 2, Y109	303-04C-00-1
Fuel injector 2, Y109	303-04D-00-1
Fuel injector 2, Y109	303-04F-00-1
Fuel injector 2, Y109	303-04G-00-1
Fuel injector 2, Y109	303-04H-00-1
Fuel injector 3, Y110	303-04A-00-1
Fuel injector 3, Y110	303-04B-00-1
Fuel injector 3, Y110	303-04B-00-2
Fuel injector 3, Y110	303-04C-00-1
Fuel injector 3, Y110	303-04D-00-1
Fuel injector 3, Y110	303-04F-00-1
Fuel injector 3, Y110	303-04G-00-1
Fuel injector 3, Y110	303-04H-00-1

Fuel injector 4, Y111	303-04A-00-1
Fuel injector 4, Y111	303-04B-00-1
Fuel injector 4, Y111	303-04B-00-2
Fuel injector 4, Y111	303-04C-00-1
Fuel injector 4, Y111	303-04D-00-1
Fuel injector 4, Y111	303-04F-00-1
Fuel injector 4, Y111	303-04G-00-1
Fuel injector 4, Y111	303-04H-00-1
Fuel injector 5, Y112	303-04C-00-1
Fuel injector 5, Y112	303-04D-00-1
Fuel injector 5, Y112	303-04H-00-1
Fuel injector 6, Y113	303-04C-00-1
Fuel injector 6, Y113	303-04D-00-1
Fuel injector 6, Y113	303-04H-00-1
Fuel metering valve, Y165	303-14F-00-1
Fuel metering valve, Y165	303-14F-00-2
Fuel metering valve, Y165	303-14F-00-4
Fuel metering valve, Y165	303-14G-00-1
Fuel metering valve, Y165	303-14G-00-2
Fuel pump relay, K4	303-14A-00-5
Fuel pump relay, K4	303-14B-00-13
Fuel pump relay, K4	303-14B-00-14
Fuel pump relay, K4	303-14C-00-8
Fuel pump relay, K4	303-14D-00-7
Fuel pump relay, K4	303-14H-00-8
Fuel pump relay, K4	303-14H-00-9
Fuel rail pressure transducer sensor, B225	303-14A-00-11
Fuel rail pressure transducer sensor, B225	303-14F-00-13
Fuel rail pressure transducer sensor, B225	303-14G-00-8
Fuel tank unit, A31	413-01-00-2
Fuel temperature sensor, B109	303-14F-00-13
Fuel temperature sensor, B109	303-14G-00-8
Fuse and Relay Information	700-01-00-1
Fuse Details	700-03-00-1
Fuse holder 2, P46	417-01-00-30
Fuse holder 2, P46	417-01-00-34
Fuse holder 2, P46	417-01-00-53
Fuse holder 2, P46	417-01-00-54
Fuse holder 2, P46	700-03-00-101
Fuse holder 2, P46	700-03-00-73
Fuse holder 2, P46	700-03-00-74
Fuse holder, P44	417-01-00-41
Fuse holder, P44	417-01-00-45
Fuse holder, P44	417-01-00-54
Fuse holder, P44	700-03-00-101
Fuse holder, P44	700-03-00-74
G100	700-04-00-1
G101	700-04-00-1
G102	700-04-00-2