

Mondeo Wiring Diagrams - FAP

Table of Contents

Group 1 – General Information

General Information

Table of Contents	100-00-00-1
Systems Overview	100-00-01-1
Index	100-00-02-1
Introduction	100-00-03-1
Symbols	100-00-04-1
Connector Repair Procedures	100-00-05-1

Group 2 – Chassis

Brake System

Anti-Lock Control	206-09A-00-1
Anti-Lock Control – Stability Assist	206-09C-00-1

Group 3 – Powertrain

Engine

Engine Cooling –	
2.3L Duratec-HE (MI4)	303-03A-00-1
Engine Cooling –	
2.0L Duratec-HE (MI4)	303-03B-00-1
Engine Cooling –	
2.0L Duratorq-TDCi (DW) Diesel	303-03C-00-1
Fuel Charging and Controls –	
2.3L Duratec-HE (MI4)	303-04A-00-1
Fuel Charging and Controls –	
2.0L Duratec-HE (MI4)	303-04B-00-1
Fuel Charging and Controls –	
2.0L Duratorq-TDCi (DW) Diesel	303-04C-00-1
Starting System –	
2.3L Duratec-HE (MI4)	303-06A-00-1
Starting System –	
2.0L Duratec-HE (MI4)	303-06B-00-1
Starting System –	
2.0L Duratorq-TDCi (DW) Diesel	303-06C-00-1
Engine Ignition –	
2.3L Duratec-HE (MI4)	303-07A-00-1
Engine Ignition –	
2.0L Duratec-HE (MI4)	303-07B-00-1
Glow Plug System –	
2.0L Duratorq-TDCi (DW) Diesel	303-07C-00-1
Electronic Engine Controls –	
2.3L Duratec-HE (MI4)	303-14A-00-1

Electronic Engine Controls –	
2.0L Duratec-HE (MI4)	303-14B-00-1
Electronic Engine Controls –	
2.0L Duratorq-TDCi (DW) Diesel	303-14C-00-1

Automatic Transmission/Transaxle

Automatic Transmission – 6-speed automatic transmission (AWF21)	307-01A-00-1
---	--------------

Group 4 – Electrical

Climate Control System

Air Conditioning – without EATC	412-03-00-1
Air Conditioning – with EATC	412-03-00-5

Instrumentation and Warning Systems

Instrument Cluster and	
Panel Illumination	413-00-00-1
Instrument Cluster	413-01-00-1
Horn	413-06-00-1
Clock	413-07-00-1
Parking Aid	413-13-00-1

Battery and Charging System

Generator and Regulator –	
2.3L Duratec-HE (MI4)	414-02A-00-1
Generator and Regulator –	
2.0L Duratec-HE (MI4)	414-02B-00-1
Generator and Regulator –	
2.0L Duratorq-TDCi (DW) Diesel	414-02C-00-1

Entertainment Systems

Audio Unit	415-01-00-1
Speakers	415-03-00-1

Lighting

Exterior Lighting – Headlamps	417-01-00-1
Exterior Lighting – Headlamp leveling	417-01-00-6
Exterior Lighting – Cornering lamps	417-01-00-8
Exterior Lighting –	
Position and Parking Lamps	417-01-00-9
Exterior Lighting –	
Licence plate lamps	417-01-00-10
Exterior Lighting – Turn Signal and	
Hazard Flasher Lamps	417-01-00-11
Exterior Lighting – Stop Lamps	417-01-00-14
Exterior Lighting – Front fog lamps	417-01-00-15
Exterior Lighting – Rear fog lamps	417-01-00-16

Exterior Lighting – Reversing lamps	417-01-00-17
Interior Lighting	417-02-00-1

Electrical Distribution

Module Communications Network	418-00-00-1
-------------------------------	-------------

Electronic Feature Group

Anti-Theft – Active	419-01A-00-1
Anti-Theft – Passive	419-01B-00-1
Cellular Phone –	
Bluetooth voice control	419-08B-00-1
Multifunction Electronic Control	
Modules	419-10-00-1

Group 5 – Body and Paint

Body and Paint

Rear View Mirrors	501-09-00-1
Seating	501-10-00-1
Glass, Frames and Mechanisms –	
Power windows	501-11-00-1
Glass, Frames and Mechanisms –	
Heated rear window	501-11-00-7
Glass, Frames and Mechanisms –	
Heated exterior mirrors	501-11-00-8
Instrument Panel and Console	501-12-00-1
Handles, Locks, Latches and Entry Systems –	
Central locking	
without keyless vehicle system	501-14-00-1
Handles, Locks, Latches and Entry Systems –	
with keyless vehicle system	501-14-00-8
Wipers and Washers	501-16-00-1
Roof Opening Panel	501-17-00-1
Safety Belt System	501-20A-00-1
Supplemental Restraint System	501-20B-00-1

Group 7 – General Wiring Information

Wiring Information

Fuse and Relay Information	700-01-00-1
Power Distribution	700-02-00-1
Fuse Details	700-03-00-1
Ground Distribution	700-04-00-1
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Views	700-07-00-1

Systems Overview

01/2007
100-00-01-1
2007.5
Mondeo

Generator and Regulator – 2.0L Duratorq–TDCi (DW) Diesel 414-02C-00
Generator and Regulator – 2.0L Duratec–HE (M14) 414-02B-00
Generator and Regulator – 2.3L Duratec–HE (M14) 414-02A-00
Automatic Transmission – 6–speed automatic transmission (AWF21) 307-01A-00
Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel 303-14C-00
Electronic Engine Controls – 2.0L Duratec–HE (M14) 303-14B-00
Electronic Engine Controls – 2.3L Duratec–HE (M14) 303-14A-00
Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel 303-07C-00
Engine Ignition – 2.0L Duratec–HE (M14) 303-07B-00
Engine Ignition – 2.3L Duratec–HE (M14) 303-07A-00
Starting System – 2.0L Duratorq–TDCi (DW) Diesel 303-06C-00
Starting System – 2.0L Duratec–HE (M14) 303-06B-00
Starting System – 2.3L Duratec–HE (M14) 303-06A-00
Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel 303-04C-00
Fuel Charging and Controls – 2.0L Duratec–HE (M14) 303-04B-00
Fuel Charging and Controls – 2.3L Duratec–HE (M14) 303-04A-00
Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel 303-03C-00
Engine Cooling – 2.0L Duratec–HE (M14) 303-03B-00
Engine Cooling – 2.3L Duratec–HE (M14) 303-03A-00

Anti–Theft – Passive 419-01B-00
Anti–Theft – Active 419-01A-00
Module Communications Network 418-00-00
Speakers 415-03-00
Audio Unit 415-01-00
Clock 413-07-00
Horn 413-06-00
Instrument Cluster 413-01-00
Instrument Cluster and Panel Illumination 413-00-00
Air Conditioning – with EATC 412-03-00-5
Air Conditioning – without EATC 412-03-00-1

Supplemental Restraint System 501-20B-00
Safety Belt System 501-20A-00
Instrument Panel and Console 501-12-00
Multifunction Electronic Control Modules 419-10-00
Cellular Phone – Bluetooth voice control 419-08B-00

Glass, Frames and Mechanisms – Heated rear window 501-11-00-7

Exterior Lighting – Reversing lamps 417-01-00-17

Exterior Lighting – Rear fog lamps 417-01-00-16

Exterior Lighting – Stop Lamps 417-01-00-14

Exterior Lighting – Turn Signal and Hazard Flasher Lamps 417-01-00-11

Exterior Lighting – Licence plate lamps 417-01-00-10

Exterior Lighting – Position and Parking Lamps 417-01-00-9

Interior Lighting 417-02-00

Roof Opening Panel 501-17-00

Seating 501-10-00

Parking Aid 413-13-00

Glass, Frames and Mechanisms – Power windows 501-11-00-1

Wiper and Washer 501-16-00

Rear View Mirrors 501-09-00

Glass, Frames and Mechanisms – Heated exterior mirrors 501-11-00-8

Exterior Lighting – Headlamps 417-01-00-1

Exterior Lighting – Headlamp leveling 417-01-00-6

Exterior Lighting – Cornering Lamps 417-01-00-8

Exterior Lighting – Position and Parking Lamps 417-01-00-9

Exterior Lighting – Turn Signal and Hazard Flasher Lamps 417-01-00-11


Exterior Lighting – Front fog lamps 417-01-00-15

Anti–Lock Control 206-09A-00

Anti–Lock Control – Stability Assist 206-09C-00

Handles, Locks, Latches and Entry Systems – Central locking without keyless vehicle system 501-14-00-1

Handles, Locks, Latches and Entry Systems – with keyless vehicle system 501-14-00-8

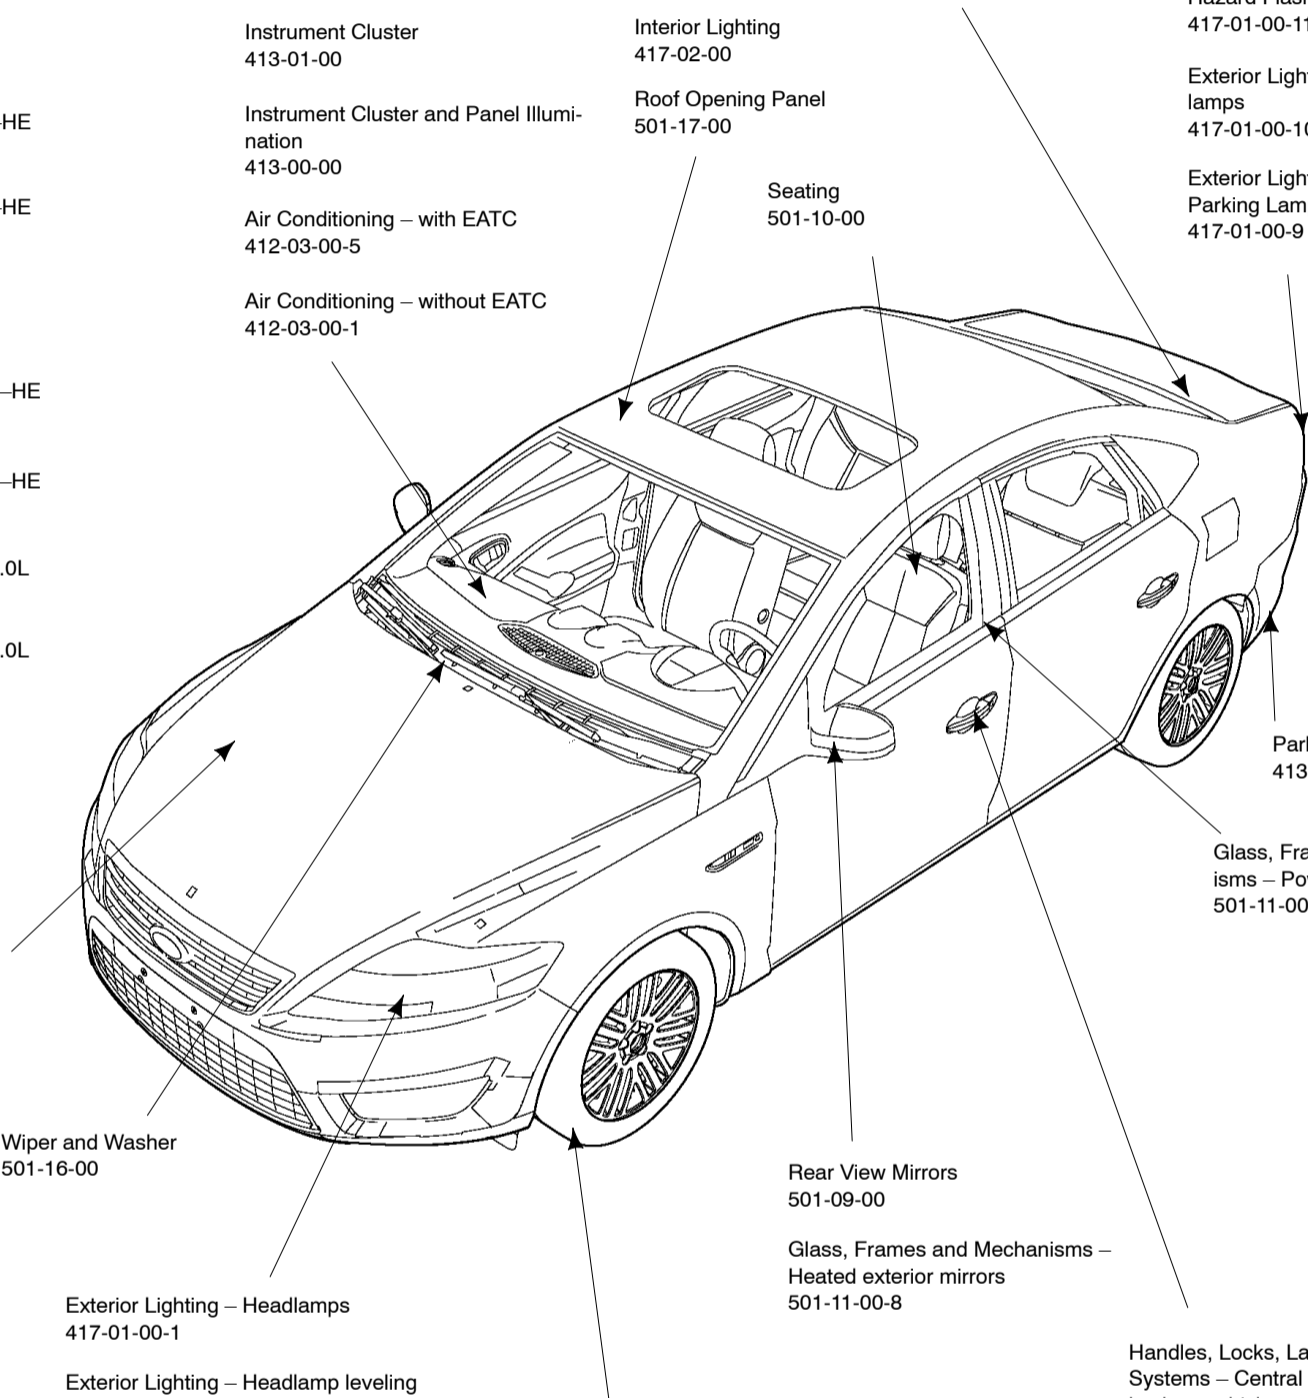

A/C Clutch relay, K107	412-03-00-11
A/C Clutch relay, K107	412-03-00-12
A/C Clutch relay, K107	412-03-00-3
A/C Clutch relay, K107	412-03-00-4
A/C Compressor clutch, Y16	412-03-00-11
A/C Compressor clutch, Y16	412-03-00-12
A/C Compressor clutch, Y16	412-03-00-3
A/C Compressor clutch, Y16	412-03-00-4
A/C pressure sensor, B308	303-03A-00-1
A/C pressure sensor, B308	303-03B-00-1
A/C pressure sensor, B308	303-03C-00-1
A/C pressure sensor, B308	303-14A-00-4
A/C pressure sensor, B308	303-14B-00-4
A/C pressure sensor, B308	412-03-00-12
A/C pressure sensor, B308	412-03-00-3
A/C pressure sensor, B308	412-03-00-4
ABS module, A7	206-09A-00-2
Accelerator pedal position sensor, B129	303-14A-00-6
Accelerator pedal position sensor, B129	303-14B-00-6
Accelerator pedal position sensor, B129	303-14C-00-7
Advanced Front Lighting System (AFS) module, A501	417-01-00-6
Air Conditioning – with EATC	412-03-00-5
Air Conditioning – without EATC	412-03-00-1
Air quality sensor, B316	412-03-00-7
Air temperature door motor, LH side, M100	412-03-00-8
Air temperature door motor, RH side, M101	412-03-00-8
Ambient air temperature sensor, B203	303-14A-00-5
Ambient air temperature sensor, B203	303-14B-00-5
Ambient air temperature sensor, B203	413-01-00-3
Ambient air temperature sensor, B203	413-01-00-4
Ambient air temperature sensor, B203	413-01-00-5
Antenna amplifier module, A507	415-01-00-1
Antenna, A151	415-01-00-1
Antenna, A151	419-08B-00-1
Anti-Lock Control	206-09A-00-1
Anti-Lock Control – Stability Assist	206-09C-00-1
Anti-Theft – Active	419-01A-00-1
Anti-Theft – Passive	419-01B-00-1
Anti-theft alarm horn, H5	419-01A-00-1
Anti-theft interior scan sensor, front, B102	419-01A-00-1
Anti-theft relay, K143	419-01A-00-1
Audio control module, A369	415-03-00-1
Audio Unit	415-01-00-1
Automatic Transmission – 6-speed automatic transmission (AWF21)	307-01A-00-1
Auxiliary IN, D81	415-01-00-1
Auxiliary IN, D81	419-08B-00-3
Battery Junction Box (BJB), P93	700-02-00-1
Battery Junction Box (BJB), P93	700-02-00-2
Battery Junction Box (BJB), P93	700-02-00-3

Battery Junction Box (BJB), P93	700-02-00-4
Battery Junction Box (BJB), P93	700-02-00-5
Battery Junction Box (BJB), P93	700-03-00-1
Battery Junction Box (BJB), P93	700-03-00-10
Battery Junction Box (BJB), P93	700-03-00-11
Battery Junction Box (BJB), P93	700-03-00-12
Battery Junction Box (BJB), P93	700-03-00-13
Battery Junction Box (BJB), P93	700-03-00-14
Battery Junction Box (BJB), P93	700-03-00-15
Battery Junction Box (BJB), P93	700-03-00-16
Battery Junction Box (BJB), P93	700-03-00-17
Battery Junction Box (BJB), P93	700-03-00-18
Battery Junction Box (BJB), P93	700-03-00-19
Battery Junction Box (BJB), P93	700-03-00-2
Battery Junction Box (BJB), P93	700-03-00-20
Battery Junction Box (BJB), P93	700-03-00-3
Battery Junction Box (BJB), P93	700-03-00-4
Battery Junction Box (BJB), P93	700-03-00-5
Battery Junction Box (BJB), P93	700-03-00-6
Battery Junction Box (BJB), P93	700-03-00-7
Battery Junction Box (BJB), P93	700-03-00-8
Battery Junction Box (BJB), P93	700-03-00-9
Battery, O1	700-02-00-1
Battery, O1	700-02-00-3
Battery, O1	700-02-00-4
Battery, O1	700-04-00-1
Blower motor control module, A97	412-03-00-6
Blower motor relay, K14	412-03-00-1
Blower motor relay, K14	412-03-00-6
Blower motor resistor, R21	412-03-00-1
Blower motor, M3	412-03-00-1
Blower motor, M3	412-03-00-6
Bluetooth voice control module, A381	419-08B-00-2
Boost pressure sensor, B108	303-14C-00-4
Brake fluid level switch, N1	413-01-00-2
Brake pedal position switch, N82	303-14A-00-6
Brake pedal position switch, N82	303-14B-00-6
Brake pedal position switch, N82	303-14C-00-7
Brake pedal position switch, N82	501-14-00-10
Brake pedal position switch, N82	501-14-00-11
Brake pedal position switch, N82	501-14-00-12
Camshaft position sensor, B41	303-07A-00-1
Camshaft position sensor, B41	303-07B-00-1
Camshaft position sensor, B41	303-14A-00-3
Camshaft position sensor, B41	303-14B-00-3
Camshaft position sensor, B41	303-14C-00-5
Catalyst monitor sensor, B192	303-14A-00-1
Catalyst monitor sensor, B192	303-14B-00-1
Cellular Phone – Bluetooth voice control	419-08B-00-1

Central Junction Box (CJB), P91	700-02-00-2
Central Junction Box (CJB), P91	700-02-00-3
Central Junction Box (CJB), P91	700-02-00-4
Central Junction Box (CJB), P91	700-02-00-5
Central Junction Box (CJB), P91	700-03-00-10
Central Junction Box (CJB), P91	700-03-00-19
Central Junction Box (CJB), P91	700-03-00-21
Central Junction Box (CJB), P91	700-03-00-22
Central Junction Box (CJB), P91	700-03-00-23
Central Junction Box (CJB), P91	700-03-00-24
Central Junction Box (CJB), P91	700-03-00-25
Central Junction Box (CJB), P91	700-03-00-26
Central Junction Box (CJB), P91	700-03-00-27
Central Junction Box (CJB), P91	700-03-00-28
Central Junction Box (CJB), P91	700-03-00-29
Central Junction Box (CJB), P91	700-03-00-30
Central Junction Box (CJB), P91	700-03-00-31
Central Junction Box (CJB), P91	700-03-00-32
Central Junction Box (CJB), P91	700-03-00-33
Cigar lighter, front, R42	501-12-00-1
Cigar lighter, rear, R43	501-12-00-1
Climate controlled seat module, LH front, A373	501-10-00-2
Climate controlled seat module, RH front, A374	501-10-00-4
Climate controlled seat switch, N668	501-10-00-2
Climate controlled seat switch, N668	501-10-00-3
Climate controlled seat switch, N668	501-10-00-4
Climate controlled seat switch, N668	501-10-00-5
Clock	413-07-00-1
Component Location Charts	700-05-00-1
Component Location Views	700-06-00-1
Connector Repair Procedures	100-00-05-1
Connector Views	700-07-00-1
Cooling fan module, A118	303-03A-00-1
Cooling fan module, A118	303-03B-00-1
Cooling fan module, A118	303-03C-00-1
Crankshaft position sensor, B43	303-07A-00-1
Crankshaft position sensor, B43	303-07B-00-1
Crankshaft position sensor, B43	303-14A-00-3
Crankshaft position sensor, B43	303-14B-00-3
Crankshaft position sensor, B43	303-14C-00-4
Crankshaft position sensor, B43	413-01-00-3
Crankshaft position sensor, B43	413-01-00-4
Crankshaft position sensor, B43	413-01-00-5
Crash sensor, B177	501-20B-00-3
Data Link Connector (DLC), D20	418-00-00-1
Diesel particulate filter differential pressure feedback sensor, B189	303-14C-00-6
Diode, V33	206-09C-00-1
Diode, V33	206-09C-00-2
Diode, V33	501-14-00-8

Discharge temperature sensor, floor, LH side, B304	412-03-00-7
Discharge temperature sensor, floor, RH side, B305	412-03-00-7
Discharge temperature sensor, panel, LH side, B306	412-03-00-7
Discharge temperature sensor, panel, RH side, B307	412-03-00-7
Door control module, driver, A351	501-11-00-8
Door control module, LH side rear, A353	413-00-00-4
Door control module, LH side rear, A353	501-11-00-1
Door control module, passenger, A352	501-11-00-2
Door control module, passenger, A352	501-11-00-9
Door control module, RH side rear, A354	413-00-00-5
Door control module, RH side rear, A354	501-11-00-2
Door entry lamp, driver side front, E122	417-02-00-4
Door entry lamp, driver side rear, E124	417-02-00-4
Door entry lamp, passenger side front, E123	417-02-00-4
Door entry lamp, passenger side rear, E125	417-02-00-4
Door lock unit, driver side front, A172	501-14-00-15
Door lock unit, driver side front, A172	501-14-00-2
Door lock unit, LH rear, A275	501-14-00-18
Door lock unit, LH rear, A275	501-14-00-4
Door lock unit, liftgate, A333	501-14-00-20
Door lock unit, liftgate, A333	501-14-00-6
Door lock unit, passenger side front, A173	501-14-00-17
Door lock unit, passenger side front, A173	501-14-00-3
Door lock unit, RH rear, A276	501-14-00-19
Door lock unit, RH rear, A276	501-14-00-5
Door marker lamp, driver side front, E129	417-02-00-9
Door marker lamp, passenger side front, E130	417-02-00-9
Double-tone horn, H14	413-06-00-1
Driver air bag unit, A42	501-20B-00-1
Driver seat module, A207	501-10-00-1
EGR stepper motor, M251	303-14A-00-5
EGR stepper motor, M251	303-14B-00-5
EGR throttle actuator, M252	303-14C-00-1
Electronic Automatic Temperature Control (EATC) module, A205	412-03-00-7
Electronic Engine Controls – 2.0L Duratec-HE (MI4)	303-14B-00-1
Electronic Engine Controls – 2.0L Duratorq-TDCi (DW) Diesel	303-14C-00-1
Electronic Engine Controls – 2.3L Duratec-HE (MI4)	303-14A-00-1
Electronic Stability Program (ESP) module, A176	206-09C-00-2
Engine compartment switch, N21	419-01A-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-03A-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-03B-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-03C-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-14A-00-4
Engine Coolant Temperature (ECT) sensor, B10	303-14B-00-4
Engine Coolant Temperature (ECT) sensor, B10	303-14C-00-4
Engine Coolant Temperature (ECT) sensor, B10	413-01-00-3
Engine Coolant Temperature (ECT) sensor, B10	413-01-00-4
Engine Coolant Temperature (ECT) sensor, B10	413-01-00-5
Engine Cooling – 2.0L Duratec-HE (MI4)	303-03B-00-1

Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel	303–03C–00–1
Engine Cooling – 2.3L Duratec–HE (MI4)	303–03A–00–1
Engine Ignition – 2.0L Duratec–HE (MI4)	303–07B–00–1
Engine Ignition – 2.3L Duratec–HE (MI4)	303–07A–00–1
Evaporative emission canister purge valve, Y1	303–14A–00–5
Evaporative emission canister purge valve, Y1	303–14B–00–5
Evaporator discharge air temperature sensor, B217	412–03–00–2
Evaporator discharge air temperature sensor, B217	412–03–00–7
Exhaust Gas Recirculation (EGR) valve, Y2	303–14C–00–5
Exterior Lighting – Cornering lamps	417–01–00–8
Exterior Lighting – Front fog lamps	417–01–00–15
Exterior Lighting – Headlamp leveling	417–01–00–6
Exterior Lighting – Headlamps	417–01–00–1
Exterior Lighting – Licence plate lamps	417–01–00–10
Exterior Lighting – Position and Parking Lamps	417–01–00–9
Exterior Lighting – Rear fog lamps	417–01–00–16
Exterior Lighting – Reversing lamps	417–01–00–17
Exterior Lighting – Stop Lamps	417–01–00–14
Exterior Lighting – Turn Signal and Hazard Flasher Lamps	417–01–00–11
Exterior mirror, driver side, A355	501–09–00–3
Exterior mirror, passenger side, A356	501–09–00–4
F1.1	700–02–00–1
F1.1	700–03–00–1
F1.10	700–02–00–1
F1.10	700–03–00–4
F1.11	700–02–00–1
F1.11	700–03–00–5
F1.12	700–02–00–1
F1.12	700–03–00–6
F1.12	700–03–00–7
F1.12	700–03–00–8
F1.13	700–02–00–1
F1.13	700–03–00–9
F1.14	700–02–00–1
F1.14	700–03–00–9
F1.15	700–02–00–1
F1.15	700–03–00–9
F1.17	700–02–00–1
F1.17	700–02–00–3
F1.17	700–03–00–10
F1.18	700–02–00–1
F1.18	700–02–00–3
F1.18	700–03–00–10
F1.19	700–02–00–1
F1.19	700–02–00–4
F1.19	700–03–00–11
F1.2	700–03–00–1
F1.20	700–02–00–1
F1.20	700–02–00–4

F1.20	700-03-00-12
F1.22	700-02-00-1
F1.22	700-03-00-13
F1.23	700-02-00-1
F1.23	700-03-00-13
F1.24	700-02-00-1
F1.24	700-03-00-14
F1.25	700-02-00-1
F1.25	700-03-00-14
F1.26	700-02-00-1
F1.26	700-03-00-14
F1.28	700-02-00-1
F1.28	700-03-00-15
F1.31	700-02-00-1
F1.31	700-03-00-15
F1.33	700-02-00-1
F1.33	700-03-00-16
F1.36	700-02-00-1
F1.36	700-03-00-17
F1.39	700-02-00-2
F1.39	700-03-00-18
F1.4	700-02-00-1
F1.4	700-03-00-1
F1.41	700-02-00-2
F1.41	700-03-00-19
F1.42	700-02-00-2
F1.42	700-03-00-19
F1.43	700-02-00-2
F1.43	700-03-00-20
F1.5	700-02-00-1
F1.5	700-03-00-1
F1.6	700-02-00-1
F1.6	700-03-00-1
F1.7	700-02-00-1
F1.7	700-03-00-2
F1.8	700-02-00-1
F1.8	700-03-00-3
F1.9	700-02-00-1
F1.9	700-03-00-4
F1000	700-02-00-1
F1000	700-03-00-39
F1000	700-03-00-40
F2.10	700-03-00-25
F2.11	700-02-00-3
F2.11	700-03-00-10
F2.11	700-03-00-25
F2.13	700-02-00-3
F2.13	700-03-00-10
F2.13	700-03-00-25

F2.14	700-02-00-3
F2.14	700-03-00-10
F2.14	700-03-00-26
F2.17	700-02-00-3
F2.17	700-03-00-27
F2.18	700-02-00-3
F2.18	700-03-00-28
F2.19	700-02-00-3
F2.19	700-03-00-29
F2.2	700-02-00-2
F2.2	700-03-00-19
F2.2	700-03-00-21
F2.21	700-02-00-3
F2.21	700-03-00-10
F2.21	700-03-00-29
F2.22	700-02-00-3
F2.22	700-03-00-10
F2.22	700-03-00-29
F2.24	700-02-00-3
F2.24	700-03-00-10
F2.24	700-03-00-30
F2.25	700-02-00-3
F2.25	700-03-00-10
F2.25	700-03-00-31
F2.26	700-02-00-3
F2.26	700-03-00-10
F2.26	700-03-00-32
F2.27	700-02-00-3
F2.27	700-03-00-10
F2.27	700-03-00-33
F2.28	700-02-00-3
F2.28	700-03-00-10
F2.28	700-03-00-33
F2.3	700-02-00-2
F2.3	700-03-00-19
F2.3	700-03-00-22
F2.4	700-02-00-2
F2.4	700-03-00-19
F2.4	700-03-00-23
F2.6	700-02-00-3
F2.6	700-03-00-10
F2.6	700-03-00-24
F2.7	700-02-00-3
F2.7	700-03-00-10
F2.7	700-03-00-24
F2.8	700-02-00-3
F2.8	700-03-00-10
F2.8	700-03-00-24
F2.9	700-02-00-3

F2.9	700-03-00-10
F2.9	700-03-00-25
FA1	700-02-00-4
FA1	700-03-00-11
FA1	700-03-00-34
FA10	700-02-00-4
FA10	700-03-00-11
FA10	700-03-00-35
FA2	700-02-00-4
FA2	700-03-00-11
FA2	700-03-00-34
FA3	700-02-00-4
FA3	700-03-00-11
FA3	700-03-00-34
FA4	700-02-00-4
FA4	700-03-00-11
FA4	700-03-00-34
FA7	700-02-00-4
FA7	700-03-00-11
FA7	700-03-00-35
FA8	700-02-00-4
FA8	700-03-00-11
FA8	700-03-00-35
FB1	700-02-00-4
FB1	700-03-00-36
FB10	700-02-00-4
FB10	700-03-00-12
FB10	700-03-00-37
FB3	700-02-00-4
FB3	700-03-00-36
FB4	700-02-00-4
FB4	700-03-00-36
FB9	700-02-00-4
FB9	700-03-00-12
FB9	700-03-00-37
FC8	700-02-00-4
FC8	700-03-00-12
FC8	700-03-00-38
Fog lamp, LH front, E43	417-01-00-15
Fog lamp, RH front, E42	417-01-00-15
Footwell lamp, LH front, E61	417-02-00-3
Footwell lamp, RH front, E62	417-02-00-3
Fuel Charging and Controls – 2.0L Duratec-HE (MI4)	303-04B-00-1
Fuel Charging and Controls – 2.0L Duratorq-TDCi (DW) Diesel	303-04C-00-1
Fuel Charging and Controls – 2.3L Duratec-HE (MI4)	303-04A-00-1
Fuel filler door lock motor, M90	501-14-00-21
Fuel filler door lock motor, M90	501-14-00-7
Fuel heater, R32	303-04C-00-2
Fuel injector 1, Y108	303-04A-00-1

Fuel injector 1, Y108	303-04B-00-1
Fuel injector 1, Y108	303-04C-00-1
Fuel injector 2, Y109	303-04A-00-1
Fuel injector 2, Y109	303-04B-00-1
Fuel injector 2, Y109	303-04C-00-1
Fuel injector 3, Y110	303-04A-00-1
Fuel injector 3, Y110	303-04B-00-1
Fuel injector 3, Y110	303-04C-00-1
Fuel injector 4, Y111	303-04A-00-1
Fuel injector 4, Y111	303-04B-00-1
Fuel injector 4, Y111	303-04C-00-1
Fuel metering valve, Y165	303-04C-00-1
Fuel metering valve, Y165	303-14C-00-3
Fuel pressure solenoid valve, Y47	303-04C-00-1
Fuel pressure solenoid valve, Y47	303-14C-00-3
Fuel rail pressure transducer sensor, B225	303-14C-00-4
Fuel tank unit, A31	303-14A-00-7
Fuel tank unit, A31	303-14B-00-7
Fuel temperature sensor, B109	303-04C-00-1
Fuse and Relay Information	700-01-00-1
Fuse Details	700-03-00-1
G1D108-A	700-04-00-1
G1D108-B	700-04-00-2
G1D108-D	700-04-00-3
G1D108-D	700-04-00-4
G1D118-A	700-04-00-5
G1D118-B	700-04-00-5
G1D118-C	700-04-00-5
G1D118-D	700-04-00-5
G1D118-E	700-04-00-5
G1D129	700-04-00-6
G1D130-A	700-04-00-7
G1D130-B	700-04-00-8
G1D130-C	700-04-00-9
G1D130-D	700-04-00-10
G1D132-A	700-04-00-11
G1D132-B	700-04-00-12
G2D114	700-04-00-13
G2D114	700-04-00-14
G3D126	700-04-00-15
G3D127	700-04-00-16
G3D133	700-04-00-17
G3D133	700-04-00-18
G3D134	700-04-00-19
G3D134	700-04-00-20
G3D135	700-04-00-21
G3D138	700-04-00-22
G3D138	700-04-00-23
G3D138	700-04-00-24

G3D139	700-04-00-25
G3D145	700-04-00-26
G4D149	700-04-00-27
G4D149	700-04-00-28
G4D151	700-04-00-29
G6D139	700-04-00-30
G6D139	700-04-00-31
G6D139	700-04-00-32
Gearshift lever unit, N93	307-01A-00-1
Gearshift lever unit, N93	307-01A-00-2
Generator and Regulator – 2.0L Duratec-HE (MI4)	414-02B-00-1
Generator and Regulator – 2.0L Duratorq-TDCi (DW) Diesel	414-02C-00-1
Generator and Regulator – 2.3L Duratec-HE (MI4)	414-02A-00-1
Generator control module, A394	414-02A-00-1
Generator control module, A394	414-02B-00-1
Generator control module, A394	414-02C-00-1
Glass, Frames and Mechanisms – Heated exterior mirrors	501-11-00-8
Glass, Frames and Mechanisms – Heated rear window	501-11-00-7
Glass, Frames and Mechanisms – Power windows	501-11-00-1
Glove compartment lamp, E28	417-02-00-3
Glow plug 1, P16	303-07C-00-1
Glow plug 2, P17	303-07C-00-1
Glow plug 3, P18	303-07C-00-1
Glow plug 4, P19	303-07C-00-1
Glow plug relay, K212	303-07C-00-1
Glow Plug System – 2.0L Duratorq-TDCi (DW) Diesel	303-07C-00-1
Ground Distribution	700-04-00-1
Handles, Locks, Latches and Entry Systems – Central locking without keyless vehicle system	501-14-00-1
Handles, Locks, Latches and Entry Systems – with keyless vehicle system	501-14-00-8
Headlamp cleaning relay, K34	501-16-00-3
Headlamp leveling sensor, front, B245	417-01-00-6
Headlamp leveling sensor, rear, B244	417-01-00-6
Headlamp washer pump, M5	501-16-00-3
Headlamp, LH side, E1	417-01-00-1
Headlamp, RH side, E7	417-01-00-2
Heated rear window relay, K1	501-11-00-7
Heated rear window switch, N10	501-11-00-7
Heated rear window switch, N10	501-11-00-8
Heated rear window switch, N10	501-11-00-9
Heated seat back, LH front, N31	501-10-00-3
Heated seat back, RH front, N32	501-10-00-5
Heated seat cushion, LH front, N29	501-10-00-3
Heated seat cushion, RH front, N30	501-10-00-5
Heated seat module, LH front, A371	501-10-00-3
Heated seat module, RH front, A372	501-10-00-5
Heater control module, A128	412-03-00-1
High intensity discharge headlamp, LH side, E181	417-01-00-7
High intensity discharge headlamp, RH side, E182	417-01-00-7
High mounted stop lamp, E70	417-01-00-14

Horn	413-06-00-1
Horn relay, K33	413-06-00-1
Horn switch, N54	413-06-00-1
Ignition coil, cylinder 1, T6	303-07A-00-1
Ignition coil, cylinder 1, T6	303-07B-00-1
Ignition coil, cylinder 2, T7	303-07A-00-1
Ignition coil, cylinder 2, T7	303-07B-00-1
Ignition coil, cylinder 3, T8	303-07A-00-1
Ignition coil, cylinder 3, T8	303-07B-00-1
Ignition coil, cylinder 4, T9	303-07A-00-1
Ignition coil, cylinder 4, T9	303-07B-00-1
Ignition relay 2, K258	700-02-00-4
Ignition relay, K41	700-02-00-2
Ignition switch, N278	700-02-00-5
Index	100-00-02-1
Inlet air control valve solenoid, Y218	303-14A-00-5
Inlet air control valve solenoid, Y218	303-14B-00-5
Instrument Cluster	413-01-00-1
Instrument Cluster and Panel Illumination	413-00-00-1
Instrument cluster, A30	413-01-00-1
Instrument Panel and Console	501-12-00-1
Intake Air Temperature (IAT) sensor, B213	303-14C-00-4
Interface adapter, P301	419-08B-00-3
Interface adapter, P301	419-08B-00-4
Interior lamp, front, E18	417-02-00-1
Interior lamp, rear, E19	417-02-00-2
Interior Lighting	417-02-00-1
Introduction	100-00-03-1
Keyless vehicle antenna, centre console, A387	501-14-00-13
Keyless vehicle antenna, dash panel, A388	501-14-00-13
Keyless vehicle antenna, luggage compartment, A386	501-14-00-13
Keyless vehicle antenna, rear bumper, A385	501-14-00-13
Keyless vehicle clutch pedal position switch, N398	501-14-00-10
Keyless vehicle clutch pedal position switch, N398	501-14-00-11
Keyless vehicle clutch pedal position switch, N398	501-14-00-12
Keyless vehicle door lock switch, driver side front, N503	501-14-00-14
Keyless vehicle door lock switch, passenger side front, N504	501-14-00-16
Keyless vehicle door unlock switch, driver side front, N399	501-14-00-14
Keyless vehicle door unlock switch, LH rear, N501	501-14-00-18
Keyless vehicle door unlock switch, passenger side front, N500	501-14-00-16
Keyless vehicle door unlock switch, RH rear, N502	501-14-00-19
Keyless vehicle global unlock switch, N505	501-14-00-14
Keyless vehicle liftgate release switch, N506	501-14-00-10
Keyless vehicle liftgate release switch, N506	501-14-00-11
Keyless vehicle liftgate release switch, N506	501-14-00-12
Keyless vehicle module, A391	303-06A-00-2
Keyless vehicle module, A391	303-06B-00-2
Keyless vehicle module, A391	303-06C-00-2
Knee air bag, driver side, A506	501-20B-00-1

Knock sensor, B45	303-07A-00-1
Knock sensor, B45	303-07B-00-1
Knock sensor, B45	303-14A-00-2
Knock sensor, B45	303-14B-00-2
Knock sensor, B45	303-14C-00-6
Licence plate lamp, LH side, E34	417-01-00-10
Licence plate lamp, RH side, E35	417-01-00-10
Liftgate lamp assembly, LH side, E104	417-01-00-17
Liftgate lamp assembly, LH side, E104	417-01-00-18
Liftgate lamp assembly, RH side, E108	417-01-00-17
Liftgate lamp assembly, RH side, E108	417-01-00-18
Liftgate/luggage compartment lid release switch, N155	501-14-00-10
Liftgate/luggage compartment lid release switch, N155	501-14-00-11
Liftgate/luggage compartment lid release switch, N155	501-14-00-12
Liftgate/luggage compartment lid release switch, N155	501-14-00-20
Liftgate/luggage compartment lid release switch, N155	501-14-00-6
Lighting control module, A396	417-01-00-1
Lighting control module, A396	417-01-00-2
Low cleaning water level switch, N89	413-01-00-2
Luggage compartment lamp, RH side, E148	417-02-00-7
Mass Air Flow (MAF) sensor, B22	303-14C-00-2
Microphone, A164	419-08B-00-1
Microphone, A164	419-08B-00-3
Module Communications Network	418-00-00-1
Multifunction Electronic Control Modules	419-10-00-1
Oil control valve, Y191	303-14A-00-3
Oil pressure switch, N17	303-14A-00-3
Oil pressure switch, N17	303-14B-00-3
Oil pressure switch, N17	303-14C-00-2
Oil pressure switch, N17	413-01-00-3
Oil pressure switch, N17	413-01-00-4
Oil pressure switch, N17	413-01-00-5
Panel/floor mode actuator, M250	412-03-00-10
Parking Aid	413-13-00-1
Parking aid module, A265	413-13-00-1
Parking aid sensor, rear, inner left, B169	413-13-00-3
Parking aid sensor, rear, inner right, B170	413-13-00-3
Parking aid sensor, rear, outer left, B168	413-13-00-3
Parking aid sensor, rear, outer right, B171	413-13-00-3
Parking aid speaker, rear, Y163	413-13-00-3
Parking brake switch, N63	413-01-00-2
Passenger Air bag Deactivation (PAD) switch, N475	501-20B-00-2
Passenger air bag unit, A43	501-20B-00-1
Passenger seat module, A505	501-10-00-1
Passive anti-theft system transceiver module, A102	303-06A-00-2
Passive anti-theft system transceiver module, A102	303-06B-00-2
Passive anti-theft system transceiver module, A102	303-06C-00-2
Passive anti-theft system transceiver module, A102	419-01B-00-1
Passive anti-theft system transceiver module, A102	419-01B-00-2

Passive anti-theft system transceiver module, A102	419-01B-00-4
Passive anti-theft system transceiver module, A102	419-01B-00-6
PCM module relay, K163	303-04A-00-1
PCM module relay, K163	303-04B-00-1
PCM module relay, K163	303-14A-00-1
PCM module relay, K163	303-14B-00-1
PCM module relay, K163	303-14C-00-1
PCM module relay, K163	303-14C-00-2
PCM module relay, K163	303-14C-00-3
PCM module relay, K163	700-02-00-1
Post-catalyst exhaust gas temperature sensor, B188	303-14C-00-6
Power Distribution	700-02-00-1
Power steering pressure switch, N96	303-14A-00-2
Power steering pressure switch, N96	303-14B-00-2
Pre-catalyst exhaust gas temperature sensor, B187	303-14C-00-6
Pre-catalyst heated oxygen sensor (HO2S), B89	303-14A-00-1
Pre-catalyst heated oxygen sensor (HO2S), B89	303-14B-00-1
Rear Junction Box (RJB), P149	700-02-00-4
Rear Junction Box (RJB), P149	700-03-00-11
Rear Junction Box (RJB), P149	700-03-00-12
Rear Junction Box (RJB), P149	700-03-00-13
Rear Junction Box (RJB), P149	700-03-00-34
Rear Junction Box (RJB), P149	700-03-00-35
Rear Junction Box (RJB), P149	700-03-00-36
Rear Junction Box (RJB), P149	700-03-00-37
Rear Junction Box (RJB), P149	700-03-00-38
Rear lamp assembly, LH side, E9	417-01-00-12
Rear lamp assembly, LH side, E9	417-01-00-14
Rear lamp assembly, RH side, E10	417-01-00-12
Rear lamp assembly, RH side, E10	417-01-00-14
Rear View Mirrors	501-09-00-1
Rear window heater, R19	501-11-00-7
Recirculated air actuator, M69	412-03-00-2
Recirculated air actuator, M69	412-03-00-9
Remote RF receiver, A500	501-14-00-1
Remote RF receiver, A500	501-14-00-8
Restraints Control Module (RCM), A208	501-20A-00-1
Reversing lamp switch, N394	413-13-00-1
Roof Opening Panel	501-17-00-1
Roof opening panel control switch, N230	501-17-00-1
Roof opening panel module, A26	501-17-00-1
Safety belt buckle switch, driver, N466	413-01-00-9
Safety belt buckle switch, driver, N466	501-20A-00-1
Safety Belt System	501-20A-00-1
Safety belt tensioner, driver seat, A117	501-20A-00-2
Safety belt tensioner, passenger seat, A116	501-20A-00-2
Seat back fan 1, LH front, M169	501-10-00-2
Seat back fan 1, RH front, M173	501-10-00-4
Seat back fan 2, LH front, M170	501-10-00-2

Seat back fan 2, RH front, M174	501-10-00-4
Seat cushion fan 1, LH front, M167	501-10-00-2
Seat cushion fan 1, RH front, M171	501-10-00-4
Seat cushion fan 2, LH front, M168	501-10-00-2
Seat cushion fan 2, RH front, M172	501-10-00-4
Seating	501-10-00-1
Side air bag module, driver, A242	501-20B-00-4
Side air bag module, passenger, A245	501-20B-00-4
Side air bag sensor, driver, B238	501-20B-00-3
Side air bag sensor, passenger, B239	501-20B-00-3
Side head air bag module, driver, A326	501-20B-00-5
Side head air bag module, passenger, A327	501-20B-00-5
Siren control module, A504	419-01A-00-1
Smart steering column device (SSCD), A380	501-14-00-9
SP168	501-12-00-1
SP168	700-03-00-29
SP171	700-03-00-20
SP172	700-03-00-18
SP173	303-07C-00-1
SP175	412-03-00-1
SP179	303-03A-00-1
SP179	303-03B-00-1
SP179	303-14A-00-4
SP179	303-14B-00-4
SP185	700-04-00-3
SP186	700-04-00-2
SP195	700-04-00-30
SP195	700-04-00-32
SP197	700-04-00-13
SP197	700-04-00-14
SP199	700-04-00-6
SP200	700-04-00-9
SP202	303-04A-00-1
SP202	303-04B-00-1
SP202	700-03-00-4
SP203	303-07A-00-1
SP203	303-07B-00-1
SP203	700-03-00-6
SP203	700-03-00-7
SP204	700-03-00-5
SP274	418-00-00-5
SP275	418-00-00-5
SP276	418-00-00-4
SP277	418-00-00-4
SP278	418-00-00-7
SP279	418-00-00-7
SP280	418-00-00-9
SP281	418-00-00-8
SP283	418-00-00-9

SP284	418-00-00-7
SP285	418-00-00-10
SP286	418-00-00-7
SP287	418-00-00-7
SP291	418-00-00-8
SP292	418-00-00-9
SP293	418-00-00-7
SP294	418-00-00-7
SP295	418-00-00-10
SP296	418-00-00-7
SP297	418-00-00-9
SP301	700-04-00-4
SP303	415-01-00-1
SP303	419-08B-00-3
SP304	700-04-00-14
SP305	419-08B-00-1
SP306	700-04-00-14
SP311	417-02-00-3
SP311	700-03-00-27
SP314	700-03-00-27
SP328	418-00-00-5
SP329	418-00-00-5
SP330	418-00-00-4
SP331	413-01-00-5
SP331	418-00-00-5
SP332	418-00-00-5
SP333	418-00-00-4
SP334	418-00-00-5
SP334	418-00-00-6
SP335	418-00-00-5
SP335	418-00-00-6
SP336	418-00-00-3
SP337	418-00-00-2
SP339	418-00-00-3
SP340	418-00-00-3
SP342	418-00-00-4
SP343	418-00-00-4
SP344	418-00-00-12
SP345	418-00-00-11
SP347	418-00-00-12
SP348	418-00-00-11
SP349	418-00-00-12
SP350	418-00-00-11
SP352	418-00-00-12
SP353	418-00-00-11
SP354	418-00-00-12
SP355	418-00-00-12
SP356	700-03-00-22
SP358	700-04-00-8

SP371	700-04-00-7
SP373	700-04-00-10
SP380	700-04-00-11
SP386	700-04-00-17
SP386	700-04-00-18
SP388	700-04-00-21
SP389	700-04-00-21
SP389	700-04-00-26
SP391	307-01A-00-4
SP392	700-04-00-22
SP392	700-04-00-23
SP395	413-13-00-3
SP399	413-13-00-3
SP400	417-01-00-10
SP406	417-01-00-6
SP407	417-01-00-6
SP420	700-02-00-4
SP420	700-03-00-12
SP421	417-01-00-11
SP421	700-03-00-24
SP425	700-03-00-35
SP427	700-02-00-4
SP427	700-03-00-11
SP430	415-03-00-1
SP431	415-03-00-1
SP432	415-03-00-1
SP433	415-03-00-1
SP443	413-01-00-9
SP443	501-20A-00-1
SP451	417-01-00-14
SP477	700-03-00-5
SP482	700-03-00-3
SP486	303-07C-00-1
SP487	700-03-00-8
SP489	417-01-00-6
SP490	700-04-00-26
SP491	700-04-00-22
SP491	700-04-00-23
SP492	700-04-00-17
SP513	700-04-00-19
SP518	700-04-00-30
SP523	417-02-00-3
SP523	700-04-00-30
SP523	700-04-00-31
SP534	700-04-00-27
SP534	700-04-00-28
SP540	418-00-00-3
SP541	418-00-00-3
SP547	700-03-00-23

SP548	700-04-00-30
SP549	700-04-00-27
SP550	700-04-00-27
SP558	700-03-00-24
SP561	303-14A-00-6
SP561	303-14B-00-6
SP561	303-14C-00-7
SP561	501-14-00-10
SP561	501-14-00-11
SP561	501-14-00-12
SP562	700-03-00-23
SP563	501-14-00-10
SP563	501-14-00-11
SP563	501-14-00-12
SP564	417-02-00-4
SP565	413-00-00-1
SP565	413-00-00-2
SP565	501-10-00-4
SP565	501-10-00-5
SP566	413-00-00-2
SP567	417-02-00-1
SP567	417-02-00-2
SP568	417-01-00-9
SP571	206-09C-00-1
SP581	700-04-00-19
SP588	700-04-00-19
SP588	700-04-00-20
SP594	418-00-00-3
SP595	418-00-00-2
SP596	700-03-00-27
SP597	700-04-00-16
SP597	700-04-00-22
SP597	700-04-00-24
SP600	700-04-00-29
SP701	700-04-00-27
SP702	700-04-00-17
SP702	700-04-00-27
SP703	700-04-00-23
SP703	700-04-00-29
SP704	700-04-00-22
SP738	501-16-00-1
SP738	700-03-00-13
SP741	700-02-00-1
SP743	700-03-00-2
SP744	700-03-00-16
SP745	417-01-00-6
SP746	303-14A-00-7
SP746	303-14B-00-7
SP746	700-04-00-29