

# Transit Wiring Diagrams

## Table of Contents

### Group 1 – General Information

#### General Information

Table of Contents .....	100-00-00-1
Systems Overview .....	100-00-01-1
Index .....	100-00-02-1
Introduction .....	100-00-03-1
Symbols .....	100-00-04-1
Connector Repair Procedures .....	100-00-05-1

### Group 2 – Chassis

#### Suspension

Vehicle Dynamic Suspension .....	204-05-00-1
----------------------------------	-------------

#### Brake System

Brake System – General Information	206-00-00-1
Anti-Lock Control .....	206-09A-00-1
Anti-Lock Control –	
Traction Control .....	206-09B-00-1

### Group 3 – Powertrain

#### Engine

Engine Cooling –	
2.3L DOHC-16V .....	303-03A-00-1
Engine Cooling –	
2.0L Duratorq-DI/TDDi	
(Puma) Diesel .....	303-03B-00-1
Engine Cooling –	
2.0/2.4L Duratorq-TDCi	
(Puma) Diesel .....	303-03C-00-1
Engine Cooling – 2.4L Duratorq-DI	
(Puma) Diesel .....	303-03D-00-1
Engine Cooling – Liquefied Petroleum	
Gas (LPG) .....	303-03F-00-1
Fuel Charging and Controls –	
2.3L DOHC-16V .....	303-04A-00-1
Fuel Charging and Controls – 2.0/2.4L	
Duratorq-TDCi (Puma) Diesel ....	303-04C-00-1
Fuel Charging and Controls –	
Liquefied Petroleum Gas (LPG) ...	303-04F-00-1
Starting System –	
2.3L DOHC-16V .....	303-06A-00-1

Starting System –	
2.0L Duratorq-DI/TDDi	
(Puma) Diesel .....	303-06B-00-1
Starting System –	
2.0/2.4L Duratorq-TDCi	
(Puma) Diesel .....	303-06C-00-1
Starting System –	
2.4L Duratorq-DI	
(Puma) Diesel .....	303-06D-00-1
Starting System – Liquefied Petroleum	
Gas (LPG) .....	303-06F-00-1
Engine Ignition – 2.3L DOHC-16V	303-07A-00-1
Glow Plug System –	
2.0L Duratorq-DI/TDDi	
(Puma) Diesel .....	303-07B-00-1
Glow Plug System –	
2.0/2.4L Duratorq-TDCi	
(Puma) Diesel .....	303-07C-00-1
Glow Plug System –	
2.4L Duratorq-DI (Puma) Diesel ..	303-07D-00-1
Engine Ignition – Liquefied Petroleum	
Gas (LPG) .....	303-07F-00-1
Electronic Engine Controls –	
2.3L DOHC-16V .....	303-14A-00-1
Electronic Engine Controls –	
2.0L Duratorq-DI/TDDi	
(Puma) Diesel .....	303-14B-00-1
Electronic Engine Controls – 2.0/2.4L	
Duratorq-TDCi (Puma) Diesel ....	303-14C-00-1
Electronic Engine Controls –	
2.4L Duratorq-DI (Puma) Diesel ..	303-14D-00-1
Electronic Engine Controls –	
Liquefied Petroleum Gas (LPG) ...	303-14F-00-1

#### Manual Transmission, Clutch and Transfer Case

Manual Transmission –	
Durashift EST .....	308-03B-00-1

### Group 4 – Electrical

#### Climate Control System

Heating and Ventilation .....	412-02A-00-1
Auxiliary Heating .....	412-02B-00-1
Air Conditioning .....	412-03A-00-1

#### Instrumentation and Warning Systems

Instrument Cluster and	
Panel Illumination .....	413-00-00-1

Instrument Cluster .....	413-01-00-1
Horn .....	413-06-00-1
Clock .....	413-07-00-1
Warning Devices .....	413-09-00-1
Parking Aid .....	413-13-00-1
Tachograph .....	413-17-00-1

### Battery and Charging System

Generator and Regulator – 2.3L DOHC–16V .....	414-02A-00-1
Generator and Regulator – 2.0L Duratorq–DI/TDDi (Puma) Diesel .....	414-02B-00-1
Generator and Regulator – 2.0/2.4L Duratorq–TDCi (Puma) Diesel .....	414-02C-00-1
Generator and Regulator – 2.4L Duratorq–DI (Puma) Diesel ..	414-02D-00-1
Generator and Regulator – Liquefied Petroleum Gas (LPG) ...	414-02F-00-1

### Audio Systems

Audio Unit .....	415-01-00-1
Speakers .....	415-03-00-1

### Lighting Systems

Exterior Lighting – Headlamps .....	417-01-00-1
Exterior Lighting – Headlamp levelling .....	417-01-00-3
Exterior Lighting – Fog lamps .....	417-01-00-4
Exterior Lighting – Position and Parking Lamps .....	417-01-00-6
Exterior Lighting – Turn Signal Lamps .....	417-01-00-11
Exterior Lighting – Licence Plate Illumination .....	417-01-00-20
Exterior Lighting – Reversing Lamps .....	417-01-00-22
Exterior Lighting – Stop Lamps ...	417-01-00-24

Exterior Lighting – Trailer socket ...	417-01-00-27
Interior Lighting .....	417-02-00-1
Daytime Running Lamps .....	417-04-00-1

### Electrical Distribution

Module Communications Network – Data Link Connector (DLC) .....	418-00-00-1
--	-------------

### Electronic Feature Group

Anti–Theft – Active .....	419-01A-00-1
Anti–Theft – Passive .....	419-01B-00-1
Multifunction Electronic Control Modules .....	419-10-00-1

## Group 5 – Body and Paint

### Body


Rear View Mirrors .....	501-09-00-1
Seating .....	501-10-00-1
Glass, Frames and Mechanisms .....	501-11-00-1
Instrument Panel and Console .....	501-12-00-1
Handles, Locks, Latches and Entry Systems .....	501-14-00-1
Wipers and Washers .....	501-16-00-1
Supplemental Restraint System ...	501-20B-00-1

## Group 7 – General Wiring Information

### Wiring Diagrams

Fuse and Relay Information .....	700-01-00-1
Power Distribution .....	700-02-00-1
Fuse Details .....	700-03-00-1
Ground Distribution .....	700-04-00-1
Component Location Charts .....	700-05-00-1
Component Location Views .....	700-06-00-1
Connector Views .....	700-07-00-1

# Systems Overview

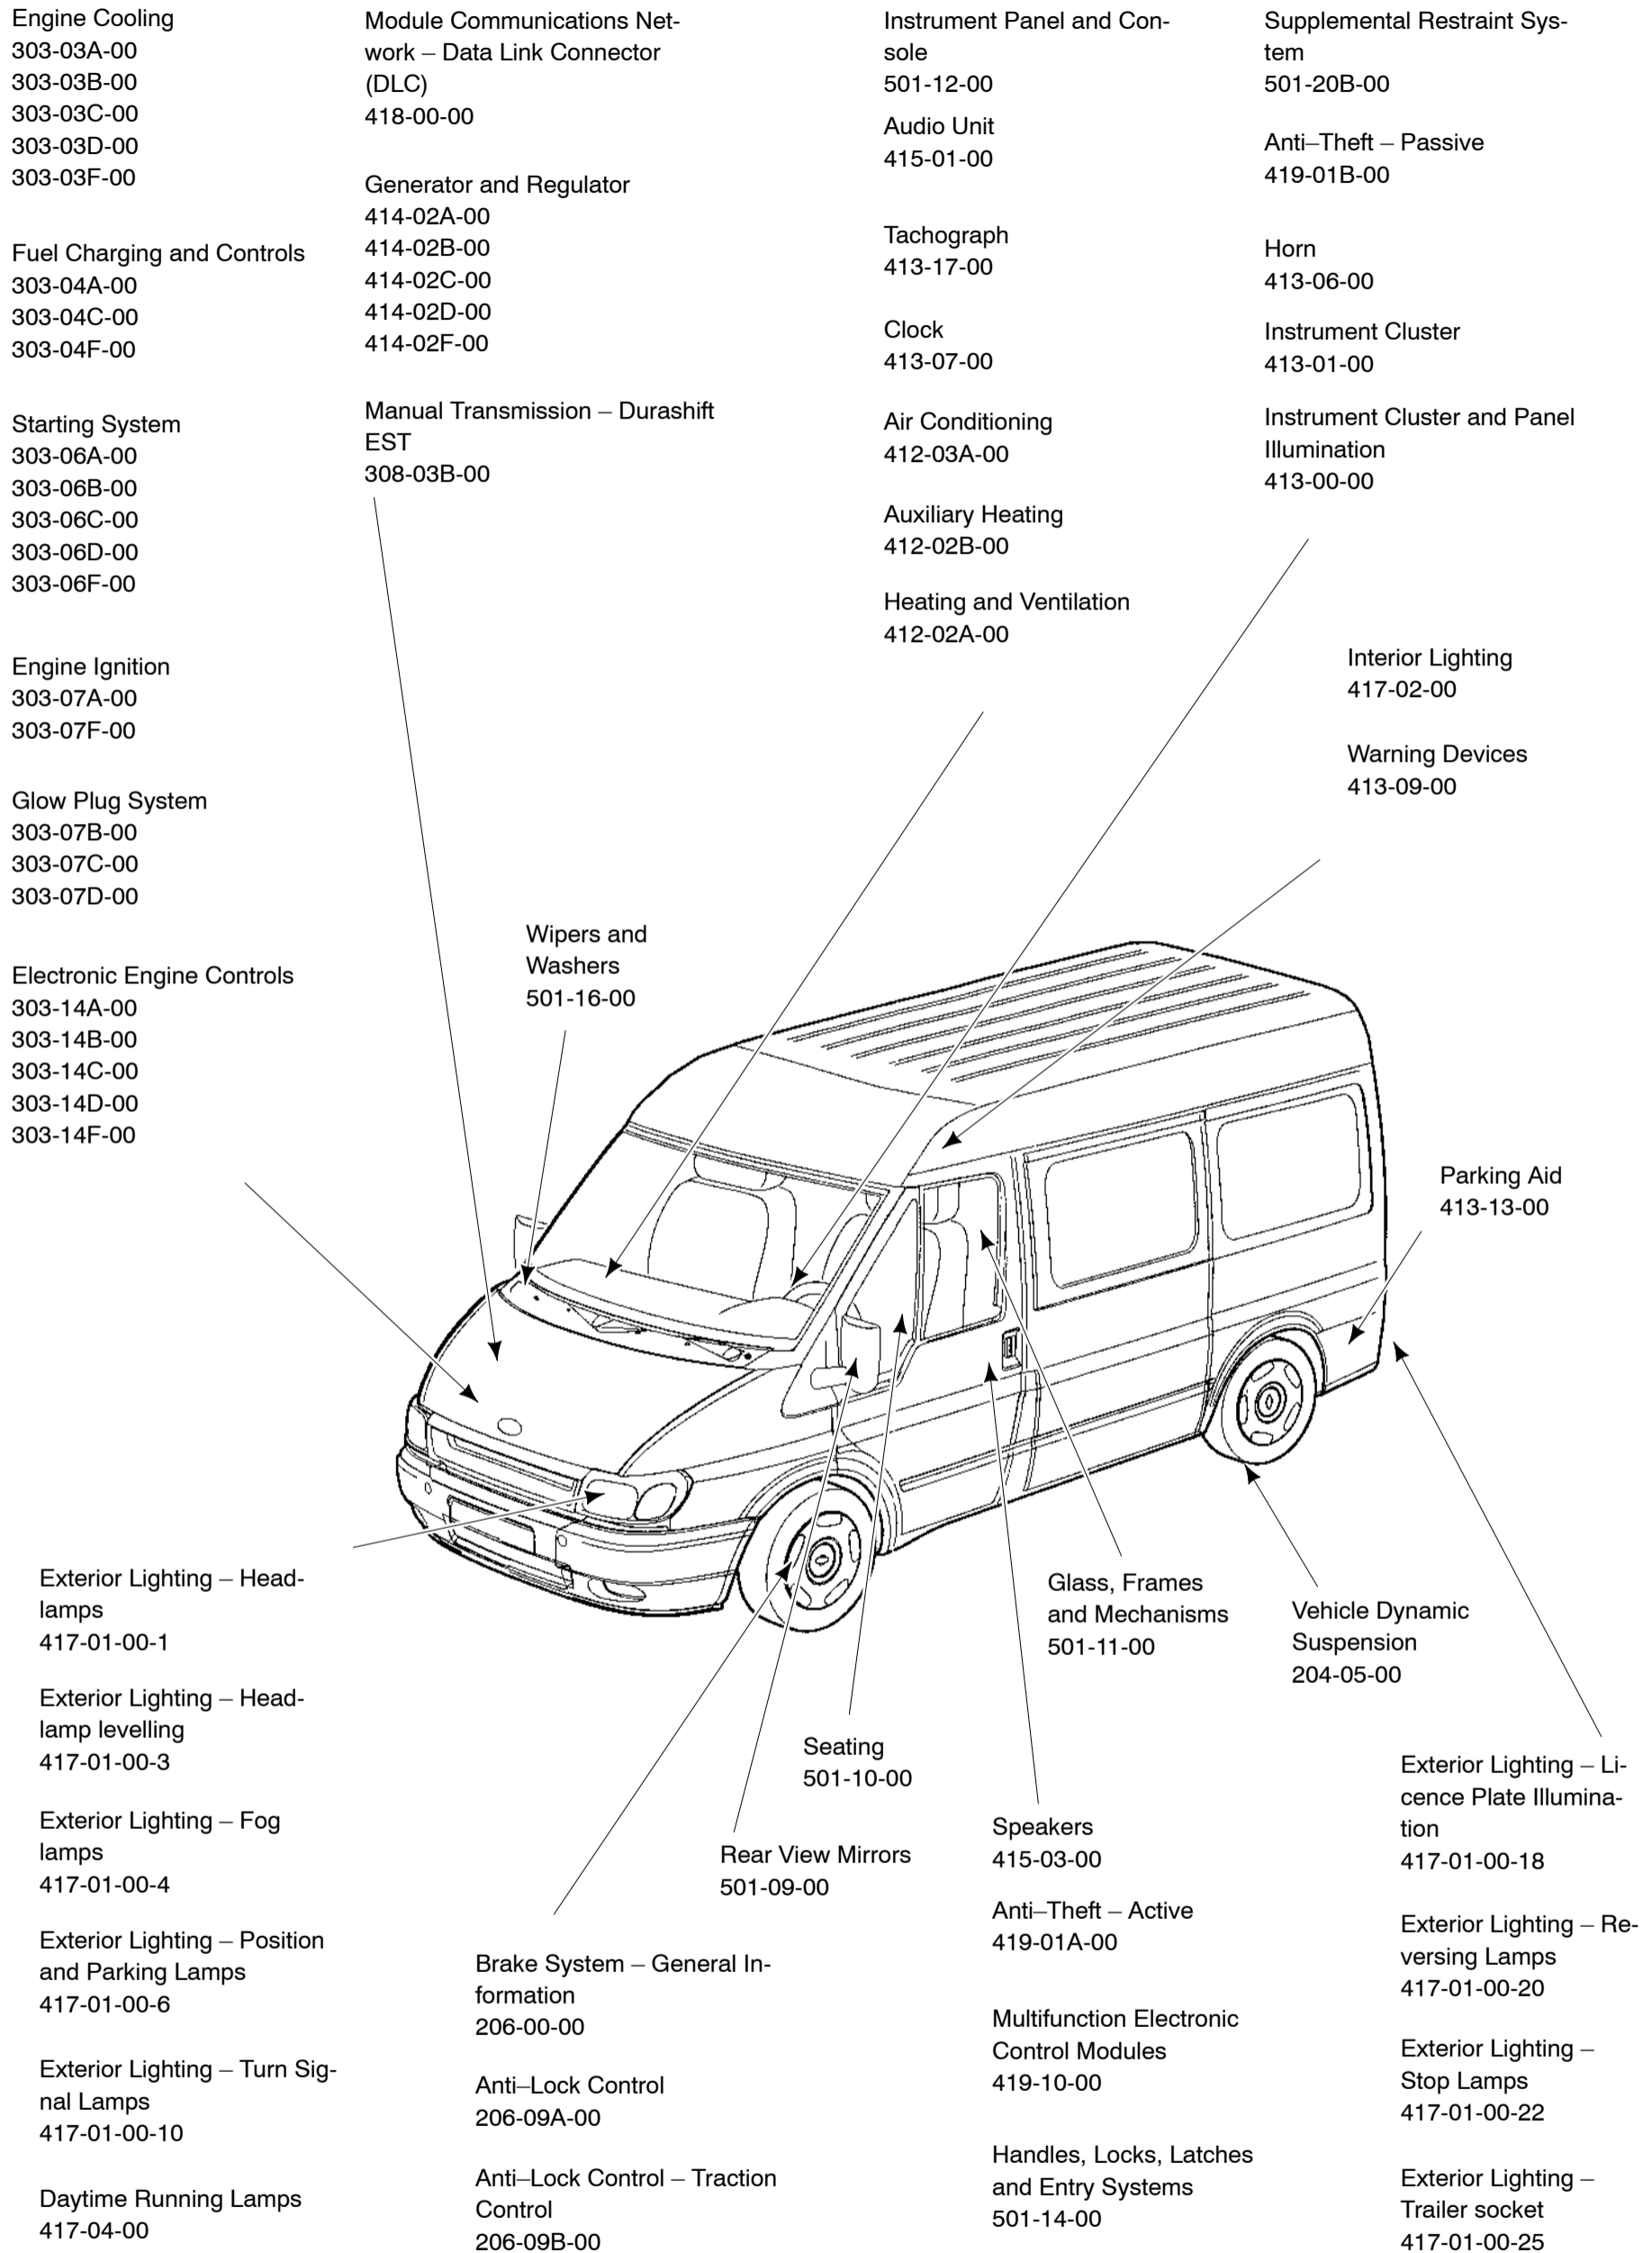

A/C compressor clutch diode, V7	412-03A-00-10
A/C compressor clutch diode, V7	412-03A-00-12
A/C compressor clutch diode, V7	412-03A-00-14
A/C compressor clutch diode, V7	412-03A-00-16
A/C compressor clutch diode, V7	412-03A-00-8
A/C compressor clutch solenoid, Y31	412-03A-00-10
A/C compressor clutch solenoid, Y31	412-03A-00-12
A/C compressor clutch solenoid, Y31	412-03A-00-14
A/C compressor clutch solenoid, Y31	412-03A-00-16
A/C compressor clutch solenoid, Y31	412-03A-00-8
A/C Full cold heater valve solenoid, Y80	412-03A-00-2
A/C Full cold switch, N233	412-03A-00-2
A/C high-pressure switch, N126	412-03A-00-11
A/C high-pressure switch, N126	412-03A-00-13
A/C high-pressure switch, N126	412-03A-00-15
A/C high-pressure switch, N126	412-03A-00-17
A/C high-pressure switch, N126	412-03A-00-3
A/C high-pressure switch, N126	412-03A-00-4
A/C high-pressure switch, N126	412-03A-00-5
A/C high-pressure switch, N126	412-03A-00-6
A/C high-pressure switch, N126	412-03A-00-7
A/C high-pressure switch, N126	412-03A-00-9
A/C Indicator diode, V19	412-03A-00-2
A/C low-pressure switch, N246	412-03A-00-2
A/C low-pressure switch, N246	412-03A-00-3
A/C low-pressure switch, N246	412-03A-00-4
A/C low-pressure switch, N246	412-03A-00-5
A/C low-pressure switch, N246	412-03A-00-6
A/C low-pressure switch, N246	412-03A-00-7
A/C Wide Open Throttle (WOT) relay, K32	412-03A-00-10
A/C Wide Open Throttle (WOT) relay, K32	412-03A-00-12
A/C Wide Open Throttle (WOT) relay, K32	412-03A-00-14
A/C Wide Open Throttle (WOT) relay, K32	412-03A-00-16
A/C Wide Open Throttle (WOT) relay, K32	412-03A-00-8
ABS module, A7	206-00-00-2
ABS module, A7	206-09A-00-1
ABS module, A7	206-09B-00-1
Accelerator pedal position sensor, B129	303-14B-00-3
Accelerator pedal position sensor, B129	303-14C-00-5
Accelerator pedal position sensor, B129	303-14D-00-4
Air bag sliding contact, P140	501-20B-00-3
Air suspension compressor assembly, A305	204-05-00-2
Air suspension compressor relay, K247	204-05-00-2
Air suspension disable switch, N353	204-05-00-1
Air suspension height sensor, B161	204-05-00-1
Air suspension inching switch, N354	204-05-00-3
Air suspension kneeling switch, N352	204-05-00-1
Air suspension module, A304	204-05-00-1
Alternative fuel control module, A475	303-04F-00-1

Alternative fuel control module, A475	303-14F-00-3
Alternative fuel control module, A475	303-14F-00-8
Antenna, A151	415-01-00-1
Antenna, A151	415-01-00-2
Anti-theft alarm horn, LH side, H21	419-01A-00-2
Anti-theft alarm horn, LH side, H21	419-01A-00-4
Anti-theft alarm horn, RH side, H22	419-01A-00-2
Anti-theft alarm horn, RH side, H22	419-01A-00-4
Anti-theft hood switch, N415	308-03B-00-10
Anti-theft hood switch, N415	308-03B-00-11
Anti-theft hood switch, N415	419-01A-00-2
Anti-theft hood switch, N415	419-01A-00-4
Auxiliary fuse box, P92	412-02B-00-3
Auxiliary fuse box, P92	700-03-00-39
Auxiliary relay, K157	501-12-00-2
Auxiliary relay box 1, P111	700-03-00-1
Battery, O1	414-02A-00-1
Battery, O1	414-02B-00-1
Battery, O1	414-02C-00-1
Battery, O1	414-02D-00-1
Battery, O1	414-02D-00-2
Battery, O1	414-02F-00-1
Battery, O1	700-02-00-1
Battery, O1	700-02-00-2
Battery, O1	700-02-00-3
Battery, O1	700-02-00-4
Battery, O1	700-02-00-5
Battery II, O3	414-02A-00-1
Battery II, O3	414-02B-00-1
Battery II, O3	414-02C-00-1
Battery II, O3	414-02D-00-1
Battery II, O3	414-02D-00-2
Battery II, O3	414-02F-00-1
Battery II, O3	700-02-00-1
Battery II, O3	700-02-00-2
Battery II, O3	700-02-00-3
Battery II, O3	700-02-00-4
Battery II, O3	700-02-00-5
Battery Junction Box (BJB), P93	700-02-00-1
Battery Junction Box (BJB), P93	700-02-00-2
Battery Junction Box (BJB), P93	700-02-00-3
Battery Junction Box (BJB), P93	700-02-00-4
Battery Junction Box (BJB), P93	700-02-00-5
Battery saver relay, K115	700-02-00-14
Battery saver relay, K115	700-02-00-18
Battery saver relay, K115	700-02-00-19
Blend door actuator, rear, M145	412-02A-00-2
Blend door actuator, rear, M145	412-02A-00-3
Blend door actuator, rear, M145	412-03A-00-19

Blower motor, M3	412-02A-00-1
Blower motor, M3	412-02B-00-3
Blower motor, M3	412-03A-00-1
Blower motor, rear, M130	412-02A-00-2
Blower motor, rear, M130	412-03A-00-18
Blower motor relay, K73	412-02B-00-3
Blower motor relay, K73	412-03A-00-1
Blower motor relay – Independent heating, K211	412-02B-00-3
Blower motor resistor, R21	412-02A-00-1
Blower motor resistor, R21	412-02B-00-3
Blower motor resistor, R21	412-03A-00-1
Blower motor resistor, rear, M211	412-02A-00-2
Blower motor resistor, rear, M211	412-03A-00-18
Booster heater control module, A324	412-02B-00-4
Booster heater control module, A324	412-02B-00-5
Booster heater fuel pump, M175	412-02B-00-4
Booster heater fuel pump, M175	412-02B-00-5
Brake fluid level switch, N1	206-00-00-1
Brake fluid level switch, N1	206-00-00-2
Brake fluid level switch, N1	206-09A-00-1
Brake fluid level switch, N1	206-09B-00-1
Brake fluid level switch, N1	413-01-00-4
Brake fluid level switch, N1	413-01-00-5
Brake pedal position switch, N82	206-09A-00-1
Brake pedal position switch, N82	206-09B-00-1
Brake pedal position switch, N82	303-14A-00-2
Brake pedal position switch, N82	303-14B-00-6
Brake pedal position switch, N82	303-14C-00-6
Brake pedal position switch, N82	303-14D-00-6
Brake pedal position switch, N82	303-14F-00-2
Brake pedal position switch, N82	417-01-00-24
Brake pedal position switch, N82	417-01-00-25
Brake pedal position switch, N82	417-01-00-26
Bulb check relay, K302	206-00-00-1
Bulb check relay, K302	413-01-00-4
Buzzer, H9	413-09-00-6
Buzzer, H9	417-02-00-14
Buzzer, H9	417-02-00-15
Camshaft position sensor, B41	303-07A-00-2
Camshaft position sensor, B41	303-07F-00-2
Camshaft position sensor, B41	303-14A-00-5
Camshaft position sensor, B41	303-14C-00-3
Camshaft position sensor, B41	303-14F-00-2
Camshaft position sensor, B41	303-14F-00-5
Cargo lamp, E51	417-02-00-11
Catalyst monitor sensor, B192	303-14A-00-3
Catalyst monitor sensor, B192	303-14F-00-3
Central Junction Box (CJB), P91	700-02-00-8
Central security module, A262	417-02-00-3

Central security module, A262	417-02-00-4
Central security module, A262	419-01A-00-1
Central security module, A262	419-10-00-1
Central security module, A262	501-14-00-1
Cigar lighter, front, R42	501-12-00-1
Cigar lighter, front, R42	501-12-00-2
Clock spring, P13	308-03B-00-3
Clock spring, P13	413-06-00-1
Clutch pedal position switch, N81	303-14B-00-6
Clutch pedal position switch, N81	303-14C-00-6
Clutch pedal position switch, N81	303-14D-00-6
Control assembly – Independent heating, A171	412-02B-00-1
Control assembly – Independent heating, A171	412-02B-00-2
Coolant temperature sensor 2, B214	303-14F-00-8
Cooling fan motor, M37	303-03A-00-1
Cooling fan motor, M37	303-03B-00-1
Cooling fan motor, M37	303-03C-00-1
Cooling fan motor, M37	303-03D-00-1
Cooling fan motor, M37	303-03F-00-1
Cooling fan motor, M37	412-03A-00-11
Cooling fan motor, M37	412-03A-00-13
Cooling fan motor, M37	412-03A-00-15
Cooling fan motor, M37	412-03A-00-17
Cooling fan motor, M37	412-03A-00-9
Cooling fan relay, K45	303-03A-00-1
Cooling fan relay, K45	303-03B-00-1
Cooling fan relay, K45	303-03C-00-1
Cooling fan relay, K45	303-03D-00-1
Cooling fan relay, K45	303-03F-00-1
Cooling fan relay, K45	412-03A-00-11
Cooling fan relay, K45	412-03A-00-13
Cooling fan relay, K45	412-03A-00-15
Cooling fan relay, K45	412-03A-00-17
Cooling fan relay, K45	412-03A-00-9
Courtesy lamp switch, rear, N468	204-05-00-3
Courtesy lamp switch, rear, N468	413-09-00-3
Courtesy lamp switch, rear, N468	413-09-00-4
Courtesy lamp switch, rear, N468	417-02-00-5
Courtesy lamp switch, rear, N468	417-02-00-6
Courtesy lamp switch, rear, N468	417-02-00-8
Crankshaft position sensor, B43	303-07A-00-2
Crankshaft position sensor, B43	303-07F-00-2
Crankshaft position sensor, B43	303-14A-00-5
Crankshaft position sensor, B43	303-14B-00-4
Crankshaft position sensor, B43	303-14B-00-5
Crankshaft position sensor, B43	303-14C-00-3
Crankshaft position sensor, B43	303-14D-00-5
Crankshaft position sensor, B43	303-14F-00-5
Cylinder head temperature sensor, B135	303-03B-00-1

Cylinder head temperature sensor, B135 .....	303-03C-00-1
Cylinder head temperature sensor, B135 .....	303-03D-00-1
Cylinder head temperature sensor, B135 .....	303-14B-00-4
Cylinder head temperature sensor, B135 .....	303-14B-00-5
Cylinder head temperature sensor, B135 .....	303-14C-00-4
Cylinder head temperature sensor, B135 .....	303-14D-00-5
Cylinder head temperature sensor, B135 .....	412-03A-00-11
Cylinder head temperature sensor, B135 .....	412-03A-00-13
Cylinder head temperature sensor, B135 .....	412-03A-00-15
Data Link Connector (DLC), D20 .....	418-00-00-1
Data link connector (LPG), D48 .....	303-14F-00-7
Data link connector (LPG), D48 .....	418-00-00-9
Daytime Running Lamps (DRL) relay, K5 .....	417-04-00-2
Deceleration fuel cutoff valve, Y172 .....	303-04F-00-1
Deceleration fuel cutoff valve, Y172 .....	303-14F-00-9
Defrost compressor switch, N469 .....	412-03A-00-1
Defrost compressor switch, N469 .....	412-03A-00-2
Diesel pump unit, A74 .....	303-14B-00-2
Diesel pump unit, A74 .....	303-14D-00-3
Differential Pressure Feedback EGR (DPFE) sensor, B257 .....	303-14A-00-2
Differential Pressure Feedback EGR (DPFE) sensor, B257 .....	303-14F-00-2
Diode 1, V67 .....	206-00-00-1
Diode 1, V67 .....	206-00-00-2
Diode 1, V67 .....	413-01-00-4
Diode 1, V67 .....	413-01-00-5
Door ajar switch, driver side front, N239 .....	413-09-00-1
Door ajar switch, driver side front, N239 .....	413-09-00-2
Door ajar switch, driver side front, N239 .....	413-09-00-5
Door ajar switch, driver side front, N239 .....	417-02-00-1
Door ajar switch, driver side front, N239 .....	417-02-00-14
Door ajar switch, driver side front, N239 .....	417-02-00-15
Door ajar switch, driver side front, N239 .....	417-02-00-2
Door ajar switch, driver side front, N239 .....	417-02-00-7
Door ajar switch, driver side front, N239 .....	417-02-00-8
Door ajar switch, passenger side front, N240 .....	413-09-00-1
Door ajar switch, passenger side front, N240 .....	413-09-00-2
Door ajar switch, passenger side front, N240 .....	417-02-00-1
Door ajar switch, passenger side front, N240 .....	417-02-00-7
Door ajar switch, passenger side front, N240 .....	417-02-00-8
Door lock actuator, driver side, rear, M162 .....	501-14-00-10
Door lock actuator, driver side, rear, M162 .....	501-14-00-11
Door lock actuator, driver side, rear, M162 .....	501-14-00-12
Door lock actuator, driver side, rear, M162 .....	501-14-00-9
Door lock actuator, passenger side, rear, M166 .....	501-14-00-10
Door lock actuator, passenger side, rear, M166 .....	501-14-00-11
Door lock actuator, passenger side, rear, M166 .....	501-14-00-12
Door lock actuator, passenger side, rear, M166 .....	501-14-00-9
Door lock unit, driver side front, A172 .....	417-02-00-3
Door lock unit, driver side front, A172 .....	417-02-00-4



Door lock unit, driver side front, A172	419-01A-00-3
Door lock unit, driver side front, A172	419-01A-00-5
Door lock unit, driver side front, A172	419-01A-00-6
Door lock unit, driver side front, A172	501-14-00-2
Door lock unit, LH rear, A275	417-02-00-4
Door lock unit, LH rear, A275	419-01A-00-6
Door lock unit, LH rear, A275	501-14-00-3
Door lock unit, passenger side front, A173	417-02-00-3
Door lock unit, passenger side front, A173	417-02-00-4
Door lock unit, passenger side front, A173	419-01A-00-3
Door lock unit, passenger side front, A173	419-01A-00-5
Door lock unit, passenger side front, A173	419-01A-00-6
Door lock unit, passenger side front, A173	501-14-00-2
Door lock unit, rear, A263	501-14-00-5
Door lock unit, rear, A263	501-14-00-6
Door lock unit, rear, A263	501-14-00-7
Door lock unit, rear, A263	501-14-00-8
Door lock unit, RH rear, A276	417-02-00-4
Door lock unit, RH rear, A276	419-01A-00-6
Door lock unit, RH rear, A276	501-14-00-3
Driver air bag unit, A42	501-20B-00-3
Durashift control assembly, A319	308-03B-00-1
Durashift power hold relay, K266	308-03B-00-1
EGR valve actuator, M254	303-14A-00-3
EGR valve actuator, M254	303-14B-00-1
EGR valve actuator, M254	303-14C-00-1
EGR valve actuator, M254	303-14D-00-1
EGR valve actuator, M254	303-14F-00-3
EGR valve position sensor, B49	303-14B-00-4
EGR valve position sensor, B49	303-14B-00-5
EGR valve position sensor, B49	303-14D-00-5
Electronic flasher module, A17	413-01-00-1
Electronic flasher module, A17	417-01-00-11
Electronic flasher module, A17	417-01-00-12
Electronic flasher module, A17	417-01-00-13
Electronic flasher module, A17	417-01-00-18
Engine Coolant Temperature (ECT) sensor, B10	303-03A-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-03F-00-1
Engine Coolant Temperature (ECT) sensor, B10	303-14A-00-2
Engine Coolant Temperature (ECT) sensor, B10	303-14F-00-2
Engine Coolant Temperature (ECT) sensor, B10	412-03A-00-17
Engine Coolant Temperature (ECT) sensor, B10	412-03A-00-9
EVAP canister purge valve, Y134	303-14A-00-3
EVAP canister purge valve, Y134	303-14F-00-3
Exterior mirror, driver side, A355	501-09-00-1
Exterior mirror, driver side, A355	501-11-00-3
Exterior mirror, passenger side, A356	501-09-00-1
Exterior mirror, passenger side, A356	501-11-00-3
Exterior mirror control switch, N409	501-09-00-1

F1.1	700-03-00-1
F1.1	700-02-00-1
F1.1	700-02-00-2
F1.1	700-02-00-3
F1.1	700-02-00-4
F1.1	700-02-00-5
F1.10	412-03A-00-8
F1.10	412-03A-00-10
F1.10	412-03A-00-12
F1.10	412-03A-00-14
F1.10	412-03A-00-16
F1.10	700-02-00-22
F1.10	700-02-00-23
F1.10	700-03-00-3
F1.101	700-02-00-1
F1.101	700-02-00-2
F1.101	700-02-00-3
F1.101	700-02-00-4
F1.101	700-02-00-5
F1.101	700-03-00-10
F1.102	700-02-00-15
F1.102	700-03-00-10
F1.103	700-02-00-16
F1.103	700-02-00-17
F1.103	700-03-00-10
F1.104	700-02-00-14
F1.104	700-02-00-18
F1.104	700-02-00-19
F1.104	700-03-00-10
F1.105	303-03A-00-1
F1.105	303-03B-00-1
F1.105	303-03C-00-1
F1.105	303-03D-00-1
F1.105	303-03F-00-1
F1.105	412-03A-00-9
F1.105	412-03A-00-11
F1.105	412-03A-00-13
F1.105	412-03A-00-15
F1.105	412-03A-00-17
F1.105	700-02-00-1
F1.105	700-02-00-2
F1.105	700-02-00-3
F1.105	700-02-00-4
F1.105	700-02-00-5
F1.105	700-03-00-10
F1.106	303-06A-00-1
F1.106	303-06B-00-1
F1.106	303-06C-00-1
F1.106	303-06D-00-1

F1.106	303-06F-00-1
F1.106	700-02-00-1
F1.106	700-02-00-2
F1.106	700-02-00-3
F1.106	700-02-00-4
F1.106	700-02-00-5
F1.106	700-02-00-24
F1.106	700-03-00-11
F1.107	700-03-00-11
F1.108	700-02-00-1
F1.108	700-02-00-2
F1.108	700-02-00-3
F1.108	700-02-00-4
F1.108	700-02-00-5
F1.108	700-02-00-6
F1.108	700-02-00-8
F1.108	700-02-00-9
F1.108	700-02-00-11
F1.108	700-02-00-12
F1.108	700-03-00-11
F1.109	303-03A-00-1
F1.109	303-03B-00-1
F1.109	303-03C-00-1
F1.109	303-03D-00-1
F1.109	303-03F-00-1
F1.109	412-03A-00-9
F1.109	412-03A-00-11
F1.109	412-03A-00-13
F1.109	412-03A-00-15
F1.109	412-03A-00-17
F1.109	700-02-00-1
F1.109	700-02-00-2
F1.109	700-02-00-3
F1.109	700-02-00-4
F1.109	700-02-00-5
F1.109	700-03-00-12
F1.11	700-02-00-20
F1.11	700-03-00-4
F1.110	700-02-00-1
F1.110	700-02-00-2
F1.110	700-02-00-3
F1.110	700-02-00-4
F1.110	700-02-00-5
F1.110	700-03-00-12
F1.111	700-02-00-20
F1.111	700-03-00-13
F1.113	700-02-00-15
F1.113	700-03-00-13
F1.114	700-02-00-20

F1.114	700-03-00-13
F1.13	700-02-00-20
F1.13	700-03-00-4
F1.14	303-03A-00-1
F1.14	303-03B-00-1
F1.14	303-03C-00-1
F1.14	303-03D-00-1
F1.14	303-03F-00-1
F1.14	412-03A-00-9
F1.14	412-03A-00-11
F1.14	412-03A-00-13
F1.14	412-03A-00-15
F1.14	412-03A-00-17
F1.14	700-02-00-20
F1.14	700-03-00-5
F1.15	419-01B-00-1
F1.15	419-01B-00-2
F1.15	419-01B-00-3
F1.15	419-01B-00-4
F1.15	419-01B-00-5
F1.15	700-02-00-6
F1.15	700-02-00-8
F1.15	700-02-00-9
F1.15	700-02-00-11
F1.15	700-02-00-12
F1.15	700-03-00-5
F1.16	412-03A-00-12
F1.16	412-03A-00-14
F1.16	700-02-00-6
F1.16	700-02-00-8
F1.16	700-02-00-9
F1.16	700-02-00-11
F1.16	700-02-00-12
F1.16	700-03-00-6
F1.17	700-02-00-20
F1.17	700-03-00-6
F1.18	414-02B-00-1
F1.18	414-02D-00-1
F1.18	414-02D-00-2
F1.18	700-02-00-1
F1.18	700-02-00-2
F1.18	700-02-00-3
F1.18	700-02-00-4
F1.18	700-02-00-5
F1.18	700-03-00-7
F1.19	700-02-00-20
F1.19	700-03-00-7
F1.20	700-02-00-24
F1.20	700-03-00-7

F1.21	700-02-00-6
F1.21	700-02-00-8
F1.21	700-02-00-9
F1.21	700-02-00-11
F1.21	700-02-00-12
F1.21	700-03-00-8
F1.22	700-02-00-8
F1.22	700-02-00-11
F1.22	700-02-00-20
F1.22	700-03-00-9
F1.23	700-02-00-22
F1.23	700-02-00-23
F1.23	700-03-00-9
F1.24	700-02-00-22
F1.24	700-02-00-23
F1.24	700-03-00-9
F1.3	700-02-00-22
F1.3	700-02-00-23
F1.3	700-03-00-1
F1.5	700-02-00-14
F1.5	700-02-00-18
F1.5	700-02-00-19
F1.5	700-02-00-27
F1.5	700-03-00-2
F1.6	700-02-00-22
F1.6	700-02-00-23
F1.6	700-03-00-2
F1.7	700-02-00-22
F1.7	700-02-00-23
F1.7	700-03-00-2
F1.8	700-02-00-22
F1.8	700-02-00-23
F1.8	700-03-00-3
F1.9	700-02-00-22
F1.9	700-02-00-23
F1.9	700-03-00-3
F2.1	700-02-00-21
F2.1	700-03-00-14
F2.10	700-02-00-16
F2.10	700-02-00-17
F2.10	700-03-00-26
F2.11	700-02-00-14
F2.11	700-02-00-18
F2.11	700-02-00-19
F2.11	700-03-00-26
F2.12	700-02-00-16
F2.12	700-02-00-17
F2.12	700-03-00-26
F2.13	700-02-00-14

F2.13 ..... 700-02-00-18  
F2.13 ..... 700-02-00-19  
F2.13 ..... 700-03-00-27  
F2.14 ..... 417-02-00-6  
F2.14 ..... 700-02-00-16  
F2.14 ..... 700-02-00-17  
F2.14 ..... 700-03-00-28  
F2.14 ..... 700-03-00-29  
F2.14 ..... 700-03-00-30  
F2.15 ..... 700-02-00-14  
F2.15 ..... 700-02-00-18  
F2.15 ..... 700-02-00-19  
F2.15 ..... 700-03-00-31  
F2.15 ..... 700-03-00-32  
F2.16 ..... 700-02-00-16  
F2.16 ..... 700-02-00-17  
F2.16 ..... 700-03-00-33  
F2.17 ..... 700-02-00-16  
F2.17 ..... 700-02-00-17  
F2.17 ..... 700-03-00-33  
F2.18 ..... 700-02-00-21  
F2.18 ..... 700-03-00-34  
F2.19 ..... 700-02-00-21  
F2.19 ..... 700-03-00-35  
F2.2 ..... 700-02-00-15  
F2.2 ..... 700-03-00-15  
F2.20 ..... 700-02-00-16  
F2.20 ..... 700-02-00-17  
F2.20 ..... 700-03-00-36  
F2.21 ..... 303-14F-00-2  
F2.21 ..... 417-01-00-24  
F2.21 ..... 417-01-00-25  
F2.21 ..... 417-01-00-26  
F2.21 ..... 700-02-00-21  
F2.21 ..... 700-03-00-36  
F2.22 ..... 700-02-00-16  
F2.22 ..... 700-02-00-17  
F2.22 ..... 700-03-00-36  
F2.23 ..... 700-02-00-21  
F2.23 ..... 700-03-00-36  
F2.24 ..... 413-09-00-2  
F2.24 ..... 700-02-00-16  
F2.24 ..... 700-02-00-17  
F2.24 ..... 700-02-00-26  
F2.24 ..... 700-03-00-37  
F2.25 ..... 700-02-00-21  
F2.25 ..... 700-03-00-37  
F2.26 ..... 700-02-00-16  
F2.26 ..... 700-02-00-17

F2.26	700-03-00-38
F2.27	700-02-00-24
F2.27	700-03-00-38
F2.3	700-02-00-24
F2.3	700-02-00-25
F2.3	700-03-00-15
F2.31	700-02-00-16
F2.31	700-02-00-17
F2.31	700-03-00-39
F2.38	700-02-00-16
F2.38	700-02-00-17
F2.38	700-03-00-39
F2.4	700-02-00-24
F2.5	700-02-00-24
F2.5	700-03-00-16
F2.6	700-02-00-26
F2.6	700-03-00-17
F2.7	700-02-00-24
F2.7	700-03-00-18
F2.8	700-02-00-26
F2.8	700-03-00-19
F2.8	700-03-00-20
F2.8	700-03-00-21
F2.9	700-02-00-26
F2.9	700-03-00-22
F2.9	700-03-00-23
F2.9	700-03-00-24
F2.9	700-03-00-25
F3.1	700-02-00-1
F3.1	700-02-00-2
F3.1	700-02-00-3
F3.1	700-02-00-4
F3.1	700-02-00-5
F3.1	700-03-00-39
F3.2	700-03-00-39
F4.1	700-02-00-13
F4.1	700-03-00-40
F4.2	700-02-00-27
F4.2	700-03-00-40
Flash code connector, D82	303-14F-00-7
Fog lamp, LH side front, E43	417-01-00-4
Fog lamp, LH side front, E43	417-01-00-5
Fog lamp, RH side front, E42	417-01-00-4
Fog lamp, RH side front, E42	417-01-00-5
Fuel injector 1, Y108	303-04A-00-1
Fuel injector 1, Y108	303-04C-00-1
Fuel injector 1, Y108	303-04F-00-2
Fuel injector 2, Y109	303-04A-00-1
Fuel injector 2, Y109	303-04C-00-1

Fuel injector 2, Y109 .....	303-04F-00-2
Fuel injector 3, Y110 .....	303-04A-00-1
Fuel injector 3, Y110 .....	303-04C-00-1
Fuel injector 3, Y110 .....	303-04F-00-2
Fuel injector 4, Y111 .....	303-04A-00-1
Fuel injector 4, Y111 .....	303-04C-00-1
Fuel injector 4, Y111 .....	303-04F-00-2
Fuel lift pump motor, M255 .....	303-14D-00-2
Fuel lift pump relay, K341 .....	303-14D-00-2
Fuel metering valve, Y165 .....	303-04C-00-1
Fuel metering valve, Y165 .....	303-14C-00-2
Fuel pump relay, K4 .....	303-14A-00-4
Fuel pump relay, K4 .....	303-14B-00-2
Fuel pump relay, K4 .....	303-14D-00-3
Fuel pump relay, K4 .....	303-14F-00-4
Fuel rail pressure transducer sensor, B225 .....	303-04C-00-2
Fuel rail pressure transducer sensor, B225 .....	303-14C-00-4
Fuel selection switch, N370 .....	303-14F-00-7
Fuel tank unit, A31 .....	303-14A-00-4
Fuel tank unit, A31 .....	303-14F-00-4
Fuel tank unit, A31 .....	413-01-00-2
Fuel tank unit, A31 .....	413-01-00-3
Fuel temperature sensor, B109 .....	303-04C-00-2
Fuel temperature sensor, B109 .....	303-14C-00-4
Function selector switch assembly, P76 .....	412-02A-00-1
Function selector switch assembly, P76 .....	412-02B-00-3
Function selector switch assembly, P76 .....	412-03A-00-1
Function selector switch assembly, P76 .....	412-03A-00-2
Function selector switch assembly, rear, P83 .....	412-02A-00-2
Function selector switch assembly, rear, P83 .....	412-03A-00-18
Fuse holder, P44 .....	700-02-00-1
Fuse holder, P44 .....	700-02-00-2
Fuse holder, P44 .....	700-02-00-3
Fuse holder, P44 .....	700-02-00-4
Fuse holder, P44 .....	700-02-00-5
Fuse holder, P44 .....	700-03-00-39
Fuse holder 1, P45 .....	413-01-00-13
Fuse holder 1, P45 .....	700-03-00-40
Fuse holder 2, P46 .....	700-02-00-27
Fuse holder 2, P46 .....	700-03-00-40
Fusible link A, O26 .....	700-02-00-2
Fusible link A, O26 .....	700-02-00-3
Fusible link A, O26 .....	700-02-00-4
G2 .....	700-04-00-1
G2 .....	700-04-00-2
G2 .....	700-04-00-3
G3 .....	700-04-00-4
G3 .....	700-04-00-5
G3 .....	700-04-00-6



G3	700-04-00-7
G3	700-04-00-8
G3	700-04-00-9
G4	700-04-00-11
G5	700-04-00-11
G6	700-04-00-12
G7	700-04-00-17
G8	700-04-00-20
G10	700-04-00-21
G10	700-04-00-22
G11	700-04-00-23
G11	700-04-00-24
G12	700-04-00-25
G12	700-04-00-26
G12	700-04-00-27
G12	700-04-00-28
G12	700-04-00-29
G12	700-04-00-32
G12	700-04-00-33
G13	700-02-00-1
G13	700-02-00-2
G13	700-02-00-3
G13	700-02-00-4
G13	700-02-00-5
G13	700-04-00-34
G14	700-04-00-35
G14	700-04-00-36
G14	700-04-00-37
G14	700-04-00-38
G14	700-04-00-39
G14	700-04-00-40
G14	700-04-00-41
G14	700-04-00-42
G14	700-04-00-43
G14	700-04-00-44
G15	700-04-00-45
G16	700-04-00-45
G17	700-04-00-45
G100	700-04-00-46
G101	700-04-00-47
G102	700-04-00-48
G103	700-04-00-48
Gear selector switch, steering wheel, N390	308-03B-00-3
Generator, O5	414-02A-00-1
Generator, O5	414-02B-00-1
Generator, O5	414-02C-00-1
Generator, O5	414-02D-00-1
Generator, O5	414-02D-00-2
Generator, O5	414-02F-00-1

Generator cutoff relay, K349	414-02C-00-1
Generator cutoff relay, K349	414-02D-00-1
Glow plugs, P20	303-07B-00-1
Glow plugs, P20	303-07C-00-1
Glow plugs, P20	303-07C-00-2
Glow plugs, P20	303-07D-00-1
Hazard flasher switch, N49	417-01-00-13
Headlamp, LH side, E1	417-01-00-1
Headlamp, LH side, E1	417-01-00-2
Headlamp, LH side, E1	417-01-00-3
Headlamp, LH side, E1	417-04-00-1
Headlamp, RH side, E7	417-01-00-1
Headlamp, RH side, E7	417-01-00-2
Headlamp, RH side, E7	417-01-00-3
Headlamp, RH side, E7	417-04-00-1
Headlamp switch, N120	413-00-00-1
Headlamp switch, N120	413-00-00-2
Headlamp switch, N120	413-09-00-1
Headlamp switch, N120	413-09-00-5
Headlamp switch, N120	417-01-00-1
Headlamp switch, N120	417-01-00-2
Headlamp switch, N120	417-01-00-20
Headlamp switch, N120	417-01-00-21
Headlamp switch, N120	417-01-00-3
Headlamp switch, N120	417-01-00-5
Headlamp switch, N120	417-01-00-6
Headlamp switch, N120	417-01-00-8
Headlamp switch, N120	417-04-00-1
Headlamp switch, N120	417-04-00-2
Headlamp switch, N120	700-02-00-25
Headlamp switch, N120	700-02-00-26
Heated rear window/heated mirror timer relay, K292	501-11-00-3
Heated rear window switch, N10	501-11-00-3
Heated seat back, driver side, N459	501-10-00-1
Heated seat back, driver side, N459	501-10-00-2
Heated seat back, passenger side, N460	501-10-00-2
Heated seat cushion, driver side, N457	501-10-00-1
Heated seat cushion, driver side, N457	501-10-00-2
Heated seat cushion, passenger side, N458	501-10-00-2
Heated seat switch, driver side, N274	501-10-00-1
Heated seat switch, driver side, N274	501-10-00-2
Heated seat switch, passenger side, N275	501-10-00-2
Heated windshield, LH side, R66	501-11-00-4
Heated windshield, RH side, R65	501-11-00-4
Heated windshield, right relay, K326	501-11-00-4
Heated windshield switch, N280	501-11-00-4
Heated windshield timer relay, LH side, K291	501-11-00-4
Heater control module, rear, A264	412-02A-00-2
Heater control module, rear, A264	412-02A-00-3

Heater control module, rear, A264	412-03A-00-19
Heater coolant valve, rear, Y235	412-02A-00-3
Heater coolant valve, rear, Y235	412-03A-00-19
High beam relay, K37	417-01-00-1
High beam relay, K37	417-04-00-1
High mounted stop lamp, E174	417-01-00-24
High mounted stop lamp, E174	417-01-00-25
High speed cooling fan relay, K46	303-03A-00-1
High speed cooling fan relay, K46	303-03B-00-1
High speed cooling fan relay, K46	303-03C-00-1
High speed cooling fan relay, K46	303-03D-00-1
High speed cooling fan relay, K46	303-03F-00-1
High speed cooling fan relay, K46	412-03A-00-11
High speed cooling fan relay, K46	412-03A-00-13
High speed cooling fan relay, K46	412-03A-00-15
High speed cooling fan relay, K46	412-03A-00-17
High speed cooling fan relay, K46	412-03A-00-9
Horn, H1	413-06-00-1
Horn relay, K33	413-06-00-1
Horn switch, N54	413-06-00-1
Hydraulic power unit (HPU), A320	308-03B-00-1
Hydraulic power unit (HPU), A320	308-03B-00-6
Hydraulic pump relay, K267	308-03B-00-1
Idle air control valve (IAC), Y133	303-04A-00-1
Idle air control valve (IAC), Y133	303-04F-00-1
Idle air control valve (IAC), Y133	303-14A-00-1
Idle air control valve (IAC), Y133	303-14F-00-1
Ignition coil A, T10	303-07A-00-1
Ignition coil A, T10	303-07F-00-1
Ignition coil B, T11	303-07A-00-1
Ignition coil B, T11	303-07F-00-1
Ignition relay, K41	700-02-00-20
Ignition switch, N278	700-02-00-24
Ignition transformer capacitor 1, U10	303-07A-00-1
Ignition transformer capacitor 1, U10	303-07F-00-1
In-line fuse 1, P84	700-02-00-16
In-line fuse 1, P84	700-02-00-17
In-line fuse 2, P85	700-02-00-16
In-line fuse 2, P85	700-02-00-17
Independent heating control module, A131	412-02B-00-1
Independent heating control module, A131	412-02B-00-2
Independent heating control module, A131	412-02B-00-3
Inertia Fuel Shutoff (IFS) switch, N316	303-14A-00-4
Inertia Fuel Shutoff (IFS) switch, N316	303-14D-00-2
Inertia Fuel Shutoff (IFS) switch, N316	303-14F-00-4
Inertia Fuel Shutoff (IFS) switch, N316	412-02B-00-2
Inertia Fuel Shutoff (IFS) switch, N316	412-02B-00-4
Inertia Fuel Shutoff (IFS) switch, N316	412-02B-00-5
Inertia Fuel Shutoff (IFS) switch, N316	700-02-00-27

Injector cutoff relay, K281 .....	303-04F-00-1
Injector cutoff relay, K281 .....	303-14F-00-6
Input shaft speed sensor (ISS), B172 .....	308-03B-00-8
Instrument cluster, A30 .....	413-01-00-1
Instrument cluster, A30 .....	413-07-00-1
Instrument cluster, A30 .....	413-17-00-1
Interior/map reading lamp assembly, second seat row, E302 .....	417-02-00-11
Interior/map reading lamp assembly, third seat row, E310 .....	417-02-00-11
Interior lamp, centre, E236 .....	417-02-00-1
Interior lamp, centre, E236 .....	417-02-00-10
Interior lamp, centre, E236 .....	417-02-00-11
Interior lamp, centre, E236 .....	417-02-00-2
Interior lamp, centre, E236 .....	417-02-00-5
Interior lamp, centre, E236 .....	417-02-00-6
Interior lamp, centre, E236 .....	417-02-00-9
Interior lamp, front, E18 .....	417-02-00-1
Interior lamp, front, E18 .....	417-02-00-10
Interior lamp, front, E18 .....	417-02-00-11
Interior lamp, front, E18 .....	417-02-00-2
Interior lamp, front, E18 .....	417-02-00-5
Interior lamp, front, E18 .....	417-02-00-6
Interior lamp, front, E18 .....	417-02-00-9
Interior lamp, LH rear, E155 .....	417-02-00-10
Interior lamp, LH rear, E155 .....	417-02-00-5
Interior lamp, LH rear, E155 .....	417-02-00-6
Interior lamp, LH rear, E155 .....	417-02-00-9
Interior lamp, RH rear, E154 .....	417-02-00-10
Interior lamp, RH rear, E154 .....	417-02-00-5
Interior lamp, RH rear, E154 .....	417-02-00-6
Interior lamp, RH rear, E154 .....	417-02-00-9
Interior lamp relay, K142 .....	413-09-00-4
Interior lamp relay, K142 .....	417-02-00-10
Interior lamp relay, K142 .....	417-02-00-11
Interior lamp relay, K142 .....	417-02-00-12
Interior lamp relay, K142 .....	417-02-00-2
Interior lamp relay, K142 .....	417-02-00-8
Interior lamp relay, K142 .....	417-02-00-9
Knock sensor, B45 .....	303-14C-00-4
Left front speaker, Y28 .....	415-03-00-1
Left front speaker, Y28 .....	415-03-00-3
Left rear speaker, Y17 .....	415-03-00-2
Left rear speaker, Y17 .....	415-03-00-4
Licence plate lamp, LH side, E34 .....	417-01-00-20
Licence plate lamp, LH side, E34 .....	417-01-00-21
Licence plate lamp, RH side, E35 .....	417-01-00-20
Licence plate lamp, RH side, E35 .....	417-01-00-21
Lights-ON-warning module, A66 .....	413-09-00-1
Lights-ON-warning module, A66 .....	413-09-00-2
Lights-ON-warning module, A66 .....	413-09-00-3