


CONTENT

1	PETROL ENGINE ASSEMBLY	1	21	IGNITION CABLE ASSEMBLY	23
2	PETROL ENGINE COMPONENTS	2	22	IGNITION COIL	24
3	CYLINDER BLOCK SUB-ASSEMBLY	3	23	ALTERNATOR COMPONENTS	25
4	CYLINDER HEAD COVER COMPONENTS	4	24	STARTER	26
5	CYLINDER HEAD	5	25	FUEL PUMP ASSEMBLY	27
6	CYLINDER BLOCK COMPONENTS	6	26	OIL FILTER	28
7	TIMING BELT COVER AND BELT PULLEYS	8	27	ENGINE MOUNTING	29
8	PISTON CONNECTING ROD COMPONENTS	9	28	FUEL FILTER	31
9	CRANKSHAFT FLYWHEEL COMPONENT	10	29	PHASE SENSOR AND BASE	32
10	CAMSHAFT	11	30	COLD AIR INTAKE BOX	33
11	VALVE	12	31	CLUTCH ASSEMBLY	34
12	TIMING BELT	13			
13	OIL PUMP ASSEMBLY	14			
14	OIL STRAINER AND OIL PAN COMPONENTS	15			
15	THERMOSTAT ASSEMBLY	16			
16	WATER PUMP ASSEMBLY	17			
17	THROTTLE	18			
18	INTAKE MANIFOLD COMPONENTS	19			
19	EXHAUST MANIFOLD COMPONENTS	21			
20	FUEL INJECTOR	22			
				"★" IS A NON-REUSABLE PART	

1 PETROL ENGINE ASSEMBLY

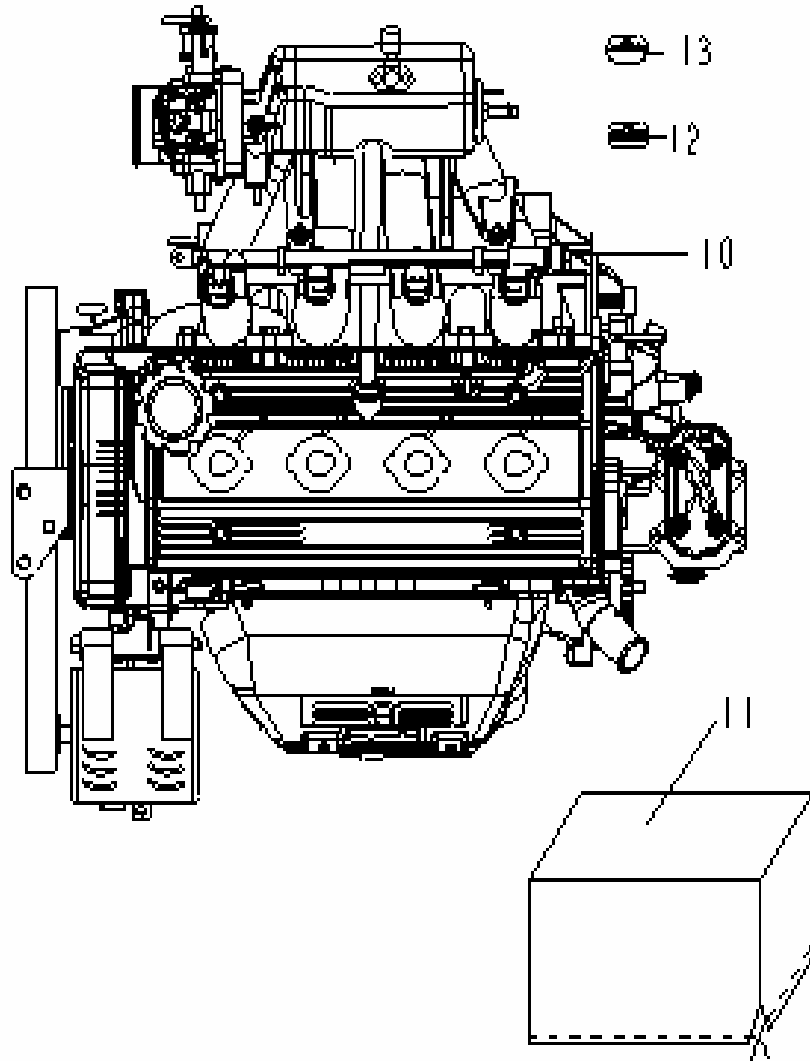

NO.		DES	QTY	REMARK
10		PETROL ENGINE ASSEMBLY	1	
11		PETROL ENGINE FILM COVER (FOR TRANSPORTATION)	1	MR479Q
12		PETROL ENGINE MAINTAINANCE PASTER	1	
13		PETROL ENGINE MAINTAINANCE PASTER	1	MR479QA

2 PETROL ENGINE COMPONENTS

NO.	PART NO.	DES	QTY	REMARK
		PETROL ENGINE COMPONENTS	1	

