


Main Wiring Diagram, 2.8L Gas Engine, engine code AAA

Note:

For A/C system wiring information for vehicles equipped with the 2.8L gas engine, code AAA, see Index for correct Wiring Diagram No.

Relay locations

Position of relays and multi-pin connector wiring, see also "Component Locations" section.

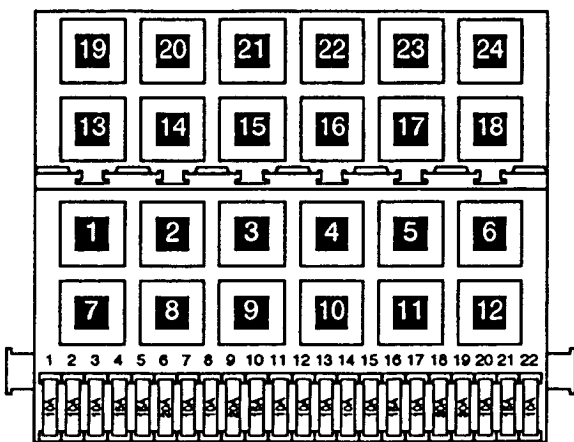

- 4** — Load Reduction Relay (18)
- 6** — Emergency Flasher Relay (21)
- 8** — Wiper/Washer Intermittent Relay (19, 99)
- 9** — Seat Belt Warning System Relay (4, 29)
- 11** — Dual Horn Relay (53)
- 12** — Fuel Pump Relay (67, 80, 167)


Note:

Number in parentheses indicates production control number stamped on relay housing.

97-2932

Fuse colors

- 30A — green
- 25A — white
- 20A — yellow
- 15A — blue
- 10A — red

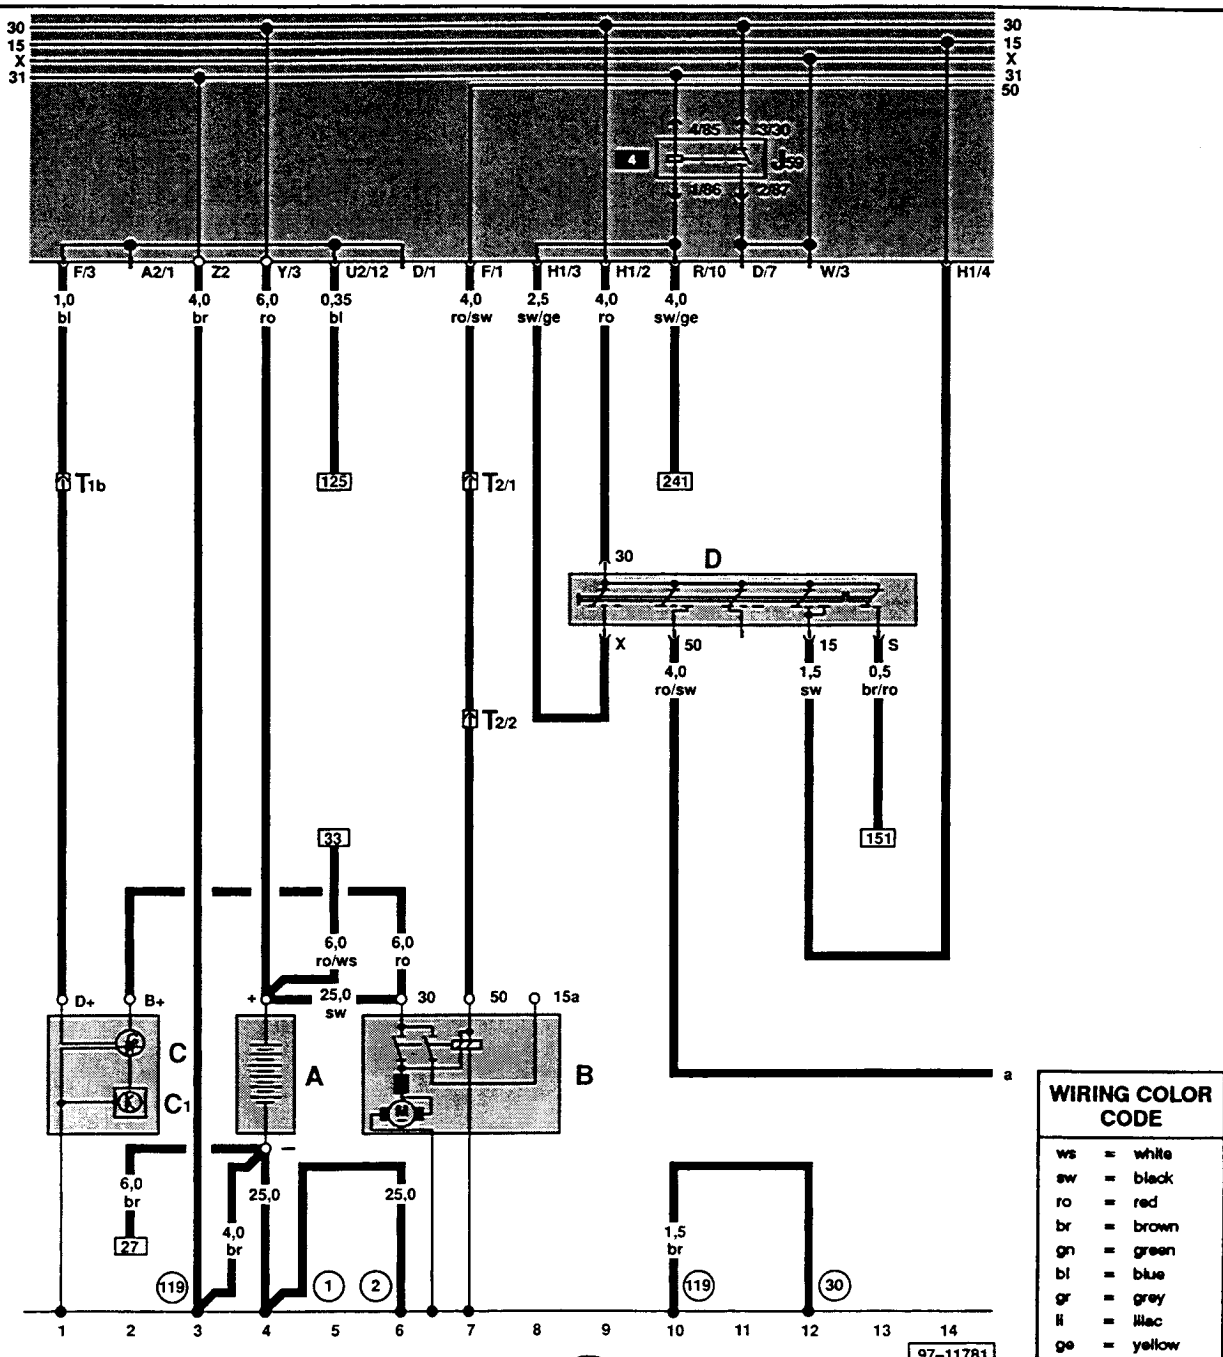

WIRING COLOR CODE	
ws	= white
sw	= black
ro	= red
br	= brown
gn	= green
bl	= blue
gr	= grey
ll	= lilac
ge	= yellow

- A - Battery
- B - Starter
- C - Generator (GEN)
- C1 - Voltage Regulator (VR)
- D - Ignition/Starter Switch
- J59 - Load Reduction Relay
- T1b - Single Connector, near battery
- T2 - Double Connector, behind fuse/relay panel

- 1 - Ground strap, battery to body
- 2 - Ground strap, transmission to body
- 30 - Ground connection -1-, beside fuse/relay panel
- 119 - Ground connection -1-, in headlight wiring harness