



**OPERATOR'S HANDBOOK**

**PAT LOAD MOMENT INDICATOR**

**DS 350 G**

# TABLE OF CONTENTS

---

## PART 1

---

<b>1</b>	<b>General Information</b>	<b>1.1</b>
<b>2</b>	<b>Warnings</b>	<b>1.2</b>
<b>3</b>	<b>System Description</b>	<b>1.3</b>
3.1	Operating Console	1.5
3.2	System Function	1.6
<b>4</b>	<b>System's Operation</b>	<b>1.7</b>
4.1	Information Run	1.7
4.2	Programming Procedure	1.23
4.2.1	Setting of Operating Mode	1.23
4.2.2	Activating and Setting of Angle Limits	1.28
<b>5</b>	<b>Pre-Operation Inspection</b>	<b>1.33</b>
<b>6</b>	<b>Service and Maintenance</b>	<b>1.37</b>
<b>7</b>	<b>Troubleshooting</b>	<b>1.38</b>

---



# Grove Pat Load Moment Indicator Ds 350 G Operator Manual

Full download: <http://manualplace.com/download/grove-pat-load-moment-indicator-ds-350-g-operator-manual/>