




**HIRSCHMANN**

**PAT**

**LOAD MOMENT INDICATOR**

**DS 350GW**

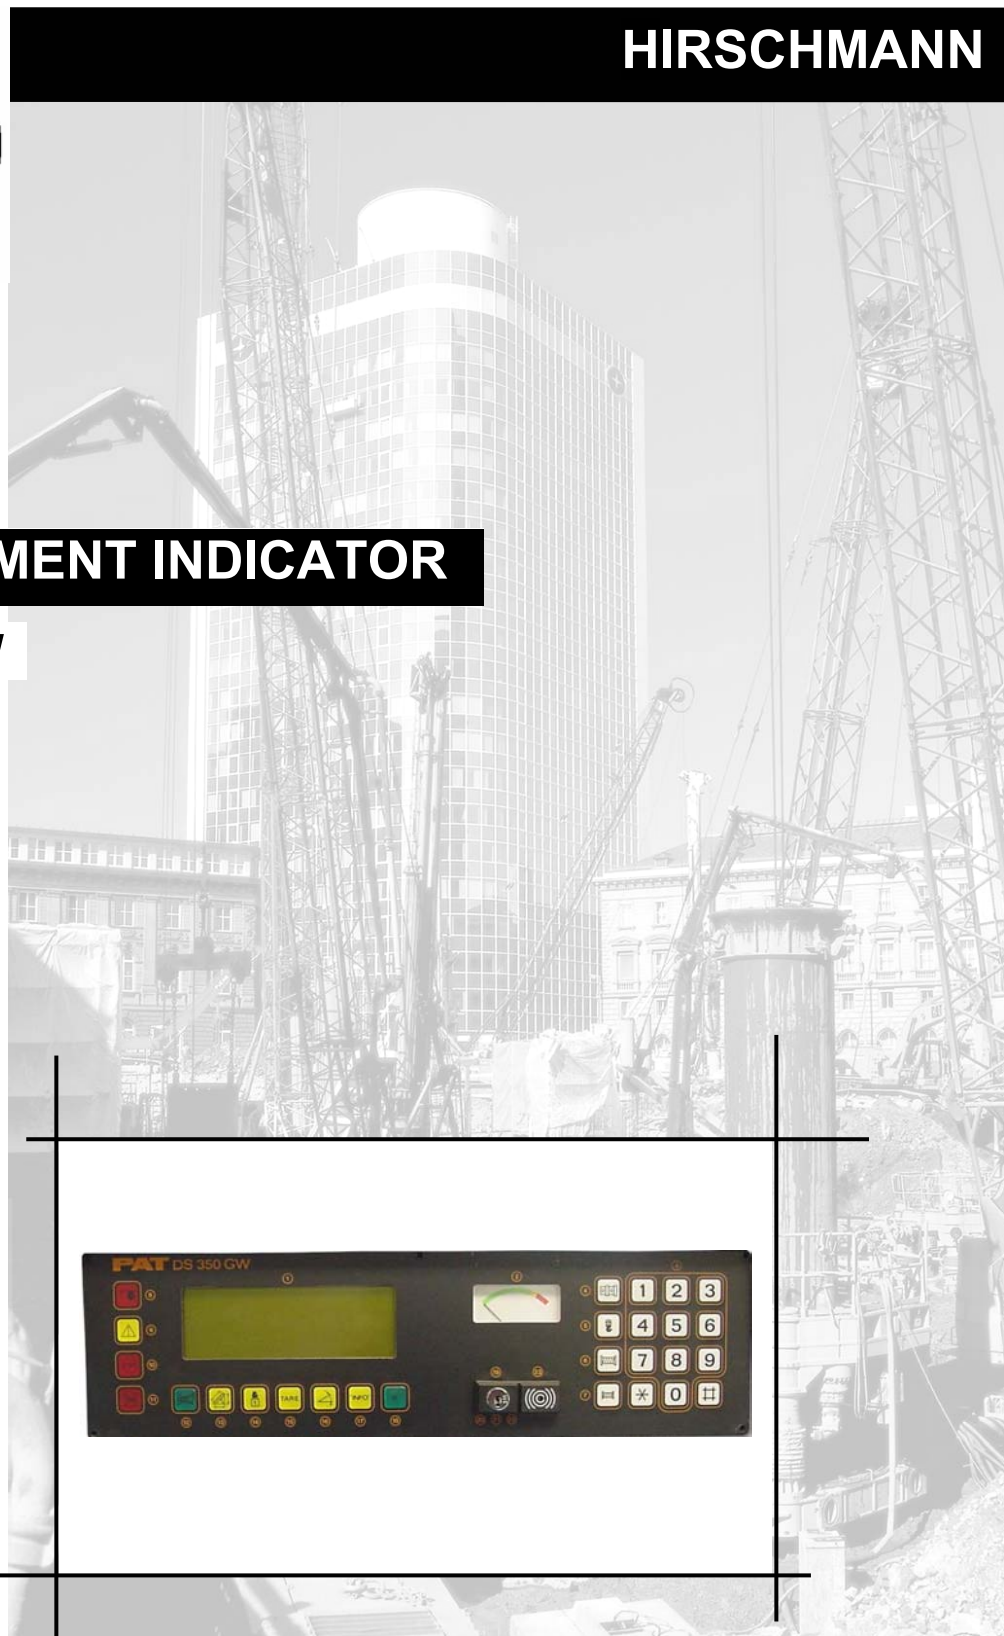

**OPERATOR'S MANUAL**

5<sup>TH</sup> Edition 1996 OPRTHDB-DS350GW

---

*Copyright 1993 by PIETZSCH Automatisierungstechnik GmbH*

**Fifth Edition 5/16/1996**

OPRTH08-DS350GW

## NOTICE

The information in this document is subject to change without notice.

*PAT makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.*

*PAT shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.*

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of PAT.



# PART 1

---

## TABLE OF CONTENTS

---

<b>1</b>	<b>General Information</b>	<b>1</b>
<hr/>		
<b>2</b>	<b>Warnings</b>	<b>2</b>
<hr/>		
<b>3</b>	<b>System Description</b>	<b>3</b>
3.1	Operating Console	5
3.2	System Function	6
<hr/>		
<b>4</b>	<b>System's Operation</b>	<b>7</b>
4.1	Pre-Setup	7
4.2	Information Run	12
4.3	Programming Procedure	26
4.3.1	Programming of Operating Mode	26
4.3.2	Activating and Setting of Boom Angle Preset Limits	33
<hr/>		
<b>5</b>	<b>Pre-Operation Inspection and Calibration Verification</b>	<b>38</b>
<hr/>		
<b>6</b>	<b>Service and Maintenance</b>	<b>44</b>
<hr/>		
<b>7</b>	<b>Troubleshooting</b>	<b>45</b>
<hr/>		