



HIRSCHMANN

PAT

LOAD MOMENT INDICATOR

DS 160



SERVICE MANUAL

P/N 031-300-190-142 REV. G, 02/16/2006

NOTICE

The information in this document is subject to change without notice. Hirschmann makes no warranty of any kind with regard to this material, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose. Hirschmann shall not be liable for errors contained in this manual or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual. This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hirschmann.

MANUAL REVISIONS

REV	DATE	NAME	DESCRIPTION
-	11/26/01	CSH	Service Manual created.
A	3/29/02	CSH	ECN 02-100
B	4/29/02	JRR	ECN 02-157
C	6/13/02	CSH	ECN 02-182
D	5/26/05	SB	ECN 05-102
E	9/26/05	MWS	ECN 05-175
F	11/10/05	MJ	ECN 05-208
G	02/16/06	SB	ECN 06-018

TABLE OF CONTENTS

1	GENERAL INFORMATION	1
2	WARNINGS	1
3	SYSTEM DESCRIPTION	2
4	GENERAL TROUBLESHOOTING INFORMATION	3
4.1	GENERAL FLOW CHARTS	3
5	ERROR CODES	4
5.1	OPERATING ERRORS E01 THROUGH E05	4
5.2	LOCKOUT FUNCTION ERRORS 07 AND 08	5
5.3	ANALOG INPUT CHANNEL ERRORS	5
5.3.1	TRUBLESHOOTING A SENSOR PROBLEM USING THE DISPLAY	5
5.3.2	ERROR CODES FOR THE ANALOG INPUTS	6
5.4	ERRORS 31 AND UP	8
6	FUNCTION LOCKOUT	11
7	NO DISPLAY	12
8	ANTI-TWO BLOCK PROBLEM	14
9	LENGTH READING PROBLEM	17
10	ANGLE READING PROBLEM	19
11	LOAD READING PROBLEM	21
12	DATA TRANSFER CENTRAL UNIT <--> CONSOLE	23
13	DRAWINGS	25
13.1	SYSTEM WIRING DIAGRAM	25
13.2	SYSTEM WIRING DIAGRAM	26
13.3	SYSTEM WIRING DIAGRAM	27
13.4	CENTRAL UNIT MAIN BOARD TERMINATION AND BREAKDOWN / PARTS LIST	28
13.5	CENTRAL UNIT MAIN BOARD LAYOUT	29
13.6	CONSOLE DS160/0005 / PARTS LIST	30
13.7	PRESSURE TRANSDUCER (DAVS314)	31
13.8	PRESSURE TRANSDUCER (DAVS300 / 3401)	31
13.9	CABLE REEL	32
14	PROCEDURES	33
14.1	EPROM LOCATION AND INSTALLATION PROCEDURE	33
14.2	MAIN BOARD REPLACEMENT PROCEDURE	34
14.3	CALIBRATION OF SENSORS PROCEDURE	35
14.3.1	PRESSURE TRANSDUCER CALIBRATION PROCEDURE	35
14.3.2	LENGTH SENSOR CALIBRATION PROCEDURE	36
14.3.3	ANGLE SENSOR CALIBRATION PROCEDURE	37
14.4	CABLE REEL LWG308/0001 ADJUSTMENT PROCEDURE	38
14.5	CABLE REEL LENGTH CABLE REPLACEMENT PROCEDURE	39
15	TROUBLESHOOTING MOISTURE	40
15.1.1	WATER INGRESS	40
15.1.2	CONDENSATION	41
16	SENSOR THEORY	42
16.1	THEORY 1. OPERATION OF PISTON SIDE LOAD SENSOR	42
16.2	THEORY 2. OPERATION OF ROD SIDE LOAD SENSOR	43
16.3	THEORY 3. OPERATION OF BOOM LENGTH SENSOR	44

16.4 THEORY 4. OPERATION OF ANGLE SENSOR.....	45
17 DS50C TO DS160 UPGRADE INSTALLATION	46
17.1 CONSOLE MOUNTING.....	47
17.2 CENTRAL UNIT MOUNTING	47
17.3 SOFTWARE.....	47
17.4 PRESSURE TRANSDUCER REPLACEMENT	47
17.5 DS160 COMPONENT INSTALLATION PROCEDURE.....	48
17.6 LMI SYSTEM TEST PROCEDURE.....	55