

PAT
LOAD MOMENT
INDICATOR
DS 350 / 1307
INTERACTIVE



OPERATOR'S HANDBOOK

NOTICE

The information in this document is subject to change without notice. PAT makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. PAT shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of PAT.

Copyright 1996 PIETZSCH Automatisierungstechnik GmbH, D-76275 Ettlingen

First Edition 07/22/1996 -ko.
(for SYS-PROM: DLIA V1.1 / KON-PROM: KPIE V 1.0)

50\350\19_1307e.DOC

TABLE OF CONTENTS

1	General Information	1
----------	----------------------------	----------

2	Warnings	1
----------	-----------------	----------

3	System Description	3
3.1	System Function	5
3.2	Operating Console	5
3.3	Control Identification	5

4	Programming procedure	21
4.1	Setting the Outrigger Configuration	22
4.2	Setting the Boom Configuration	22
4.3	Setting the Lifting operation mode	24
4.5	Setting the Reeving	25
4.5	Confirmation of Programming Procedure	26

5	Pre-Operation Inspection and Calibration Verification	27
----------	--	-----------

6	Service and Maintenance	33
----------	--------------------------------	-----------

7	Troubleshooting	35
----------	------------------------	-----------
