



PAT

PAT

www.patamerica.com

PAT America, Inc.

LOAD MOMENT INDICATOR

DS 350 / 1318 Graphic



OPERATOR'S MANUAL

P/N 050-350-191-318 REV 7 - 3/27/2001

NOTICE

The information in this document is subject to change without notice.

PAT makes no warranty of any kind with regard to this material, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose.

PAT shall not be liable for errors contained in this manual or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual. This document contains proprietary information, which is protected by copyright. All rights are reserved.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of PAT.

TABLE OF CONTENTS

1	GENERAL INFORMATION	1
2	WARNINGS	2
3	SYSTEM DESCRIPTION	3
3.1	SYSTEM FUNCTION	5
3.2	OPERATING CONSOLE	6
3.3	CONTROL IDENTIFICATION	7
4	CONFIGURATION SETUP	13
4.1	LMI SETUP PROCEDURE	13
4.2	QUICK SETTING OF THE REEVING	18
4.3	QUICK HOIST LINE SELECTION	19
5	OPERATION	21
5.1	LIMIT SETTING	24
5.1.1	Slewing Angle Limitation / Work Area Definition	25
5.1.2	Tip Height Limitation	32
5.1.3	Boom Angle Limitation	33
5.1.4	Radius Limitation	36
5.2	INFO CRANE CONFIGURATION	39
5.3	DISPLAY CONTRAST CONTROL	40
6	PRE-OPERATION INSPECTION AND CALIBRATION VERIFICATION	41
7	SERVICE AND MAINTENANCE	47
8	TROUBLESHOOTING	48
9	APPENDIX	52
9.1	APPENDIX A: DETAILED SYMBOL EXPLANATION OF BOOM EXTENSIONS	52
9.2	APPENDIX B: DETAILED SYMBOL EXPLANATION OF COUNTERWEIGHT OPTIONS	53

Grove Pat Load Moment Indicator Ds350 1318 Operator Manual

Full download: <http://manualplace.com/download/grove-pat-load-moment-indicator-ds350-1318-operator-manual/>