




www.patamerica.com

PAT America, Inc.

PAT  
**PAT**

# LOAD MOMENT INDICATOR

DS 350 / 1319 Graphic

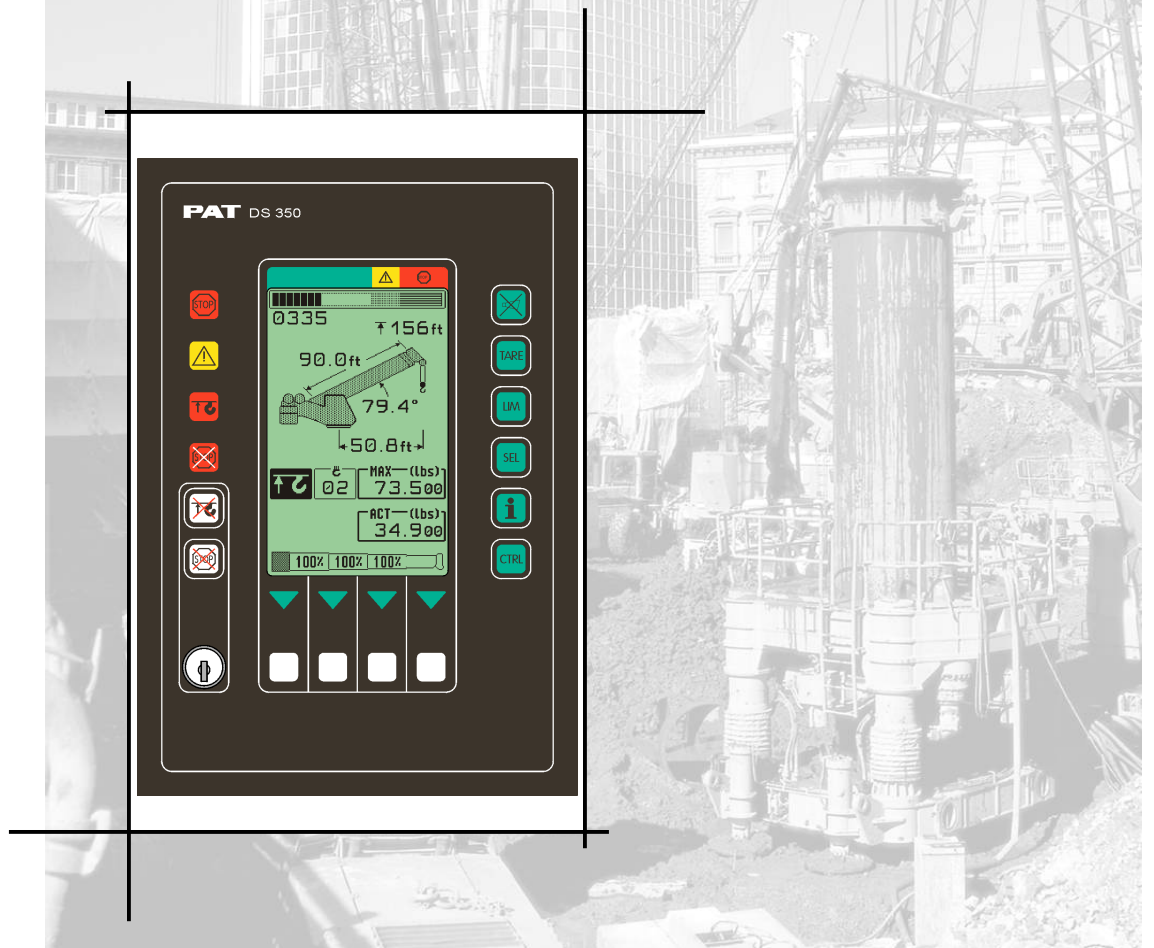

## OPERATOR'S MANUAL

P/N 050-350-191-319 REV 7- 6/18/2001

## NOTICE

PAT America, Inc. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and/or its fitness for a particular purpose.

PAT America, Inc. will not be liable for errors contained in this manual or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual. This document contains proprietary information, which is protected by copyright, and all rights are reserved.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of PAT America, Inc.

PAT America, Inc. reserves proprietary rights to all drawings, photos and the data contained therein. The drawings, photos and data are confidential and cannot be used or reproduced without the written consent of PAT America, Inc. The drawings and/or photos are subject to technical modification without prior notice.

All information in this document is subject to change without notice.

## MANUAL REVISIONS

REV	DATE	NAME	DESCRIPTION
6	12/21/00	CSH	ADDED COUNTERWEIGHT OPTION PAGE TO APPENDIX B
7	6/18/01	MOO	REVISED UNDER ECN 01-187

## TABLE OF CONTENTS

<b>1</b>	<b>GENERAL INFORMATION</b> .....	<b>1</b>
<b>2</b>	<b>WARNINGS</b> .....	<b>1</b>
<b>3</b>	<b>SYSTEM DESCRIPTION</b> .....	<b>2</b>
	<b>3.1 SYSTEM FUNCTION</b> .....	<b>4</b>
	<b>3.2 OPERATING CONSOLE</b> .....	<b>5</b>
	<b>3.3 CONTROL IDENTIFICATION</b> .....	<b>5</b>
<b>4</b>	<b>CONFIGURATION SETUP</b> .....	<b>11</b>
	<b>4.1 LMI SETUP PROCEDURE</b> .....	<b>11</b>
	<b>4.2 QUICK SETTING OF THE REEVING</b> .....	<b>15</b>
	<b>4.3 QUICK HOIST LINE SELECTION</b> .....	<b>16</b>
<b>5</b>	<b>OPERATION</b> .....	<b>17</b>
	<b>5.1 LIMIT SETTING</b> .....	<b>19</b>
	<b>5.1.1 Slewing Angle Limitation / Work Area Definition</b> .....	<b>20</b>
	<b>5.1.2 Tip Height Limitation</b> .....	<b>25</b>
	<b>5.1.3 Boom Angle Limitation</b> .....	<b>26</b>
	<b>5.1.4 Radius Limitation</b> .....	<b>28</b>
	<b>5.2 INFO CRANE CONFIGURATION</b> .....	<b>30</b>
	<b>5.3 DISPLAY CONTRAST CONTROL</b> .....	<b>31</b>
<b>6</b>	<b>PRE-OPERATION INSPECTION AND CALIBRATION VERIFICATION</b> .....	<b>32</b>
	<b>6.1 MACHINES WITH ONLY A MAIN HOIST</b> .....	<b>32</b>
	<b>6.2 MACHINES WITH MAIN AND AUXILIARY HOISTS</b> .....	<b>32</b>
	<b>6.3 INSTALLATION OF ANTI TWO-BLOCK RETAINER IN LOCKING POSITION</b> .....	<b>33</b>
	<b>6.4 REMOVAL AND STORAGE OF THE ANTI TWO-BLOCK RETAINER</b> .....	<b>33</b>
	<b>6.5 PRE-OPERATION INSPECTION AND CALIBRATION VERIFICATION</b> .....	<b>34</b>
<b>7</b>	<b>OPERATION</b> .....	<b>36</b>
<b>8</b>	<b>SERVICE AND MAINTENANCE</b> .....	<b>37</b>
<b>9</b>	<b>TROUBLESHOOTING</b> .....	<b>38</b>
	<b>9.1 GENERAL</b> .....	<b>38</b>
	<b>9.2 MALFUNCTION TABLE</b> .....	<b>38</b>
	<b>9.3 OPERATING ERRORS</b> .....	<b>39</b>
<b>10</b>	<b>APPENDIX A: DETAILED SYMBOL EXPLANATION OF BOOM EXTENSIONS</b> .....	<b>40</b>
<b>11</b>	<b>APPENDIX B: DETAILED SYMBOL EXPLANATION OF COUNTERWEIGHT OPTIONS</b> ..	<b>41</b>

# Grove Pat Load Moment Indicator Ds350 1319 Operator Manual

Full download: <http://manualplace.com/download/grove-pat-load-moment-indicator-ds350-1319-operator-manual/>