

**PAT**  
**LOAD MOMENT**  
**INDICATOR**  
**DS 350 AM**  
**CM20**

---

**OPERATOR'S HANDBOOK**

---

## NOTICE

The information in this document is subject to change without notice.

*PAT makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.*

*PAT shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.*

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of PAT.

---

Copyright 1994 by PIETZSCH Automatisierungstechnik GmbH

First Edition 08/22/1994

OPRTHDB-DS350 / 50 350 06 1255

## TABLE OF CONTENTS

---

<b>1</b>	<b>General Information</b>	<b>1</b>
<hr/>		
<b>2</b>	<b>Warnings</b>	<b>1</b>
<hr/>		
<b>3</b>	<b>System Description</b>	<b>3</b>
3.1	System Function	5
3.2	Operating Console	5
3.3	Control Identification	5
<hr/>		
<b>4</b>	<b>Pre-Operation Inspection and Calibration Verification</b>	<b>19</b>
<hr/>		
<b>5</b>	<b>Service and Maintenance</b>	<b>25</b>
<hr/>		
<b>6</b>	<b>Troubleshooting</b>	<b>26</b>
<hr/>		