

**PAT**  
**LOAD MOMENT**  
**INDICATOR**  
**DS 350**  
**INTERACTIVE**

---

**OPERATOR'S HANDBOOK**

---

## **NOTICE**

The information in this document is subject to change without notice.

*PAT makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.*

*PAT shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.*

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of PAT.

# TABLE OF CONTENTS

<b>1</b>	<b>General Information</b>	
<b>2</b>	<b>Warnings</b>	
<b>3</b>	<b>System Description</b>	
3.1	System Function	
3.2	Operating Console	
3.3	Control Identification	
<b>4</b>	<b>Programming procedure</b>	<b>19</b>
4.1	Setting the Outrigger Configuration	20
4.2	Holst Line Selection	20
4.3	Setting the Boom Configuration	21
4.4	Setting the Reeving	22
4.5	Confirmation of Programming Procedure	22
<b>5</b>	<b>Pre-Operation Inspection and Calibration Verification</b>	<b>23</b>
<b>6</b>	<b>Service and Maintenance</b>	<b>29</b>
<b>7</b>	<b>Troubleshooting</b>	<b>30</b>