



www.hirschmann.com

**HIRSCHMANN**

# LOAD MOMENT INDICATOR

*mentor*



**OPERATOR'S MANUAL**

P/N 031-300-190-197 REV F 12/17/2008



## NOTICE

Hirschmann, Inc. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and/or its fitness for a particular purpose.

Hirschmann, Inc. will not be liable for errors contained in this manual or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual. This document contains proprietary information, which is protected by copyright, and all rights are reserved.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hirschmann, Inc.

Hirschmann, Inc. reserves proprietary rights to all drawings, photos and the data contained therein. The drawings, photos and data are confidential and cannot be used or reproduced without the written consent of Hirschmann, Inc. The drawings and/or photos are subject to technical modification without prior notice.

All information in this document is subject to change without notice.

## MANUAL REVISIONS

REV	DATE	NAME	DESCRIPTION
-	08/19/05	SB	ECN 05-145, Create manual
A	09/19/05	SB	ECN 05-164
B	01/13/06	SB	ECN 06-005
C	02/20/06	SB	ECN 06-014
D	04/03/06	SB	ECN 06-070
E	07/25/06	SB	ECN 06-089
F	12/17/08	KE	ECN 08-202