



**HIRSCHMANN**

**PAT**

**LOAD MOMENT INDICATOR**

**TM9150**

DS350G BCS



**SERVICE MANUAL**

P/N 031-300-190-042 REV B 12/05/2005

## **Notice**

**The information in this document is subject to change without notice.**

**Hirschmann makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.**

**Hirschmann shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this manual.**

**This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without prior consent of Hirschmann.**



## TABLE OF CONTENTS

Section	Content	Page
1	General Information	1
2	Reference Material	1
3	Warnings	1
4	Service and Maintenance	2
5	Boom Control Interface	3
6	Boom Sequence	9
7	Boom Control Flow	10
8	Ramping	12
9.1	DS 350 G - Boom Components and Setup	13
9.2	Length Transducer Adjustment	15
9.3	DS 350 G - Turntable Components	16
10.1	DS 350 G Central Unit Assembly - Layout	18
10.2	Terminal Board Layout	19
11.1	DS 350 G - Boom Wiring	20
11.2	DS 350 G - LMI/ Crane Interface Wiring	21
11.3	DS 350 G - LMI/ Turntable Wiring	22
12	Boom Length Percentage Error	23
13	Main Boom Length Error	29
14	Inner Mid Length Error	35
15	No Extend or Retract Function in Automode	41
16	Out of Sequence Warning	43
17.1	Additional Error Codes - Operational	45
17.2	Additional Error Codes - System	46



## 1. General Information

The DS 350 load moment indicator (LMI) with boom control extension is designed to aid the crane operator through the crane operations. The DS 350 with boom control extension is not, and shall not, be a substitute for good operator judgment, experience and use of accepted safe crane operating procedure.

## 2. Reference Material

Parts & Installation Manual:

*PAT- Part number*  
031-300-150-651

*Grove- Part number*  
9-333-102985

Operator's Handbook :

*PAT- Part number*  
GW5SEC9150

## 3. Warnings

The DS 350 load moment indicator (LMI) with boom control extension is an operational aid that warns the crane operator when he approaches an overload condition, a two block condition and an out of boom sequence condition. The boom control extension controls the sequence of the boom during operation. It still remains the operator's responsibility to verify the operation and to select the correct mode during crane operations.

The manual mode is a rigging mode. Lifting loads with manual mode programmed is prohibited.

Should an out of sequence condition occur, the crane operator is responsible to select manual mode to return the sections into sequence before continuing the lift.

The responsibility for safe crane operation shall remain with the crane operator who shall ensure that all warnings and instructions supplied are fully understood and observed.

Prior to operating the crane, the operator must carefully and thoroughly read and understand the information provided by the crane and load moment indicator manufacturer.

Proper functioning depends upon proper daily inspection and observance of the operating instructions provided with the crane and load moment indicator.