



# OPERATOR'S MANUAL

This manual has been prepared for and is considered part of -

## RT540E

Crane Model Number


This Manual is divided into the following sections:

SECTION 1	INTRODUCTION
SECTION 2	SAFETY INFORMATION
SECTION 3	OPERATING CONTROLS AND PROCEDURES
SECTION 4	SET-UP AND INSTALLATION
SECTION 5	LUBRICATION
SECTION 6	MAINTENANCE CHECKLIST

### NOTICE

The crane serial number is the only method your distributor or the factory has of providing you with correct parts and service information.

The crane serial number is identified on the builder's decal attached to the operator's cab. **Always furnish crane serial number** when ordering parts or communicating service problems with your distributor or the factory.

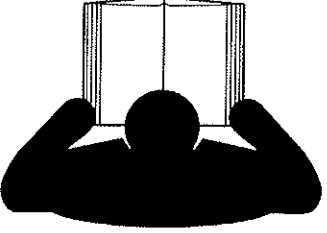

## WARNING

**To prevent death or serious injury:**

- Avoid unsafe operation and maintenance.
- This crane must be operated and maintained by trained and experienced personnel. Manitowoc is not responsible for qualifying these personnel.
- Do not operate or work on this crane without first reading and understanding Operator's Manual and Rating Plate supplied with crane.
- Store Operator's Manual in holder provided on crane.
- Attach laminated Capacity Charts supplied with crane to chain in operator's cab.
- If Operator's Manual or Capacity Charts are missing from cab, contact your distributor for new ones.





To Contact Us:



**Manitowoc Cranes, Inc.**  
2401 South 30th Street  
Manitowoc, WI 54220  
(920) 684-6621  
(920) 683-6277 (fax)




**Grove Worldwide**  
1565 Buchanan Trail East  
P.O. Box 21  
Shady Grove, PA 17256  
(717) 597-8121  
(717) 597-4062 (fax)



**National Crane Corporation**  
1565 Buchanan Trail East  
P.O. Box 21  
Shady Grove, PA 17256  
(717) 597-8121  
(717) 597-4062 (fax)




**Grove Worldwide**  
1565 Buchanan Trail East  
P.O. Box 21  
Shady Grove, PA 17256  
(717) 597-8121  
(717) 597-4062 (fax)

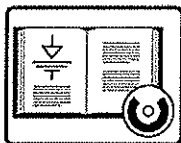

Technical  
Publications




Field  
Service

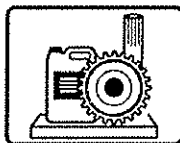

Parts



Factory  
Service

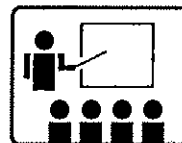

Training

*See end of this manual for Alphabetical Index*

**SECTION 1 . . . . . Introduction**

- General . . . . . 1-1
- Noise/vibration Test Results . . . . . 1-1
  - Noise Level Test Results Are As Follows: . . . . . 1-1
  - Vibration Level Test Results Are As Follows: . . . . . 1-1

**SECTION 2 . . . . . Safety Information**

- Diesel Engine Exhaust. . . . . 2-1
- Battery Posts, Terminals, and Related Accessories . . . . . 2-1
- Safety Messages . . . . . 2-1
  - General . . . . . 2-1
  - Safety Alert Symbol . . . . . 2-1
  - Signal Words. . . . . 2-1
- General . . . . . 2-1
- Operator's Information . . . . . 2-2
- Operational Aids . . . . . 2-2
- Crane Stability/Structural Strength . . . . . 2-4
  - Load Charts . . . . . 2-4
  - Work Site . . . . . 2-5
  - Lifting Operations . . . . . 2-5
  - Counterweight. . . . . 2-6
- Load Moment Indicating (LMI) Systems . . . . . 2-7
  - Two-Blocking . . . . . 2-7
- Electrocution Hazard . . . . . 2-7
  - Set-Up and Operation . . . . . 2-8
  - Electrocution Hazard Devices. . . . . 2-9
  - Electrical Contact . . . . . 2-9
  - Special Operating Conditions and Equipment . . . . . 2-10
- Crushing Hazards . . . . . 2-10
- Personnel Handling . . . . . 2-10
- Travel Operation . . . . . 2-11
- Accidents . . . . . 2-12
- Maintenance . . . . . 2-12
  - Service and Repair . . . . . 2-12
  - Lubrication . . . . . 2-12
  - Tires . . . . . 2-13
  - Wire Rope. . . . . 2-13
- Batteries. . . . . 2-14
- Engine . . . . . 2-14
- Work Practices. . . . . 2-14
  - Crane Access . . . . . 2-14
  - Job Preparation. . . . . 2-14
  - Working. . . . . 2-15
  - Lifting . . . . . 2-15
  - Hand Signals. . . . . 2-16
- Transporting The Crane. . . . . 2-16
- Shut-Down . . . . . 2-16
- Boom Extension/Jib . . . . . 2-17
- Cold Weather Operation . . . . . 2-17
- Temperature Effects on Hydraulic Cylinders . . . . . 2-17

**SECTION 3 . . . . . Operating Controls and Procedures**

- Controls And Indicators . . . . . 3-1
  - Tachometer with Hourmeter . . . . . 3-1

**TOC**

Gauge Cluster . . . . .	3-1
Voltmeter . . . . .	3-1
Engine Oil Pressure Gauge . . . . .	3-1
Water Temperature Gauge . . . . .	3-1
Fuel Quantity Gauge . . . . .	3-1
Right Turn Signal Indicator . . . . .	3-1
Left Turn Signal Indicator . . . . .	3-1
Four Wheel Engaged/Rear Wheels Not Centered Indicator . . . . .	3-1
High Beam/Lamp Malfunction Indicator . . . . .	3-1
Low Brake Pressure/Low Fuel Level Indicator . . . . .	3-1
Engine Wait To Start Indicator/Transmission Service Indicator (XMSN) . . . . .	3-2
Engine Warning/Electrical System Diagnostic Indicator . . . . .	3-2
Engine Stop/Module Off Line Indicator . . . . .	3-2
Park Brake/Swing Brake Engaged Indicator . . . . .	3-2
Inter-Axle Differential Lock Indicator . . . . .	3-2
Hoist 3rd Wrap Indicator (Optional w/CE) . . . . .	3-2
Low Steer Pressure Indicator (CE Option) . . . . .	3-6
Left Front Outrigger Beam/Stabilizer Switch . . . . .	3-6
Right Front Outrigger Beam/Stabilizer Switch . . . . .	3-6
Park Brake On/Off Switch . . . . .	3-6
Hazard Light Switch . . . . .	3-6
Headlights Switch . . . . .	3-6
Work Lights Switch . . . . .	3-6
Boom Lights Switch (Optional) . . . . .	3-6
Heater Control Switch . . . . .	3-6
Air Conditioner Switch (Optional) . . . . .	3-6
Hi/Med/Low Fan Switch . . . . .	3-7
Heater On/Off Switch . . . . .	3-7
Fan Defroster Switch . . . . .	3-7
Cross-Axle Differential Lock Switch (Optional) . . . . .	3-7
Drive Axle Selector Switch . . . . .	3-7
Right Rear Outrigger/Stabilizer Switch . . . . .	3-7
Left Rear Outrigger/Stabilizer Switch . . . . .	3-7
Emergency Stop Switch . . . . .	3-7
Ignition Switch . . . . .	3-7
Outrigger Extend/Retract Switch . . . . .	3-8
Crane Function Power Switch . . . . .	3-8
Engine Diagnostic Switches . . . . .	3-8
Skylight Wiper Switch . . . . .	3-8
Throttle Pedal . . . . .	3-8
Hydraulic Oil Cooler Temperature Indicator . . . . .	3-9
Service Brake Pedal . . . . .	3-9
Transmission Shift Lever . . . . .	3-9
Telescope Control Foot Pedal (Optional w/Aux. Hoist) . . . . .	3-9
Turn Signal Lever . . . . .	3-9
Horn Button . . . . .	3-9
Cab Circulating Fan . . . . .	3-9
Defroster Fan . . . . .	3-9
Skylight Wiper . . . . .	3-9
Fire Extinguisher . . . . .	3-9
Steering Column Tilt Switch . . . . .	3-9
Cab Dome Light . . . . .	3-9
12 VDC Accessory Outlet . . . . .	3-10
360° Swing Lock Control (Positive Lock Type) (Optional) . . . . .	3-10
Electrical Diagnostic Connector . . . . .	3-10
Bubble Level Indicator . . . . .	3-10
Swing Brake Selector Switch . . . . .	3-10

Auxiliary Hoist Speed Selector Switch . . . . .	3-10
Telescope/Auxiliary Hoist/Swing Controller . . . . .	3-10
Swing Horn Button . . . . .	3-10
Hoist Rotation Indicators (Main and Auxiliary Hoist). . . . .	3-10
Main Hoist Speed Selector Switch . . . . .	3-10
Boom Lift/Main Hoist Controller . . . . .	3-10
Rear Steer Control Switch . . . . .	3-11
Fuse Panel . . . . .	3-11
Canister Pump Assembly . . . . .	3-11
Cab Control Module . . . . .	3-11
Turntable Lock Control (Pin Type) . . . . .	3-11
Operating Procedures . . . . .	3-12
New Crane Conditioning . . . . .	3-12
Pre-Starting Checks . . . . .	3-12
Cold Weather Operation . . . . .	3-13
Engine Operation . . . . .	3-13
Crane Travel Operation . . . . .	3-15
Traveling With 7.92 m (26 ft) Boom Extension Erected . . . . .	3-15
Extended Travel . . . . .	3-16
Moving The Crane . . . . .	3-16
Steering . . . . .	3-16
Front Wheel Steering . . . . .	3-16
Rear Wheel Steering . . . . .	3-16
Four Wheel Steering . . . . .	3-16
Crabbing . . . . .	3-16
Traveling - Forward . . . . .	3-17
Traveling - Reverse . . . . .	3-17
Four-Wheel Drive Operation . . . . .	3-17
General Crane Operation . . . . .	3-17
Using Your Load Chart . . . . .	3-17
Crane Functions . . . . .	3-19
Operational Aids . . . . .	3-23
Crane Travel Operation . . . . .	3-24
Stowing and Parking . . . . .	3-24

**SECTION 4 . . . . . Set-up And Installation Procedures**

General . . . . .	4-1
Installing Cable On The Hoist . . . . .	4-1
Cable Reeving . . . . .	4-1
Dead-end Rigging/wedge Sockets . . . . .	4-5
Installing Wedge And Socket . . . . .	4-5
Erecting And Stowing The Boom Extension . . . . .	4-7
General Warnings . . . . .	4-7
Erecting . . . . .	4-7
Stowing . . . . .	4-8
Setting The Offset . . . . .	4-9
Changing Boom Extension From Telescoping Type To Fixed Type . . . . .	4-10
Setting The Telescoping Extension Length . . . . .	4-10
Counterweights . . . . .	4-10

**SECTION 5 . . . . . Lubrication**

General . . . . .	5-1
Arctic Conditions Below -18°C (0°F) . . . . .	5-1
Arctic Conditions Down To -40°F . . . . .	5-1
Lubrication Points . . . . .	5-2
Surface Protection for Cylinder Rods . . . . .	5-2

TOC

SAFETY .....	5-2
STEERING & SUSPENSION Lubrication .....	5-4
AXLE Lubrication .....	5-4
DRIVE TRAIN Lubrication .....	5-9
OUTRIGGER Lubrication .....	5-9
TURNTABLE Lubrication .....	5-10
LIFT CYLINDER Lubrication .....	5-10
bOOM Lubrication .....	5-10
HOIST Lubrication .....	5-12
HYDRAULIC Lubrication .....	5-12
FUEL FILTER .....	5-12
AIR CLEANER FILTER .....	5-12
Wire Rope Lubrication .....	5-12
<b>SECTION 6. ....</b>	<b>Maintenance Checklist</b>
General .....	6-1
Instructions .....	6-1



# SECTION 1 INTRODUCTION

## TABLE OF CONTENTS

General .....	1-1
Noise/vibration Test Results .....	1-1
Noise Level Test Results Are As Follows: .....	1-1
Vibration Level Test Results Are As Follows: .....	1-1