



HINO-EPC System

Operation Manual



R.2A
May 2003

INTRODUCTION

Welcome to Hino EPC world.

We are pleased to release Operation Manual R.2A of Hino EPC System.

Hino EPC (Electronic Parts Catalog) is a system to inquire or search part numbers for vehicles produced and supplied by Hino Motors, Ltd. This manual gives you basic operating instructions of Hino EPC.

Please note the following when you use Hino EPC:

1. Hino EPC only covers original equipment parts produced and/or supplied by Hino Motors, Ltd in Japan.
Parts equipped locally at distributors, dealers or service workshops are not contained in Hino EPC.
2. Hino EPC sometimes displays alternative part number(s) because of part modifications. Be sure to confirm which part is equipped in the actual vehicle.
3. The content of Hino EPC is subject to change without notice.
You are requested to always install the latest information.

HINO EPC runs with two kind of CD-ROM.

1. "System EPC" :This is program to search catalog data.
 2. "Data EPC": This is content of catalog and will be updated from time to time.
- "System EPC" can be freely copied or used without time limit, while "Data EPC" has built-in time limit function in order for promotion to diffuse the latest information. "Data EPC" will expire around 12 months after issue date.

The following hardware and software specifications must be met to install and run Hino EPC.

1. Windows NT, Windows 98, Windows 2000
(Windows 95 is not supported.)
2. 40MB free disk space for installation of System EPC.
700MB or over free disk space for installation of both "System EPC" and "Data EPC".
3. 64MB RAM
4. Pentium 166MHz processor or over
5. CD-ROM device equipped
6. Monitor : 1024x800 resolution or over

All the title and copyright in and to the software are owned by Hino Motors Ltd. You may not copy or reproduce the software or any related documentation. You shall acknowledge that you are receiving only a limited license to use the software and related documentation.

Hino Motors, Ltd. shall not be liable for any consequential, incidental or indirect damages arising out of the use of the software.

The contents of the software and/or any related documentation is subject to change without notice.

May 2003
Hino Motors, Ltd.

INDEX

INTRODUCTION	1
INDEX	2
INSTALLATION AND SETUP	6
1. Outline of Installation and Setup	8
1-1. Outline of Installation and Setup	9
1-1-1. Initial Installation and Setup	9
1-1-2. New Release Setup	9
2. Install "System EPC"	10
2-1. Installation	11
2-1-1. Installation	11
2-1-2. Uninstallation	13
3. Start Hino EPC System	14
3-1. Start Hino EPC System	15
4. Setup System Environment	16
4-1. Setup System Environment	17
4-2. Setup CD-Drive	19
4-2-1. Initial Setup	19
4-2-2. New Release Setup	23
4-3. Copy "Data EPC" into PC's Disk	25
4-3-1. Initial Setup	25
4-3-2. New Release Setup	31
4-4. Check CD-drive	34

INDEX

SEARCHING OPERATION	36
1. Outline of Searching Operation	38
1-1. Outline of Searching Operation	39
1-1-1. Search Part Number	39
1-1-2. Search Part Number by Group Code	43
1-1-3. Search Applicable Model for Part Number	43
2. HINO EPC Screen	44
2-1. HINO EPC Screen	45
2-1-1. HINO EPC Screen	46
2-1-2. Language	46
3. Vehicle Information	48
3-1. Outline of Vehicle Information	49
3-1-1. When Model is Available	50
3-1-2. When Model is Not Available	51
3-1-3. History Function	52
3-1-4. When VIN is available	52
3-2. Explanation of Screen	53
3-2-1. Explanation of Each Column	53
3-2-2. Explanation of PF Key	55
3-3. Enter Model (6-character) and Chassis No.	58
3-4. Enter Model (6-character) and Select Vehicle Spec.	59
3-5. Enter Model (1 to 5-character) and Select CAT-NO.	61
3-6. Select CAT-NO. Directly	62
3-7. History Function	63
3-8. When VIN is available	64

INDEX

4. General Search	66
4-1. Outline of General Search	67
4-1-1. Outline of General Search	68
4-1-2. Search KEY-NO. Using Illustration Index	68
4-1-3. Search KEY-NO. by FIG-NO.	68
4-1-4. Enter KEY-NO.	68
4-1-5. Search KEY-NO. by Part Description	68
4-2. Display General Search Screen	69
4-3. Explanation of Screen	70
4-3-1. Explanation of Each Column	70
4-3-2. Explanation of PF Key	71
4-4. Search KEY-NO. Using Illustration Index	73
4-4-1. Illustration Index (Details)	73
4-4-2. Illustration Index (Component)	74
4-5. Search KEY-NO. by FIG-NO.	76
4-6. Input KEY-NO.	77
4-7. Search KEY-NO. by Part Description	78
5. Illustration	80
5-1. Explanation of Illustration Screen	81
5-1-1. Explanation of Each Column	81
5-1-2. Explanation of PF-key	82
5-2. Search Part Number	85
5-3. Function of Illustration Screen	86
5-3-1. Model	86
5-3-2. Part Description	87
5-3-3. KEY-NO. List	87
5-4. Display All The Illustrations	88
5-5. KEY-NO. List	89
5-6. Zooming-in	90
5-6-1. Zooming-in	90
5-6-2. Scrolling	91

INDEX

6. Part Number List	92
6-1. Outline of Part Number List	93
6-1-1. Search Applicable Part Number	93
6-1-2. Various Functions	93
6-2. Explanation of Screen	94
6-2-1. Explanation of Each Column	94
6-2-2. Explanation of PF-key	96
6-3. Search Part Number	99
6-4. Save Data	100
6-4-1. Save Data	100
6-4-2. Call Saved Data	101
6-5. Memo Function	102
6-5-1. Input Memo	102
6-5-2. Delete Memo	103
6-5-3. Memo List	104
6-6. D.M.S Connection	106
6-6-1. D.M.S Connection	106
6-6-2. D.M.S Setting	107
6-7. Reference Price	108
7. KEY-NO. Search	110
7-1. Outline of KEY-NO.	111
7-1-1. Search by KEY-NO.	111
7-1-2. Search by GROUP CODE	111
7-1-3. Search Applicable Model	111
7-2. Display KEY-NO. Search Screen	112
7-3. Explanation of Screen	113
7-3-1. Explanation of Each Column	113
7-3-2. Explanation of PF-key	114
7-4. Search Part Number by GROUP CODE	116
7-4-1. Set GROUP CODE	116
7-4-2. Set GROUP CODE Contents	118
7-4-3. Search Part Number by GROUP CODE	119
7-5. KEY-NO. Search	121
7-6. Search Applicable Model for Part Number	122

INSTALLATION AND SETUP



1. Outline of Installation and Setup	8
2. Install "System EPC"	10
3. Start Hino EPC System	14
4. Setup System Environment	16

1. Outline of Installation and Setup




Outline of initial installation and setup procedures of HINO EPC is explained in this chapter.

1-1. Outline of Installation and Setup	9
1-1-1. Initial Installation and Setup	9
1-1-2. New Release Setup	9

1-1. Outline of Installation and Setup

1-1-1. Initial Installation and Setup

Before using Hino EPC, be sure to install and setup "System EPC" first.

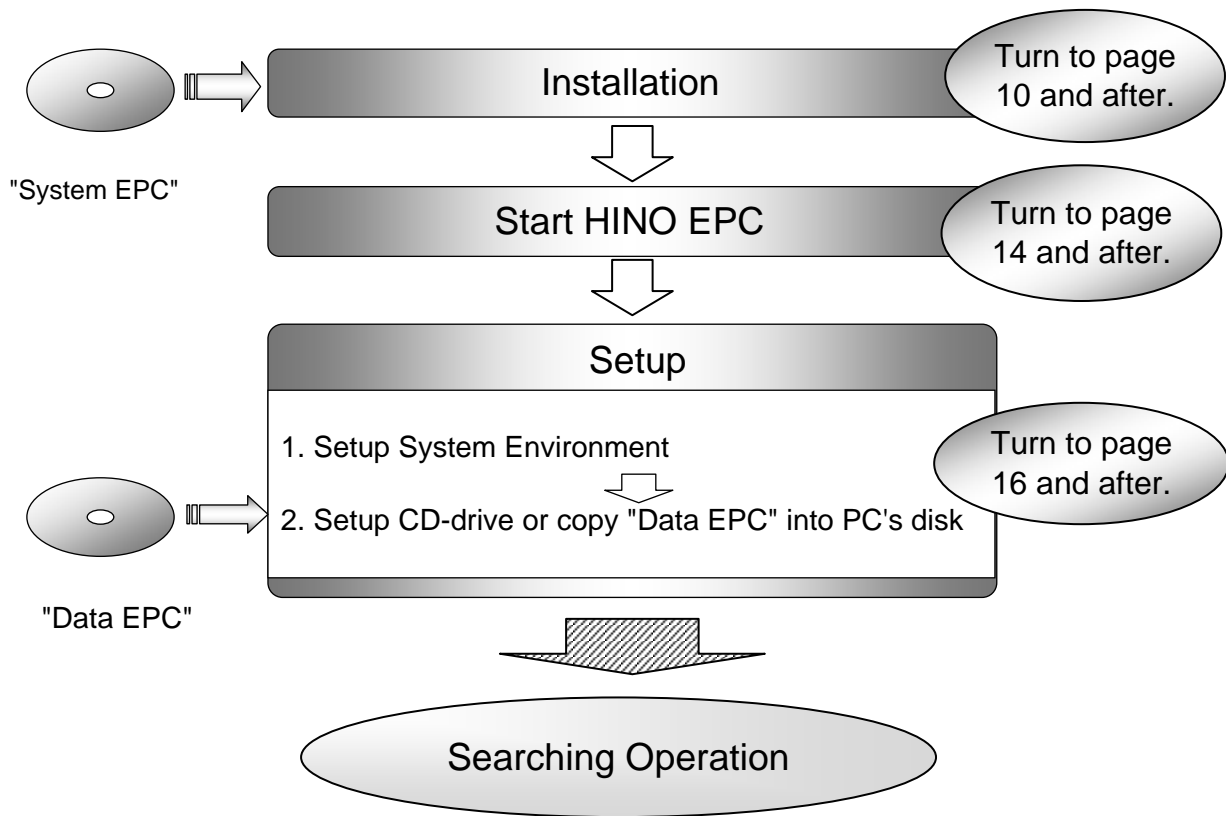

1-1-2. New Release Setup

When you get a newly-released "Data EPC", be sure to setup CD-NO.

