

Hitachi Ex60 1 Spare PartsFull download: <http://manualplace.com/download/hitachi-ex60-1-spare-parts/>**HITACHI EX60-1****BUCKET****BUCKET PINS****BUCKET LINKAGES****BUCKET LINKAGES****DIPPER STICK****BOOM****BUCKET CYLINDER****DIPPER STICK CYLINDER****BOOM LIFT CYLINDER****CAB****SEAT****INSTRUMENT PANEL****RELAYS****COMPUTER****WIRING LOOM****HAND SERVO CONTROLS****HEATER A/C****BONNET****DOORS****FUEL TANK****HYDRAULIC TANK****BELLY PLATES****DIESEL ENGINE****RADIATOR****HYDRAULIC OIL COOLER****HYDRAULIC PUMPS****HYD PUMP DRIVE GEARBOX****SLEW MOTOR****SLEW MOTOR GEARBOX****CONTROL VALVE****CENTRE JOINT****SLEW BEARING****TRACK CHAINS & GROUSERS**

TOP ROLLERS

FRONT IDLERS

RECOIL SPRINGS

TRACK ADJUSTERS

BOTTOM ROLLERS

TRACK MOTORS

FINAL DRIVES

 
DRIVE SPROCKETS

BATTERIES

HOSES

OTHER PARTS BOOKS

Bucket

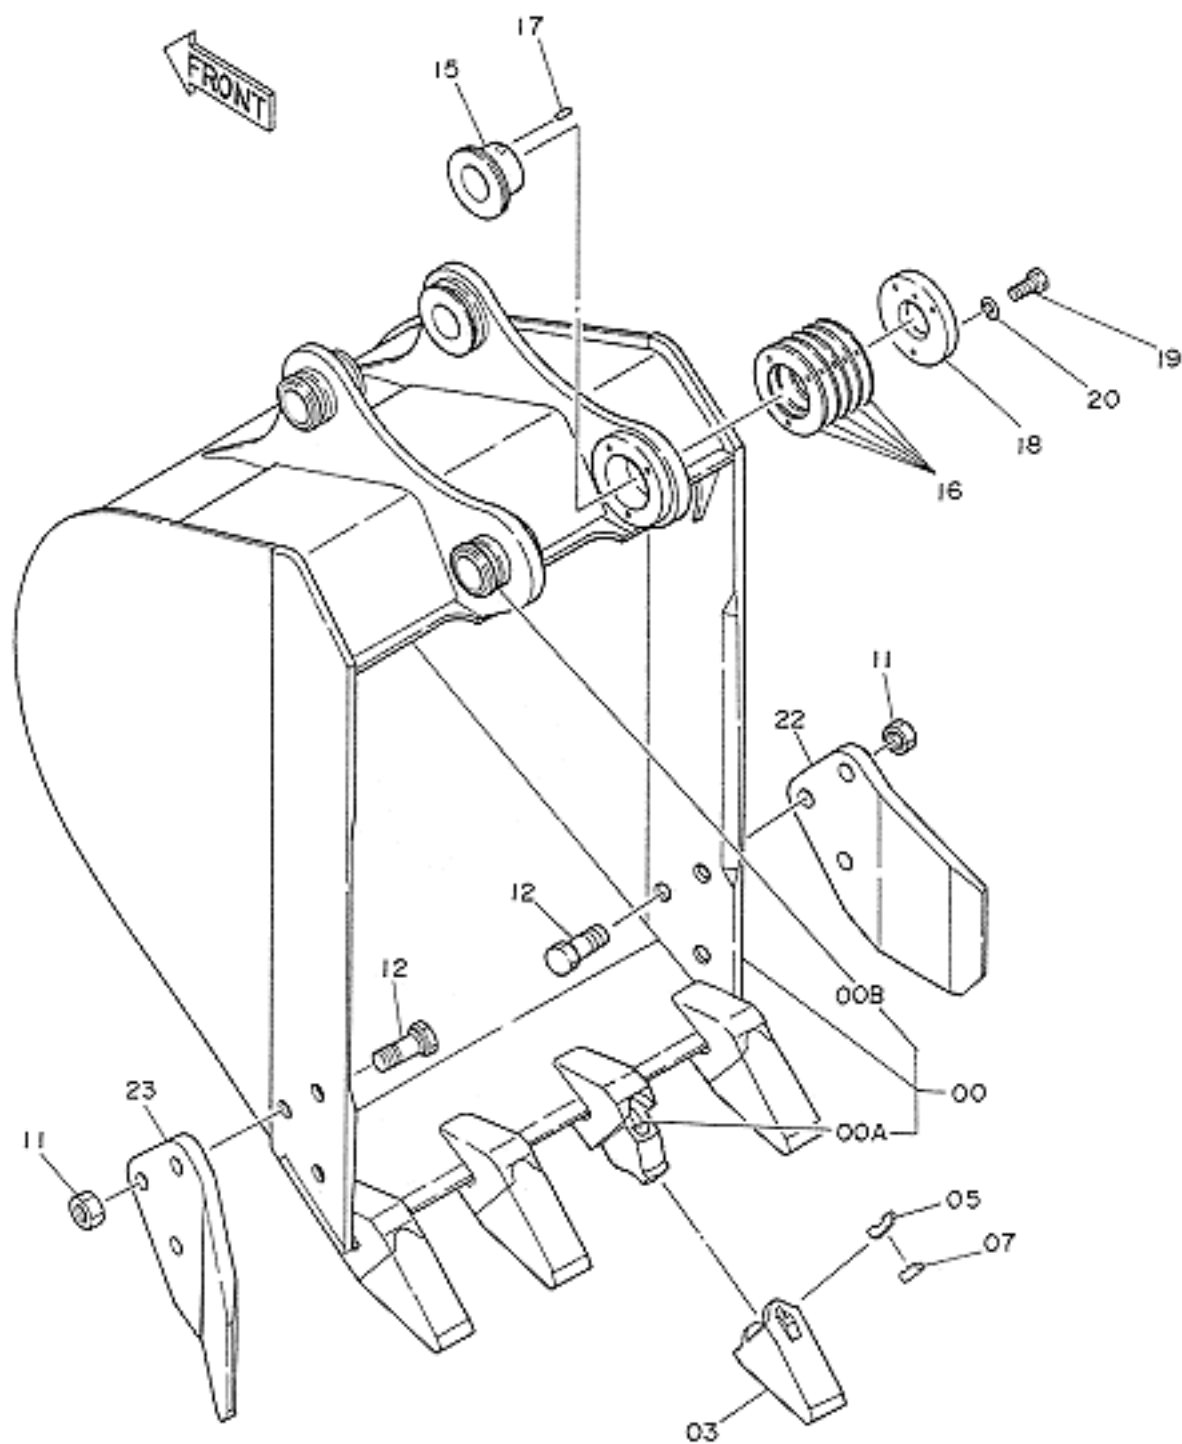


100 { 00A ~ 1
03 ~ 1
05 ~ 1
07 ~ 1

ITEM	PART NO	PART NAME
	9071353	BUCKET ASS'Y
00	9071395	BUCKET
00A	4135495	ADAPTER;TOOTH
00B	4197029	STOPPER
03	4135296	POINT;TOOTH
05	4135497	PIN;LOCK
07	4135498	RUBBER;LOCK
11	J953020	NUT
12	4152074	BOLT
15	3037352	BUSHING
16	4197838	SHIM 1.0
17	4198156	PIN;KNOCK
18	4197837	PLATE
19	J901035	BOLT
20	A590910	WASHER;SPRING
22	3039775	CUTTER;SIDE
23	3039776	CUTTER;SIDE
100	9054069	KIT;POINT

[Home Page](#)

 Bucket Pins

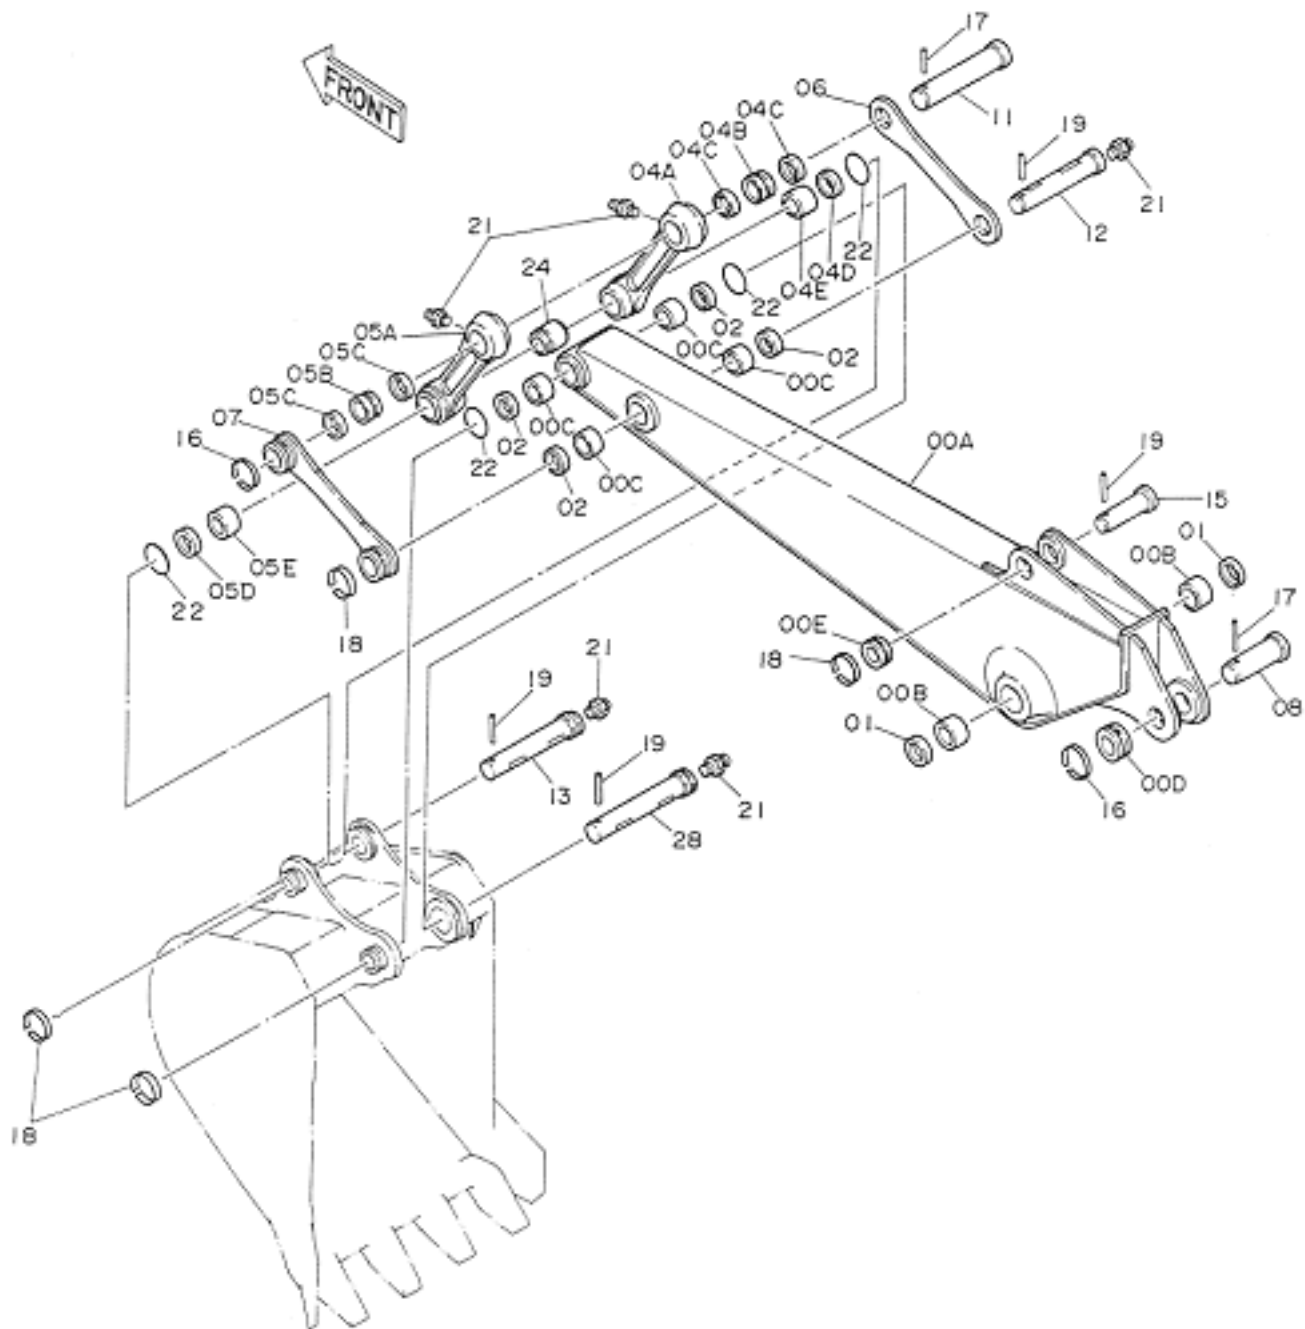


ITEM	PART NO	PART NAME
00A-E	7017839	ARM ASS'Y
00A	6008262	ARM
00B	4197842	BUSHING
00C	4197481	BUSHING
00D	4197031	STOPPER

00E	4197029	STOPPER
01	4094086	SEAL;DUST
02	4094088	SEAL;DUST
04A-E	8040619	LINK ASS'Y
04A	3040532	LINK
04B	4197839	BUSHING
04C	4094087	SEAL;DUST
04D	4094088	SEAL;DUST
04E	4197841	BUSHING
05A-E	8040620	LINK ASS;Y
05A	3040533	LINK
05B	4197839	BUSHING
05C	4094087	SEAL;DUST
05D	4094088	SEAL;DUST
05E	4197841	BUSHING
06	3037342	LINK (R)
07	8037570	LINK (L)
08	3038480	PIN
11	3037350	PIN
12	3037349	PIN
13	3037345	PIN
15	3038481	PIN
16	4065688	RING
17	4065689	PIN
18	4141000	RING
19	4141001	PIN
21	J75481	FITTING
22	4094085	O-RING
24	4037725	PIECE
28	3041074	PIN

[Home Page](#)

 Bucket Linkages

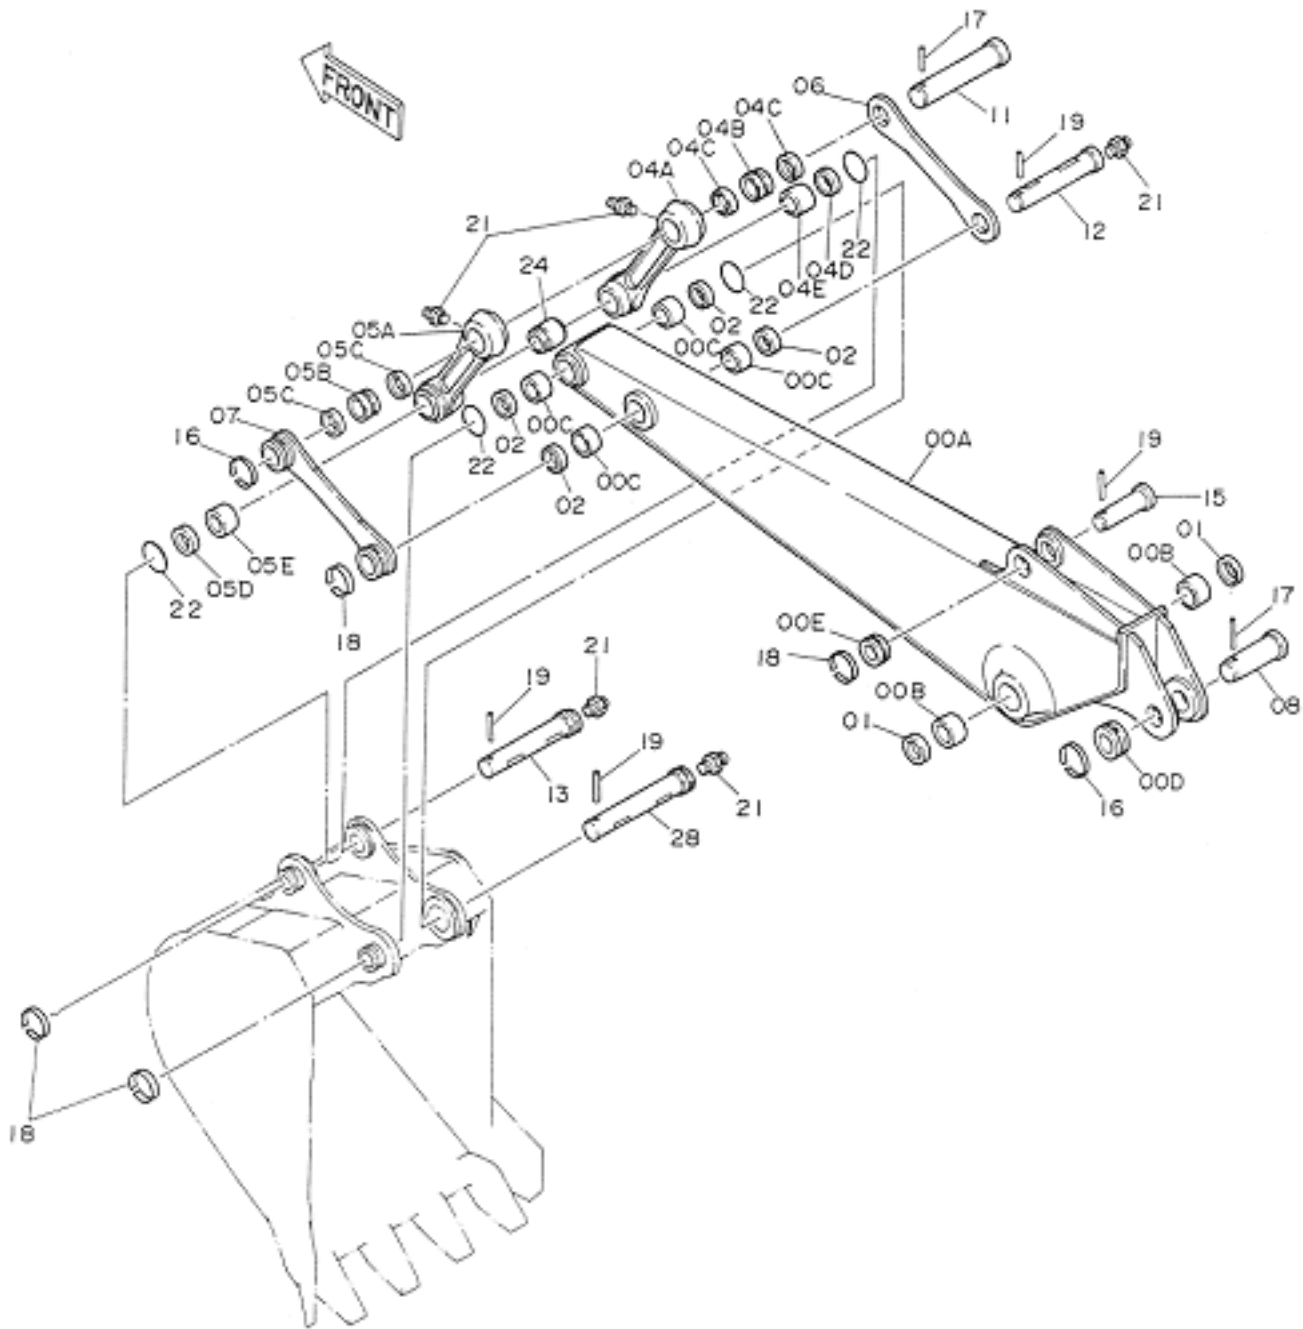


ITEM	PART NO	PART NAME
00A-E	7017839	ARM ASS'Y
00A	6008262	ARM
00B	4197842	BUSHING
00C	4197481	BUSHING
00D	4197031	STOPPER

00E	4197029	STOPPER
01	4094086	SEAL;DUST
02	4094088	SEAL;DUST
04A-E	8040619	LINK ASS'Y
04A	3040532	LINK
04B	4197839	BUSHING
04C	4094087	SEAL;DUST
04D	4094088	SEAL;DUST
04E	4197841	BUSHING
05A-E	8040620	LINK ASS;Y
05A	3040533	LINK
05B	4197839	BUSHING
05C	4094087	SEAL;DUST
05D	4094088	SEAL;DUST
05E	4197841	BUSHING
06	3037342	LINK (R)
07	8037570	LINK (L)
08	3038480	PIN
11	3037350	PIN
12	3037349	PIN
13	3037345	PIN
15	3038481	PIN
16	4065688	RING
17	4065689	PIN
18	4141000	RING
19	4141001	PIN
21	J75481	FITTING
22	4094085	O-RING
24	4037725	PIECE
28	3041074	PIN

[Home Page](#)

 Dipper Stick

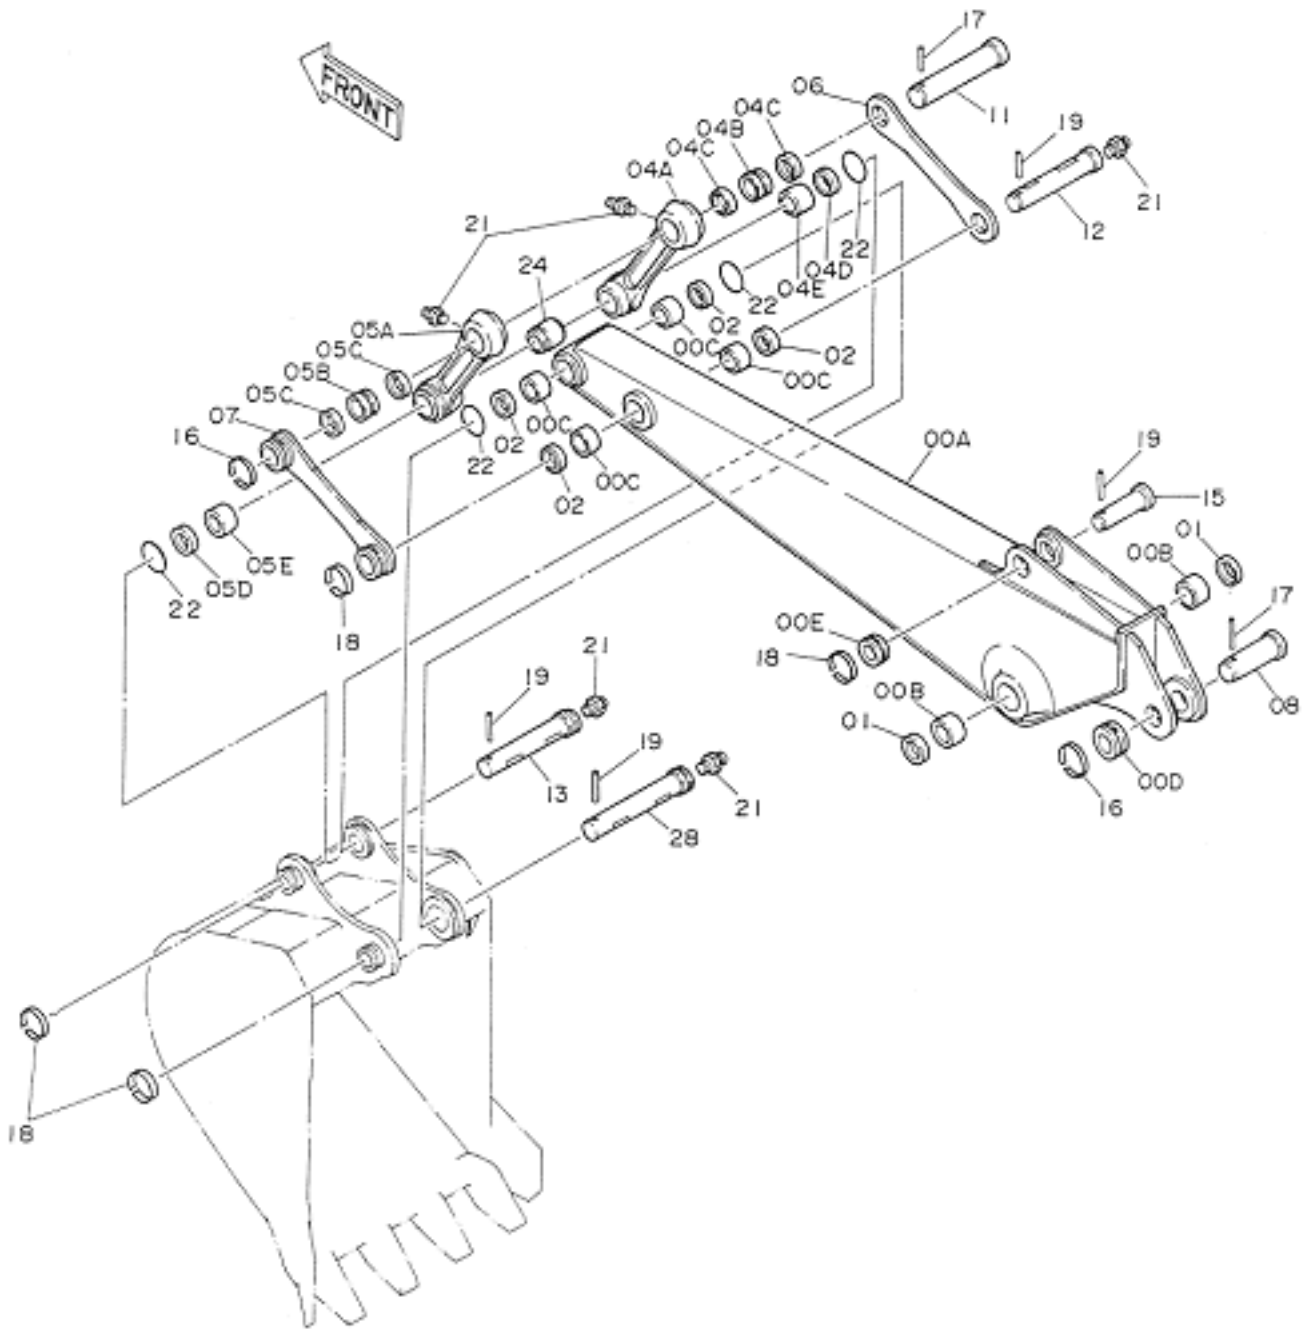

ITEM	PART NO	PART NAME
00A-E	7017839	ARM ASS'Y
00A	6008262	ARM
00B	4197842	BUSHING
00C	4197481	BUSHING
00D	4197031	STOPPER

Hitachi Ex60 1 Spare PartsFull download: <http://manualplace.com/download/hitachi-ex60-1-spare-parts/>

00E	4197029	STOPPER
01	4094086	SEAL;DUST
02	4094088	SEAL;DUST
04A-E	8040619	LINK ASS'Y
04A	3040532	LINK
04B	4197839	BUSHING
04C	4094087	SEAL;DUST
04D	4094088	SEAL;DUST
04E	4197841	BUSHING
05A-E	8040620	LINK ASS;Y
05A	3040533	LINK
05B	4197839	BUSHING
05C	4094087	SEAL;DUST
05D	4094088	SEAL;DUST
05E	4197841	BUSHING
06	3037342	LINK (R)
07	8037570	LINK (L)
08	3038480	PIN
11	3037350	PIN
12	3037349	PIN
13	3037345	PIN
15	3038481	PIN
16	4065688	RING
17	4065689	PIN
18	4141000	RING
19	4141001	PIN
21	J75481	FITTING
22	4094085	O-RING
24	4037725	PIECE
28	3041074	PIN

[Home Page](#)