

Operator's Manual

ZAXIS

140W-3

170W-3

190W-3

210W-3

Wheeled Excavator


ZAXIS140W-3 • 170W-3 • 190W-3 • 210W-3 WHEELED EXCAVATOR OPERATOR'S MANUAL

 **Hitachi Construction Machinery Co., Ltd.**
URL:<http://www.hitachi-c-m.com>

Serial No.		
ZAXIS140W-3	002001	and up
ZAXIS170W-3	003001	and up
ZAXIS190W-3	002001	and up
ZAXIS210W-3	002001	and up

EMCGB-1-1

PRINTED IN JAPAN (K) 2007, 06

 **Recycle** This book is printed on recycled paper.

INTRODUCTION

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or machine damage.

This standard specification machine can be operated under the following conditions without being modified.
Atmospheric Temperature: -20°C to 40°C (-4°F to 104°F)
Altitude: Up to 2000 m (to 6600 ft)

In case the machine is used under conditions other than described above, consult your nearest Hitachi dealer.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

This machine is of metric design. Measurements in this manual are metric. Use only metric hardware and tools as specified.

- SI Units (International System of Units) are used in this manual.

For reference MKS system units and English units are also indicated in parentheses after the SI units.

Example : 24.5 MPa (250 kgf/cm², 3560 psi)

Right-hand and left-hand sides are determined by facing in the direction of forward travel.

Write product identification numbers in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as a part of Hitachi's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that Hitachi will back its products where defects appear within the warranty period. In some circumstances, Hitachi also provides field improvements, often without charge to the customer, even if the product is out of warranty.

Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied.

Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

Only qualified, experienced operators officially licensed (according to local law) should be allowed to operate the machine. Moreover, only officially licensed personnel should be allowed to inspect and service the machine.

Prior to operating this machine, including satellite communication system, in a country other than a country of its intended use, it may be necessary to make modifications to it so that it complies with the local regulatory standards (including safety standards) and legal requirements of that particular country. Please do not export or operate this machine outside of the country of its intended use until such compliance has been confirmed. Please contact Hitachi Construction Machinery Co., Ltd. or any of our authorized distributor or dealer if you have any questions concerning compliance.

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

INDEX

MACHINE NUMBERS

SAFETY

SAFETY SIGNS

COMPONENTS NAME

OPERATOR'S STATION

BREAK-IN

OPERATING THE ENGINE

DRIVING THE MACHINE

OPERATING THE MACHINE

TRANSPORTING

MAINTENANCE

MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS

STORAGE

TROUBLESHOOTING

SPECIFICATIONS



OPTIONAL ATTACHMENTS AND DEVICES

INDEX


MACHINE NUMBERS

The manufacturing Nos. explained in this group is the individual number (serial No.) given to each machine and hydraulic components. These numbers are requested when inquiring any information on the machine and/or components. Fill these serial Nos. in the blank spaces in this group to immediately make them available upon request.

MACHINE


 Hitachi Construction Machinery Co., Ltd. 850, Koriyama-machi, Tsuchiura-shi, Ibaraki-shi, 300-0813 Japan	
Model/type	<input type="text"/>
Homologation Number	<input type="text"/>
Vehicle Identification Number	<input type="text"/>
Total permissible mass(kg)	<input type="text"/>
Permissible front axle load(kg)	<input type="text"/>
Permissible rear axle load(kg)	<input type="text"/>
Allowable towing mass	<input type="text"/>
Year of Manufacturing	<input type="text"/>
Engine Power(kW)	<input type="text"/>
 Hydraulic Excavator	

 SS3100862

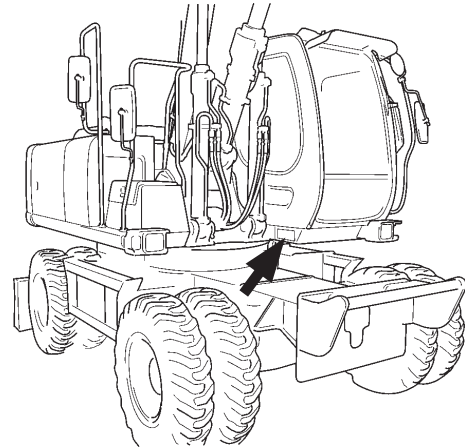

MCBB-01-011

 1. Model/Type
2. Homologation Number (Italy only)
3. Vehicle Identification Number
4. Operating mass (standard version)
5. Year of Manufacturing
6. Engine power in kW according to ISO9249


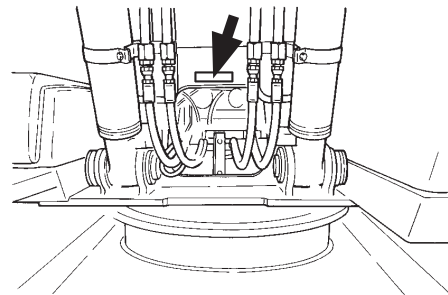


M157-12-008

VEHICLE IDENTIFICATION NUMBER

VEHICLE IDENTIFICATION NUMBER: _____

   NOTE:

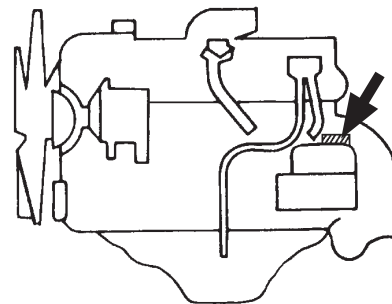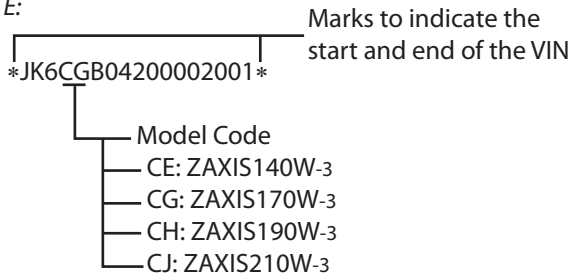


ZAXIS140W-3

M178-00-002

ENGINE

TYPE: _____

 MFG. NO.: _____

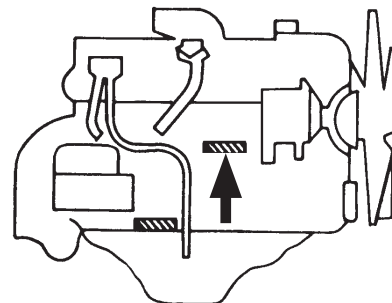

ZAXIS170W-3, 190W-3, 210W-3

 
M178-00-001

MACHINE NUMBERS

HYDRAULIC PUMP


TYPE: _____

MFG. NO.: _____

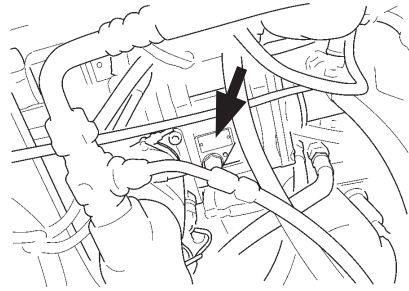

ZAXIS140W-3

 MCBB-00-001

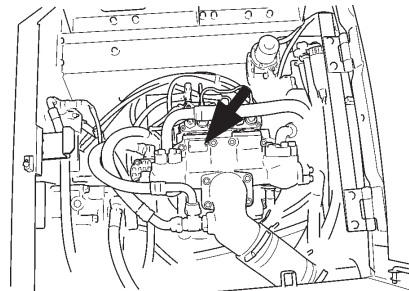


ZAXIS170W-3, 190W-3, 210W-3

MCBB-00-002

SWING MOTOR

TYPE: _____

 MFG. NO.: _____

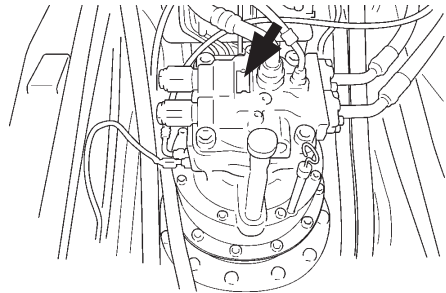


M178-07-086

TRAVEL MOTOR


TYPE: _____

 MFG. NO.: _____

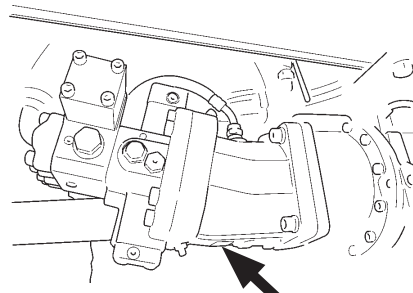

ZAXIS140W-3

 MCBB-00-003

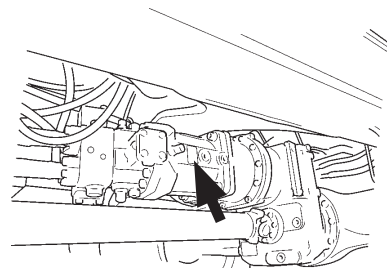

ZAXIS170W-3, 190W-3, 210W-3

 
MCBB-07-021

MACHINE NUMBERS

TRANSMISSION


TYPE: _____

MFG. NO.: _____

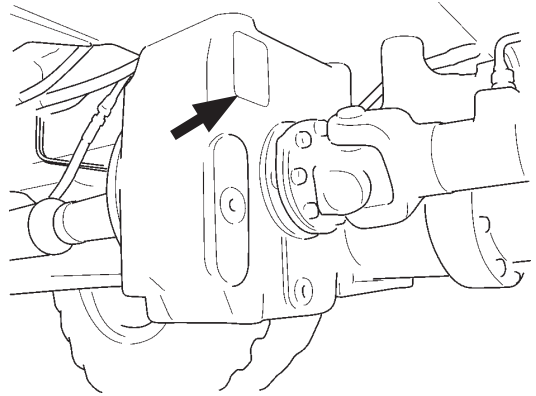

ZAXIS140W-3

 MCBB-00-004

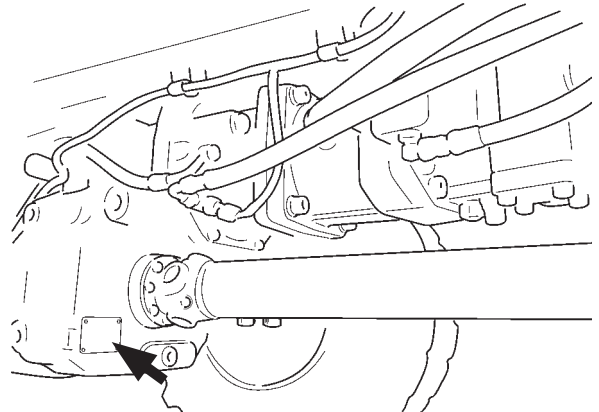


ZAXIS170W-3, 190W-3, 210W-3

MCBB-00-007

FRONT AXLE


TYPE: _____

 MFG. NO.: _____

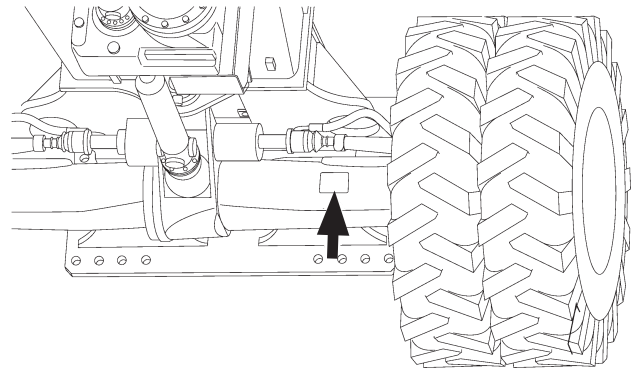

ZAXIS140W-3

 MCBB-00-008

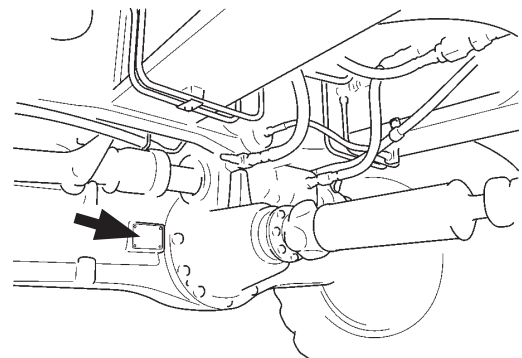

ZAXIS170W-3, 190W-3, 210W-3

 
MCBB-00-005

MACHINE NUMBERS

REAR AXLE


TYPE: _____

MFG. NO.: _____

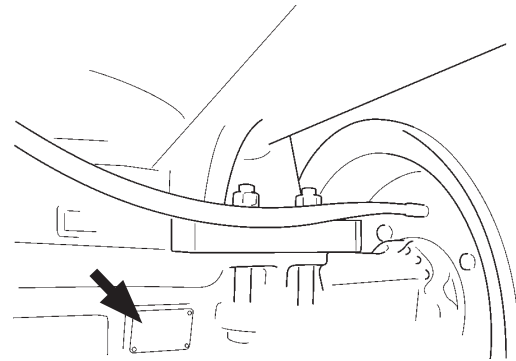

ZAXIS140W-3

 MCBB-00-006

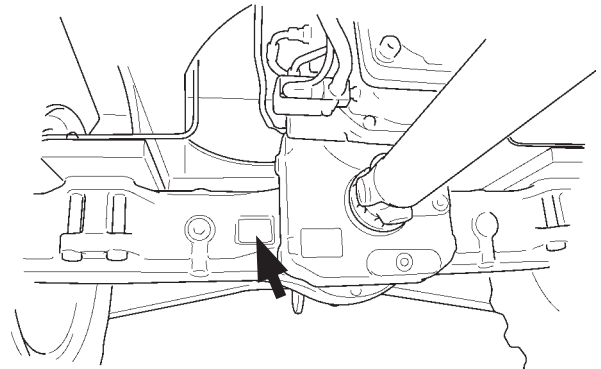

ZAXIS170W-3, 190W-3, 210W-3

MCBB-07-053

CONTENTS

MACHINE NUMBERS

SAFETY

Recognize Safety Information	S-1
Understand Signal Words	S-1
Follow Safety Instructions	S-2
Prepare for Emergencies.....	S-3
Wear Protective Clothing	S-3
Protect Against Noise	S-3
Inspect Machine	S-4
General Precautions for Cab.....	S-4
Use Handholds and Steps	S-5
Adjust the Operator's Seat	S-5
Ensure Safety Before Rising From or Leaving Operator's Seat.....	S-5
Fasten Your Seat Belt.....	S-6
Move and Operate Machine Safely.....	S-6
Handle Starting Aids Safety.....	S-6
Operate Only From Operator's Seat.....	S-7
Jump Starting	S-7
Keep Riders Off Machine	S-7
Precautions for Operations	S-8
Investigate Job Site Beforehand	S-9
Equipment of Head Guard, Rops, Fops	S-10
Provide Signals for Jobs Involving Multiple Numbers of Machines.....	S-10
Confirm Direction of Machine to Be Driven.....	S-10
Drive Machine Safely.....	S-11
Avoid Injury From Rollaway Accidents	S-11
Avoid Injury From Back-over and Swing Accidents	S-12
Keep Person Clear From Working Area.....	S-13
Never Position Bucket Over Anyone	S-13
Avoid Undercutting.....	S-13
Avoid Tipping.....	S-14
Never Undercut a High Bank.....	S-14
Dig with Caution.....	S-15
Operate with Caution	S-15
Avoid Power Lines.....	S-16
Precautions for Lightening	S-16
Object Handling	S-16
Protect Against Flying Debris	S-17
Park Machine Safely.....	S-17
Handle Fluids Safely—avoid Fires	S-17
Transport Safely	S-18
Practice Safe Maintenance	S-19
Warn Others of Service Work	S-20
Support Machine Properly.....	S-20
Stay Clear of Moving Parts	S-20
Prevent Parts From Flying	S-21
Store Attachments Safely	S-21
Support Maintenance Properly	S-21
Prevent Burns.....	S-22
Replace Rubber Hoses Periodically.....	S-22
Avoid High-pressure Fluids.....	S-23
Prevent Fires.....	S-24

Evacuating in Case of Fire.....	S-25
Beware of Exhaust Fumes	S-25
Precautions for Welding and Grinding	S-25
Avoid Heating Near Pressurized Fluid Lines	S-26
Avoid Applying Heat to Lines Containing Flammable Fluids	S-26
Remove Paint Before Welding or Heating	S-26
Beware of Asbestos Dust	S-27
Prevent Battery Explosions	S-27
Service Air Conditioning System Safely	S-27
Handle Chemical Products Safely.....	S-28
Dispose of Waste Properly.....	S-28

SAFETY SIGNS	S-29
---------------------------	------

COMPONENTS NAME	1-1
------------------------------	-----

OPERATOR'S STATION

Cab Features (Standard Model).....	1-2
Steering Column Console	1-3
Steering Wheel and Travel Horn Switch	1-4
Accelerator Pedal.....	1-4
Brake Pedal	1-5
F-N-R Lever	1-6
Combination Switch (Turn Signal Switch, Light and Dimmer Switches)	1-7
Brake Switch	1-10
Working Brake	1-11
Auto Axle Lock.....	1-11
Hazard Switch	1-12
Operator's Station	1-13
Engine Control Dial	1-14
Travel Mode Switch.....	1-14
Engine Speed Control Mode Selection Switch	1-15
Power Mode Switch	1-16
Work Light Switch	1-17
Wiper/Washer Switch.....	1-18
Front Attachment Pilot/Blade/Outrigger Switch	1-19
Auto-idle Switch	1-20
Switch Panel (Optional).....	1-20
Travel Alarm Deactivation Switch (Optional)	1-21
Swing Alarm Switch (Optional)	1-21
Electric Control Main Switch	1-21
Overload Alarm Switch (Optional)	1-22
Revolving Light Switch (Optional).....	1-22
Seat Heater Switch (Optional).....	1-22
Key Switch.....	1-23
Right/Left Control Levers.....	1-24
Lever Switch	1-25
Lighter	1-26
Cab Light	1-27
Pilot Control Shut-off Lever	1-28
Engine Stop Switch.....	1-28
Multi Function Monitor	1-29
Basic Screen.....	1-30

CONTENTS

Monitor Operation.....	1-31	BREAK-IN	
Displaying Basic Screen.....	1-31	Observe Engine Operation Closely.....	2-1
Trip Meter (7).....	1-33	Every 8 Hours or Daily.....	2-1
Odometer (8).....	1-33	After the First 50 Hours.....	2-1
Hour Meter (9).....	1-33	After the First 100 Hours.....	2-1
Clock (18).....	1-33		
Fuel Gauge (25).....	1-33	OPERATING THE ENGINE	
Coolant Temperature Gauge (30).....	1-33	Inspect Machine Daily Before Starting.....	3-1
Brake Oil Pressure Gauge (33).....	1-34	Before Starting Engine.....	3-2
Travel Speed Meter (34).....	1-34	Starting the Engine in Ordinary Temperature.....	3-3
Tachometer (35).....	1-34	Starting in Cold Weather.....	3-6
Back Monitor Screen Selector (22).....	1-38	Starting in Cold Weather (ZX140W-3).....	3-8
Menu Key (23).....	1-38	Check Instruments After Starting.....	3-9
Optional Function Keys (24, 27, 29 and 31).....	1-38	Using Booster Batteries.....	3-10
Return-basic Screen Key (32).....	1-38	Stopping the Engine.....	3-12
Menu Screen.....	1-41		
Displaying Basic Screen by Inputting Password (Optional).....	1-42	DRIVING THE MACHINE	
Corrective Measures to be Taken when a Wrong Password is input.....	1-44	Traveling.....	4-1
Extending Password Validity Time.....	1-46	Engine Speed Control.....	4-2
Alarm Occurrence Screen.....	1-47	Travel Mode Switch.....	4-3
Clock Setting.....	1-51	Stopping and Restarting.....	4-4
Work Mode (Attachment Selection).....	1-52	Instructions for Traveling on a Slope.....	4-6
Attachment Adjustment (Pump 2 Flow Rate Adjustment).....	1-56	Parking.....	4-7
Operating Status.....	1-58	Emergency Parking Due to Machine Failure.....	4-8
Maintenance Setting.....	1-59	Travel Alarm (Optional).....	4-9
Mail (Optional).....	1-65		
Meter Display Control.....	1-67	OPERATING THE MACHINE	
Password Revising (Optional).....	1-69	Control Lever (ISO Pattern) (Standard).....	5-1
Back Monitor Setting.....	1-72	Control Lever (Hitachi Pattern).....	5-2
Language Setting.....	1-75	Pilot Control Shut-off Lever.....	5-3
Meter Combination Setting.....	1-77	Steering Wheel Column.....	5-4
Unit Setting.....	1-79	Warming-up Operation.....	5-5
Fuse Box.....	1-81	Engine Speed Control.....	5-6
Additional Fuse Box.....	1-81	Auto-idle.....	5-7
Auto Air Conditioner Operation.....	1-82	Work Mode.....	5-9
Tips for Optimal Air Conditioner Usage.....	1-89	Power Digging (Only ZAXIS210W-3).....	5-11
Heater (Optional) Operation.....	1-90	Power Mode.....	5-12
Am/Fm Radio Operation.....	1-94	Parking/Stopping the Machine on a Slope (In Case of Emergency).....	5-14
Digital Clock Setting Procedure.....	1-95	Raising the Machine Front Above the Ground with the Boom and Arm Function.....	5-14
Cab Door Release Lever.....	1-96	Excavation.....	5-15
Opening Upper Front Window.....	1-96	Face Shovel Operation.....	5-16
Closing Upper Front Window.....	1-97	Grading Operation.....	5-17
Removing and Storing Lower Front Window.....	1-98	Do Not Slam the Bucket Teeth into the Ground.....	5-17
Opening Door Windows.....	1-99	Do Not Use the Bucket as a Hammer.....	5-17
Opening/Closing Overhead Window (Std. Model).....	1-100	Avoid Increasing Digging Force Forcibly.....	5-18
Emergency Exit.....	1-101	Avoid Using Swing Power.....	5-18
Adjusting the Seat.....	1-102	Boom Lowering Procedure in Emergency or when the Engine Stalls.....	5-19
Seat with a Built-in Heater.....	1-103	Overnight Storage Instructions.....	5-21
Adjusting the Air-suspension Seat (Optional).....	1-104		
Seat with a Built-in Heater.....	1-105	TRANSPORTING	
Seat Belt.....	1-106	Transporting by Road.....	6-1
		Loading/Unloading on a Trailer.....	6-2

CONTENTS

Transporting.....	6-4	Check Fuel Hoses.....	7-63
Unloading	6-5	H. Air Cleaner.....	7-64
Towing Machine	6-6	Clean the Air Cleaner Outer Element	7-64
		Replace the Air Cleaner Outer and Inner Elements..	7-64
		I. Cooling System	7-66
		Check Coolant Level.....	7-67
		Check and Adjust Fan Belt Tension	7-67
		Change Coolant	7-68
		Clean Radiator Interior	7-68
		Clean Radiator, Oil Cooler Core and Inter Cooler	7-69
		Clean Oil Cooler, Radiator and Inter Cooler Front Screen	7-69
		Clean Air Conditioner Condenser.....	7-69
		Clean Fuel Oil Cooler	7-69
		Clean Air Conditioner Front Screen (Opt.)	7-69
		J. Electrical System	7-70
		Batteries	7-70
		Replace Battery	7-73
		Remove and Installing Battery	7-74
		Replacing Fuses.....	7-74
		K. Miscellaneous	7-76
		Check Bucket Teeth.....	7-76
		Change Bucket	7-78
		Convert Bucket Connection Into Face Shovel.....	7-79
		Adjust the Bucket Linkage	7-80
		Check and Replace Seat Belt Check.....	7-81
		Check Windshield Washer Fluid Level.....	7-82
		Clean and Replace Air Conditioner Filter Clean Filter	7-83
		Replace Filter	7-83
		Check the Air Conditioner.....	7-85
		Clean Cab Floor	7-86
		Retighten Cylinder Head Bolt	7-87
		Inspect and Adjust Valve Clearance.....	7-87
		Measure Engine Compression Pressure	7-87
		Check Starter and Alternator	7-87
		Check Tightening Torque of Bolts and Nuts	7-88
		MAINTENANCE UNDER SPECIAL ENVIRONMENTAL CONDITIONS	
		Maintenance Under Special Environmental Conditions..	9-1
		STORAGE	
		Storing the Machine.....	10-1
		Removing the Machine from Storage.....	10-2
		TROUBLESHOOTING	
		Troubleshooting	11-1
		Engine.....	11-1
		Engine Auxiliaries	11-1
		Engine is Hard to Start	11-2
		Control Lever.....	11-3
		Hydraulic System	11-4
		Travel.....	11-5
		Swing	11-8

CONTENTS

Engine Speed.....	11-9	OPTIONAL ATTACHMENTS AND DEVICES	
Blade/outrigger.....	11-10	Blade and Outrigger.....	13-1
Others.....	11-10	Maintenance.....	13-5
SPECIFICATIONS		INDEX.....	14-1
Specifications (ZAXIS140W-3)			
(Standard CHASSIS, REAR BLADE)	12-1		
Specifications (ZAXIS140W-3)			
(Standard CHASSIS, REAR OUTRIGGER)	12-2		
Specifications (ZAXIS140W-3)			
(FRONT BLADE REAR OUTRIGGER)	12-3		
Specifications (ZAXIS140W-3)			
(FRONT OUTRIGGER REAR BLADE)	12-4		
Specifications (ZAXIS140W-3)			
(FRONT OUTRIGGER REAR OUTRIGGER)	12-5		
Working Ranges			
ZAXIS140W-3 MONOBLOCK BOOM	12-6		
Specifications (ZAXIS170W-3)			
(Standard GAUGE, Standard CHASSIS, REAR BLADE).....	12-7		
Specifications (ZAXIS170W-3)			
(Standard GAUGE, Standard CHASSIS, REAR OUTRIGGER)	12-8		
Specifications (ZAXIS170W-3)			
(Standard GAUGE, FRONT BLADE REAR OUTRIGGER) ...	12-9		
Specifications (ZAXIS170W-3)			
(Standard GAUGE, FRONT OUTRIGGER REAR BLADE)	12-10		
Specifications (ZAXIS170W-3)			
(Standard GAUGE, FRONT OUTRIGGER REAR OUTRIGGER).....	12-11		
Working Ranges			
ZAXIS170W-3 MONOBLOCK BOOM	12-12		
Specifications (ZAXIS190W-3)			
(Standard CHASSIS, REAR BLADE)	12-13		
Specifications (ZAXIS190W-3)			
(Standard CHASSIS, REAR OUTRIGGER)	12-14		
Specifications (ZAXIS190W-3)			
(FRONT BLADE REAR OUTRIGGER)	12-15		
Specifications (ZAXIS190W-3)			
(FRONT OUTRIGGER REAR BLADE)	12-16		
Specifications (ZAXIS190W-3)			
(FRONT OUTRIGGER REAR OUTRIGGER)	12-17		
Working Ranges			
ZAXIS190W-3 MONOBLOCK BOOM	12-18		
Specifications (ZAXIS210W-3)			
(Standard GAUGE, REAR BLADE)	12-19		
Specifications (ZAXIS210W-3)			
(Standard GAUGE, REAR OUTRIGGER).....	12-20		
Specifications (ZAXIS210W-3)			
(Standard GAUGE, FRONT BLADE REAR OUTRIGGER)	12-21		
Specifications (ZAXIS210W-3)			
(Standard GAUGE, FRONT OUTRIGGER REAR BLADE)	12-22		
Specifications (ZAXIS210W-3)			
(Standard GAUGE, FRONT OUTRIGGER REAR OUTRIGGER).....	12-23		
Working Ranges			
ZAXIS210W-3 MONOBLOCK BOOM	12-25		

SAFETY

RECOGNIZE SAFETY INFORMATION

- These are the **SAFETY ALERT SYMBOLS**.
 - When you see these symbols on your machine or in this manual, be alert to the potential for personal injury.
 - Follow recommended precautions and safe operating practices.



001-E01A-0001

SA-688

UNDERSTAND SIGNAL WORDS

- On machine safety signs, signal words designating the degree or level of hazard - **DANGER**, **WARNING**, or **CAUTION** - are used with the safety alert symbol.
 - **DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 - **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 - **CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
 - **DANGER or WARNING safety signs** are located near specific hazards. General precautions are listed on **CAUTION safety signs**.
 - Some safety signs don't use any of the designated signal words above after the safety alert symbol are occasionally used on this machine.
- To avoid confusing machine protection with personal safety messages, a signal word **IMPORTANT** indicates a situation which, if not avoided, could result in damage to the machine.
-  **NOTE** indicates an additional explanation for an element of information.



IMPORTANT




002-E01A-1223

SA-1223

SAFETY

FOLLOW SAFETY INSTRUCTIONS

- Carefully read and follow all safety signs on the machine and all safety messages in this manual.
- Safety signs should be installed, maintained and replaced when necessary.
 - If a safety sign or this manual is damaged or missing, order a replacement from your authorized dealer in the same way you order other replacement parts (be sure to state machine model and serial number when ordering).
- Learn how to operate the machine and its controls correctly and safely.
- Allow only trained, qualified, authorized personnel to operate the machine.
- Keep your machine in proper working condition.
 - Unauthorized modifications of the machine may impair its function and/or safety and affect machine life.
 - Do not modify any machine parts without authorization. Failure to do so may deteriorate the part safety, function, and/or service life. In addition, personal accident, machine trouble, and/or damage to material caused by unauthorized modifications will void Hitachi Warranty Policy.
 - Do not use attachments and/or optional parts or equipment not authorized by Hitachi. Failure to do so may deteriorate the safety, function, and/or service life of the machine. In addition, personal accident, machine trouble, and/or damage to material caused by using unauthorized attachments and/or optional parts or equipment will void Hitachi Warranty Policy.
- The safety messages in this SAFETY chapter are intended to illustrate basic safety procedures of machines. However it is impossible for these safety messages to cover every hazardous situation you may encounter. If you have any questions, you should first consult your supervisor and/or your authorized dealer before operating or performing maintenance work on the machine.

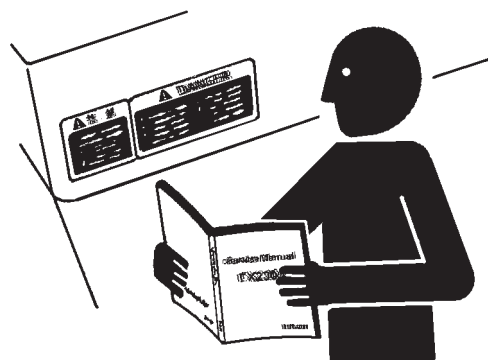

SA-003

003-E01B-0003

SAFETY

PREPARE FOR EMERGENCIES

- Be prepared if a fire starts or if an accident occurs.
 - Keep a first aid kit and fire extinguisher on hand.
 - Thoroughly read and understand the label attached on the fire extinguisher to use it properly.
 - To ensure that a fire-extinguisher can be always used when necessary, check and service the fire-extinguisher at the recommended intervals as specified in the fire-extinguisher manual.
 - Establish emergency procedure guidelines to cope with fires and accidents.
 - Keep emergency numbers for doctors, ambulance service, hospital, and fire department posted near your telephone.



SA-437

004-E01A-0437

WEAR PROTECTIVE CLOTHING

- Wear close fitting clothing and safety equipment appropriate to the job.

You may need:

- A hard hat
- Safety shoes
- Safety glasses, goggles, or face shield
- Heavy gloves
- Hearing protection
- Reflective clothing
- Wet weather gear
- Respirator or filter mask.

Be sure to wear the correct equipment and clothing for the job. Do not take any chances.

- Avoid wearing loose clothing, jewelry, or other items that can catch on control levers or other parts of the machine.
- Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating the machine.



005-E01A-0438

PROTECT AGAINST NOISE

- Prolonged exposure to loud noise can cause impairment or loss of hearing.
 - Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortably loud noises.



006-E01A-0434

SA-434

SAFETY

INSPECT MACHINE

- Inspect your machine carefully each day or shift by walking around it before you start it to avoid personal injury.
- In the walk-around inspection be sure to cover all points described in the "PRE-START INSPECTION" chapter in the operator's manual.



007-E01A-0435

SA-435

GENERAL PRECAUTIONS FOR CAB

- Before entering the cab, thoroughly remove all dirt and/or oil from the soles of your work boots. If any controls such as a pedal is operated while with dirt and/or oil on the soles of the operator's work boots the operator's foot may slip off the pedal, possibly resulting in a personal accident.
- Do not leave parts and/or tools lying around the operator's seat. Store them in their specified locations.
- Avoid storing transparent bottles in the cab. Do not attach any transparent type window decorations on the windowpanes as they may focus sunlight, possibly starting a fire.
- Refrain from listening to the radio, or using music headphones or mobile telephones in the cab while operating the machine.
- Keep all flammable objects and/or explosives away from the machine.
- After using the ashtray, always cover it to extinguish the match and/or tobacco.
- Do not leave cigarette lighters in the cab. When the temperature in the cab increases, the lighter may explode.

524-E01A-0000

SAFETY

USE HANDHOLDS AND STEPS

- Falling is one of the major causes of personal injury.
 - When you get on and off the machine, always face the machine and maintain a three-point contact with the steps and handrails.
 - Do not use any controls as hand-holds.
 - Never jump on or off the machine. Never mount or dismount a moving machine.
 - Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.



008-E01A-0439

SA-439

ADJUST THE OPERATOR'S SEAT

- A poorly adjusted seat for either the operator or for the work at hand may quickly fatigue the operator leading to misoperations.
 - The seat should be adjusted whenever changing the operator for the machine.
 - The operator should be able to fully depress the pedals and to correctly operate the control levers with his back against the seat back.
 - If not, move the seat forward or backward, and check again.
 - Adjust the rear view mirror position so that the best rear visibility is obtained from the operator's seat. If the mirror is broken, immediately replace it with a new one.



009-E01A-0462

SA-378

ENSURE SAFETY BEFORE RISING FROM OR LEAVING OPERATOR'S SEAT

- Before rising from the operator's seat to open/close either side window or to adjust the seat position, be sure to first lower the front attachment to the ground and then move the pilot control shut-off lever to the LOCK position. Failure to do so may allow the machine to unexpectedly move when a body part unintentionally comes in contact with a control lever, possibly resulting in serious personal injury or death.
 - Before leaving the machine, be sure to first lower the front attachment to the ground and then move the pilot control shut-off lever to the LOCK position. Turn the key switch OFF to stop the engine.
 - Before leaving the machine, close all windows, doors, and access covers and lock them up.

SAFETY

FASTEN YOUR SEAT BELT

- If the machine should overturn, the operator may become injured and/or thrown from the cab. Additionally the operator may be crushed by the overturning machine, resulting in serious injury or death.
- Prior to operating the machine, thoroughly examine webbing, buckle and attaching hardware. If any item is damaged or worn, replace the seat belt or component before operating the machine.
- Be sure to remain seated with the seat belt securely fastened at all times when the machine is in operation to minimize the chance of injury from an accident.
- We recommend that the seat belt be replaced every three years regardless of its apparent condition.



SA-237

010-E01A-0237

MOVE AND OPERATE MACHINE SAFELY

- Bystanders can be run over.
 - Take extra care not to run over bystanders. Confirm the location of bystanders before moving, swinging, or operating the machine.
 - Always keep the travel alarm and horn in working condition (if equipped). It warns people when the machine starts to move.
 - Use a signal person when moving, swinging, or operating the machine in congested areas. Coordinate hand signals before starting the machine.
 - Use appropriate illumination. Check that all lights are operable before operating the machine. If any faulty illumination is present, immediately repair it.



SA-083

011-E01A-0398

HANDLE STARTING AIDS SAFELY

Starting fluid:

- Starting fluid is highly flammable.
 - Keep all sparks and flame away when using it.
 - Keep starting fluid well away from batteries and cables.
 - Remove container from machine if engine does not need starting fluid.
 - To prevent accidental discharge when storing a pressurized container, keep the cap on the container, and store it in a cool, well-protected location.
 - Do not incinerate or puncture a starting fluid container.



 
SA-293

036-E01A-0293-3

SAFETY

OPERATE ONLY FROM OPERATOR'S SEAT

- Inappropriate engine starting procedures may cause the machine to runaway, possibly resulting in serious injury or death.
 - Start the engine only when seated in the operator's seat.
 - NEVER start the engine while standing on the track or on ground.
 - Do not start engine by shorting across starter terminals.
 - Before starting the engine, confirm that all control levers are in neutral.
 - Before starting the engine, confirm the safety around the machine and sound the horn to alert bystanders.

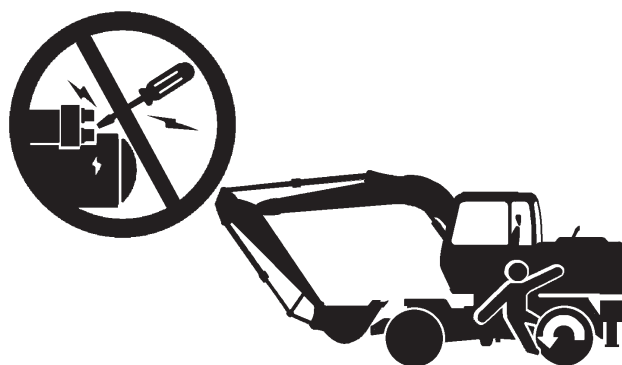

SA-084

012-E01B-0431

JUMP STARTING

- Battery gas can explode, resulting in serious injury.
 - If the engine must be jump started, be sure to follow the instructions shown in the "OPERATING THE ENGINE" chapter in the operator's manual.
 - The operator must be in the operator's seat so that the machine will be under control when the engine starts. Jump starting is a two-person operation.
 - Never use a frozen battery.
 - Failure to follow correct jump starting procedures could result in a battery explosion or a runaway machine.



SA-032

S013-E01A-0032

KEEP RIDERS OFF MACHINE

- Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine.
 - Only the operator should be on the machine. Keep riders off.
 - Riders also obstruct the operator's view, resulting in the machine being operated in an unsafe manner.



014-E01B-0427

SA-091