

Operator's Manual

ZAXIS

16

18

25

Excavator

Serial No.

ZAXIS 16 001001 and up

ZAXIS 18 000501 and up

ZAXIS 25 000501 and up

HITACHI

INTRODUCTION

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

This machine is of metric design. Measurements in this manual are metric. Use only metric hardware and tools as specified.

- SI Units (International System of Units) are used in this manual.
For reference MKS system units and English units are also indicated in parentheses after the SI units.
Example : 24.5 MPa (250 kgf/cm², 3560 psi)

Right-hand and left-hand sides are determined by facing in the direction of forward travel.

Write product identification numbers in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as a part of Hitachi's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that Hitachi will back its products where defects appear within the warranty period. In some circumstances, Hitachi also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

Prior to operating this machine in a country other than a country of its intended use, it may be necessary to make modifications to it so that it complies with the local standards (including safety standards) and requirements of that particular country. Please do not operate this machine outside of the country of its intended use until such compliance has been confirmed.

Please contact Hitachi Construction Machinery Co., Ltd. or any of our authorized distributor or dealer if you have any questions concerning compliance.



All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

INDEX

MACHINE NUMBERS

SAFETY

SAFETY SIGNS

COMPONENTS NAME

OPERATOR'S STATION

BREAK-IN

OPERATING THE ENGINE

DRIVING THE MACHINE

OPERATING THE MACHINE

TRANSPORTING

MAINTENANCE

STORAGE

TROUBLESHOOTING

SPECIFICATIONS

INDEX

CONTENTS

MACHINE NUMBERS

SAFETY

Recognize Safety Information	S1
Understand Signal Words	S1
Follow Safety Instructions	S2
Prepare for Emergencies	S2
Wear Protective Clothing	S3
Protect Against Noise	S3
Inspect Machine	S3
Use Handholds and Steps	S4
Adjust the Operator's Seat	S4
Fasten Your Seat Belt	S5
Move and Operate Machine Safely	S5
Operate Only from Operator's Seat	S6
Jump Starting	S6
Keep Riders Off Machine	S6
Investigate Job Site Beforehand	S7
Protect Against Falling Stones and Debris	S7
Provide Signals for Jobs Involving Multiple Numbers of Machines	S8
Confirm Direction of Machine to be Driven	S8
Drive Machine Safely	S9
Avoid Injury from Rollaway Accidents	S10
Avoid Injury from Back-Over and Swing Accidents	S11
Keep Person Clear from Working Area	S12
Never Position Bucket Over Anyone	S12
Avoid Undercutting	S12
Avoid Tipping	S13
Never Undercut a High Bank	S13
Dig with Caution	S14
Operate with Caution	S14
Avoid Power Lines	S14
Do Not Use for Craning Operation	S15
Protect Against Flying Debris	S15
Park Machine Safely	S15
Handle Fluids Safely – Avoid Fires	S16
Safety Transporting	S17
Practice Safe Maintenance	S18
Support Machine Properly	S19
Stay Clear of Moving Parts	S19
Warn Others of Service Work	S19
Prevent Parts from Flying	S20
Store Attachments Safely	S20
Prevent Burns	S21
Replace Rubber Hoses Periodically	S21
Avoid High-Pressure Fluids	S22
Prevent Fires	S23
Evacuating in Case of Fire	S24
Beware of Exhaust Fumes	S24
Avoid Heating Near Pressurized Fluid Lines	S25
Avoid Applying Heat to Lines Containing Flammable Fluids	S25
Remove Paint before Welding or Heating	S25
Prevent Battery Explosions	S26

Handle Chemical Products Safely	S27
Dispose of Waste Properly	S27

SAFETY SIGNS	S28
---------------------------	-----

COMPONENTS NAME	1-1
------------------------------	-----

OPERATOR'S STATION

Pedals and Levers	1-2
Monitor Panel and Switch Panel	1-3
Key Switch	1-4
Work Light Switch	1-4
Monitor Panel	1-5
Alternator Indicator	1-5
Engine Oil Pressure Indicator	1-5
Preheat Indicator	1-6
Coolant Temperature Gauge and Overheat Indicator	1-6
Fuel Gauge and Fuel Level Indicator	1-7
Hour Meter	1-7
Cab Heater	1-8
Wiper/Washer Switch	1-8
Opening and Closing Front Window	1-9
Emergency Exit	1-10
Tool Box and Operator's Manual Box	1-11
Cab Door Release Button	1-11
Cab Light	1-11
Adjusting the Operator's Seat	1-12
Seat Belt	1-13

BREAK-IN

Breaking in a New Machine	2-1
Correct Break-In Procedures	2-1

OPERATING THE ENGINE

Before Starting Engine	3-1
Engine Speed Control Lever	3-1
Starting the Engine	3-2
Check Instruments after Starting	3-2
Using Booster Batteries	3-3
Stopping the Engine	3-4

DRIVING THE MACHINE

Travel Levers	4-1
Fast Speed Travel Pedal	4-2
Traveling	4-3
Operating on Soft Ground	4-4
Raise One Track Using Boom and Arm	4-4
Towing Machine a Short Distance	4-5
Operating in Water or Mud	4-6
Precautions for Traveling on Slopes	4-7
Parking and Stopping on a Slope	4-8
Parking the Machine	4-8

CONTENTS

OPERATING THE MACHINE

Control Lever (ISO Excavator Pattern)	5-1
Boom-Swing Pedal	5-2
Optional Pedal.....	5-3
Blade Lever	5-4
Blade and Track Width Control Lever Operation	5-5
Install and Remove Extension Blade	5-6
Pilot Control Shut-Off Lever	5-7
Warming Up Operation	5-9
Warming Up in Cold Weather	5-9
Precautions for Operations	5-10
Avoid Tipping.....	5-11
Operating Backhoe	5-12
Take Care Not to Hit the Bucket Teeth	5-12
Grading Operation.....	5-13
Avoid Abusive Operation.....	5-13
Select Correct Track Shoes	5-14
Operating Tips.....	5-14
Object Handling --- If Equipped.....	5-15
Avoid Hitting Blade with Front Attachment.....	5-16
Avoid Hitting Blade with Bucket	5-16
Avoid Striking the Blade into a Rock	5-16
Boom Cylinder May Hit Track	5-17
Precautions for Installing Wide Bucket or Special Type Bucket	5-17
Operate the Machine Safely.....	5-18
Using Rubber Crawler.....	5-19
Traveling and Other Cautions	5-20
Emergency Stop Procedure to Lower Front Attachment.....	5-21
Hydraulic Breaker Operating Tips.....	5-22
Replacement of Hydraulic Oil and Filter Element	5-24
Operating Hydraulic Crusher --- If Equipped	5-25
After Finishing Work.....	5-26

TRANSPORTING

Transporting by Road.....	6-1
Transporting the Machine by Truck	6-1
Precautions for Transporting Machines with Rubber Tracks	6-3
Lifting the Entire Machine with a Crane	6-5

MAINTENANCE

Correct Maintenance and Inspection Procedures	7-1
Service Your Machine at Specified Intervals	7-2
Check the Hour Meter Regularly.....	7-2
Prepare Machine for Maintenance.....	7-3
Hood and Access Covers	7-4
Daily Inspection	7-5
Daily Inspection Check List.....	7-6
Periodic Replacement of Parts	7-7
Maintenance Guide	7-8
The Brand Names of Recommended Oils and Lubricants	7-10

A. Greasing	7-11
Front Joint Pins.....	7-11
Bucket and Link Pins	7-13
Precautions for Front Attachment and Blade Removal.....	7-13
Swing Bearing	7-14
Swing Internal Gear.....	7-15
Control Lever Universal Joint	7-16
B. Engine.....	7-17
Engine Oil Level	7-17
Change Engine Oil	7-18
Replace Engine Oil Filters	7-18
C. Transmission	7-20
D. Hydraulic System.....	7-22
Inspection and Maintenance of Hydraulic Equipment.....	7-22
Check Hydraulic Oil Level	7-23
Drain Hydraulic Tank Sump	7-24
Change Hydraulic Oil.....	7-25
Clean Suction Filter	7-25
Increase Air Pressure in Hydraulic Oil Tank	7-28
Replace Hydraulic Oil Tank Filter	7-29
Replace Pilot Oil Filter	7-31
Check Hoses and Lines	7-32
E. Fuel System.....	7-38
Drain Fuel Tank Sump.....	7-39
Check Water Separator.....	7-40
Replace Fuel Filter	7-40
Check Fuel Hoses	7-41
F. Air Cleaner.....	7-42
Clean the Air Cleaner Element.....	7-42
G. Cooling System	7-43
Check Coolant Level	7-44
Check and Adjust Fan Belt Tension	7-45
Change Coolant.....	7-46
Clean Radiator.....	7-47
H. Electrical System	7-48
Batteries.....	7-48
Replacing Fuses	7-52
Electrical Socket	7-52
I. Miscellaneous.....	7-53
Check Bucket Teeth	7-53
Replace Bucket	7-54
Adjusting Bucket Linkage	7-55
Check Track Sag (rubber crawler)	7-56
Replace Rubber Track	7-58
Check Track Sag (steel crawler)	7-59
Check and Replace Seat Belt	7-62
Check Fuel Injection Nozzles	7-62
Check and Adjust Valve Clearance.....	7-62
Check Injection Timing	7-63
Measure Engine Compression pressure.....	7-63
Check Starter and Alternator.....	7-63
Check Radiator Cap	7-63
Check Tightening Torque of Bolts and Nuts	7-64

CONTENTS

Often-Replaced Parts.....	7-66
Maintenance Under Special Environmental Conditions	7-67

STORAGE

Storing the Machine	10-1
Removing the Machine From Storage	10-2

TROUBLESHOOTING

Troubleshooting	11-1
-----------------------	------

SPECIFICATIONS

Specifications	12-1
Working Ranges.....	12-3
Shoe Types and Applications	12-6
Bucket Types and Applications.....	12-9
Noise Level Results (89/514/EEG)	12-10
Special Specification (Optional)	12-11

INDEX	14-1
--------------------	------

CONTENTS

MEMO

A series of horizontal dotted lines for writing a memo, consisting of approximately 30 lines.

 
MACHINE NUMBERS

The manufacturing Nos. explained in this group is the individual number (serial No.) given to each machine and hydraulic components. These numbers are requested when inquiring any information on the machine and/or components. Fill these serial Nos. in the blank spaces in this group to immediately make them available upon request.

MACHINE

MODEL/TYPE: _____

PRODUCT
IDENTIFICATION
NUMBER: _____

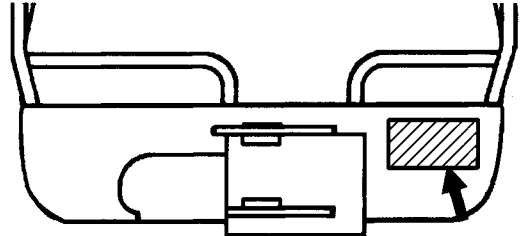


M503-12-001

PRODUCT IDENTIFICATION NUMBER

PRODUCT
IDENTIFICATION
NUMBER: _____

 
 NOTE:

 *HCM1LA00000001001* Marks to indicate the start and end of the PIN

PRODUCT IDENTIFICATION
NUMBER (PIN)


ENGINE

 TYPE: _____
MGF.NO.: _____

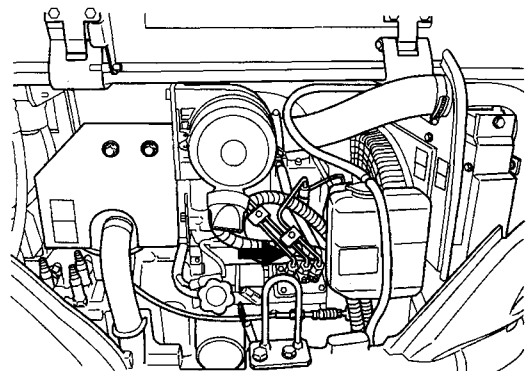

ZAXIS16, 18

 M1LN-07-013

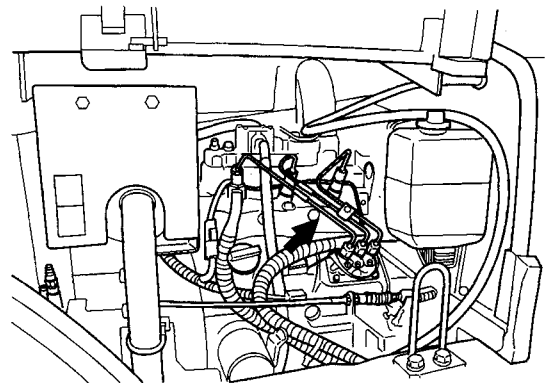

ZAXIS25

 
M1LN-07-014

MACHINE NUMBERS

TRAVEL MOTOR

TYPE: _____

MGF.NO.: _____

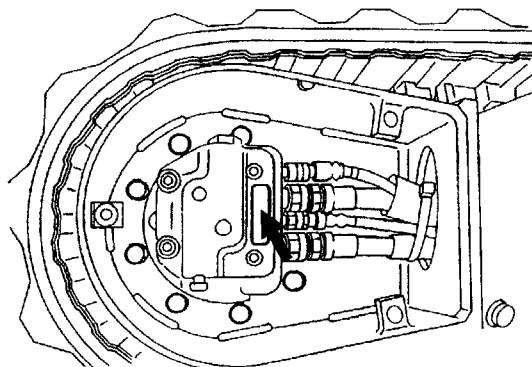


M503-12-003

HYDRAULIC PUMP


TYPE: _____

 MGF.NO.: _____

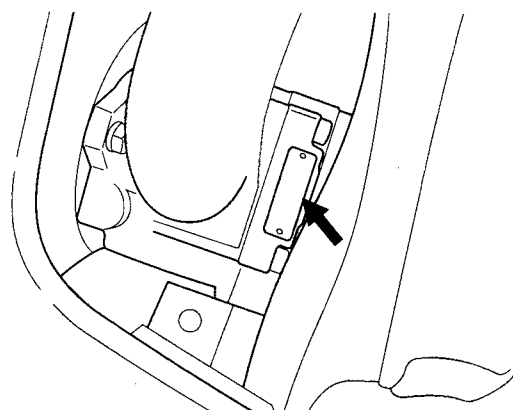

ZAXIS16, 18

 M1LN-00-001

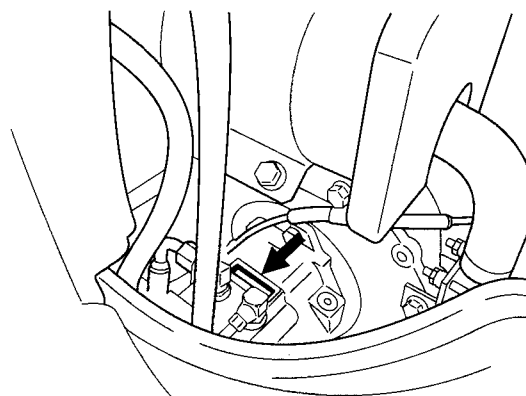

ZAXIS25

M1LN-00-002