



How to Use This Manual

This manual contains technical information for the 1997 – 2000 CR-V. It is divided into 24 sections. The first page of each section is marked with a black tab that lines up with its corresponding thumb index tab on this page and the back cover. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Each section includes:

- 1. A table of contents, or an exploded view index showing:
 - · Parts disassembly sequence.
 - · Bolt torques and thread sizes.
 - Page references to descriptions in text.
- 2. Disassembly/assembly procedures and tools.
- 3. Inspection.
- 4. Testing/troubleshooting.
- 5. Repair.
- 6. Adjustments.

Special Information

A WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTICE

The purpose of these messages is to help prevent damage to the vehicle, other property, or the environment.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of standard workshop procedures, safety principles and service operations are not included. Please note that this manual contains warnings and cautions against some specific service methods which could cause PERSONAL INJURY, damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by HONDA might be done, or of the possible hazardous consequences of every conceivable way, nor could HONDA investigate all such ways. Anyone using service procedures or tools, whether or not recommended by HONDA, must satisfy himself thoroughly that neither personal safety nor vehicle safety will be jeopardized.

First Edition 11/99

HONDA MOTOR CO., LTD. Service Publication Office

Specifications apply to U.S.A. and Canada


As sections with * include SRS components; special precautions are required when servicing.


General Info specs Specifications Maintenance **Engine Electrical** ENGINE Engine Cooling Fuel and Emissions *Transaxle *Steering Suspension *Brakes (Including ABS) *Body *Heater and Air Conditioning *Body Electrical *Restraints


General Information

Chassis and Paint Codes	1-2
Identification Number Locations	1-10
Warning/Caution Label Locations	1-11
Under-hood Emissions Control	
Label	1-15
Lift and Support Points	
Lift and Safety Stands	1-19
Floor Jack	1-20
Towing	1-21
Service Precautions	
Parts Marking Locations	1-22
Precautions for Real-time 4WD	
(Four-wheel Drive)	1-23


U.S. 1997 Model

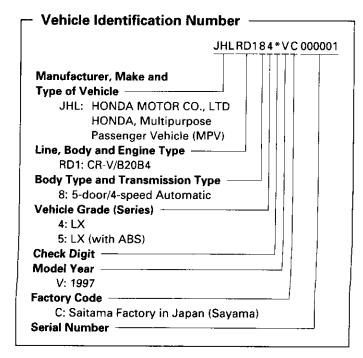


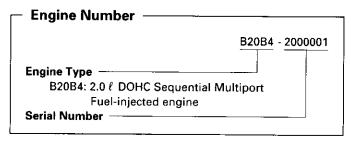

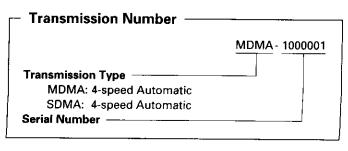


Paint Code ——	
Paint Code	Calor
B-84P	Supermarine Blue Pearl
G-82P	Cypress Green Pearl
NH-552M	Sebring Silver Metallic
NH-592P	Flamenco Black Pearl
R-94	San Marino Red

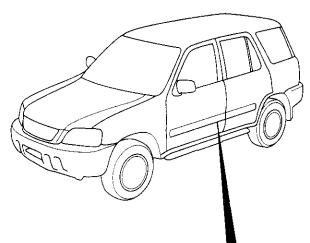


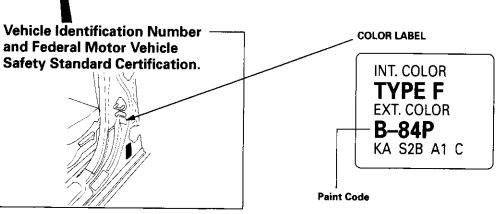





U.S. 1998 Model

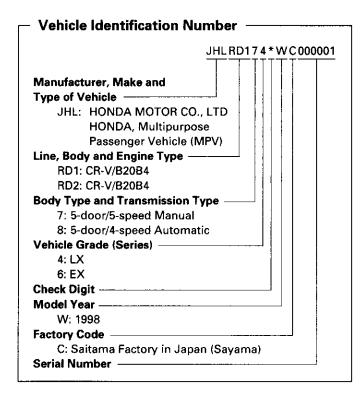


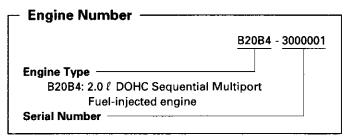

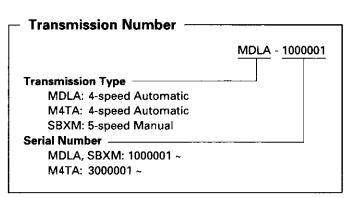


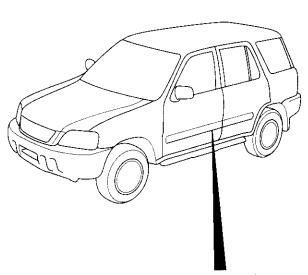



Paint Code Paint Code Color B-84P G-82P NH-552M NH-592P R-94 Cypress Green Pearl Cypress Green Pearl Sebring Silver Metallic Flamenco Black Pearl San Marino Red

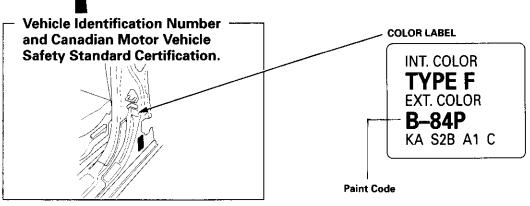


U.S. 1999 Model

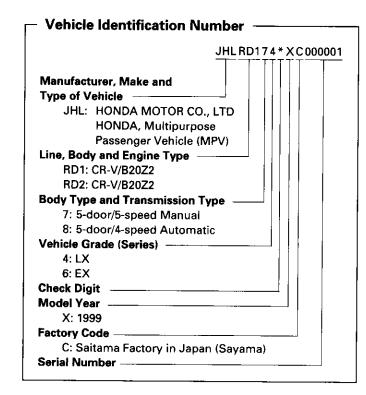


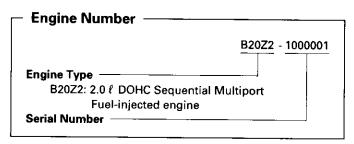

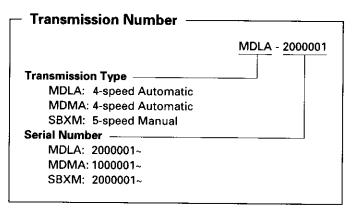

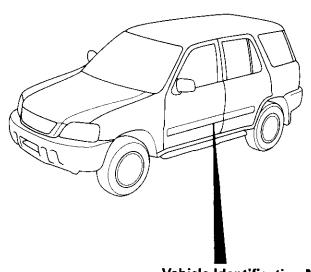

 Paint Code —— 	
Paint Code	Color
B-84P	Supermarine Blue Pearl
B-92P	Nighthawk Black Pearl
G-95P	Clover Green Pearl
NH-578	Taffeta White
NH-552M	Sebring Silver Metallic
R-81	Milano Red

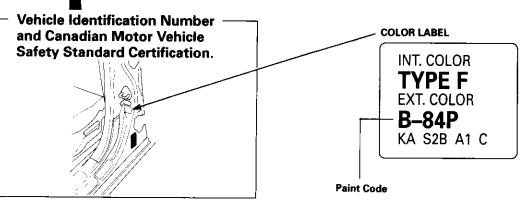






U.S. 2000 Model




Vehicle Identification Number — JHLRD174*YC000001 Manufacturer, Make and Type of Vehicle JHL: HONDA MOTOR CO., LTD HONDA, Multipurpose Passenger Vehicle (MPV) Line, Body and Engine Type RD1: CR-V/B20Z2 RD2: CR-V/B20Z2 Body Type and Transmission Type -7: 5-door/5-speed Manual 8: 5-door/4-speed Automatic Vehicle Grade (Series) -4: LX 6: EX 7: SE Check Digit -Model Year Y: 2000 Factory Code -C: Saitama Factory in Japan (Sayama) Serial Number -

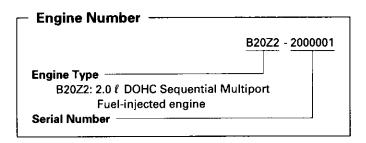

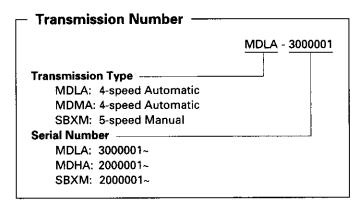


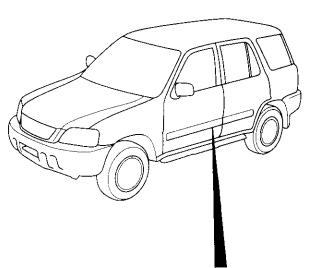



Paint Code Paint Code Color B-92P B-95P G-95P NH-578 NH-552M R-81 Clover Green Pearl Taffeta White Milano Red

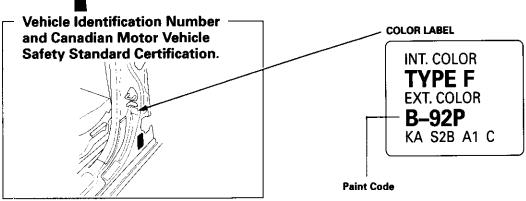


Canada 1997 Model

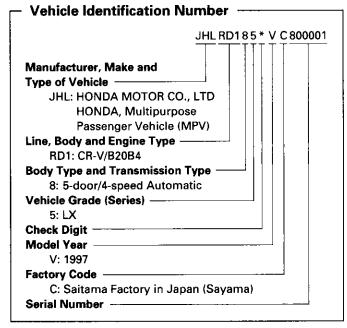


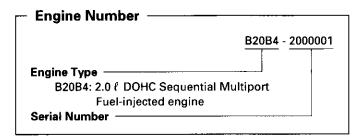

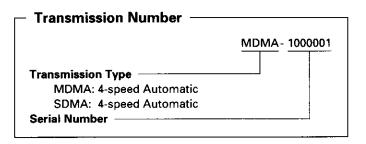

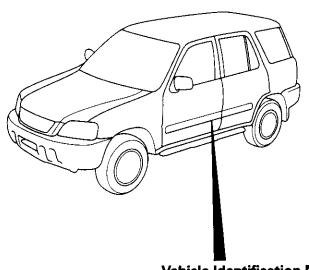



Paint Code —	
Paint Code	Color
B-84P	Supermarine Blue Pearl
G-82P	Cypress Green Pearl
NH-552M	Sebring Silver Metallic
NH-592P	Flamenco Black Pearl
R-94	San Marino Red

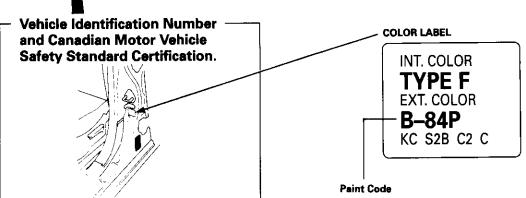





Canada 1998 Model

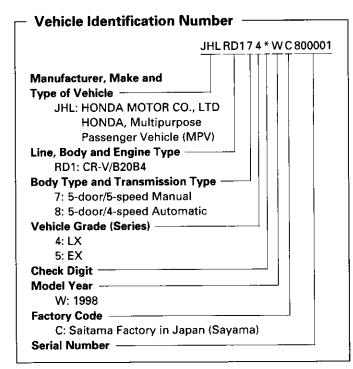


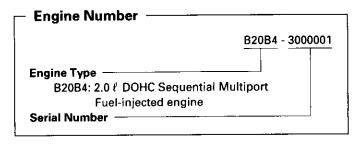

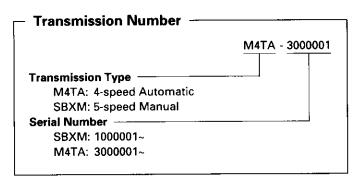


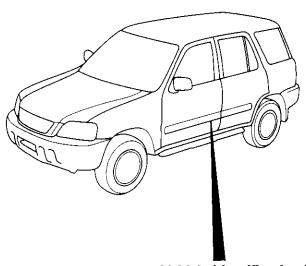



Paint Code Paint Code Color B-84P G-82P NH-552M NH-592P R-94 Color Supermarine Blue Pearl Cypress Green Pearl Sebring Silver Metallic Flamenco Black Pearl San Marino Red

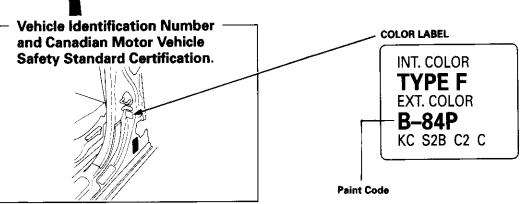


Canada 1999 Model

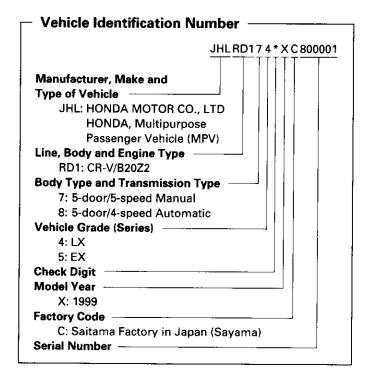


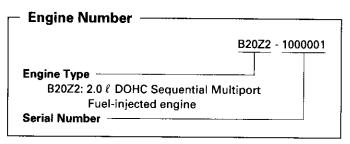

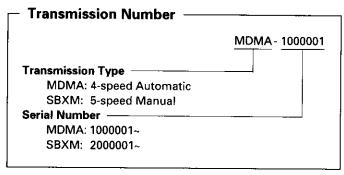

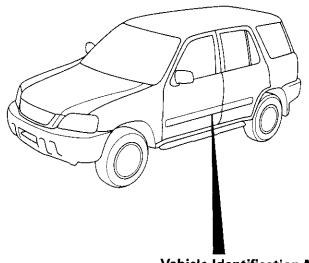


_ Paint Code <i>—</i>	
Paint Code	Color
B-84P	Supermarine Blue Pearl
B-92P	Nighthawk Black Pearl
G-95P	Clover Green Pearl
NH-552M	Sebring Silver Metallic
R-81	Milano Red

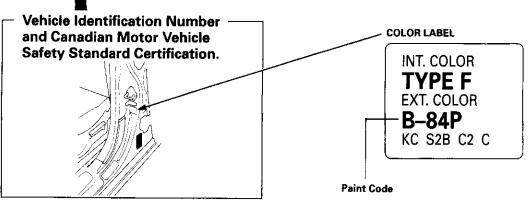





Canada 2000 Model




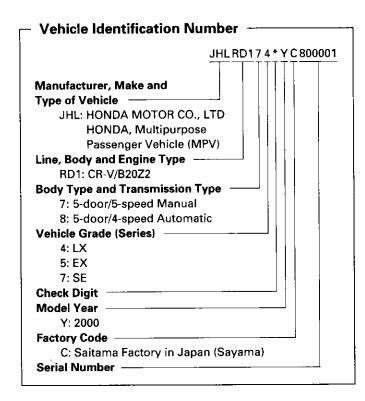


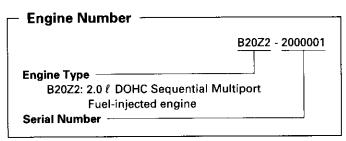

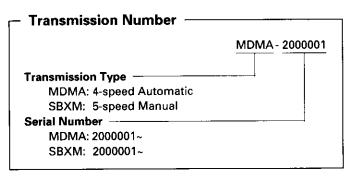




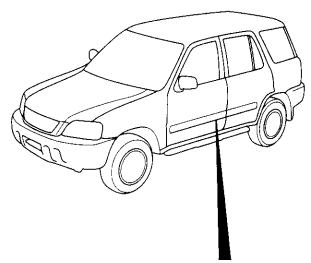

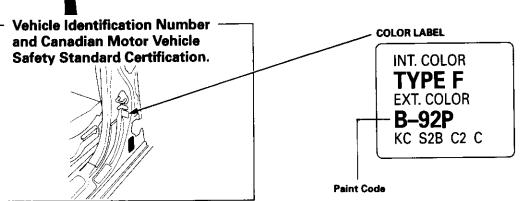

Identification Number Locations

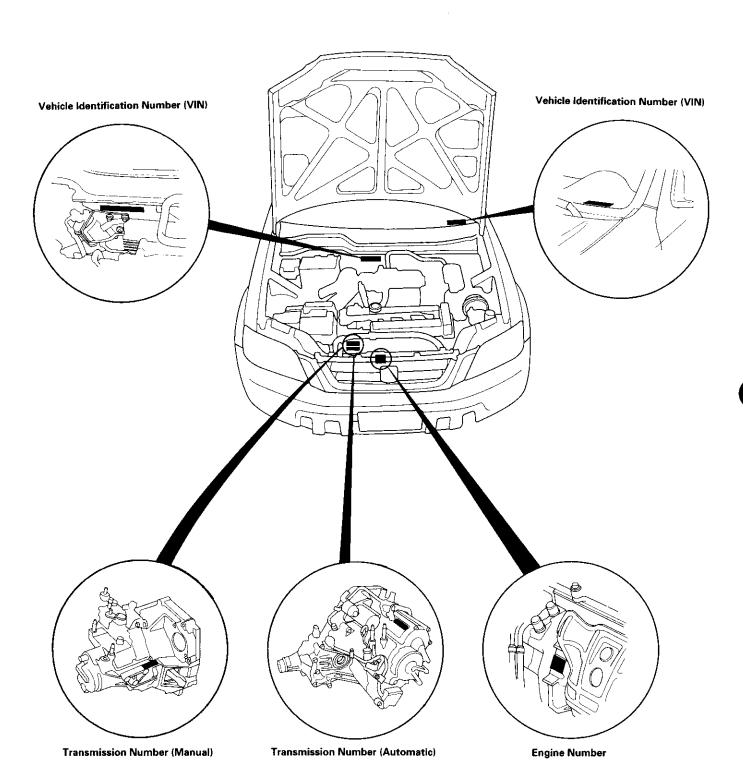




Warning/Caution Label Locations





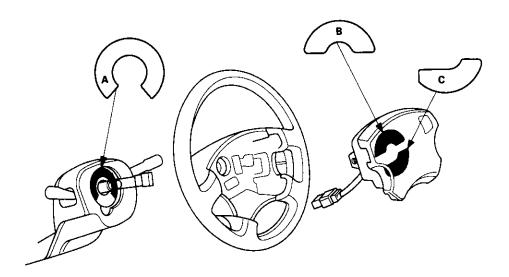

A: CABLE REEL CAUTION

SRS

INSTALLATION OF THE SRS CABLE REEL IS CRITICAL TO THE PROPER OPERATION OF THE SRS SYSTEM. REFER TO THE SERVICE MANUAL FOR DETAILED INSTALLATION INSTRUCTIONS.

B: DRIVER MODULE DANGER

⚠ DANGER

EXPLOSIVE/FLAMMABLE

CONTACT WITH ACID, WATER OR HEAVY METALS SUCH AS COPPER, LEAD OR MERCURY MAY PRODUCE HARMFUL AND IRRITATING GASES OR EXPLOSIVE COMPOUNDS. STORAGE TEMPERATURES MUST NOT EXCEED 200°F (100°C). FOR PROPER HANDLING, STORAGE, AND DISPOSAL PROCEDURES, REFER TO SERVICE MANUAL, SRS SUPPLEMENT.

POISON

CONTAINS POISONOUS SODIUM AZIDE AND POTASSIUM NITRATE.

FIRST AID

IF CONTENTS ARE SWALLOWED, INDUCE VOMITING. FOR EYE CONTACT, FLUSH EYES WITH WATER FOR 15 MINUTES. IF GASES (FROM ACID OR WATER CONTACT) ARE INHALED, SEEK FRESH AIR. IN EVERY CASE, GET PROMPT MEDICAL ATTENTION.

KEEP OUT OF REACH OF CHILDREN.

C: DRIVER MODULE WARNING

△ WARNING


THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT OR KILL YOU.

- DO NOT USE ELECTRICAL TEST EQUIPMENT OR PROBING DEVICES.
 - THEY CAN CAUSE ACCIDENTAL DEPLOYMENT.
- NO SERVICEABLE PARTS INSIDE. DO NOT DISASSEMBLE.
- PLACE AIRBAG UPRIGHT WHEN REMOVED.
- FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

(cont'd)

Warning/Caution Label Locations

(cont'd)

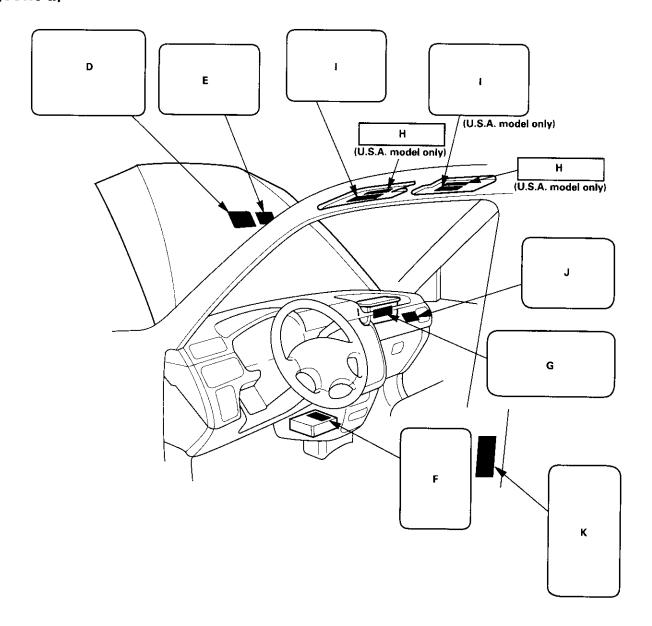

D: SRS WARNING (HOOD)

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

THIS VEHICLE IS EQUIPPED WITH DRIVER AND FRONT SEAT PASSENGER AIRBAGS.

ALL SRS ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW.

TAMPERING WITH, DISCONNECTING OR USING ELECTRICAL TEST EQUIPMENT ON THE SRS WIRING CAN MAKE THE SYSTEM INOPERATIVE OR CAUSE ACCIDENTAL FIRING OF THE INFLATOR.

△ WARNING

THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT YOU. FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

E: STEERING COLUMN NOTICE (HOOD)

NOTICE

TO PREVENT SRS DAMAGE, REMOVE STEERING WHEEL BEFORE REMOVING STEERING SHAFT CONNECTING BOLT.

F: MONITOR NOTICE

NOTICE SRS

- NO SERVICEABLE PARTS INSIDE.
- REFER TO SERVICE MANUAL FOR DETAILED INSTRUCTIONS.





G: FRONT SEAT PASSENGER AIRBAG MODULE DANGER

▲ DANGER

EXPLOSIVE/FLAMMABLE

CONTACT WITH ACID, WATER, OR HEAVY METALS SUCH AS COPPER, LEAD, OR MERCURY MAY PRODUCE HARMFUL AND IRRITATING GASES OR EXPLOSIVE COMPOUNDS. STORAGE TEMPERATURES MUST NOT EXCEED 200°F (100°C). FOR PROPER HANDLING, STORAGE, AND DISPOSAL PROCEDURES REFER TO THE SERVICE MANUAL, SRS SUPPLEMENT.

POISON

CONTAINS POISONOUS SODIUM AZIDE AND POTASSIUM NITRATE.

FIRST AID

IF CONTENTS ARE SWALLOWED, INDUCE VOMITING. FOR EYE CONTACT, FLUSH EYES WITH WATER FOR 15 MINUTES. IF GASES (FROM ACID OR WATER CONTACT) ARE INHALED, SEEK FRESH AIR. IN EVERY CASE, GET PROMPT MEDICAL ATTENTION.

KEEP OUT OF REACH OF CHILDREN.

⚠ WARNING

THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT OR KILL YOU.

- DO NOT USE ELECTRICAL TEST EQUIPMENT OR PROBING DEVICES.
 - THEY CAN CAUSE ACCIDENTAL DEPLOYMENT.
 NO SERVICEABLE PARTS INSIDE. DO NOT DISASSEMBLE.
- PLACE AIRBAG UPRIGHT WHEN REMOVED.
- FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

H: PASSENGER INFORMATION (U.S.A. model) (U.S.A. '97 model)

AIRBAG SEE OTHER SIDE.

(U.S.A. '98 - 00 models)

AIRBAG WARNING FLIP VISOR OVER.

I: SRS INFORMATION (U.S.A. '97 model Canada '97 – 00 models

CAUTION

TO AVOID SERIOUS INJURY:

- FOR MAXIMUM SAFETY PROTECTION IN ALL TYPES OF CRASHES, YOU MUST ALWAYS WEAR YOUR SAFETY RELT
- DO NOT INSTALL REARWARD-FACING CHILD SEATS IN ANY FRONT PASSENGER SEAT POSITION.
- DO NOT SIT OR LEAN UNNECESSARILY CLOSE TO THE AIRBAG.
- DO NOT PLACE ANY OBJECTS OVER THE AIRBAG OR BETWEEN THE AIRBAG AND YOURSELF.
- SEE THE OWNER'S MANUAL FOR FURTHER INFORMATION AND EXPLANATIONS.
- THE SRS MUST BE INSPECTED TEN YEARS AFTER IT IS INSTALLED.
- THE DATE OF INSTALLATION IS SHOWN ON THE DRIVER'S DOORJAMB.

(U.S.A. '98 - 00 models)

WARNING

DEATH OR SERIOUS INJURY CAN OCCUR.

- CHILDREN 12 AND UNDER CAN BE KILLED BY THE AIRBAG.
- THE BACK SEAT IS THE SAFEST PLACE FOR CHILDREN.
- NEVER PUT A REAR-FACING CHILD SEAT IN THE FRONT.
- SIT AS FAR BACK AS POSSIBLE FROM THE AIRBAG.
- ALWAYS USE SEAT BELTS AND CHILD RESTRAINTS.
- THE SRS MUST BE INSPECTED TEN YEARS AFTER IT IS INSTALLED.
- THE DATE OF INSTALLATION IS SHOWN ON THE DRIVER'S DOORJAMB.

J: FRONT PASSENGER AIRBAG WARNING (U.S.A. '98 – 00 models)

WARNING

CHILDREN CAN BE KILLED OR INJURED BY THE PASSENGER AIRBAG.

THE BACK SEAT IS THE SAFEST PLACE FOR CHILDREN 12 AND UNDER.

MAKE SURE ALL CHILDREN USE SEAT BELTS OR CHILD SEATS.

K: FRONT SEATBELT TENSIONER WARNING

WARNING


EXPLOSIVE MATERIAL INSIDE YOU CAN BE SERIOUSLY HURT OR BURNED.

- DO NOT TAMPER OR DISASSEMBLE.
 NO SERVICEABLE PARTS INSIDE.
- REFER TO SERVICE MANUAL FOR COMPLETE INSTRUCTIONS.

(cont'd)

Warning/Caution Label Locations

(cont'd)

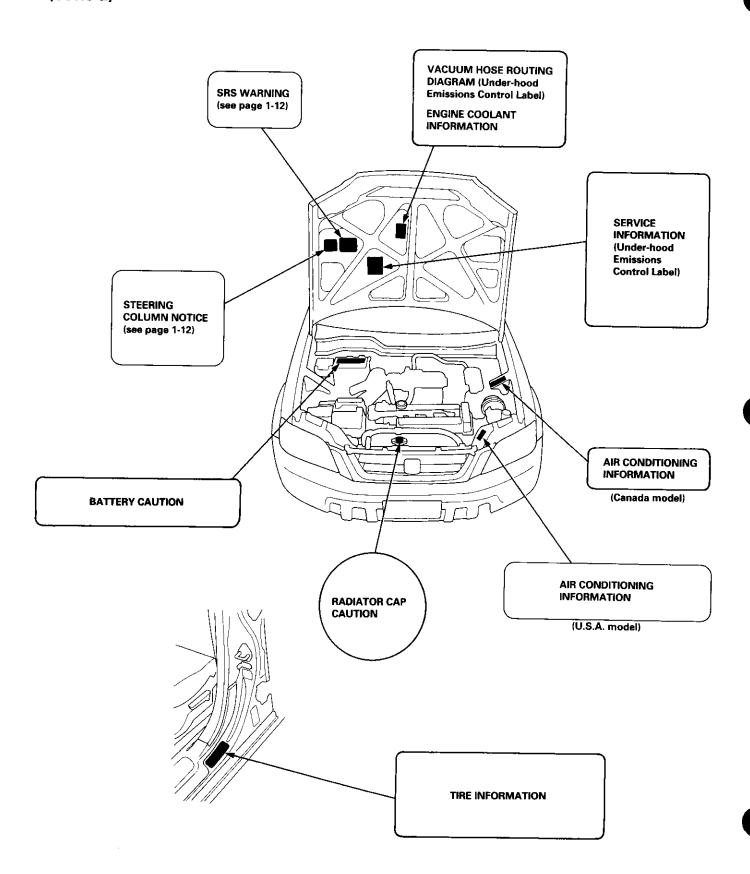


Under-hood Emissions Control Label





Emission Group Identification (1997 model)

Example:

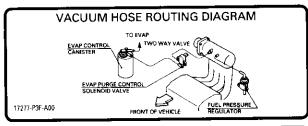

ENGINE FAMIL' DISPLACEMEN' EVAPORATIVE I	Y-VHN2.0 T-2.0 LITI FAMILY-		ST H
TUNE UP CON			
NO OTHER AD	петме	ENGINE AT NORMAL OPERATI ALL ACCESSORIES TURNED O TRANSMISSION IN NEUTRAL ITS NEEDED	
IDLE SPEED		IATIC TRANSMISSION	750 ± 50 rpm
IGNITION TIMI			16° ± 2° BTDC
VALVE LASH	IN		0.10 ± 0.02 mm COLD 0.18 ± 0.02 mm COLD
	TYPE	NGK: ZFR5F-11	ND: KJ16CR-L11
SPARK PLUG	GAP	NON. ZI NOI - I I	1.1 - 8 1 mm
THIS VEHICLE (CONFOR	MS TO U.S. EPA REGULATIONS ODEL YEAR NEW LIGHT-DUTY	
(K•A)			201JGKEE
HONDA MOTO	R CO., L	D.	
17275-P3F-A01	.,,		

LOADED NM TESTING OF PERMANENT FOUR-WHEEL DRIVE OR TRACTION CONTROL-EQUIPPED VEHICLES MUST BE CONDUCTED ON A FOUR-WHEEL DRIVE SPEED SYNCHRONIZED DYNAMOMETER. OTHERWISE, A NON-LOADED TEST PROCEDURE MUST BE PERFORMED.

50ST (50 States):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1997 MODEL YEAR NEW LIGHT DUTY TRUCKS.

49ST (49 States/Federal):

THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 1997 MODEL YEAR NEW LIGHT DUTY TRUCKS.

CAL (California):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1997 MODEL YEAR NEW TLEV LIGHT DUTY TRUCKS PROVIDED THAT THIS VEHICLE IS ONLY INTRODUCED INTO COMMERCE FOR SALE IN THE STATE OF CALIFORNIA.

Engine and Evaporative Families


Engine Family:	<u>V</u>	HN	2.0	1 . T	J G	K	ΕK
Model Year ————		i					
V: 1997					ļ		11
Manufacturer —————							
HN: Honda				Ì			11
Displacement				ŀ			
Class —				١		1	
1: Light Duty Vehicle							11
Fuel System and Number of Valves	-			_	١	ı	
J: Electronic Sequential Multipor	rt				ļ	-	
Injection (three or more valves	s p	er					
cylinder)							
Fuel Type —				_			
G: Gasoline						İ	
Standard —							11
F: 49 or 50 States Tier 1							
K: 49 or 50 States Tier 1							
1: California Tier 1							
2: California TLEV							
3: California LEV							,
4: California ULEV							
Catalyst —	_						
E, F, G, H: Three Way Catalyst							
OBD —							
K – T: OBD Equipped							

Evaporative Family:	V HN	077	3 Y M B P
•			
Model Year —	_		
V: 1997	i		<u> </u>
Manufacturer ————			
HN: Honda			
Storage System —		⁾	
1: Canister			
Canister Working Capacity (grams	s) ——		
Canister Configuration			[,]
A: Plastic Housing (Closed Botte	om)		
B: Plastic Housing (Open Bottor	m)		
Fuel System			
Y: Fuel Injection			
Fuel Tank ———————	-		
M: Metal			
Standard ——————			
A: Current Evap			
B: Enhanced Evap			
Wild Card —			

Under-hood Emissions Control Label

Emission Group Identification (1998 model)

Example:

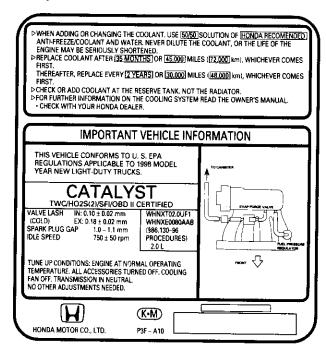

50ST (50 States):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1998 MODEL YEAR NEW LIGHT DUTY TRUCKS.


49ST (49 States/Federal):

THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 1998 MODEL YEAR NEW LIGHT DUTY TRUCKS.

CAL (California):

THIS VEHICLE CONFORMS TO U.S. EPA AND STATE OF CALIFORNIA REGULATIONS APPLICABLE TO 1998 MODEL YEAR NEW TLEV LIGHT DUTY TRUCKS PROVIDED THAT THIS VEHICLE IS ONLY INTRODUCED INTO COMMERCE FOR SALE IN THE STATE OF CALIFORNIA.

Engine and Evaporative Families

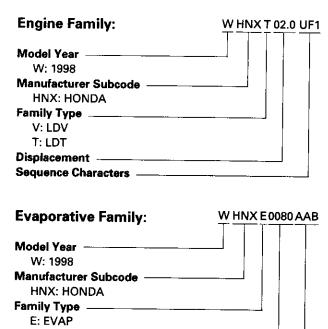

R: EVAP/ORVR

Canister Work Capacity -


Sequence Characters -







Example:

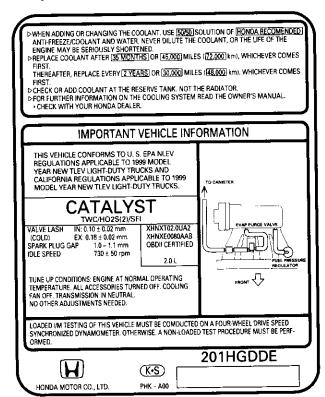

50 State TLEV + NLEV (Unrestricted)

THIS VEHICLE CONFORMS TO U.S. EPA NLEV REGULATIONS APPLICABLE TO 1999 MODEL YEAR NEW TLEV LIGHT DUTY TRUCKS AND CALIFORNIA REGULATIONS APPLICABLE TO 1999 MODEL YEAR NEW LIGHT DUTY TRUCKS.

Engine and Evaporative Families


Engine Family:	X HNX T 02.0 UA2
_	
Model Year —	
X: 1999	
Manufacturer Subcode ———	
HNX: HONDA	
Family Type	
V: LDV	
T: LDT	
Displacement —	
Sequence Characters ————	
Evaporative Family:	X HNX E 0080 AAB
Model Year	
X:1999	
Manufacturer Subcode	
HNX: HONDA	
Family Type —	
E: EVAP	
R: EVAP/ORVR	
Canister Work Capacity	

Full download: http://manualplace.com/download/honda-crv-1997-2000-service-manual/

Under-hood Emissions Control Label

Emission Group Identification (2000 model)

Example:

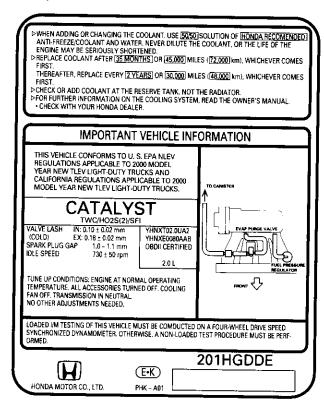

50 State TLEV + NLEV (Unrestricted)

THIS VEHICLE CONFORMS TO U.S. EPA NLEV REGULATIONS APPLICABLE TO 2000 MODEL YEAR NEW TLEV LIGHT DUTY TRUCKS AND CALIFORNIA REGULATIONS APPLICABLE TO 2000 MODEL YEAR NEW LIGHT DUTY TRUCKS.

Engine and Evaporative Families

