Full download: http://manualplace.com/download/hummer-hydraulic-cylinders/



HYDRAULIC CYLINDERS

COMPONENT REPAIR MANUAL





6570091 (8-92)-1.5M

 
A BUSINESS UNIT OF CLARK EQUIPMENT COMPANY



Printed in U.S.A.

Full download: http://manualplace.com/download/hummer-hydraulic-cylinders/


MAINTENANCE SAFETY




Instructions are necessary before operating or servicing machine. Read Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W-2003-1089

Safety Alert Symbol: This symbol is used for important safety messages. When you see this symbol, follow the safety message to avoid personal injury or death.

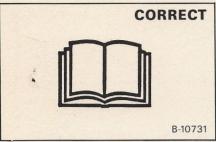

Never service the Bobcat loader without instructions.

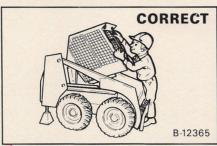

Don't lift or lower operator cab without instruction.




Cleaning and maintenance are required daily.

Keep rear doo closed except for service. Close and latch door before operating the loader.



Have good ventilation when welding or grinding painted parts. Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

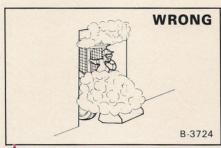

Vent exhaust to outside when engine must be run for service. Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.



Never work on loader with lift arms up unless lift arms are held by a lift arm support device.

Never modify equipment or add attachments not approved by Melroe Company.



Stop, cool and clean engine of flammable materials before checking fluids.

Never service or adjust loader with the engine running unless instructed to do so in the manual.

Avoid contact with leaking hydraulic fluids or diesel fuel which is under pressure. It can penetrate the skin or eyes.

Never fill fuel tank with engine running, while smoking or when near open flame.



Keep body, jewelry and clothing away from moving parts, electrical contacts, hot parts and exhaust.

Wear eve protection to guard from

contacts, hot parts and exhaust.

Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.



Lead-acid batteries produce flammable and explosive gases.
Keep arcs, sparks, flames and lighted tobacco away from batteries.

Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.