

G9 F J ⇨ 9 ' A 5 B I 5 @



< F + \$ # / % \$ # / & \$ # / % \$ 7 ! -

Overview: Chapters

- **Chapter 1: Machine designation, manufacturer, serial number and measuring units**
- **Chapter 2: Technical specifications Compaction rollers**
- **Chapter 3: Operating elements & displays**
- **Chapter 4: Options**
- **Chapter 5: Maintenance**
- **Chapter 6: Diesel engine and hydraulic system**
- **Chapter 7: Drum drive and rear axle**
- **Chapter 8: Antrieb vibration system**
- **Chapter 9: Electrical system**
- **Chapter 10: Steering system and articulated pendulum joint**
- **Chapter 11: Towing**

Table of contents

- **Chapter 1: Machine designation, manufacturer, serial number and measuring units**
 - 1.1 Machine designation, intended use and manufacturer 1-2**
 - 1.1.1 Manufacturer 1-2
 - 1.1.1A Distributer 1-2
 - 1.1.2 HR70C-9: Type plate and serial number 1-3
 - 1.1.3 HR110C-9/HR120C-9/HR140C-9: Type plate and serial number 1-4
 - 1.1.4 Legal measuring units 1-5
 - 1.1.5 Tightening torques (in Nm) for screws & bolts 1-6
- **Chapter 2: Technical specifications Compaction rollers**
 - 2.1 Technical specifications 2-2**
 - 2.1.1 Operating data 2-2
 - 2.1.2 HR70C-9: Dimensions 2-4
 - 2.1.3 HR110C-9/HR120C-9/HR140C-9: Dimensions 2-5
 - 2.1.4 Roll-over protection system 2-6
- **Chapter 3: Operating elements & displays**
 - 3.1 Control elements and displays 3-2**



3.1.1 Displays on the dashboard	3-3
3.1.2 Dashboard: Displays related to roller operation	3-4
3.1.3 Steering column switches	3-4
3.1.4 HR70C-9: Control lever (joystick) and panel of switches in the right armrest.....	3-5
3.1.5 HR110C-9/HR120C-9/HR140C-9: Control lever (joystick) and panel of switches in the right armrest.....	3-6
3.2 Compaction roller functions.....	3-7
3.2.1 HR70C-9: Functions of the hydraulic HA control	3-7
3.2.2 HR110C-9/HR120C-9/HR140C-9: Functions of the hydraulic HA control.....	3-8
3.2.3 Maximum gradeability of the compaction rollers	3-9
• Chapter 4: Options	
4.1 Converting from a smooth roller drum to a pad foot roller drum (Optional feature).....	4-2
4.1.1 Mounting the pad foot segments on a smooth roller drum	4-3
4.1.2 Mounting the pad foot segments	4-4
4.1.3 Mounting the scrapers for the pad foot roller drum	4-6
4.2 Compaction measurement system (Optional feature).....	4-7
4.2.1 Variants of the compaction measurement system.....	4-8
4.2.2 Installing the sensors and connecting them to the compaction measurement system	4-10
4.2.3 Installing the speed sensor at the axle	4-11
4.2.4 Establishing the connections at the compaction measurement system	4-13
4.3 ECO Speed Function (Optional feature).....	4-14
4.3.1 Activating and deactivating the ECO Speed function	4-14

4.3.2 Overview: Components of the ECO Speed system.....	4-15
---	------

- **Chapter 5: Maintenance**

5.1 Maintenance measures	5-2
5.1.1 Safety instructions referring to maintenance work.....	5-2
5.1.2 Safety precautions to be taken prior to maintenance work	5-3
5.1.3 HR70C-9: Maintenance overview	5-4
5.1.4 HR110C-9/HR120C-9/HR140C-9: Maintenance overview	5-5
5.1.5 Maintenance instructions referring to the initial operation	5-6
5.1.6 Instruction and demonstration at the machine	5-7
5.1.7 Check list: 1st inspection after 50 operating hours.....	5-9
5.1.8 Table of lubricants.....	5-10
5.2 Maintenance work	5-11
5.2.1 Maintenance work related to the Diesel engine	5-11
5.2.2 Hydraulic system	5-15
5.2.3 Rear axle	5-17
5.2.4 HR70C-9: Maintenance work at the drum drive.....	5-20
5.2.5 HR110C-9/HR120C-9/HR140C-9: Maintenance work at the drum drive.....	5-21
5.2.6 Maintenance work at the vibration drive	5-22
5.2.7 Maintenance work at the ventilation system.....	5-23
5.2.8 Note regarding maintenance work related to the electrical installation	5-23

5.2.9	HR70C-9: Perkins Diesel engine maintenance schedule	5-24
5.2.10	HR110C-9/HR120C-9/HR140C-9: Deutz Diesel engine maintenance schedule	5-25
5.3	Tires at the rear axle.....	5-26
5.3.1	Water filling in the tires of the rear axle	5-26
5.3.2	Emptying the tires.....	5-27
5.3.3	Filling procedure: Using the “Hanauer Maus”	5-28
5.3.4	Checking the tire inflation pressure	5-29
5.3.5	Mounting the tires.....	5-29
•	Chapter 6: Diesel engine and hydraulic system	
6.1	Diesel engine	6-2
6.1.1	Technical specifications Diesel engine	6-2
6.1.2	Maintenance overview Diesel engine	6-2
6.2	Hydraulic system.....	6-3
6.2.1	Technical specifications hydraulic system	6-3
6.2.2	Maintenance work hydraulic system.....	6-3
6.2.3	Hydraulic circuit diagram: Entire hydraulic system HR70C-9	6-4
6.2.4	Hydraulic circuit diagram: Entire hydraulic system HR110C-9/HR120C-9/HR140C-9	6-5
•	Chapter 7: Drum drive and rear axle	
7.1	Drum and rear axle.....	7-2
7.1.1	Technical specifications drum.....	7-2



7.1.2	Technical specifications rear axle	7- 2
7.1.3	Overview: Drum	7- 3
7.1.4	Overview Drive Hydraulics Drum HR70C-9 DIR110C-9 DIR120C-9 DIR140C-9 Á.....	7- 4
7.1.5	Overview Drive Hydraulics Rear Axle HR70C-9 DIR110C-9 DIR120C-9 DIR140C-9 Á.....	7- 5
7.1.6	HR70C-9: Drive unit - Sequence of functions	7- 6
7.1.7	HR110C-9 DIR120C-9 DIR140C-9: Drive unit - Sequence of functions..... È.....	7- 7
7.1.8	Trouble shooting: What to do if the compaction roller does not start	7- 8
7.1.9	Speeds, hydraulic measuring and adjustment values for compaction rollers.....	7-10
7.1.10	Overview: Adjustments at the oil pressure pump of the drum drive	7-10
7.1.11	Overview: Adjustments at the oil pressure pump of the drum drive.....	7-11
7.2	Installing & dismantling the drum.....	
7.2.1	Preparing the drum for repair work.....	7-13
7.2.1.1	Overview Drum.....	7-14
7.2.2	Removing the drum	7-17
7.2.3	Dismantling the drum.....	7-18
7.2.4	Removing the bearing	7-20
7.2.5	Installing the bearing	7-21
7.2.6	Assembling the drum	7-23
7.2.7	Installing the drum	7-27

• **Chapter 8: Drive unit of the vibration system**

8.1 Vibration system	8- 2
8.1.1 Technical specifications	8- 2
8.1.2 Overview: Vibration system	8- 3
8.1.3 Overview: Vibration hydraulics	8- 4
8.1.4 Sequence of function - Vibration mode.....	8- 5
8.1.5 Trouble shooting: What to do if the vibration does not start	8- 6
8.2 Engine speeds, hydraulic measuring and default values	8- 7
8.2.1 Overview: Measuring points of the vibration hydraulics and required operating conditions	8- 8
8.2.2 Overview: Adjustments at the oil pressure pump (vibration)	8- 9
8.3 Using a sirometer	8-10

• **Chapter 9: Electrical system**

9.1 Electrical system	9- 2
9.1.1 Maintenance work referring to the electrical system	9- 2
9.1.2 Overview: Electrical system HR70C-9	9- 3
9.1.3 Overview: Electrical system HR110C-9HR120C-9HR140C-9.....	9- 4
9.1.4 Printed circuit board, fuses and relays	9- 5

Electric circuit diagrams	9-10
--	-------------

• Chapter 10: Steering system & Articulated pendulum joint	
10.1 Steering system and articulated pendulum joint	10-2
10.2 Steering system.....	10-2
10.2.1 Technical specifications	10-2
10.2.2 Overview: Steering hydraulics and components	10-3
10.3 Articulated pendulum joint	10-4
10.3.1 Installing and dismantling the articulated pendulum joint	10-5
• Kapitel 11: Towing the compaction roller	
11.1 Towing the compaction roller.....	11- 2
11.1.1 Safety instructions referring to towing the compaction roller	11- 2
11.1.2 Precautionary measures to be taken prior to towing	11- 3
11.1.3 Carrying out the towing process	11- 4
11.1.4 After the towing process	11- 5

Chapter 1

Machine designation, manufacturer, serial number and measuring units

Contents

This chapter provides you with information about:

- the machine type, the manufacturer and
- the serial number & the type plate
- measuring units and conversion tables