




Workshop Manual

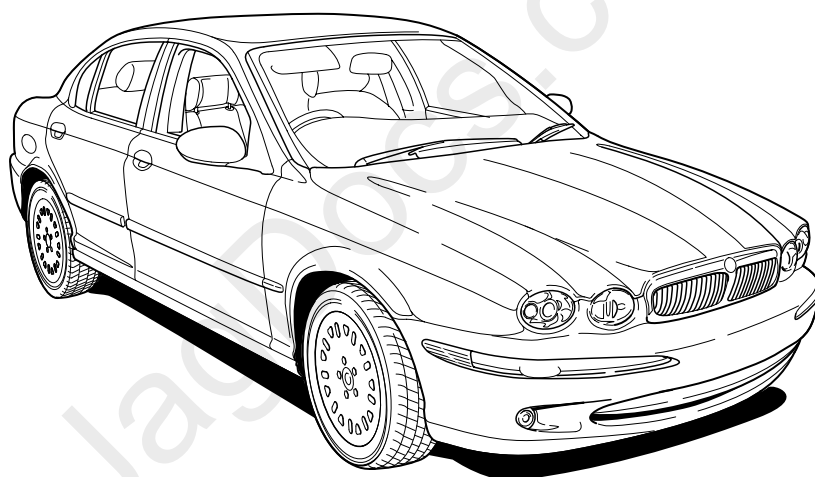

X-TYPE

Sedan and Estate (Wagon)

2.0 L, 2.5 L and 3.0 L Gasoline;

2.0 L and 2.2 L, Diesel

2001 to 2009

www.JagDocs.com

TABLE OF CONTENTS

1: General Information

100: Service Information

100-00: General Information

- Description and Operation
 - About This Manual
 - Application and Use of Specifications
 - General Service Information
 - Health and Safety Precautions
 - How To Use This Manual
 - Important Safety Instructions
 - Road/Roller Testing
 - Solvents, Sealants and Adhesives
 - Standard Workshop Practices

100-01: Identification Codes

- Description and Operation
 - Identification Codes

100-02: Jacking and Lifting

- Description and Operation
 - Jacking
 - Lifting

100-04: Noise, Vibration and Harshness

- Description and Operation
 - Noise, Vibration and Harshness (NVH)
- Diagnosis and Testing
 - Noise, Vibration and Harshness (NVH)
- General Procedures
 - Exhaust System Neutralizing

2: Chassis

204: Suspension

204-00: Suspension System - General Information

Specification

Description and Operation

Wheel Alignment Angles

Diagnosis and Testing

Suspension System

General Procedures

Front Toe Adjustment (57.65.01)

Rear Toe Adjustment (57.65.08)

Wheel Bearing Inspection

204-01: Front Suspension

Specification

Description and Operation

Front Suspension

Diagnosis and Testing

Front Suspension

Removal and Installation

Lower Arm (60.35.02)

Shock Absorber and Spring Assembly (60.30.02)

Front Stabilizer Bar (60.10.01)

Front Stabilizer Bar Bushing (60.10.04)

Front Wheel Bearing and Wheel Hub (60.25.03)

Wheel Knuckle (60.25.23)

Disassembly and Assembly

Shock Absorber and Spring Assembly (60.30.21)

204-02: Rear Suspension

Specification

Description and Operation

Rear Suspension

Diagnosis and Testing

Rear Suspension

Removal and Installation

Damper

Front Lower Arm (64.35.51) - 4-Door

Front Lower Arm (64.35.51) - Wagon

Rear Lower Arm (64.35.52)

Spring (64.20.01)

Rear Stabilizer Bar (64.35.08)

Rear Stabilizer Bar Link (64.35.24)

Upper Arm (64.25.31)

Wheel Hub (64.15.14)

Wheel Knuckle (64.15.22)

Wheel Knuckle Front Bushing (64.15.28)

Wheel Knuckle Rear Bushing (64.15.30)

204-04: Wheels and Tires

Specification

Description and Operation

Safety Precautions

Wheels and Tires

Diagnosis and Testing

Wheels and Tires

Removal and Installation

Tire Low Pressure Sensor - VIN Range: J28493->V99999

Tire Pressure Monitoring System (TPMS) Front Antenna - VIN Range: J28493->V99999

Tire Pressure Monitoring System (TPMS) Main Antenna - VIN Range: J28493->V99999

Tire Pressure Monitoring System (TPMS) Module - VIN Range: J28493->V99999

Tire Pressure Monitoring System (TPMS) Rear Antenna - VIN Range: J28493->V99999

Wheel and Tire (74.20.05)

205: Driveline

205-00: Driveline System - General Information

Description and Operation

Driveline System

Diagnosis and Testing
Driveline System

205-01: Driveshaft

Specification
Description and Operation
 Driveshaft
Diagnosis and Testing
 Driveshaft
General Procedures
 Driveshaft Runout and Balancing
Removal and Installation
 Driveshaft (47.15.01)

205-02: Rear Drive Axle/Differential

Specification
Description and Operation
 Rear Drive Axle and Differential
Diagnosis and Testing
 Rear Drive Axle and Differential
In-Vehicle Repair
 Axle Shaft Seal (51.20.04) (51.20.36)
 Drive Pinion Flange
 Drive Pinion Seal (51.20.01)
Removal and Installation
 Axle Assembly (51.25.13)

205-04: Front Drive Halfshafts

Specification
Description and Operation
 Front Drive Halfshafts
Diagnosis and Testing
 Front Drive Halfshafts
Removal and Installation
 Front Halfshaft LH (47.10.15)
 Front Halfshaft RH (47.10.16) - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 – AJ27

Front Halfshaft RH (47.10.16) - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi
(110kW/150PS) - Puma
Inner Constant Velocity (CV) Joint Boot (47.10.18)
Intermediate Shaft
Outer Constant Velocity (CV) Joint Boot (47.10.19)

205-05: Rear Drive Halfshafts

Specification

Description and Operation

Rear Drive Halfshafts

Diagnosis and Testing

Rear Drive Halfshafts

Removal and Installation

Rear Halfshaft (47.10.13)

Outer Constant Velocity (CV) Joint Boot (47.10.32)

206: Brake System

206-00: Brake System - General Information

Specification

Description and Operation

Brake System

Diagnosis and Testing

Brake System

General Procedures

Brake Disc Runout Check

Brake System Bleeding (70.25.03)

206-03: Front Disc Brake

Specification

Description and Operation

Front Disc Brake

Diagnosis and Testing

Front Disc Brake

Removal and Installation

Brake Caliper (70.55.02)

Brake Disc (70.10.10)

Brake Pads (70.40.02)

206-04: Rear Disc Brake

Specification

Description and Operation

Rear Disc Brake

Diagnosis and Testing

Rear Disc Brake

Removal and Installation

Brake Caliper (70.55.03) (70.55.25)

Brake Disc (70.10.11)

Brake Disc Shield (70.10.19)

Brake Pads (70.40.03)

206-05: Parking Brake and Actuation

Specification

Description and Operation

Parking Brake

Diagnosis and Testing

Parking Brake

General Procedures

Removal and Installation

Parking Brake Cable (70.35.29) - Vehicles With: Manually Adjusted Parking Brake

Parking Brake Cable (70.35.29) - Vehicles With: Self-Adjusting Parking Brake

Parking Brake Control (70.35.08) - Vehicles With: Manually Adjusted Parking Brake

Parking Brake Control (70.35.08) - Vehicles With: Self-Adjusting Parking Brake

206-06: Hydraulic Brake Actuation

Specification

Description and Operation

Hydraulic Brake Actuation

Diagnosis and Testing

Hydraulic Brake Actuation

Removal and Installation

Brake Fluid Reservoir (70.30.16)

Brake Master Cylinder (70.30.08)

Brake Pedal and Bracket (70.35.03)

Brake Pedal Cross-Shaft

206-07: Power Brake Actuation

Specification

Description and Operation

Brake Booster

Diagnosis and Testing

Power Brake System

Removal and Installation

Brake Booster (70.50.17) - LHD AWD/LHD FWD

Brake Booster (70.50.17) - RHD AWD/RHD FWD

Brake Vacuum Pump - 2.0L NA V6 - AJV6

Brake Vacuum Pump - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS)

– Puma

206-09: Anti-Lock Control - Stability Assist

Specification

Description and Operation

Anti-Lock Control - Stability Assist

Diagnosis and Testing

Anti-Lock Control - Stability Assist - VIN Range: C00344->J12991

Anti-Lock Control - Stability Assist - VIN Range: J12992->V99999

Removal and Installation

Anti-Lock Brake System (ABS) Module (70.60.02) - VIN Range: C00001->J12991

Front Wheel Speed Sensor (70.60.03)

Hydraulic Control Unit (HCU) (70.60.18) (70.60.19) - VIN Range: C00001->J12991

Hydraulic Control Unit (HCU) (70.60.18) (70.60.19) - VIN Range: J12992->V99999

Rear Wheel Speed Sensor (70.60.04)

Stability Assist Module

Steering Wheel Rotation Sensor (86.56.58)

Yaw Rate Sensor (86.56.57) - 2.0L Duratorq-TDCi/2.0L NA V6 - AJV6/2.5L NA V6 –
AJV6/3.0L NA V6 - AJ27

Yaw Rate Sensor (86.56.57) - 2.2L Duratorq-TDCi (110kW/150PS) – Puma

211: Steering System

211-00: Steering System - General Information

Specification

Description and Operation

Steering System

Diagnosis and Testing

Steering System

General Procedures

Power Steering System Filling

Power Steering System Flushing (57.15.08)

211-02: Power Steering

Specification

Description and Operation

Power Steering

Diagnosis and Testing

Power Steering

General Procedures

Start Up Procedure After Power Steering Pump/Gear Overhaul

Removal and Installation

Power Steering Control Valve Actuator (57.10.32) - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Power Steering Fluid Cooler (57.15.11) - 2.0L Duratorq-TDCi

Power Steering Fluid Cooler (57.15.11) - 2.2L Duratorq-TDCi (110kW/150PS) – Puma

Power Steering Fluid Reservoir (57.15.08)

Power Steering Pump (57.20.14) - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Power Steering Pump (57.20.14) - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Steering Gear (57.10.01) - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Steering Gear (57.10.01) - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 – AJ27

211-03: Steering Linkage

Specification

Description and Operation

Steering Linkage

Diagnosis and Testing

Steering Linkage

Removal and Installation

Steering Gear Boot (57.10.29)

Tie Rod End (57.55.02)

211-04: Steering Column

Specification

Description and Operation

Steering Column

Diagnosis and Testing

Steering Column

Removal and Installation

Ignition Switch Lock Cylinder (57.40.29)

Steering Column (57.40.01)

Steering Column Coupling

Steering Wheel (57.60.01)

211-05: Steering Column Switches

Description and Operation

Steering Column Switches

Diagnosis and Testing

Steering Column Switches

Removal and Installation

Steering Column Multifunction Switch LH (86.65.78)

Steering Column Multifunction Switch RH (86.65.41)

3: Powertrain

303: Engine

303-00: Engine System - General Information

Specification

Description and Operation

Engine

Diagnosis and Testing

Engine

General Procedures

Bearing Inspection

Camshaft Bearing Journal Clearance

Camshaft Bearing Journal Diameter

Camshaft End Play

Camshaft Lobe Lift

Camshaft Surface Inspection

Connecting Rod Cleaning

Connecting Rod Large End Bore

Crankshaft End Play

Crankshaft Main Bearing Journal Clearance

Crankshaft Main Bearing Journal Diameter

Cylinder Block Distortion

Cylinder Bore Out-of-Round

Cylinder Head Distortion

Exhaust Manifold Cleaning and Inspection

Flywheel Inspection

Piston Diameter

Piston Inspection

Piston Pin Diameter

Piston Pin to Bore Diameter

Piston Ring End Gap

Piston Ring-to-Groove Clearance

Valve Seat Inspection

Valve Spring Free Length

Valve Stem Diameter

Leakage Test Using Smoke Test Equipment

303-01A: Engine - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Specification

Description and Operation

Engine

Diagnosis and Testing

Engine

General Procedures

Valve Clearance Adjustment (12.29.48)

Valve Clearance Check (12.29.47)

In-Vehicle Repair

Camshafts LH (12.13.19)

Crankshaft Front Seal (12.21.14)

Crankshaft Pulley (12.21.09)

Crankshaft Rear Seal (12.21.20)

Cylinder Head LH (12.29.02)

Engine Front Cover (12.65.01)

Engine Front Mount (12.45.01)

Exhaust Manifold LH (30.15.55)

Flexplate (12.53.13)

Exhaust Manifold RH (30.15.56)

Flywheel (12.53.07)

Intake Manifold (30.15.01)

Lower Intake Manifold (30.15.61)

Oil Cooler (12.60.68)

Oil Pan (12.60.44)

Oil Pressure Sender

Oil Pump (12.60.26)

Timing Drive Components (12.65.13)

Valve Cover LH (12.29.43)

Valve Cover RH (12.29.44)

Removal

Engine (12.41.01) - Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transaxle - MMT6

Engine (12.41.01) - Vehicles With: 5-Speed Automatic Transaxle - JATCO/6-Speed Automatic Transaxle - AWF21

Disassembly

Engine

Disassembly and Assembly of Subassemblies

Cylinder Head (12.29.22)

Piston (12.17.02)

Assembly

Engine

Installation

Engine (12.41.01) - Vehicles With: 5-Speed Manual Transmission - MT75/6-Speed Manual Transaxle - MMT6

Engine (12.41.01) - Vehicles With: 5-Speed Automatic Transaxle - JATCO/6-Speed Automatic Transaxle - AWF21

303-01B: Engine - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Specification

Description and Operation

Engine

In-Vehicle Repair

Crankshaft Front Seal (12.21.14)

Crankshaft Rear Seal (12.21.20)

Engine Front Cover (12.65.01)

Engine Front Mount (12.45.01)

Flexplate (12.53.13)

Flywheel (12.53.07)

Intake Manifold (30.15.01)

Oil Pan (12.60.44)

Timing Chain

Valve Cover

Removal

Engine (12.41.01) - 2.0L Duratorq-TDCi

Engine (12.41.01) - 2.2L Duratorq-TDCi (110kW/150PS) - Puma

Disassembly

Engine

Assembly

Engine

Installation

Engine (12.41.01) - 2.0L Duratorq-TDCi

Engine (12.41.01) - 2.2L Duratorq-TDCi (110kW/150PS) – Puma

303-03A: Engine Cooling - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Specification

Description and Operation

Engine Cooling

Diagnosis and Testing

Engine Cooling

General Procedures

Cooling System Backflushing

Cooling System Draining, Filling and Bleeding

Cooling System Flushing

Removal and Installation

Block Heater (86.62.18)

Coolant Expansion Tank (26.15.01)

Cooling Fan Module (26.25.38)

Cooling Fan Motor (26.25.24)

Cooling Fan Motor and Shroud (26.25.25)

Cooling Module (26.40.16)

Radiator (26.40.01)

Thermostat (26.45.07)

Water Pump (26.50.01)

Water Pump Housing (26.50.07)

303-03B: Engine Cooling - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) –

Puma

Specification

Description and Operation

Engine Cooling

General Procedures

Cooling System Draining, Filling and Bleeding

Cooling System Draining and Vacuum Filling

Removal and Installation

Cooling Fan Motor and Shroud (26.25.25)

Cooling Module (26.40.16)

Radiator (26.40.01)

Water Pump (26.50.01)

303-04A: Fuel Charging and Controls - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Specification

Description and Operation

Fuel Charging and Controls

Diagnosis and Testing

Fuel Charging and Controls - 2.0L NA V6 - AJV6

Fuel Charging and Controls - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27, VIN Range:
E96603->J28492

Fuel Charging and Controls - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27, VIN Range:
J28493->V99999

Removal and Installation

Fuel Charging Wiring Harness (86.70.22)

Fuel Injection Supply Manifold (19.60.13)

Fuel Injectors (18.10.02)

Fuel Pulse Damper (18.30.98) - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Throttle Body (19.70.04)

303-04B: Fuel Charging and Controls - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Specification

Description and Operation

Fuel Charging and Controls

Diagnosis and Testing

Fuel Charging and Controls

General Procedures

Fuel Injection Component Cleaning

Removal and Installation

Fuel Injection Pump

Fuel Injection Supply Manifold (19.60.13)

Fuel Injector (18.10.01)

Fuel Metering Valve

Fuel Return Line Venturi

303-04C: Fuel Charging and Controls - Turbocharger

Specification

Description and Operation

Turbocharger

Diagnosis and Testing

Turbocharger

Removal and Installation

Turbocharger

303-05: Accessory Drive

Specification

Description and Operation

Accessory Drive

Diagnosis and Testing

Accessory Drive

Removal and Installation

Accessory Drive Belt (12.10.40) - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Accessory Drive Belt (12.10.40) - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Accessory Drive Belt Tensioner (12.10.41) - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Accessory Drive Belt Tensioner (12.10.41) - 2.0L NA V6 - AJV6/2.5L NA V6 – AJV6/3.0L NA V6 - AJ27

Power Steering Pump Belt - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Power Steering Pump Belt Tensioner - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Water Pump Belt (12.10.44) - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 – AJ27

Water Pump Belt Tensioner (12.10.45) - 2.0L NA V6 - AJV6/2.5L NA V6 – AJV6/3.0L NA V6 - AJ27

303-06: Starting System

Specification

Description and Operation

Starting System

Diagnosis and Testing

Starting System - 2.0L NA V6 - AJV6

Starting System - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Removal and Installation

Starter Motor (86.60.01) - 2.0L Duratorq-TDCi

Starter Motor (86.60.01) - 2.2L Duratorq-TDCi (110kW/150PS) - Puma

Starter Motor (86.60.01) - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 –
AJ27

303-07A: Engine Ignition - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Specification

Description and Operation

Engine Ignition

Diagnosis and Testing

Engine Ignition - 2.0L NA V6 - AJV6

Engine Ignition - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Removal and Installation

Ignition Coil-On-Plug LH (18.20.44)

Ignition Coil-On-Plug RH (18.20.43)

303-07B: Glow Plug System

Specification

Description and Operation

Glow Plug System

Diagnosis and Testing

Glow Plug System

Removal and Installation

Glow Plugs

303-08: Engine Emission Control - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Specification

Description and Operation

Engine Emission Control

Diagnosis and Testing

Engine Emission Control

Removal and Installation

Exhaust Gas Recirculation (EGR) Cooler

Exhaust Gas Recirculation (EGR) Cooler to EGR Valve Tube

Exhaust Gas Recirculation (EGR) Valve (17.45.01)

303-12A: Intake Air Distribution and Filtering - 2.0L NA V6 - AJV6/2.5L NA V6 – AJV6/3.0L NA V6 - AJ27

Description and Operation

Intake Air Distribution and Filtering

Diagnosis and Testing

Intake Air Distribution and Filtering

Removal and Installation

Air Cleaner (19.10.05)

Air Cleaner Element (19.10.08)

Air Cleaner Outlet Pipe (19.10.31)

303-12B: Intake Air Distribution and Filtering - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Specification

Description and Operation

Intake Air Distribution and Filtering

Diagnosis and Testing

Intake Air Distribution and Filtering

Removal and Installation

Air Cleaner (19.10.05)

Air Cleaner Element (19.10.08)

Air Cleaner Outlet Pipe (19.10.31)

Charge Air Cooler - 2.0L Duratorq-TDCi

Charge Air Cooler - 2.2L Duratorq-TDCi (110kW/150PS) – Puma

303-13: Evaporative Emissions

Specification

Description and Operation

Evaporative Emissions

Diagnosis and Testing

Evaporative Emissions - 2.0L NA V6 - AJV6

Evaporative Emissions - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Removal and Installation

Evaporative Emission Canister (17.15.13) - 2.0L NA V6 - AJV6

Evaporative Emission Canister (17.15.13) - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Evaporative Emission Canister Purge Valve (17.15.30)

303-14A: Electronic Engine Controls - 2.0L NA V6 - AJV6/2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Specification

Description and Operation

Electronic Engine Controls

Diagnosis and Testing

Electronic Engine Controls - 2.0L NA V6 - AJV6

Electronic Engine Controls - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27, VIN Range:
E96603->J28492

Electronic Engine Controls - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27, VIN Range:
J28493->V99999

General Procedures

Powertrain Control Module (PCM) Long Drive Cycle Self-Test

Powertrain Control Module (PCM) Short Drive Cycle Self-Test

Removal and Installation

Camshaft Position (CMP) Sensor (18.30.63)

Catalyst Monitor Sensor LH (18.30.81)

Catalyst Monitor Sensor RH (18.30.80)

Crankshaft Position (CKP) Sensor (18.30.12)

Engine Control Module (ECM) (18.30.01)

Fuel Temperature Sensor (18.30.99) - 2.5L NA V6 - AJV6/3.0L NA V6 - AJ27

Heated Oxygen Sensor (HO2S) LH (18.30.79)

Heated Oxygen Sensor (HO2S) RH (18.30.78)

Knock Sensor (KS) (18.30.69)

Mass Air Flow (MAF) Sensor (18.30.15)

Oil Temperature Sensor (18.31.01)

Throttle Position (TP) Sensor (18.30.17)

Variable Camshaft Timing (VCT) Oil Control Solenoid (18.30.90)

303-14B: Electronic Engine Controls - 2.0L Duratorq-TDCi/2.2L Duratorq-TDCi (110kW/150PS) - Puma

Specification

Description and Operation

Electronic Engine Controls

Diagnosis and Testing

Electronic Engine Controls

Removal and Installation

Camshaft Position (CMP) Sensor (18.30.63)

Catalytic Converter Temperature Sensor

Crankshaft Position (CKP) Sensor (18.30.12)

Cylinder Head Temperature (CHT) Sensor (18.30.97)

Diesel Particulate Filter (DPF) Temperature Sensor

Engine Control Module (ECM) (18.30.01)

Engine Oil Pressure (EOP) Sensor

Fuel Temperature Sensor (18.30.99)

Knock Sensor (KS) (18.30.69)

Manifold Absolute Pressure and Temperature (MAPT) Sensor

Manifold Absolute Pressure (MAP) Sensor (18.30.86)

Mass Air Flow (MAF) Sensor (18.30.15)

307: Automatic Transmission/Transaxle

307-01A: Automatic Transmission/Transaxle - Vehicles With: 5-Speed Automatic Transaxle - JATCO

Specification

Description and Operation

Transmission Description - Vehicles With: 5-Speed Automatic Transaxle - JATCO

Diagnosis and Testing

Diagnostic Strategy - Vehicles With: 5-Speed Automatic Transaxle - JATCO

General Procedures

Transmission Fluid Drain and Refill (44.24.02)

Transmission Fluid Level Check

Transmission Range (TR) Sensor Adjustment (44.15.37)

In-Vehicle Repair

Halfshaft Seal LH (37.23.10)

Halfshaft Seal RH

Main Control Valve Body (44.40.01)

Shift Solenoids (SS) (44.15.50)

Transaxle Support Insulator (37.16.42)