

Jlg 3394rt & 4394rt Operation And Safety Manual

Full download: <http://manualplace.com/download/jlg-3394rt-4394rt-operation-and-safety-manual/>



An Oshkosh Corporation Company

Operation and Safety Manual

Original Instructions, keep this manual with the machine at all times.

Model
3394RT
4394RT



P/N - 3121132

May 16, 2014

This is the cut pages sample. Download all 104 page(s) at: ManualPlace.com

FOREWORD

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS



This is the Safety Alert Symbol. It is used to alert you to the potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

INDICATES AN IMMINENTLY HAZARDOUS SITUATION. IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE A RED BACKGROUND.

⚠ WARNING

INDICATES A POTENTIALITY HAZARDOUS SITUATION. IF NOT AVOIDED, COULD RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE AN ORANGE BACKGROUND.

⚠ CAUTION

INDICATES A POTENTIALITY HAZARDOUS SITUATION. IF NOT AVOIDED, MAY RESULT IN MINOR OR MODERATE INJURY. IT MAY ALSO ALERT AGAINST UNSAFE PRACTICES. THIS DECAL WILL HAVE A YELLOW BACKGROUND.

NOTICE

INDICATES INFORMATION OR A COMPANY POLICY THAT RELATES DIRECTLY OR INDIRECTLY TO THE SAFETY OF PERSONNEL OR PROTECTION OF PROPERTY.

⚠ WARNING

THIS PRODUCT MUST COMPLY WITH ALL SAFETY RELATED BULLETINS. CONTACT JLG INDUSTRIES, INC. OR THE LOCAL AUTHORIZED JLG REPRESENTATIVE FOR INFORMATION REGARDING SAFETY-RELATED BULLETINS WHICH MAY HAVE BEEN ISSUED FOR THIS PRODUCT.

NOTICE

JLG INDUSTRIES, INC. SENDS SAFETY RELATED BULLETINS TO THE OWNER OF RECORD OF THIS MACHINE. CONTACT JLG INDUSTRIES, INC. TO ENSURE THAT THE CURRENT OWNER RECORDS ARE UPDATED AND ACCURATE.

NOTICE

JLG INDUSTRIES, INC. MUST BE NOTIFIED IMMEDIATELY IN ALL INSTANCES WHERE JLG PRODUCTS HAVE BEEN INVOLVED IN AN ACCIDENT INVOLVING BODILY INJURY OR DEATH OF PERSONNEL OR WHEN SUBSTANTIAL DAMAGE HAS OCCURRED TO PERSONAL PROPERTY OR THE JLG PRODUCT.

For:

- Accident Reporting
- Product Safety Publications
- Current Owner Updates
- Questions Regarding Product Safety
- Standards and Regulations Compliance Information
- Questions Regarding Special Product Applications
- Questions Regarding Product Modifications

Contact:

Product Safety and Reliability Department
JLG Industries, Inc.
13224 Fountainhead Plaza
Hagerstown, MD 21742

or Your Local JLG Office
(See addresses on manual rear cover)

In USA:

Toll Free: 877-JLG-SAFE (877-554-7233)

Outside USA:

Phone: 240-420-2661
E-mail: ProductSafety@JLG.com

REVISION LOG

Original Issue	- April 11, 2002
Revised	- July 12, 2002
Revised	- July 18, 2003
Revised	- February 18, 2004
Revised	- August 6, 2004
Revised	- December 21, 2004
Revised	- July 15, 2005
Revised	- February 28, 2006
Revised	- March 29, 2007
Revised	- May 22, 2008
Revised	- September 30, 2008
Revised	- November 30, 2010
Revised	- May 16, 2014

SECTION - PARAGRAPH, SUBJECT	PAGE
SECTION - 1 - SAFETY PRECAUTIONS	
1.1 GENERAL.....	1-1
1.2 PRE-OPERATION.....	1-2
Operator Training and Knowledge.....	1-2
Workplace Inspection.....	1-2
Machine Inspection.....	1-3
1.3 OPERATION.....	1-4
General.....	1-4
Trip and Fall Hazards.....	1-5
Electrocution Hazards.....	1-6
Tipping Hazards.....	1-7
Crushing and Collision Hazards.....	1-8
1.4 TOWING, LIFTING, AND HAULING.....	1-9
1.5 MAINTENANCE.....	1-10
General.....	1-10
Maintenance Hazards.....	1-10
Battery Hazards.....	1-11
SECTION - 2 - USER RESPONSIBILITIES, MACHINE PREPARATION AND INSPECTION	
2.1 PERSONNEL TRAINING.....	2-1
Operator Training.....	2-1
Training Supervision.....	2-1
Operator Responsibility.....	2-1
2.2 PREPARATION, INSPECTION, AND	

SECTION - PARAGRAPH, SUBJECT	PAGE
MAINTENANCE.....	2-2
Pre-Start Inspection.....	2-4
GENERAL.....	2-6
Function Check.....	2-8
2.3 LOCKOUT CYLINDER TEST.....	2-9
2.4 DUAL FUEL SYSTEM (IF EQUIPPED).....	2-10
SECTION - 3 - USER RESPONSIBILITIES AND MACHINE CONTROL	
3.1 GENERAL.....	3-1
3.2 OPERATING CHARACTERISTICS AND LIMITATIONS.....	3-1
General.....	3-1
Placards.....	3-1
Capacities.....	3-1
Stability.....	3-1
3.3 CONTROLS AND INDICATORS.....	3-2
Ground Control Station.....	3-3
Platform Control Station.....	3-6
Indicator Control Panel.....	3-10
SECTION - 4 - MACHINE OPERATION	
4.1 DESCRIPTION.....	4-1
4.2 ENGINE OPERATION.....	4-1
Platform/Ground Select Switch.....	4-1

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE	SECTION - PARAGRAPH, SUBJECT	PAGE
Emergency Stop Switch.....	4-1	Lifting	4-11
Speed Switch.....	4-1	4.13 TOWING	4-11
Starting Procedure	4-2		
4.3 OPERATING CHARACTERISTICS.....	4-3	SECTION - 5 - EMERGENCY PROCEDURES	
Leveling Jacks	4-3	5.1 GENERAL	5-1
Auto Leveling	4-3	5.2 EMERGENCY TOWING PROCEDURES	5-1
Manual Level Adjustment (Trim)	4-4	5.3 EMERGENCY CONTROLS AND THEIR LOCATIONS	5-2
Power Deck	4-4	Emergency Stop Switch	5-2
Auxiliary Power.....	4-5	Ground Control Station	5-2
Generator	4-5	Manual Descent	5-2
Lift	4-5	5.4 EMERGENCY OPERATION.....	5-3
Drive.....	4-5	Use of Ground Controls	5-3
4.4 DUAL FUEL SYSTEM.....	4-5	Operator Unable to Control Machine	5-3
4.5 RAISING AND LOWERING PLATFORM	4-6	Platform Caught Overhead	5-3
Raising	4-6	Righting of Tipped Machine	5-3
Lowering.....	4-7	Post-Incident Inspection	5-3
4.6 PLATFORM EXTENSION	4-7	5.5 INCIDENT NOTIFICATION	5-4
4.7 STEERING.....	4-7		
4.8 TRAVELING	4-8	SECTION - 6 - GENERAL SPECIFICATIONS AND OPERATOR MAINTENANCE	
Traveling Forward	4-8	6.1 INTRODUCTION	6-1
Traveling in Reverse	4-8	6.2 SUPPLEMENTAL INFORMATION.....	6-1
4.9 PARKING AND STOWING.....	4-10	6.3 OPERATING SPECIFICATIONS	6-2
4.10 PLATFORM LOADING	4-10	Dimensional Data.....	6-3
4.11 SAFETY PROP.....	4-11	Capacities	6-3
4.12 TIE DOWN/LIFT LUGS	4-11		
Tie Down.....	4-11		

SECTION - PARAGRAPH, SUBJECT	PAGE
Tires	6-4
Engines	6-5
Critical Stability Weights.....	6-7
Lubrication	6-7
6.4 OPERATOR MAINTENANCE	6-16
Fuel Tank	6-16
Drive Hub	6-17
Hydraulic Oil	6-17
Sliding Wear Pads	6-17
Oil Change w/Filter - Ford	6-18
Oil Change w/Filter - Deutz	6-18
Oil Change w/Filter - Deutz D 2.9 L4 - T4F ...	6-19
Oil Change w/Filter - GM.....	6-19
Fuel Filter - Ford	6-20
Fuel Filter - Deutz	6-20
Fuel Filter - Deutz D 2.9 L4 - T4F.....	6-21
Fuel Filter (Gasoline) - GM	6-21
Air Filter	6-21
Electronic Pressure Regulator (LPG only)	6-21
Fuel Filter (Propane) - GM.....	6-22
6.5 DRAINING OIL BUILD UP FROM THE PROPANE REGULATOR.....	6-22
6.6 PROPANE FUEL FILTER REPLACEMENT.....	6-24
Removal	6-25
Installation.....	6-25

SECTION - PARAGRAPH, SUBJECT	PAGE
6.7 PROPANE FUEL SYSTEM PRESSURE RELIEF	6-25
6.8 PROPANE FUEL SYSTEM LEAK TEST	6-26
6.9 TIRES AND WHEELS	6-26
Tire Damage.....	6-26
Tire Replacement.....	6-27
Wheel Replacement	6-27
Wheel Installation	6-27

SECTION - 7 - INSPECTION AND REPAIR LOG

LIST OF FIGURES

2-1. Walk Around Inspection Diagram	2-5
2-2. Walk Around Inspection Points - Sheet 1 of 2 ...	2-6
2-3. Walk Around Inspection Points - Sheet 2 of 2 ...	2-7
3-1. Ground Control Station	3-2
3-2. Platform Control Station	3-5
3-3. Indicator Panel	3-9
3-4. Decal Location - Sheet 1 of 2 (ANSI).....	3-11
3-5. Decal Location - Sheet 2 of 2 (ANSI).....	3-12
3-6. Decal Installation - Sheet 1 of 2 (CE/AUS)	3-16
3-7. Decal Installation - Sheet 2 of 2 (CE/AUS)	3-17
4-1. Grade and Sideslope.....	4-9
4-2. Lifting and Tie Down Chart (Sheet 1 of 2)	4-12
4-3. Lifting and Tie Down Chart (Sheet 2 of 2)	4-13

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE
6-1. Engine Operating Temperature Specifications - Deutz - Sheet 1 of 2	6-9
6-2. Engine Operating Temperature Specifications - Deutz - Sheet 2 of 2	6-10
6-3. Engine Operating Temperature Specifications - Ford - Sheet 1 of 2	6-11
6-4. Engine Operating Temperature Specifications - Ford - Sheet 2 of 2	6-12
6-5. Engine Operating Temperature Specifications - GM - Sheet 1 of 2	6-13
6-6. Engine Operating Temperature Specifications - GM - Sheet 2 of 2	6-14
6-7. Operator Maintenance and Lubrication Diagram	6-15
6-8. Filter Lock Assembly	6-24

SECTION - PARAGRAPH, SUBJECT	PAGE
LIST OF TABLES	
1-1 Minimum Approach Distances (M.A.D.)	1-6
2-1 Inspection and Maintenance Table	2-3
2-2 Maximum Cutout Height	2-8
2-3 Tilt Cutout Settings	2-8
3-1 Decal Location Legend - ANSI	3-13
3-2 Decal Legend - CE/AUS	3-18
4-1 Platform Capacities	4-10
6-1 Operating Specifications	6-2
6-2 Dimensional Data	6-3
6-3 Capacities	6-3
6-4 Tire Specifications	6-4
6-5 Ford LRG-425 Specifications	6-5
6-6 Deutz F3M2011 Specifications	6-5
6-7 Deutz - D 2.9 - L4 - T4F Engine Specifications	6-6
6-8 GM 3.0L Specifications	6-6
6-9 Critical Stability Weights	6-7
6-10 Hydraulic Oil	6-7
6-11 Lubrication Specifications	6-8
6-12 Wheel Torque Chart	6-28
7-1 Inspection and Repair Log	7-1