




Service Manual

Models ***644B, 6K,*** ***844C, 8K,*** ***1044C, 10K***

10709790

Revised
February 18, 2005

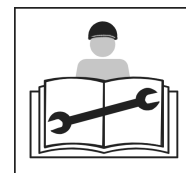

An Oshkosh Truck Corporation Company

Quick Reference

Section	No.
Safety	1
Identification and Specifications	2
General Maintenance	3
Reference Diagrams	4
Supply, Pressure, and Return Hydraulics	5
Boom and Transfer	6
Frame Tilt and Oscillation	7
Transmission	8
Brakes	9
Outriggers	10

Table of Contents

Section 1 — Safety

General	1-1
Caution, Warning, and Danger	1-1
Safety Standard	1-2
Maintenance Safety	1-2
General	1-2
Mounting and Dismounting	1-2
Before Servicing the Machine	1-2
Fuel Hazards	1-3
Engine Coolant Hazards	1-3
Hydraulic System Hazards	1-4
Electrical System Hazards	1-4
Tire and Wheels Hazards	1-5
Rollover Protective Structure (ROPS) and Falling Object Protective Structure (FOPS)	1-6
Decals and Placards	1-6
General	1-6
Cleaning Decals	1-6
Attaching Decals	1-7
Decal Locations	1-7

Section 2 — Identification and Specifications

Serial Number Locations	2-1
Machine Serial Number	2-1
Engine Serial Number, John Deere	2-2
Engine Serial Number, Cummins	2-2
Axle Serial Number	2-3
Attachment Serial Number Plate	2-3
Models 644B-37 and 6K-37	2-4
Identification	2-4
Specifications	2-5
Models 644B-42 and 6K-42	2-8
Identification	2-8
Specifications	2-9
Models 844C-42 and 8K-42	2-12
Identification	2-12
Specifications	2-13
Models 1044C-42 and 10K-42	2-16
Identification	2-16
Specifications	2-17
Models 1044C-54 and 10K-54	2-20
Identification	2-20
Specifications	2-21

Table of Contents

Engine Specifications	2-24
John Deere 4039D	2-24
John Deere 4039T	2-24
John Deere 4045T	2-24
John Deere 6068D	2-25
Cummins 4B3.9	2-25
Cummins 4BT3.9	2-25
Cummins 4BT3.9 (EPA)	2-26
Cummins 6B5.9	2-26

Section 3 — General Maintenance

General Instructions	3-1
Service Preparation Procedures	3-1
Service And Repair Procedures	3-2
Replacement Parts	3-3
General	3-3
Lubrication	3-3
General	3-3
Fluid and Lubricant Specifications	3-4
General Specifications	3-4
Engine Oil Specifications	3-4
Transmission Oil Specifications	3-5
Fuel Requirements	3-6
Grease	3-6
Hydraulic Oil	3-7
Care and Cleaning	3-7
Cleaning Exterior Surfaces	3-7
Cleaning the Cab	3-8
Cleaning Decals	3-8
Attaching Decals	3-8
Storage	3-9
Preparing the Machine for Long-Term Storage	3-9
Preparing the Machine After Long-Term Storage	3-9
Torque Specifications	3-10
General Torques for Standard Bolts, Capscrews, and Nuts	3-10
Hydraulic Fitting Torques	3-13
Jump Starting Procedures	3-15
Conversion Charts	3-17

Table of Contents

Section 4 — Reference Diagrams

Schematic, Model 644B w/ Naturally Aspirated Engine, Control Manifold Hydraulic System	Diagram 1
Schematic, Model 644B w/ Naturally Aspirated Engine, Mid-Inlet Hydraulic System	Diagram 2
Pump Unloader Valve Operation, Mid-Inlet Hydraulic System	Diagram 3
Schematic, Models 644B, 844C, 1044C-42 w/ Turbocharged Engine, Mid-Inlet Hydraulic Sys.	Diagram 4
Schematic, Model 1044C-54, Mid-Inlet Hydraulic System	Diagram 5
Electrical Diagram, Models 644B and 6K w/ Control Manifold Hydraulic System	Diagram 6
Rear Oscillation Lock System Operation, Control Manifold Hydraulic System	Diagram 7
Boom/Transfer Extend Lockout Circuit Operation, Control Manifold Hydraulic System	Diagram 8
Rear Oscillation Lock System Operation, Mid-Inlet Hydraulic System	Diagram 9
Rear Axle Stabilizer Control Valve Operation, Mid-Inlet Hydraulic System	Diagram 10
Boom/Transfer Extend Lockout Circuit Operation, Mid-Inlet Hydraulic System	Diagram 11
Electrical Diagram, ZF DW-2/EST-19 System Harness	Diagram 12
Electrical Diagram, ZF DW-3 System Harness	Diagram 13

Section 5 — Supply, Pressure, and Return Hydraulics

General	5-1
Major System Components	5-1
General Description	5-1
Hydraulic Systems	5-3
General Hydraulic Maintenance Practices	5-4
Safe Maintenance Practices	5-4
Cleanliness	5-5
Checking Hydraulic Lines	5-5
Hydraulic Reservoir	5-6
Description	5-6
Filling Hydraulic Reservoir	5-8
Reservoir Drain and Refill	5-11
Removal	5-13
Installation	5-15
Sight Gauge	5-16
Description	5-16
Removal	5-17
Installation	5-18
Suction Strainer	5-19
Description	5-19
Removal and Cleaning	5-20
Installation	5-21
Hydraulic Return Filter	5-22
Description	5-22
Checking Filter Condition	5-22
Replacing Return Filter Element	5-23
Removal	5-26
Installation	5-27

Table of Contents

Reservoir Breather	5-27
Description	5-27
Removal and Installation	5-28
Hydraulic Pressure Filter	5-28
Description	5-28
Checking Filter Element Condition	5-29
Replacing Pressure Filter Element	5-30
Removal	5-31
Installation	5-32
Hydraulic Pump	5-33
Description	5-33
Troubleshooting Pump Problems	5-34
Removal	5-35
Installation	5-40
Checking Pump Flow Rate	5-43
Multi-Spool Control Valve	5-45
Description	5-45
Removal	5-49
Installation	5-49
Overhaul	5-50
Hydraulic Control Manifold	5-64
Description	5-64
Control Valve Functions	5-67
Hydraulic Manifold Assembly Functions	5-70
Removal	5-71
Overhaul	5-72
Installation	5-76
Pump Unloader Valve	5-77
General	5-77
Removal	5-78
Overhaul	5-79
Mid-Inlet Control Valve	5-81
Description	5-81
Removal	5-85
Installation	5-86
Rear Axle Stabilizer Control Valve	5-86
Description	5-86
Removal, Rear Axle Stabilizer Control Valve	5-89
Boom Extend Lockout Valve	5-91
Description	5-91
Hydraulic Diagnostic Ports	5-91
General	5-91
Roll-Back Hose Tray	5-93
General	5-93
Removal	5-94
Installation	5-97

Table of Contents

Section 6 — Boom and Transfer

Boom and Transfer Hydraulics	6-1
General Description	6-1
Joystick Controls	6-2
General Description	6-2
Removal	6-3
Installation	6-4
Disassembly	6-5
Hydraulic Cylinders	6-9
Description	6-9
Checking Cylinder Condition	6-10
Boom Hoist Cylinder	6-11
Description	6-11
Removal	6-12
Installation	6-13
Overhaul	6-14
Front Carriage Tilt Cylinder	6-17
Description	6-17
Removal	6-18
Installation	6-19
Overhaul	6-20
Rear Carriage Tilt Cylinder	6-23
Description	6-23
Removal	6-24
Installation	6-25
Overhaul	6-26
Boom Hydraulic Control Valve (Control Manifold System)	6-28
Description	6-28
Removal	6-29
Installation	6-31
Overhaul	6-31
Selector Valve (Control Manifold System)	6-38
Description	6-38
Removal	6-39
Installation	6-40
Overhaul	6-41
Selector Valve (Mid-Inlet System)	6-43
Description	6-43
Removal	6-44
Installation	6-45
Overhaul	6-45
Troubleshooting	6-47

Table of Contents

Boom Slide Pads — General	6-48
Description	6-48
Slide Pad Inspection	6-48
Lubrication	6-50
Slide Area Surface Finish	6-50
Replacing and Shimming Boom Slide Pads — General	6-52
Quick Attach	6-54
Description	6-54
Disconnecting an Attachment	6-54
Connecting an Attachment	6-56
Removal	6-58
Installation	6-59
Boom Angle Inclinometer	6-60
Description	6-60
Replacement	6-60
2-Section Boom	6-61
Description	6-61
Shimming Procedures	6-61
Inspection Procedures	6-67
Removal	6-69
Installation	6-72
Disassembly	6-73
Assembly	6-79
Extension Cylinder	6-80
3-Section Boom	6-90
Description	6-90
Shimming Procedures	6-91
Inspection Procedures	6-97
Removal and Disassembly	6-98
Assembly and Installation	6-118
Extension Cylinder	6-139
4-Section Boom	6-145
Description	6-145
Shimming Procedures	6-146
Inspection Procedures	6-151
Boom Removal	6-153
installation	6-160
Boom Disassembly	6-161
Assembly	6-182
Extension Cylinder	6-207
Boom Extension Proximity Switch	6-213
Description	6-213
Removal	6-214
Installation	6-215
Adjustments	6-215

Table of Contents

Transfer Carriage	6-216
Description	6-216
Removal	6-217
Installation	6-223
Rollers, Bushings, and Shims	6-225
Boom Cradle	6-231
Description	6-231
Removal	6-231
Installation	6-237
Shims and Bushings	6-238
Transfer Cylinder	6-243
Description	6-243
Removal	6-244
Installation	6-245
Overhaul	6-246

Section 7 — Frame Tilt and Oscillation

Frame Tilt System	7-1
General Description	7-1
Circuit Description	7-2
Frame Tilt Control Valve	7-3
Description	7-3
Removal	7-4
Installation	7-5
Overhaul	7-6
Frame Tilt Cylinder	7-9
Description	7-9
Removal	7-10
Installation	7-11
Overhaul	7-13
Counterbalance Valve Cartridge	7-16
Frame Level Indicator	7-17
Description	7-17
Adjustment	7-17
Rear Oscillation Lock System	7-18
General Description, Models with Control Manifold Hydraulics	7-18
Theory of Operation and Circuit Logic	7-19
Testing Rear Oscillation Lock Circuit	7-23
Rear Oscillation Lock Cylinder	7-24
Description	7-24
Removal	7-25
Installation	7-26
Overhaul	7-28

Table of Contents

Oscillation Control Block	7-31
Description	7-31
Removal	7-33
Installation	7-35
Overhaul	7-36
Frame Tilt Lockout Valve	7-39
Description	7-39
Removal	7-40
Installation	7-41
Overhaul	7-41
Boom Elevation Proximity Switch	7-43
Description	7-43
Removal	7-44
Installation	7-44
Adjustment	7-45

Section 8 — Transmission

Description	8-1
ZF Transmission with DW-2 Shifter	8-1
ZF Transmission with DW-3 Shifter	8-2
Troubleshooting and Test Procedures	8-4
Troubleshooting Options	8-4
Testing ZF Transmission Electrical System	8-6
DW-2 Shifter System Tests	8-7
DW-3 Shifter System Tests	8-10
Park Brake Pressure Switch	8-17
Service Brake Pressure Switch	8-18
Rear Oscillation Lock Proximity Switch and Relay	8-20
ZF Transmission Pressure Checks	8-23

Section 9 — Brakes

Service Brakes	9-1
Description, Models with Control Manifold Hydraulics	9-1
Brake Testing and Bleeding	9-2
Service Brake Pedal and Valve	9-6
Adjustment	9-6
Removal	9-9
Disassembly	9-11
Reassembly	9-12
Service Brake Adjustment Procedures	9-13
Service Brake Pressure Switch Replacement	9-16

Table of Contents

Accumulator	9-18
General	9-18
Precautions	9-19
Pre-Charging Accumulator	9-19
Checking Pre-charge	9-21
Removal	9-23
Overhaul	9-25
Installation	9-27
Park Brake	9-28
Inspection	9-29
Park Brake Pressure Switch	9-30
Installation, Park Brake Pressure Switch	9-32
Valve Removal, Park Brake	9-33
Valve Installation, Park Brake	9-35
Cylinder Removal	9-36
Cylinder Installation	9-39
Adjustment, Park Brake	9-40
Drum Brake Repair/Replacement	9-42

Section 10 — Outriggers

Outriggers	10-1
General	10-1
Removal	10-2
Installation	10-3
Outrigger Cylinders	10-5
General	10-5
Removal	10-6
Installation	10-7
Overhaul	10-8
Differential Pressure Switch	10-10
Description	10-10
Boom Extension Proximity Switch	10-11
Description	10-11
Removal	10-12
Installation	10-13
Adjustments	10-13
Outrigger Control Valves	10-14
Description	10-14
Removal	10-15
Installation	10-16

List of Figures

Fig. 1-1: Decals and Placards	1-8
Fig. 1-2: Instrument Panel Decals	1-8
Fig. 1-3: Control Decals	1-9
Fig. 1-4: Disconnect Battery Decal and Slow Moving Vehicle Sign.	1-9
Fig. 1-5: Steer Selector Plate	1-10
Fig. 1-6: Hydraulic Reservoir/Fuel Tank Decals	1-10
Fig. 1-7: Fork Carriage Decals	1-10
Fig. 2-1: Machine Serial Number Plate	2-1
Fig. 2-2: Stamped Machine Serial Number	2-1
Fig. 2-3: Engine Serial Number — John Deere	2-2
Fig. 2-4: Engine Serial Number — Cummins	2-2
Fig. 2-5: Axle Serial Number	2-3
Fig. 2-6: Attachment Serial Number Plate	2-3
Fig. 2-7: Top View — Models 644B-37 and 6K-37	2-4
Fig. 2-8: Left Side View — Models 644B-37 and 6K-37	2-4
Fig. 2-9: Top View — Models 644B-42 and 6K-42	2-8
Fig. 2-10: Left Side View — Models 644B-42 and 6K-42	2-8
Fig. 2-11: Top View — Models 844C-42 and 8K-42	2-12
Fig. 2-12: Left Side View — Models 844C-42 and 8K-42	2-12
Fig. 2-13: Top View — Models 1044C-42 and 10K-42	2-16
Fig. 2-14: Left Side View — Models 1044C-42 and 10K-42	2-16
Fig. 2-15: Top View — Models 1044C-54 and 10K-54	2-20
Fig. 2-16: Left Side View — Models 1044C-54 and 10K-54	2-20
Fig. 3-1: SAE Grade Identification	3-10
Fig. 3-2: Metric Class Identification	3-12
Fig. 5-1: Major Hydraulic Components	5-1
Fig. 5-2: Control Manifold Hydraulic Components.	5-3
Fig. 5-3: Mid-Inlet Hydraulic Components	5-3
Fig. 5-4: Hydraulic Reservoir Location	5-6
Fig. 5-5: Hydraulic Reservoir	5-7
Fig. 5-6: Recommended Reservoir Filling Method	5-8
Fig. 5-7: Alternate Reservoir Filling Method	5-9
Fig. 5-8: Hydraulic Reservoir Drain and Refill	5-11
Fig. 5-9: Hydraulic Reservoir/Fuel Tank Installation	5-13
Fig. 5-10: Hydraulic Reservoir Sight Gauge	5-16
Fig. 5-11: Reservoir Sight Gauge Installation	5-17
Fig. 5-12: Suction Strainer Installation.	5-19
Fig. 5-13: Hydraulic Return Filter.	5-22

List of Figures

Fig. 5-14: Return Filter Pressure Gauge	5-22
Fig. 5-15: Filter Housing Cover	5-23
Fig. 5-16: Filter Element Assembly	5-24
Fig. 5-17: Return Filter Assembly	5-26
Fig. 5-18: Reservoir Breather	5-27
Fig. 5-19: Hydraulic Pressure Filter – Control Manifold Hydraulics	5-28
Fig. 5-20: Pressure Filter Service Indicator	5-29
Fig. 5-21: Hydraulic Pressure Filter Element	5-30
Fig. 5-22: Hydraulic Pressure Filter Assembly	5-31
Fig. 5-23: Hydraulic Pump Location	5-33
Fig. 5-24: Hydraulic Pump Installation – Control Manifold Hydraulics	5-35
Fig. 5-25: Hydraulic Pump Hoses – Mid-Inlet Hydraulics	5-37
Fig. 5-26: Hydraulic Pump Installation – Mid-Inlet Hydraulics	5-38
Fig. 5-27: Checking Hydraulic Pump Flow Rate	5-43
Fig. 5-28: Multi-Spool Control Valve Location	5-45
Fig. 5-29: Control Valve Configurations, Models 644B, 844C, and 1044C	5-46
Fig. 5-30: Control Valve Configurations, Models 6K, 8K, and 10K	5-47
Fig. 5-31: Multi-Spool Control Valve Components	5-48
Fig. 5-32: Multi-Spool Control Valve Installation	5-49
Fig. 5-33: Hydraulic Control Valve Sections	5-50
Fig. 5-34: Spool Assembly	5-51
Fig. 5-35: Load Check Assembly	5-53
Fig. 5-36: CRA Assembly	5-55
Fig. 5-37: Outlet and Inlet Covers	5-58
Fig. 5-38: Power-Beyond Sleeve Assembly	5-60
Fig. 5-39: Main Relief Valve	5-62
Fig. 5-40: Hydraulic Control Manifold Location	5-64
Fig. 5-41: Hydraulic Control Manifold Valves	5-64
Fig. 5-42: Hydraulic Control Manifold Ports	5-65
Fig. 5-43: Hydraulic Control Manifold Removal/Installation	5-71
Fig. 5-44: Hydraulic Control Manifold Block Fittings Removal/Installation	5-73
Fig. 5-45: Hydraulic Control Manifold Assembly	5-74
Fig. 5-46: Pump Unloader Valve Location	5-77
Fig. 5-47: Pump Unloader Valve Installation - Control Manifold Hydraulics	5-78
Fig. 5-48: Pump Unloader Valve	5-79
Fig. 5-49: Mid-Inlet Control Valve Location	5-81
Fig. 5-50: Mid-Inlet Control Valve Components	5-81
Fig. 5-51: Mid-Inlet Control Valve Configurations, Models 644B, 844C, 1044C	5-83

List of Figures

Fig. 5-52: Mid-Inlet Control Valve Configurations, Models 6K, 8K, 10K	5-84
Fig. 5-53: Mid-Inlet Control Valve Installation	5-85
Fig. 5-54: Rear Axle Stabilizer Control Valve Location	5-86
Fig. 5-55: Rear Axle Stabilizer Control Valve Ports.	5-87
Fig. 5-56: Rear Axle Stabilizer Control Valve Installation	5-89
Fig. 5-57: Boom Extend Lockout Valve	5-91
Fig. 5-58: Hydraulic Diagnostic Ports - Models with Control Manifold Hydraulics	5-91
Fig. 5-59: Hydraulic Diagnostic Ports - Models with Mid-Inlet Hydraulics	5-92
Fig. 5-60: Roll-Back Hose Frame Location - Control Manifold Hydraulics	5-93
Fig. 5-61: Roll-Back Tray Installation - Control Manifold Hydraulics	5-95
Fig. 5-62: Roll-Back Tray Installation - Mid-Inlet Hydraulics	5-96
Fig. 6-1: Major Boom and Transfer Hydraulic Components	6-1
Fig. 6-2: Joystick	6-2
Fig. 6-3: Joystick Installation	6-3
Fig. 6-4: Joystick Components	6-5
Fig. 6-5: Pilot Pressure Diagnostic Port.	6-8
Fig. 6-6: Pilot Pressure Plug	6-8
Fig. 6-7: Boom Hoist Cylinders	6-11
Fig. 6-8: Boom Hoist Cylinder Installation	6-12
Fig. 6-9: Boom Hoist Cylinder Assembly	6-14
Fig. 6-10: Head Capscrew Torque Sequence	6-16
Fig. 6-11: Front Carriage Tilt Cylinder	6-17
Fig. 6-12: Front Carriage Tilt Cylinder Installation	6-18
Fig. 6-13: Front Carriage Tilt Cylinder Assembly.	6-20
Fig. 6-14: Rear Carriage Tilt Cylinder	6-23
Fig. 6-15: Rear Carriage Tilt Cylinder Installation	6-24
Fig. 6-16: Rear Carriage Tilt Cylinder Assembly	6-26
Fig. 6-17: Boom Hydraulic Control Valve	6-28
Fig. 6-18: Boom Hydraulic Control Valve Installation	6-29
Fig. 6-19: Boom Control Valve Fittings	6-32
Fig. 6-20: Control Valve Components	6-33
Fig. 6-21: Boom Hydraulic Control Valve Assembly	6-34
Fig. 6-22: Relief Valve Assembly.	6-36
Fig. 6-23: Selector Valve – Models with Control Manifold Hydraulics	6-38
Fig. 6-24: Selector Valve Installation – Models with Control Manifold Hydraulics	6-39
Fig. 6-25: Selector Valve Assembly – Models with Control Manifold Hydraulics.	6-41
Fig. 6-26: Selector Valve – Models with Mid-Inlet Hydraulics	6-43
Fig. 6-27: Selector Valve Installation – Models with Mid-Inlet Hydraulics	6-44

List of Figures

Fig. 6-28: Selector Valve Assembly – Models with Mid-Inlet Hydraulics	6-45
Fig. 6-29: Load Bearing Pad	6-48
Fig. 6-30: Pad Worn, But Still OK	6-49
Fig. 6-31: Pad Must Be Replaced	6-49
Fig. 6-32: Bolted Boom Slide Pad	6-49
Fig. 6-33: Slide Pad Without Chamfers – 3 and 4-Section Boom	6-50
Fig. 6-34: Damaged Slide Surface	6-51
Fig. 6-35: Slide Surface Repair	6-51
Fig. 6-36: Slide Pad Installation (2-Section Shown)	6-52
Fig. 6-37: Positioning Retaining Block	6-52
Fig. 6-38: Determining Capscrew Length	6-53
Fig. 6-39: Correctly Installed Capscrew	6-53
Fig. 6-40: Quick Attach Rear View	6-54
Fig. 6-41: Release Handle	6-54
Fig. 6-42: Lock Plate	6-55
Fig. 6-43: Rotating Quick Attach Downwards	6-55
Fig. 6-44: Lowering Boom	6-55
Fig. 6-45: Retracting Boom	6-56
Fig. 6-46: Extending Boom	6-56
Fig. 6-47: Raising Boom	6-56
Fig. 6-48: Rotating Quick Attach Forward	6-57
Fig. 6-49: Lock Plate Engaged	6-57
Fig. 6-50: Lower Pivot of Carriage Tilt Cylinder	6-58
Fig. 6-51: Quick Attach Pivot	6-59
Fig. 6-52: Boom Angle Inclinator	6-60
Fig. 6-53: Boom Angle Inclinator Installation	6-60
Fig. 6-54: 2-Section Boom	6-61
Fig. 6-55: Boom Slide Pad Locations, 2-Section Boom	6-61
Fig. 6-56: Boom Section Gaps – Front of 2-Section Boom	6-62
Fig. 6-57: Lower Shim Installation – Front of 2-Section Boom	6-63
Fig. 6-58: Upper Shim Installation – Front of 2-Section Boom	6-63
Fig. 6-59: Boom Section Gaps – Rear of 2-Section Boom	6-64
Fig. 6-60: Lower Shim Installation – Rear of 2-Section Boom	6-64
Fig. 6-61: Upper Shim Installation – Rear of 2-Section Boom	6-65
Fig. 6-62: Clearances Between Boom Sections Rear of 2-Section Boom	6-65
Fig. 6-63: Gaps Between Pads and Boom – Rear of 2-Section Boom	6-66
Fig. 6-64: Clearances Between Boom Sections – Front of 2-Section Boom	6-66
Fig. 6-65: Gaps Between Pads and Boom – Front of 2-Section Boom	6-67

List of Figures

Fig. 6-66: Inner Boom Cross-Section at Window	6-68
Fig. 6-67: View at Rear of 2-Section Boom	6-68
Fig. 6-68: Hose Connections, 2-Section Boom	6-69
Fig. 6-69: Cylinder Pivot Pins	6-70
Fig. 6-70: Boom Pivot Pins, 2-Section.	6-71
Fig. 6-71: Front Slide Pads, Outer Boom	6-73
Fig. 6-72: Rear Slide Pads, Inner Boom	6-74
Fig. 6-73: Extension Cylinder Rear Support	6-75
Fig. 6-74: Extension Cylinder Rod End	6-76
Fig. 6-75: Hose Connections at Extension Cylinder	6-76
Fig. 6-76: Rear Boom Extension Cylinder Mount Support Installation	6-77
Fig. 6-77: Hose Carrier to Tray Attachments.	6-77
Fig. 6-78: Hose Connections in Inner Boom	6-78
Fig. 6-79: Hose Carrier to Boom Attachments.	6-78
Fig. 6-80: 2-Section Boom Extension Cylinder	6-80
Fig. 6-81: Extension Cylinder Rod End	6-81
Fig. 6-82: Hose Connections, 2-Section Boom	6-81
Fig. 6-83: Hose Connections in Inner Boom	6-82
Fig. 6-84: Hose Carrier in Inner Boom.	6-82
Fig. 6-85: Rear Boom Extension Cylinder Mount Support.	6-83
Fig. 6-86: 2-Section Boom Extension Cylinder Assembly	6-84
Fig. 6-87: 2-Section Boom Extension Cylinder Assembly	6-87
Fig. 6-88: 3-Section Boom.	6-90
Fig. 6-89: Boom Slide Pad Locations, 3-Section Boom.	6-91
Fig. 6-90: Boom Section Gaps – Front of 3-Section Boom	6-92
Fig. 6-91: Lower Shim Installation – Front of 3-Section Boom	6-92
Fig. 6-92: Upper Shim Installation – Front of 3-Section Boom	6-93
Fig. 6-93: Boom Section Gaps – Rear of 3-Section Boom	6-93
Fig. 6-94: Lower Shim Installation – Rear of 3-Section Boom.	6-94
Fig. 6-95: Upper Shim Installation – Rear of 3-Section Boom.	6-94
Fig. 6-96: Clearances Between Boom Sections – Rear of 3-Section Boom	6-95
Fig. 6-97: Gaps Between Pads and Boom – Rear of 3-Section Boom	6-95
Fig. 6-98: Clearances Between Boom Sections – Front of 3-Section Boom	6-96
Fig. 6-99: Gaps Between Pads and Boom – Front of 3-Section Boom	6-96
Fig. 6-100: Inner Boom Cross-Section at Window	6-97
Fig. 6-101: Middle Boom Cross-Section at Window	6-98
Fig. 6-102: Upper Chains - First Type	6-99
Fig. 6-103: Upper Chains - Second Type	6-100

List of Figures

Fig. 6-104: Upper Chains - Third Type	6-101
Fig. 6-105: Upper Chain Roller	6-102
Fig. 6-106: Boom Cover	6-102
Fig. 6-107: Rear Hose Connections, Inner Boom	6-103
Fig. 6-108: Front Slide Pads, Outer Boom	6-104
Fig. 6-109: Anchor Base	6-104
Fig. 6-110: Lower Chain Adjustment Rod	6-105
Fig. 6-111: Rod End of Extension Cylinder	6-105
Fig. 6-112: Hose Connections, Outer Boom	6-106
Fig. 6-113: Hose Connections, 3-Section Boom	6-107
Fig. 6-114: Cylinder Pivot Pins	6-108
Fig. 6-115: 3-Section Boom Pivot Pins	6-109
Fig. 6-116: Hydraulic Tubes, Outer Boom	6-110
Fig. 6-117: Boom Extension Cylinder Removal – 3-Section Boom	6-111
Fig. 6-118: Hose Tensioner	6-112
Fig. 6-119: Attaching Chain to Rear Anchor	6-113
Fig. 6-120: Rear Chain Roller - Middle Boom Section.	6-113
Fig. 6-121: Rear Slide Pads, Middle Boom Section	6-114
Fig. 6-122: Front Slide Pads, Middle Boom.	6-114
Fig. 6-123: Rear Chain Anchor	6-115
Fig. 6-124: Rear Slide Pads, Inner Boom	6-116
Fig. 6-125: Front Carriage Tilt Cylinder	6-117
Fig. 6-126: Rear Chain Anchor	6-119
Fig. 6-127: Front Slide Pads, Middle Boom.	6-120
Fig. 6-128: Rear Slide Pads, Inner Boom	6-120
Fig. 6-129: Rear Slide Pads, Middle Boom	6-121
Fig. 6-130: Chain Roller Installation, Middle Boom	6-122
Fig. 6-131: Lower Chain Installation	6-123
Fig. 6-132: Hose Tensioner Mounting	6-124
Fig. 6-133: Initial Lower Chain Adjustment	6-124
Fig. 6-134: Boom Extension Cylinder Removal – 3-Section Boom	6-125
Fig. 6-135: Hydraulic Tube Installation, Outer Boom.	6-126
Fig. 6-136: Hose Installation, Outer Boom	6-127
Fig. 6-137: 3-Section Outer Boom Installation.	6-128
Fig. 6-138: Cylinder Pivot Pin Installation	6-129
Fig. 6-139: Hose Connections, 3-Section Boom	6-130
Fig. 6-140: Rod End of Extension Cylinder	6-131
Fig. 6-141: Anchor Base Installation	6-131

List of Figures

Fig. 6-142: Front Slide Pads Installation, Outer Boom 6-132

Fig. 6-143: Securing Lower Chain 6-133

Fig. 6-144: Upper Chains - First Type 6-134

Fig. 6-145: Upper Chains - Second Type 6-135

Fig. 6-146: Upper Chains - Third Type 6-136

Fig. 6-147: Rear Hose Connections, Inner Boom 6-137

Fig. 6-148: Access Cover Installation, Outer Boom. 6-138

Fig. 6-149: Boom Cover installation 6-138

Fig. 6-150: 3-Section Boom Extension Cylinder 6-139

Fig. 6-151: Boom Extension Cylinder Removal – 3-Section Boom 6-140

Fig. 6-152: 3-Section Boom Extension Cylinder Assembly 6-143

Fig. 6-153: 4-Section Boom. 6-145

Fig. 6-154: Boom Slide Pad Locations – 4-Section Boom. 6-146

Fig. 6-155: Boom Section Gaps – Front of 4-Section Boom 6-146

Fig. 6-156: Lower Shim Installation – Front of 4-Section Boom 6-147

Fig. 6-157: Upper Shim Installation – Front of 4-Section Boom 6-147

Fig. 6-158: Boom Section Gaps – Rear of 4-Section Boom 6-148

Fig. 6-159: Lower Shim Installation - Rear of 4-Section Boom 6-148

Fig. 6-160: Upper Shim Installation – Rear of 4-Section Boom. 6-149

Fig. 6-161: Clearances Between Boom Sections – Rear of 4-Section Boom 6-149

Fig. 6-162: Gaps Between Pads and Boom – Rear of 4-Section Boom 6-150

Fig. 6-163: Clearances Between Boom Sections – Front of 4-Section Boom 6-150

Fig. 6-164: Gaps Between Pads and Boom – Front of 4-Section Boom 6-151

Fig. 6-165: Inner Boom Cross-Section at Window 6-152

Fig. 6-166: Middle (Forward) Boom Cross-Section at Window 6-152

Fig. 6-167: Middle (Forward) Boom Cross-Section at Window 6-153

Fig. 6-168: 4-Section Boom Cover Installation 6-154

Fig. 6-169: Hose Connections, 4-Section Boom 6-154

Fig. 6-170: Cylinder Pivot Pins 6-155

Fig. 6-171: Upper Rear Slide Pad Removal – Middle (Rear) Boom Section 6-156

Fig. 6-172: Upper Rear Slide Pad Removal – Middle (Forward) Boom Section 6-157

Fig. 6-173: Upper Rear Slide Pad Removal – Inner Boom Section. 6-157

Fig. 6-174: Locations for Chain Attachment – Inner Boom Section. 6-158

Fig. 6-175: 4-Section Boom Pivot Pins 6-159

Fig. 6-176: Slide Pad Removal – Outer Boom Section 6-162

Fig. 6-177: Lower Front Slide Pad Removal – Middle (Rear) Boom Section 6-163

Fig. 6-178: Disconnecting Hoses Between Sections. 6-164

Fig. 6-179: Extension Cylinder Removal – 4-Section Boom 6-165