



An Oshkosh Corporation Company

Operation and Safety Manual

Keep this manual with the machine at all times.

Boom Lift Models
800S
860SJ



3121138
August 13, 2008

FOREWORD

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS



This is the Safety Alert Symbol. It is used to alert you to the potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death

DANGER

INDICATES AN IMMINENTLY HAZARDOUS SITUATION. IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE A RED BACKGROUND.

WARNING

INDICATES A POTENTIALLY HAZARDOUS SITUATION. IF NOT AVOIDED, COULD RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE AN ORANGE BACKGROUND.

CAUTION

INDICATES A POTENTIALLY HAZARDOUS SITUATION. IF NOT AVOIDED, MAY RESULT IN MINOR OR MODERATE INJURY. IT MAY ALSO ALERT AGAINST UNSAFE PRACTICES. THIS DECAL WILL HAVE A YELLOW BACKGROUND.

⚠ WARNING

THIS PRODUCT MUST COMPLY WITH ALL SAFETY RELATED BULLETINS. CONTACT JLG INDUSTRIES, INC. OR THE LOCAL AUTHORIZED JLG REPRESENTATIVE FOR INFORMATION REGARDING SAFETY-RELATED BULLETINS WHICH MAY HAVE BEEN ISSUED FOR THIS PRODUCT.

NOTICE

JLG INDUSTRIES, INC. SENDS SAFETY RELATED BULLETINS TO THE OWNER OF RECORD OF THIS MACHINE. CONTACT JLG INDUSTRIES, INC. TO ENSURE THAT THE CURRENT OWNER RECORDS ARE UPDATED AND ACCURATE.

NOTICE

JLG INDUSTRIES, INC. MUST BE NOTIFIED IMMEDIATELY IN ALL INSTANCES WHERE JLG PRODUCTS HAVE BEEN INVOLVED IN AN ACCIDENT INVOLVING BODILY INJURY OR DEATH OF PERSONNEL OR WHEN SUBSTANTIAL DAMAGE HAS OCCURRED TO PERSONAL PROPERTY OR THE JLG PRODUCT.

For:

- Accident Reporting
- Product Safety Publications
- Current Owner Updates
- Questions Regarding Product Safety
- Standards and Regulations Compliance Information
- Questions Regarding Special Product Applications
- Questions Regarding Product Modifications

Contact:

Product Safety and Reliability Department
JLG Industries, Inc.
13224 Fountainhead Plaza
Hagerstown, MD 21742

or Your Local JLG Office
(See addresses on inside of manual cover)

In USA:

Toll Free: 877-JLG-SAFE (877-554-7233)

Outside USA:

Phone: 240-420-2661
Fax: 301-745-3713
E-mail: ProductSafety@JLG.com

REVISION LOG

Original Issue	- October 9, 2001
Revised	- October 31, 2001
Revised	- December 4, 2001
Revised	- March 1, 2002
Revised	- January 1, 2003
Revised	- April 24, 2003
Revised	- May 4, 2005
Revised	- March 3, 2006
Revised	- July 7, 2006
Revised	- August 13, 2008

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE
SECTION - 1 - SAFETY PRECAUTIONS	
1.1 GENERAL	1-1
1.2 PRE-OPERATION	1-1
Operator Training and Knowledge	1-1
Workplace Inspection	1-2
Machine Inspection	1-2
1.3 OPERATION	1-3
General	1-3
Trip and Fall Hazards	1-3
Electrocution Hazards	1-4
Tipping Hazards	1-6
Crushing and Collision Hazards	1-7
1.4 TOWING, LIFTING, AND HAULING	1-8
1.5 ADDITIONAL HAZARDS / SAFETY	1-9
SECTION - 2 - USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION	
2.1 PERSONNEL TRAINING	2-1
Operator Training	2-1
Training Supervision	2-1
Operator Responsibility	2-1
2.2 PREPARATION, INSPECTION, AND MAINTENANCE	2-2
Pre-Start Inspection	2-4
Function Check	2-5

SECTION - PARAGRAPH, SUBJECT	PAGE
General	2-9
2.3 HORIZONTAL AND CAPACITY LIMIT SWITCHES	2-10
2.4 OSCILLATING AXLE LOCKOUT TEST (IF EQUIPPED)	2-14
SECTION - 3 - MACHINE CONTROLS AND INDICATORS	
3.1 GENERAL	3-1
3.2 CONTROLS AND INDICATORS	3-1
Ground Control Station	3-1
Ground Control Indicator Panel	3-6
Platform Station	3-7
Platform Control Indicator Panel	3-12
SECTION - 4 - MACHINE OPERATION	
4.1 DESCRIPTION	4-1
4.2 OPERATING CHARACTERISTICS AND LIMITATIONS	4-1
Capacities	4-1
Stability	4-1
4.3 ENGINE OPERATION	4-2
Starting Procedure	4-2
Shutdown Procedure	4-3
4.4 TRAVELING (DRIVING)	4-5
Traveling Forward and Reverse	4-5
4.5 STEERING	4-5

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE
4.6 PLATFORM	4-7
Platform Level Adjustment	4-7
Platform Rotation	4-7
4.7 BOOM	4-7
Swinging the Boom	4-8
Raising and Lowering the Boom	4-8
4.8 FUNCTION SPEED CONTROL	4-8
4.9 OSCILLATING AXLE LOCKOUT TEST (IF EQUIPPED)	4-8
4.10 EMERGENCY TOWING	4-9
4.11 TOW BAR (IF EQUIPPED)	4-10
4.12 SHUT DOWN AND PARK	4-12
4.13 LIFTING AND TIE DOWN	4-12
Lifting	4-12
Tie Down	4-13

SECTION - 5 - EMERGENCY PROCEDURES

5.1 GENERAL	5-1
5.2 INCIDENT NOTIFICATION	5-1
5.3 EMERGENCY OPERATION	5-1
Operator Unable to Control Machine	5-1
Platform or Boom Caught Overhead	5-2
5.4 EMERGENCY TOWING PROCEDURES	5-2
5.5 MANUAL DESCENT INSTRUCTIONS (IF EQUIPPED)	5-2

SECTION - PARAGRAPH, SUBJECT	PAGE
To Retract and Lower Boom	5-3
To Lower Boom with Fully Retracted Telescope	5-3

SECTION - 6 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

6.1 INTRODUCTION	6-1
6.2 OPERATING SPECIFICATIONS	6-1
Specifications and Performance Data	6-2
Capacities	6-3
Engine Data	6-4
Battery	6-6
Tires	6-6
Major Component Weights	6-7
Hydraulic Oil	6-7
6.3 SERIAL NUMBER LOCATION	6-10
6.4 OPERATOR MAINTENANCE	6-21
6.5 TIRES & WHEELS	6-30
Tire Inflation	6-30
Tire Damage	6-30
Tire Replacement	6-31
Wheel Replacement	6-31
Wheel Installation	6-32
6.6 DRAINING OIL BUILD UP FROM THE PROPANE REGULATOR	6-33
6.7 PROPANE FUEL FILTER REPLACEMENT	6-35

SECTION - PARAGRAPH, SUBJECT	PAGE
Removal	6-35
Installation	6-36
6.8 PROPANE FUEL SYSTEM PRESSURE RELIEF . .	6-36

SECTION - 7 - INSPECTION AND REPAIR LOG

LIST OF FIGURES

2-1. Basic Nomenclature - Sheet 1 of 2	2-6
2-2. Basic Nomenclature - Sheet 2 of 2	2-7
2-2. Daily Walk-Around Inspection - Sheet 1 of 2	2-8
2-3. Daily Walk-Around Inspection - Sheet 2 of 2	2-9
2-4. Horizontal and Capacity Limit Switches - Sheet 1 of 2	2-10
2-5. Horizontal and Capacity Limit Switches - Sheet 2 of 2	2-11
2-6. Limiting and Cut-Out Switches - Sheet 1 of 2	2-12
2-7. Limiting and Cut-Out Switches - Sheet 2 of 2	2-13
3-1. Ground Control Station - 800S	3-3
3-1. Ground Control Station - 860SJ	3-4
3-2. Ground Control Indicator Panel	3-6
3-3. Platform Control Console	3-9
3-4. Platform Light Panel	3-14
4-1. Position of Least Backward Stability	4-3
4-2. Position of Least Forward Stability	4-4
4-3. Grade and Side Slopes	4-6

SECTION - PARAGRAPH, SUBJECT	PAGE
4-4. Drive Disconnect Hub	4-9
4-5. Typical 800S/860SJ Transport	4-14
4-6. Lifting and Tie Down Chart	4-15
4-7. Decal Location - Rear Entry Platform - Sheet 1 of 2	4-16
4-8. Decal Location - Rear Entry Platform - Sheet 2 of 2	4-17
4-9. Decal Location - Side Entry Platform - Sheet 1 of 5	4-30
4-10. Decal Location - Side Entry Platform - Sheet 2 of 5	4-31
4-11. Decal Location - Side Entry Platform - Sheet 3 of 5	4-32
4-12. Decal Location - Side Entry Platform - Sheet 4 of 5	4-33
4-13. Decal Location - Side Entry Platform - Sheet 5 of 5	4-34
6-1. Serial Number Locations	6-10
6-2. Engine Operating Temperature Specifications - Deutz - Sheet 1 of 2	6-12
6-3. Engine Operating Temperature Specifications - Deutz - Sheet 2 of 2	6-13
6-4. Engine Operating Temperature Specifications - Ford - Sheet 1 of 2	6-14
6-5. Engine Operating Temperature Specifications - Ford - Sheet 2 of 2	6-15

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE
6-6. Engine Operating Temperature Specifications - Caterpillar - Sheet 1 of 2	6-16
6-7. Engine Operating Temperature Specifications - Caterpillar - Sheet 2 of 2	6-17
6-8. Engine Operating Temperature Specifications - GM - Sheet 1 of 2	6-18
6-9. Engine Operating Temperature Specifications - GM - Sheet 2 of 2	6-19
6-10. Operator Maintenance and Lubrication Diagram .	6-20
6-11. Filter Lock Assembly	6-35

LIST OF TABLES

1-1 Minimum Approach Distances (M.A.D.)	1-5
2-1 Inspection and Maintenance Table	2-3
4-1 Decal Location Legend - Rear Entry Platform	4-18
4-2 Decal Location Legend - Rear Entry Platform	4-22
4-3 Decal Location Legend - Rear Entry Platform	4-26
4-4 Decal Location Legend, 800S - Side Entry Platform	4-35
4-5 Decal Location Legend, 860SJ - Side Entry Platform	4-39
6-1 Operating Specifications	6-1
6-2 Specifications and Performance Data	6-2
6-3 Capacities	6-3
6-4 Ford LRG-425 Specifications.	6-4

SECTION - PARAGRAPH, SUBJECT	PAGE
6-5 Deutz F4M2011 Specifications.	6-4
6-6 Deutz D2011L04 Specifications	6-5
6-7 Caterpillar 3044C/ Caterpillar 3.4	6-5
6-8 GM 3.0L	6-6
6-9 Battery Specifications.	6-6
6-10 Tire Specifications	6-6
6-11 Component Weights	6-7
6-12 Hydraulic Oil	6-7
6-13 Mobilfluid 424 Specs	6-8
6-14 Mobil DTE 13M Specs	6-8
6-15 Mobil EAL 224H Specs.	6-9
6-16 UCon Hydrolube HP-5046	6-9
6-17 Exxon Univis HVI 26 Specs	6-10
6-18 Lubrication Specifications	6-21
6-19 Wheel Torque Chart	6-33
7-1 Inspection and Repair Log	7-1