

700H Crawler Dozer

OPERATOR'S MANUAL 700H Crawler Dozer

OMT201705 Issue A4 (ENGLISH)

CALIFORNIA
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

 **WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

**Worldwide Construction
And Forestry Division**
(This manual replaces OMT177893 J1)
LITHO IN U.S.A.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your authorized dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Machine Numbers section. Accurately

record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

OOU1043,0000469 -19-29JAN02-1/1

Emission Control Statement

EMISSIONS CONTROL WARRANTY STATEMENT FOR NEW JOHN DEERE CONSTRUCTION EQUIPMENT (U.S. AND CANADA)

To determine if the engine in your machine qualifies for the additional warranties set forth below, look for the "Engine Information" label located on your engine. If you reside in the United States and the engine label states: "Engine conforms to US EPA regulations on heavy duty non road diesel cycle engines," you are entitled to the "U.S. Emission Control Warranty Statement." If you reside in California, and the engine label states: "Engine conforms to California regulations on heavy duty non road diesel cycle engines," you are entitled to the "California Emission Control Warranty Statement."

U.S. EPA EMISSIONS CONTROL WARRANTY STATEMENT

Emissions control-related parts and components are warranted by John Deere for five years or 3000 hours of operation, whichever occurs first. John Deere further warrants that the engine covered by this warranty was designed, built, and equipped so as to conform at the time of sale with all U.S. emissions standards at the time of manufacture, and that it is free of defects in materials and workmanship which would cause it not to meet these standards within the period of five years or 3000 hours of operations, whichever occurs first.

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete machine warranty, less emissions-related parts and components, is provided separately as "John Deere "Secure Warranty" For New Construction Products."

CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board (CARB) and John Deere are pleased to explain the emission control system on your new engine. In California, new heavy-duty engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect, or improper maintenance of your machine.

Your emissions control system includes:

Fuel Metering System
Fuel Injection System

Air Induction System
Intake Manifold
Turbocharger System
Charge Air Cooling System

Miscellaneous Items used in Above Systems

Where a warrantable condition exists, i.e. failure due to defect in John Deere-supplied material and/or workmanship, John Deere will repair your heavy-duty engine at no cost to you including diagnosis, parts and labor

JOHN DEERE'S WARRANTY COVERAGE:

The emission control system of your heavy-duty engine is warranted for five years or 3000 hours of operation, whichever occurs first. If any emission-related part on your engine is defective, the part will be repaired or replaced by John Deere. Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete machine warranty, less emissions-related parts and components, is provided separately as the "John Deere "Secure Warranty" For New Construction Products."

OWNER'S WARRANTY RESPONSIBILITIES:

As the heavy-duty engine owner, you are responsible for the performance of the required maintenance as outlined in the

Operator's Manual. John Deere recommends that you retain all receipts covering maintenance on your heavy-duty engine, but John Deere cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

However, as the heavy-duty engine owner, you should be aware that John Deere may deny you warranty coverage if your heavy-duty engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with California's emissions requirements.

You are responsible for initiating the warranty process. The CARB suggests that you present your machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the service dealer as expeditiously as possible.

If you have any questions regarding your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400, or the State of California Air Resources Board, Mobile Source Operation Division, PO Box 8001, El Monte, CA 91731-2900

The warranty period begins on the date the machine is delivered to an ultimate purchaser, or when otherwise put into service. John Deere warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built and equipped so as to conform with all applicable regulations adopted by the Air Resources Board, and that it is free from defects in materials and workmanship which would cause the failure of a warranted part.

Any warranted part which is scheduled for replacement as required maintenance by the operator's manual is warranted by John Deere for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement point, the part shall be repaired or replaced under warranty. Any such part repaired or replaced under warranty is warranted for the remainder of the period prior to the first scheduled replacement point for that part.

Any warranted part which is not scheduled for replacement as required maintenance, or which is scheduled only for regular inspection to the effect of repairing or replacing as necessary, is warranted for the warranty period.

Repair or replacement of a warranted part will be performed at no charge to you by an authorized John Deere dealer. You will not be charged for diagnostic labor which leads to the determination that a warranted part is defective, if the diagnostic work is performed by a John Deere dealer.

John Deere is liable for damages to other engine components caused by failure under warranty of any warranted part.

John Deere is NOT liable for travel or mileage on extended emissions warranty service calls.

Any replacement part may be used in the performance of any maintenance or repairs, and such use will not reduce the warranty obligations of John Deere. However, the use of add-on or modified parts are grounds for disallowing a warranty claim.

Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

SEND TO: John Deere Dubuque Works
P.O. Box 538
Attn: Publications Supervisor, Dept. 303
Dubuque, IA 52004-0538

FAX NUMBER: 563-589-5800

Ideas, Comments (Please State Page Number): _____

OVERALL, how would you rate the quality of this publication? (Check one)

	Poor		Fair		Good		Very Good		Excellent
1	2	3	4	5	6	7	8	9	10

Company Name: _____
Technician Name: _____
Address: _____
Phone: _____
Fax No.: _____
Dealer Acct. No.: _____

THANK YOU!

Contents

	Page		Page
Safety—Safety Features			
Safety Features	1-1-1	Instrument Panel (Later Machines)	2-1-4
Safety—General Precautions			
Recognize Safety Information	1-2-1	Instrument Panel Functions (Later Machines)	2-1-5
Follow Safety Instructions	1-2-1	Transmission Controller Display Window	2-1-6
Operate Only If Qualified	1-2-2	Transmission Speed Setting Gauge (S.N. —920838)	2-1-9
Wear Protective Equipment	1-2-2	Defrosting, Heating, and Air Conditioning Controls—If Equipped	2-1-10
Avoid Unauthorized Machine Modifications	1-2-2	Operating Cab Lights—If Equipped	2-1-11
Inspect Machine	1-2-3	Windshield Wiper and Washer	2-1-12
Stay Clear Of Moving Parts	1-2-3	Horn Button	2-1-13
Avoid High-Pressure Fluids	1-2-3	Side Windows—Secondary Exits (Cab Units Only)	2-1-14
Beware Of Exhaust Fumes	1-2-4	Adjust Standard Suspension Seat	2-1-15
Prevent Fires	1-2-4	Adjust Deluxe Mechanical Suspension Seat—If Equipped	2-1-16
Prevent Battery Explosions	1-2-4	Adjust Air Suspension Seat—If Equipped	2-1-17
Handle Chemical Products Safely	1-2-5	Adjust Armrest	2-1-17
Dispose Of Waste Properly	1-2-5	Battery Disconnect Switch—If Equipped	2-1-18
Prepare For Emergencies	1-2-5	Under-Seat Heater—If Equipped	2-1-19
Add Cab Guarding For Special Uses	1-2-6	Seat Belt	2-1-20
Safety—Operating Precautions			
Start Only From Operator's Seat	1-3-1	Operation—Operating The Machine	
Prevent Unintended Machine Movement	1-3-1	Inspect Machine Daily Before Starting	2-2-1
Avoid Work Site Hazards	1-3-2	Check Instruments Before Starting (Earlier Machines)	2-2-2
Keep Riders Off Machine	1-3-2	Check Instruments Before Starting (Later Machines)	2-2-3
Avoid Backover Accidents	1-3-3	Starting the Engine	2-2-4
Avoid Machine Tip Over	1-3-3	Starting Fluid (Cold Weather Starting Aid)—If Equipped	2-2-5
Safety—Maintenance Precautions			
Park And Prepare For Service Safely	1-4-1	Using Coolant Heater—If Equipped	2-2-7
Service Cooling System Safely	1-4-1	Operating Fuel-Fired Coolant Heater—If Equipped	2-2-8
Remove Paint Before Welding or Heating	1-4-2	Using Booster Batteries—24-Volt System	2-2-17
Make Welding Repairs Safely	1-4-3	Engine Warm-Up	2-2-18
Drive Metal Pins Safely	1-4-3	Cold Weather Warm-Up	2-2-18
Safety—Safety Signs			
Safety Signs	1-5-1	Driving the Machine	2-2-19
Operation—Operator's Station			
Instrument Panel with Gauge Package—If Equipped (Earlier Machines)	2-1-1	Transmission Speed Reverse Ratio Knob—If Equipped	2-2-20
Instrument Panel Functions (Earlier Machines)	2-1-2	FNR Lever	2-2-21
		Driving the Machine	2-2-22

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2004
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright © 2000, 2001, 2003

 
Page	Page		
Steering the Machine	2-2-23	Maintenance—Every 10 Hours or Daily	
Using Engine Speed Control Lever	2-2-24	Check Coolant Level	3-4-1
Travel Speed Using FNR Lever	2-2-24	Grease Track Frame Crossbar and	
Foot Pedals	2-2-25	C-Frame Pivots	3-4-2
Using Park Lock Lever	2-2-25	Grease Dozer Linkage	3-4-3
Stopping the Machine	2-2-26	Check Engine Oil Level	3-4-4
Parking the Machine	2-2-27	Draining Fuel and Water Separator	
Blade Pitch Operation	2-2-28	Sediment	3-4-5
Blade Pitch Linkage Adjustment	2-2-29	Drain Final Fuel Filter Sediment	3-4-5
Operating Blade	2-2-29	Check Hydraulic Oil Level	3-4-6
Tilting Blade	2-2-30	Check Transmission Oil Level	3-4-7
Angling Blade	2-2-30	Clean Air Cleaner Dust Unloader Valve	3-4-7
Operating 4000S Winch—If Equipped	2-2-31	Check Winch Oil—If Equipped	3-4-8
Fasten Cable to Winch Drum—4000S			
Series	2-2-32	Maintenance—After 100 Hours	
Winch Free Spool Drag Adjustment	2-2-35	Change Engine Break-In Oil and Filter	3-5-1
Loading Machine on a Trailer	2-2-36		
Releasing the Park Brake to Tow the		Maintenance—Every 250 Hours	
Machine	2-2-38	Change Engine Oil and Filter (S.N. —	
		920838)	3-6-1
		Check Final Drive Oil Level	3-6-2
Maintenance—Machine			
Diesel Fuel	3-1-1	Maintenance—Every 500 Hours	
Low Sulfur Diesel Fuel Conditioner	3-1-1	Check Air Intake Hose	3-7-1
Dieselscan Fuel Analysis	3-1-2	Replace Primary Fuel Filter	3-7-2
Handling and Storing Diesel Fuel	3-1-2	Replace Final Fuel Filter	3-7-4
Alternative And Synthetic Lubricants	3-1-2	Check Battery Electrolyte Level and	
Diesel Engine Break-In Oil	3-1-3	Terminals	3-7-5
Diesel Engine Oil	3-1-4	Check Coolant Conditioner in Radiator	3-7-7
Track Rollers, Front Idler and Carrier		Change Winch Oil Filter—If Equipped	3-7-8
Roller Oil	3-1-5	Change Engine Oil and Filter (S.N.	
Final Drive Oil	3-1-6	920839—)	3-7-10
Winch Oil	3-1-7		
Grease	3-1-8	Maintenance—Every 1000 Hours	
Diesel Engine Coolant	3-1-9	Clean Engine Crankcase Ventilation Tube	3-8-1
		Change Final Drive Oil	3-8-2
		Check Track Frame Pivot Oil Level	3-8-3
		Replace Air Cleaner Elements	3-8-4
		Replace Air Cleaner Dust Unloader Valve	3-8-5
		Change Winch Oil and Filter—If Equipped	3-8-5
		Check and Replace Winch Hydraulic	
		Breather Filter—If Equipped	3-8-6
Maintenance—Periodic Maintenance			
Service Your Machine at Specified Intervals	3-2-1	Maintenance—Every 2000 Hours	
Check the Hour Meter Regularly	3-2-1	Adjust Engine Valve Lash (Clearance)	3-9-1
Prepare Machine for Maintenance	3-2-2	Change Hydraulic Oil and Filter	3-9-1
Fuel Tank	3-2-3	Change Transmission Oil and Filter	3-9-3
Maintenance and Repair Record			
Keeping System	3-2-4	Miscellaneous—Machine	
OILSCAN PLUS®, COOLSCAN PLUS®,		Opening and Closing the Grille	4-1-1
Dieselscan, and 3-Way Coolant Test Kit	3-2-5	Drain the Cooling System	4-1-2
Service Intervals	3-2-6		
Required Parts	3-2-8		
Maintenance—As Required			
Inspect Serpentine Belt	3-3-1		
Check Track Sag	3-3-2		
Adjust Track Sag	3-3-3		

Continued on next page

Page	Page		
Fill the Cooling System	4-1-3	Battery Disconnect Switch, Key Switch, Display Monitor, Battery, And Hour Meter Checks	4-2-9
Clean the Engine Air Precleaner Screen	4-1-4	Air Restriction Indicator Check and Reverse Warning Alarm Checks (Engine Off)	4-2-13
Replace Engine Vibration Damper	4-1-4	Neutral Start Switch and Start Circuit Checks	4-2-14
Do Not Service Or Adjust Injection Nozzles Or Injection Pump	4-1-5	Hydraulic System Checks	4-2-15
Inspecting And Cleaning Dusty Secondary And Primary Element	4-1-6	Undercarriage Checks	4-2-16
Replace Engine Torsional Dampener	4-1-7	Accessory Checks	4-2-17
Precautions for Alternator and Regulator	4-1-7	Miscellaneous—Troubleshooting	
Handling, Checking And Servicing Batteries Carefully	4-1-8	Troubleshooting Procedure	4-3-1
Replacing Batteries	4-1-10	Engine	4-3-2
Removing Batteries	4-1-11	Electrical System	4-3-6
Fuse Specifications—Canopy Machines (Earlier Machines)	4-1-13	Hydraulic System	4-3-8
Fuse Specifications—Canopy Machines (Later Machines)	4-1-15	Hydrostatic Transmission	4-3-9
Fuse Specifications—Cab Machines (Earlier Machines)	4-1-17	Gauges and Indicators	4-3-10
Fuse Specifications—Cab Machines (Later Machines)	4-1-19	Transmission Controller Service Codes	4-3-12
Lubricating Door Latches	4-1-20	Miscellaneous—Storage	
Cleaning Fresh Cab Air Filter—If Equipped	4-1-21	Prepare Machine For Storage	4-4-1
Cleaning Cab Air Recirculation Filter—If Equipped	4-1-22	Miscellaneous—Machine Numbers	
Check Air Conditioner Refrigerant Level—If Equipped	4-1-23	Record Product Identification Number (PIN)	4-5-1
Track Sag General Information	4-1-24	Record Engine Serial Number	4-5-1
Check and Adjust Idler Vertical Movement	4-1-25	Miscellaneous—Specifications	
Checking Track Carrier Roller Oil Level	4-1-27	700H Crawler Dozer Dimensions	4-6-1
Check Front Idler Oil Level	4-1-29	700H Crawler Dozer Specifications	4-6-4
Adding Oil to Track Roller	4-1-30	700H Crawler Dozer Weights	4-6-7
Do Not Service Control Valves and Cylinders	4-1-30	700H Dozer Drain and Refill Capacities	4-6-8
Adjusting Engine Speed Control Lever Tension	4-1-31	4000S Winch	4-6-8
Checking Neutral Start System	4-1-32	Miscellaneous—Crime Prevention Tips	
Check Fuel-Fired Coolant Heater Exhaust Tube—If Equipped	4-1-33	Help Prevent Crime	4-7-1
Keep ROPS Installed Properly	4-1-33	Record Identification Numbers	4-7-1
Checking Track Shoe Cap Screw Torque	4-1-34	Keep Proof of Ownership	4-7-1
Hardware Torque Specifications	4-1-35	Park Indoors Out of Sight	4-7-1
Unified Inch Bolt and Cap Screw Torque Values	4-1-36	When Parking Outdoors	4-7-2
Metric Bolt and Cap Screw Torque Values	4-1-37	Reduce Vandalism	4-7-2
		Report Thefts Immediately	4-7-3
Miscellaneous—Operational Checkout			
Operational Checkout	4-2-1		
Cooling System Checks	4-2-1		
Fuel System Checks	4-2-3		
Transmission Checks	4-2-5		

Safety—Safety Features

Safety Features

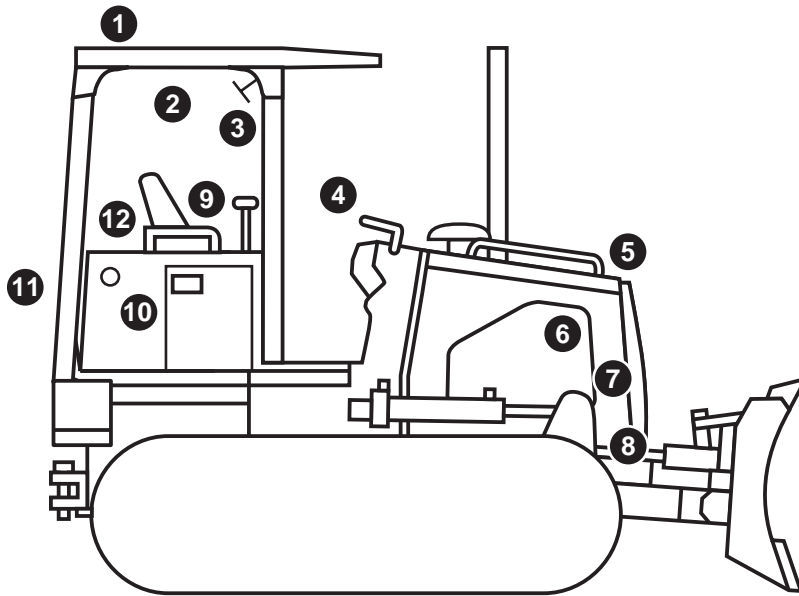

T155521

T155521 -JUN-19JUN02

Please remember, the operator is the key to preventing accidents.

1. **ROPS, FOPS, and OPS.** Structures designed to help protect the operator are certified to ISO, SAE, and OSHA. Enclosures also deflect sun and rain.
2. **Pressurized Cab.** Positive pressure ventilation system circulates both outside and inside air through filters for a clean working environment. Built-in defroster vents direct air flow for effective window defogging/deicing.
3. **Interior Rear View Mirror.** Offers the operator a view of activity behind him.
4. **Park Lock Lever.** When park lock lever is placed in "lock" position, the transmission shifts in neutral, the hydraulics are deactivated, and the park brake is engaged.
5. **Handholds.** Large conveniently placed handholds make it easy to enter or exit the operator's station.
6. **Bypass Start Protection.** Shielding over the starter solenoid helps prevent dangerous bypass starting.
7. **Engine Fan Guard.** A secondary fan guard inside engine compartment helps prevent contact with engine fan blades.
8. **Steps.** Wide skid-resistant steps help prevent slipping while getting in or out of the operator's station.
9. **Neutral Start.** Neutral start feature prevents the engine from being started unless transmission control is in neutral.
10. **Automatic Seatbelt Retractors.** Seat belt retractors help keep belts clean and convenient to use.
11. **Backup Alarm.** Alerts bystanders when reverse travel direction is selected by operator.
12. **Operator Manual Holder.** A sealed manual holder keeps manual on machine clean and dry.

HG31779,0000090 -19-03JUN02-1/1

Safety—General Precautions

Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555 -JUN-28AUG00

T133588 -19-28AUG00

TX03679,00016CC -19-21AUG00-1/1

Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety labels immediately if missing or damaged.



T133556 -JUN-24AUG00

TX03679,00016F9 -19-20MAY03-1/1

Operate Only If Qualified

Do not operate this machine unless you have read the operator's manual carefully and you have been qualified by supervised training and instruction.

Familiarize yourself with the job site and your surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to your work situation and your work site.

 
TX03679,00016FA -19-30OCT00-1/1

Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

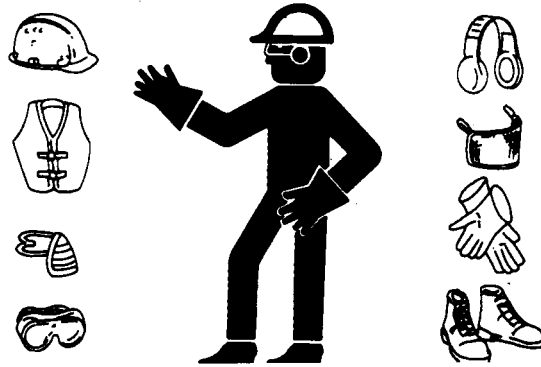

TS206 -JUN-23AUG88

TX03679,00016D0 -19-30OCT00-1/1

Avoid Unauthorized Machine Modifications

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance or reliability.

TX03679,00016B7 -19-20MAY03-1/1

Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T8607AQ -JUN-18OCT88

 
TX03679,0001734 -19-25SEP00-1/1

Stay Clear Of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

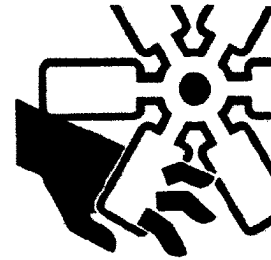

T133592 -JUN-12SEP01

TX03679,00016D2 -19-30OCT00-1/1

Avoid High-Pressure Fluids

 
This machine uses a high-pressure hydraulic system. Escaping fluid under pressure can penetrate the skin causing serious injury.

Never search for leaks with your hands. Protect hands. Use a piece of cardboard to find location of escaping fluid. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

If hydraulic fluid penetrates your skin, see a doctor immediately. Injected fluid must be removed surgically within hours or gangrene may result. Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.



T133509 -JUN-31OCT00

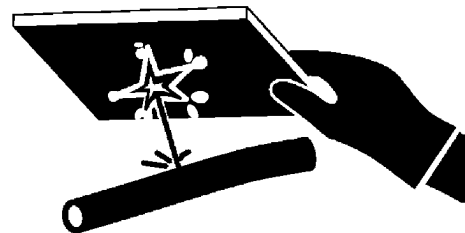


T133840 -JUN-20SEP00

TX03679,00016D3 -19-30OCT00-1/1

Beware Of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

 If you must operate in a building, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

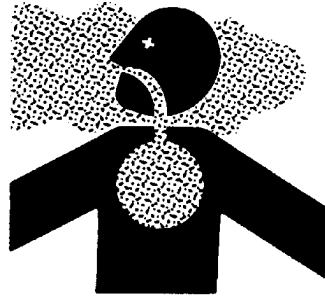

T133546 -JUN-24AUG00

TX03679,00016D4 -19-14SEP00-1/1

 
Prevent Fires

Handle Fuel Safely: Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

Clean Machine Regularly: Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

Maintain Hoses and Wiring: Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

Keep A Fire Extinguisher Available: Always keep a multi-purpose fire extinguisher on or near the machine. Know how to use extinguisher properly.

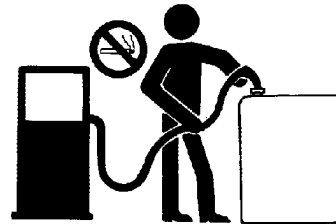

T133552 -JUN-14SEP00

T133553 -JUN-07SEP00

T133554 -JUN-07SEP00

TX03679,00016F5 -19-25SEP00-1/1

Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).




TS204 -JUN-23AUG88

TX03679,000174A -19-14SEP00-1/1

Handle Chemical Products Safely

Exposure to hazardous chemicals can cause serious injury. Under certain conditions, lubricants, coolants, paints and adhesives used with this machine may be hazardous.

 If uncertain about safe handling or use of these chemical products, contact your authorized dealer for a Material Safety Data Sheet (MSDS) or go to internet website <http://www.jdmsds.com>. The MSDS describes physical and health hazards, safe use procedures, and emergency response techniques for chemical substances. Follow MSDS recommendations to handle chemical products safely.

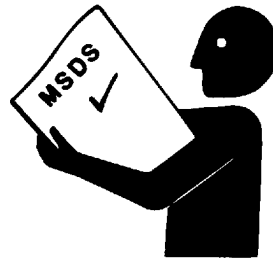

T133580 -JUN-25AUG00

TX03679,00016D7 -19-05AUG02-1/1

 
Dispose Of Waste Properly

Improper disposal of waste can threaten the environment. Fuel, oils, coolants, filters and batteries used with this machine may be harmful if not disposed of properly.

Never pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants can damage the atmosphere. Government regulations may require using a certified service center to recover and recycle used refrigerants.

If uncertain about the safe disposal of waste, contact your local environmental or recycling center or your authorized dealer for more information.

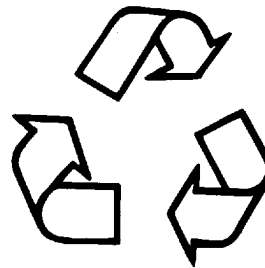

T133567 -JUN-25AUG00

 
TX03679,0001733 -19-17APR01-1/1

Prepare For Emergencies

Be prepared if an emergency occurs or a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

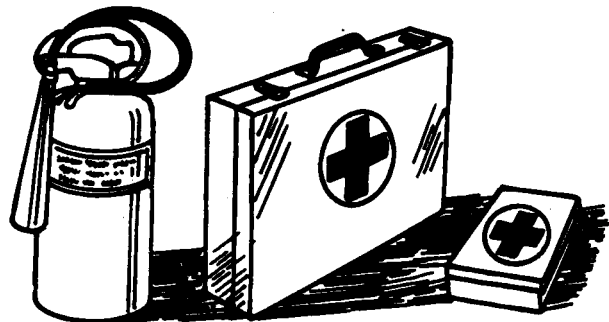


TS291 -JUN-23AUG88

TX03679,000174B -19-14SEP00-1/1

Add Cab Guarding For Special Uses

Special work situations or machine attachments may expose the operator to intruding or flying objects. Using this machine in a forestry application or woods environment, or with attachments such as a winch, requires added guarding to protect the operator.

 Forestry protection packages or special screens should be installed when working in areas where logs or branches may strike the operator. A rear screen should always be used with a winch to protect against a snapping cable. Contact your authorized dealer for information on protective guarding before operating in any hazardous environment.

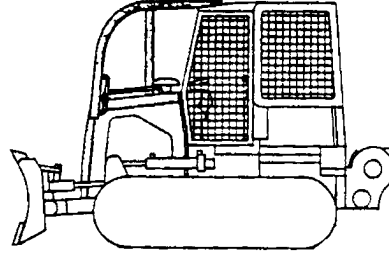

T139005 -JUN-05MAR01

TX03768,0000B77 -19-06MAR01-1/1

Safety—Operating Precautions

Start Only From Operator's Seat

Avoid unexpected machine movement. Before starting engine, sit in operator's seat. Ensure park lock lever is in "lock" position.

Never attempt to start engine from the ground or tracks. Do not attempt to start engine by shorting across the starter solenoid terminals.



 
T133715 -UN-07SEP00

TX03768,0000B71 -19-23FEB01-1/1

Prevent Unintended Machine Movement

Always move the park lock lever to the "lock" position before leaving the operator's seat for any reason.

Be careful not to accidentally actuate controls when co-workers are present. Engage park lock and lower work equipment to the ground during work interruptions. Stop the engine before allowing anyone to approach the machine. Follow these same precautions before standing up, leaving the operator's seat, or exiting the machine.

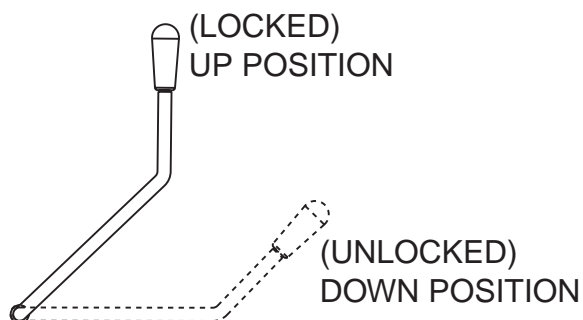

T159027 -19-30AUG02

TX03768,0000B72 -19-01MAY01-1/1

Avoid Work Site Hazards

 
Avoid contact with gas lines, buried cables and water lines. Call utility line location services to identify all underground utilities before working below ground level.

Avoid or correct hazardous work situations. Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.


Keep bystanders clear at all times. Use barricades or a signal person to keep vehicles and pedestrians away. Always keep signal person in view. Instruct co-workers and bystanders not to approach the machine while it is operating.

Operate only on solid footing Use extra care when operating on stockpiles or near banks or excavations that may cave in and cause machine to tip or fall. Never allow the machine on a floor or structure until you are sure it will support the weight.

Avoid contact with overhead electrical wires. Stay clear of electrical lines. Never move any part of machine or load closer than 3 m (10 ft.) plus twice the line insulator length to overhead wires.

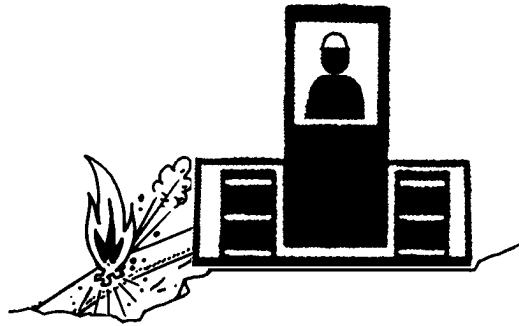

T139002 -JUN-05MAR01

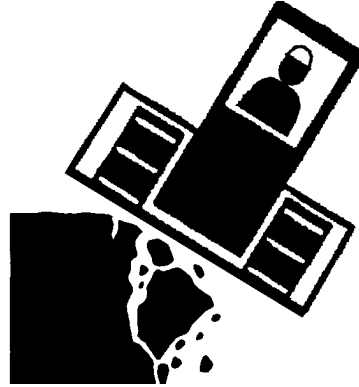 

T139003 -JUN-05MAR01

 
TX03768,0000B76 -19-06MAR01-1/1

Keep Riders Off Machine

Only allow operator on machine.

Riders are subject to injury. They may fall from machine, be caught between machine parts, or be struck by foreign objects.

Riders may obstruct operator's view or impair his ability to operate machine safely.

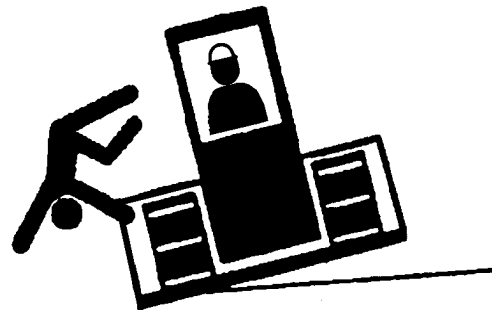

T137580 -JUN-22FEB01

TX03768,0000B73 -19-05FEB01-1/1

Avoid Backover Accidents

Before moving machine, be sure all persons are clear of the machine path. Turn around and look directly for best visibility. Use mirror to assist in checking behind the machine. Keep windows and mirror clean and in good repair.

Be certain backup warning alarm is working properly.

Use a signal person when backing if view is obstructed or when in close quarters. Keep signal person in view at all times. Use prearranged hand signals to communicate.



T138441 -JUN-22FEB01

TX03768,0000B69 -19-01MAY01-1/1

Avoid Machine Tip Over

Use seat belt at all times.

Do not jump if the machine tips. You will be unlikely to jump clear and the machine may crush you.

 
 
Load and unload from trucks or trailers carefully. Be sure truck is wide enough and secured on a firm level surface. Use loading ramps and attach them properly to truck bed. Avoid trucks with steel beds because tracks slip more easily on steel.

Be careful on slopes. Use extra care on soft, rocky or frozen ground because machine may slip sideways in these conditions. When traveling up or down steep slopes, keep the bucket or blade on uphill side and just above ground level.

Ensure solid footing. Use extra care when operating on stockpile materials, or near banks or excavations that may cave-in and cause machine to tip or fall.



**USE
SEAT
BELT**

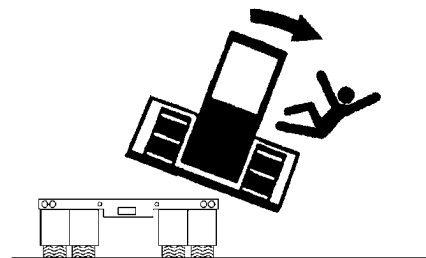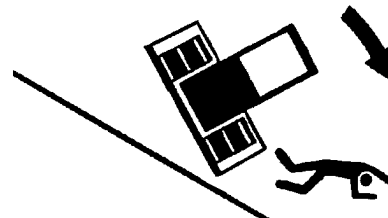

T133716 -19-14SEP00

T138416 -JUN-22FEB01

T138415 -JUN-22FEB01

TX03768,0000B6B -19-29JAN01-1/1

Safety—Maintenance Precautions

Park And Prepare For Service Safely

 
Warn others of service work. Always park and prepare your machine for service or repair properly.

- Park machine on a level surface and lower blade/bucket and attachments to the ground.
- Place park lock lever in “lock” position. Stop engine and remove key.
- Attach a “Do Not Operate” tag in an obvious place in the operator’s station.

Securely support machine or attachment before working under it.

- Do not support machine with blade/bucket or attachments.
- Do not support machine with cinder blocks or wooden pieces that may crumble or crush.
- Do not support machine with a single jack or other devices that may slip out of place.

Understand service procedures before beginning repairs. Keep service area clean and dry. Use two people whenever the engine must be running for service work.

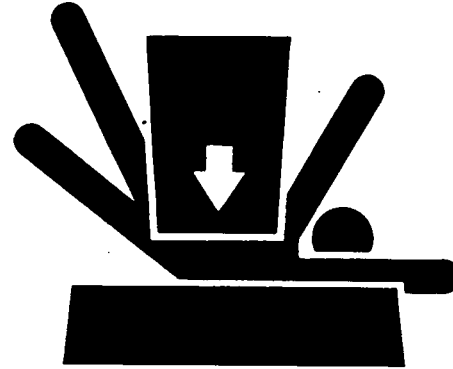

T133332 -19-14DEC01

TSS29 -UN-23AUG88

TX03768,0000B6A -19-29JAN01-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 -UN-23AUG88

DX,RCAP -19-04JUN90-1/1

Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

 
Remove paint before heating:

- Remove paint a minimum of 101 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

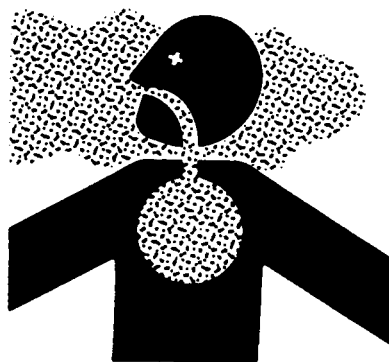

TSS20 -JUN-23AUG88

DX,PAINT -19-24JUL02-1/1