

7200 Flex-Fold MaxEmerge® 2 Drawn Conservation Planter 8-Row Wide and 12-Row Narrow



JOHN DEERE

OPERATORS MANUAL

7200 Flex-Fold MaxEmerge® 2 Drawn Conservation
Planter 8-Row Wide and 12-Row Narrow

OMA51905 Issue G0 English

John Deere Harvester Works

OMA51905 Issue G0

(This manual replaces OMH139534-F9)

LITHO IN U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.



THIS MACHINE is of metric design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

 
WRITE PRODUCT IDENTIFICATION NUMBERS in the space provided in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this

manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.


This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

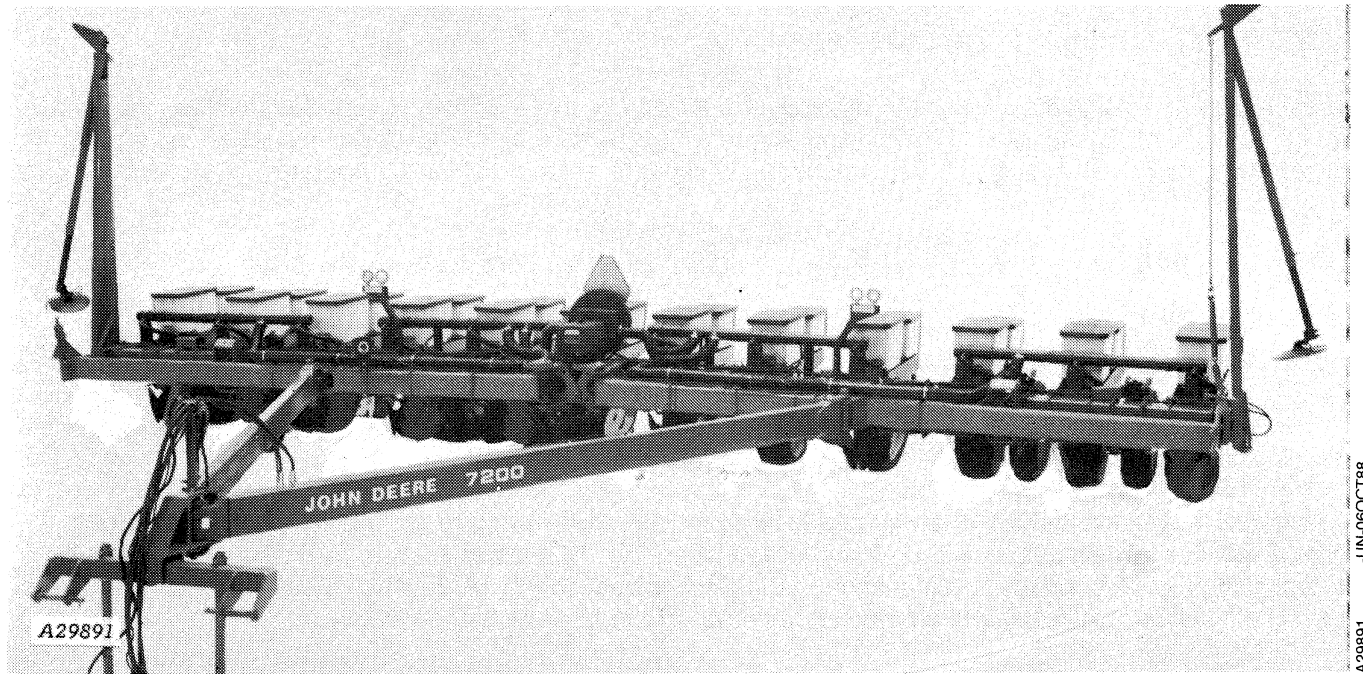

7200 Flex-Fold 12-Row Narrow Drawn Max-Emerge Planter with Vacuum Seed Metering System

 B21,7ID,A -19-28JUN90

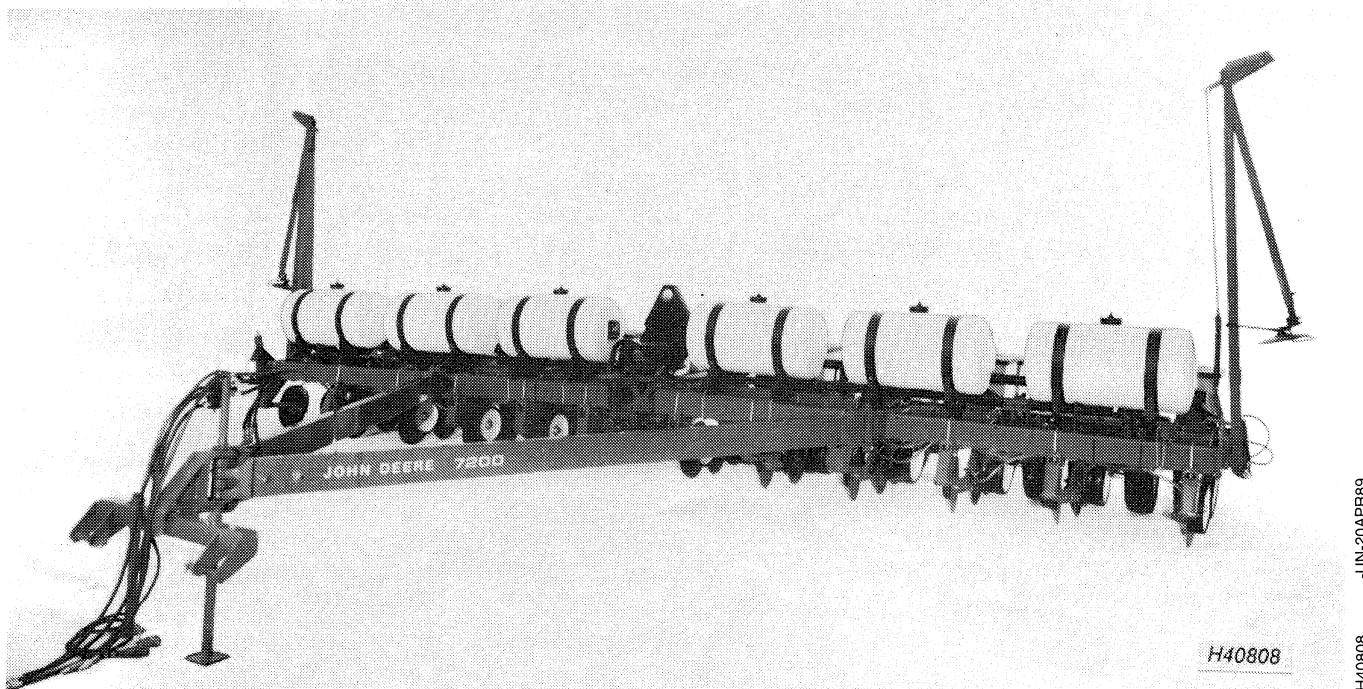

7200 Flex-Fold 12-Row Narrow Drawn Max-Emerge Planter with Vacuum Seed Metering System and Liquid Fertilizer Attachment

B21,7ID,B -19-28JUN90

A MESSAGE TO OUR CUSTOMERS

We appreciate the confidence placed in us by your purchase of this machine. Before this machine was brought to market, countless hours were spent designing and testing to ensure that its performance would be at the highest level. To achieve maximum performance, it is imperative this machine be operated in accordance with the procedures outlined in this manual.

Refer to your John Deere dealer's Predelivery Instruction for attachment assembly information.

Information in this manual is divided into sections. These sections are identified at the top of each page. Two-part page numbers identify both the section and page of that section.

Specific information within each section is organized into modules. These modules are encased in boxes with principle modules identified with a heading at the top left side of the box.

By reviewing this manual often, one will quickly learn which section to go to for specific information. For instance, planter adjustments would be found in the Operating the Planter section, lubrication intervals in the Lubrication section, opener maintenance in the Service section, etc. A detailed Table of Contents is found immediately behind this page, and an Index is provided at the back of the manual.

Thanks again for purchasing this machine.

Contents

	Page		Page
Safety	05-1	Planters Equipped w/Single-Disk Fert. Opener	30-13
Safety Signs	10-1		
Preparing the Tractor		Preparing the Vacuum Meter Unit	
Hydraulic Pressure	15-1	Choosing Seed Disks	35-1
Check Tractor Hydraulic System	15-1	Selecting Seed Disks	35-3
Rockshaft Selector Lever	15-1	Selecting Seed Disks	35-5
Link Lengths	15-2	Adjusting Vacuum Meter Insert	35-7
Sway Blocks	15-2	Installing Seed Disk	35-8
Tire Size	15-3	Adjusting Meter Hub	35-10
Check Tire Inflation	15-3	Sugar Beet and Sorghum Seed Knockout Wheel	35-12
Rear Wheel Weighting	15-3	Installing Knockout Assembly	35-13
Setting Wheel Tread	15-4	Selecting Correct Vacuum Meter Brush	35-14
Front End Weighting	15-4	Changing Vacuum Meter Brush	35-14
Set Tractor Control Valve Lever	15-4	Installing Vacuum Meter Brush	35-15
Selective Control Valve Lever Stop	15-5	Check Hydraulic Connections	35-16
Auxiliary Return Line Coupler Attachment ...	15-6		
Directional Valve	15-6	Preparing the Plateless Meter Unit	
Preparing the Planter		Plateless Seed Hoppers	40-1
Tightening Hardware	20-1	Feed Cup Metering Unit	40-3
Tire Inflation	20-1	Feed Cups	
Changing Row Widths	20-1	Soybean Feed Cup	40-3
Lubrication	20-2	Low Rate Sorghum	40-4
Selecting Seed Plates (Plate Seed Meters)	20-2	Acid-Delinted Cotton, Small Soybeans ...	40-6
		Replace Feed Cup w/Finger Pickup	40-7
Attaching and Detaching		Operating the Planter	
Attaching Planter to Tractor	25-1	General Information	45-1
Attaching Monitor to Tractor	25-8	Raising and Lowering the Planter	45-2
Detaching Planter from Tractor	25-9	Leveling the Planter	45-2
Detaching Monitor from Tractor	25-10	Marker Length	45-5
		Raising and Lowering Markers	45-5
Transporting		Marker Float Range	45-6
Transport Safely	30-1	Marker Off Switch	45-7
Folding the Planter	30-1	Independent Marker Control (Optional)	45-7
Unfolding the Planter	30-7	Marker Breakaway Bolt	45-7

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMA51905 G0-19-18JUL90

COPYRIGHT® 1990
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright® 1989, 1988, 1987 Deere & Company

Contents

	Page		Page
Half-Width Planting Drive Disconnect (Optional)	45-8	Plateless Meter Seed Charts	
Clutch Actuator	45-8	Finger Pickup	
Vacuum Meter Pump	45-8	Finger Pickup	70-1
Vacuum Meter Pump Pressure	45-9	Soybean Feed Cup	
Changing Planting Depth	45-10	Soybeans/Narrow Rows	70-2
Adjusting Closing Wheel Down Force	45-11	Soybeans/Regular Rows	70-3
Centering (Align) Closing Wheels	45-11	Beans/Ft.-Lb./Acre-Narrow Rows	70-4
Filling Seed Hoppers	45-12	Beans/Ft.-Lb./Acre-Regular Rows	70-5
Emptying Seed Hoppers		Edible Beans/Narrow Rows	70-6
Vacuum Meter Hoppers	45-13	Edible Beans/Regular Rows	70-7
Plateless Meter	45-13	(w/Seed Guide A48005) Small	
Inspection and Cleanout of Seed		Soybeans/Narrow Rows	70-8
Hoppers/Metering Units	45-15	(w/Seed Guide A48005) Small	
How To Use Planting Rate Charts		Soybeans/Regular Rows	70-9
How To Use Planting Rate Charts	50-1	Planting Small Soybeans w/Soybean	
Changing Input Sprocket Combinations	50-2	Feed Cup	70-10
Changing Planting Rate Sprocket		(Small Soybeans)	
Combinations	50-3	Beans/Ft.-Lb./Acre-Narrow Rows	70-11
Operating the Vacuum Meter		(Small Soybeans)	
Vacuum Meter Operating Characteristics	55-1	Beans/Ft.-Lb./Acre-Regular Rows	70-12
Use of Talc Lubricant	55-1	Acid Delinted Cotton/Narrow Rows	70-13
Set Vacuum Level	55-3	Acid Delinted Cotton/Regular Rows	70-14
Vacuum Level for Corn	55-4	Planting Acid-Delinted Cotton	
Vacuum Level for Peanuts	55-5	w/Soybean Feed Cup	70-15
Vacuum Level for Sugar Beets	55-6	Low Rate Sorghum Feed Cup	
Vacuum Meter Seed Charts		Sorghum (Narrow Rows)	70-16
Decal Seed Charts		Sorghum (Regular Rows)	70-17
Decal Seed Charts	60-1	Regular Rate Sorghum Feed Cup	
Vacuum Meter		Sorghum (Narrow Rows)	70-18
Corn and Sunflower	60-2	Sorghum (Regular Rows)	70-19
Cotton	60-4	Edible Bean Feed Cup	
Cotton Hilldrop	60-6	Edible Beans or Large Soybeans	
Sorghum	60-8	(Narrow Rows)	70-20
Soybeans/Narrow Rows	60-10	Edible Beans or Large Soybeans	
Soybeans/Regular Rows	60-12	(Regular Rows)	70-21
Sugar Beets	60-14	Checking Seed Population	
Small Edible Beans	60-16	Drive Wheel Slippage	75-3
Medium Edible Beans	60-18	General Attachments	
Large Edible Beans	60-20	Wheel Chain Trash Deflector	80-1
Runner and Spanish Peanuts	60-22	Drive Wheel Rock Guard	80-1
Virginia Peanuts	60-24	Unit Down Force Springs	80-1
Operating the Plateless Meter		Heavy-Duty Down Force Springs	80-2
Finger Pickup Metering Unit Operating		Unit Mounted Coulters	80-3
Characteristics	65-1	Conservation Furrowers	80-4
Feed Cup Operating Characteristics	65-2	Tine-Tooth Tillage Attachment	80-6
		Heavy-Duty Closing Wheels	80-7
		Rotary Scraper	80-8
		Frame Mounted Coulters	80-8

Continued on next page

Contents

	Page		Page
Row Leveler Chain	80-10	Planter (Folded)	115-4
Granular Chemical Attachment		Vacuum Meter	115-5
Granular Chemical Application Rates		Plateless Meter	115-9
U.S. Measurement	85-4	Checking Solenoids	115-10
Insecticide Application-Clay Granules	85-6	Checking Valves	115-12
Insecticide Application-Sand Granules	85-7	Bleeding the Hydraulic Lift System	115-14
Herbicide Application-Clay Granules	85-8	Filling Marker Hydraulic Cylinders	115-16
Calibrating Insecticide/Herbicide Meter	85-9	Lubrication	
Seed Furrow Insecticide Placement		General Purpose Grease	120-1
Bracket	85-12	High Temperature/Extreme Pressure Grease	120-2
Insecticide Band Spreader		Lubrication Symbols	120-2
Front Mounted (7 in.)	85-12	Roller Chain and Pesticide Gear Lubrication	120-3
Rear Mounted	85-13	Alternative Lubricants	120-8
Herbicide Diffuser	85-13	Special Lubricants for Vacuum Seed Meters	120-9
Windshield	85-14	Service	
Spring-Tooth Incorporator	85-14	Practice Safe Maintenance	125-1
Liquid Chemical Attachment		Bolt Torque (Metric)	125-1
Liquid Herbicide Pre-Emerge Spray Attachment	90-1	Install Service Locks	125-2
Dry Fertilizer Attachment		Service Tires Safely	125-3
Checking Dry Fertilizer Rates	95-4	Hydraulic Line Filter Maintenance	125-3
Storing Dry Fertilizer	95-6	Replacing Drill Shaft Cotter Pins/Countershaft Shear Pins	125-4
Surface Applicator Bracket	95-6	Ratchet Drive	125-5
Liquid Fertilizer Attachment		Marker Breakaway Bolt	125-6
Quik-Fill Liquid Fertilizer Rates	100-1	Drive Wheels	125-7
Changing Fertilizer Transmission Sprocket Combinations	100-4	Coulter Maintenance	125-7
Changing Driver/Driven Gear Combinations	100-5	Single-Disk Fertilizer Opener Maintenance	125-8
Operating the Metering Pump	100-6	Cleaning Insecticide and/or Herbicide Hoppers	125-9
Checking Fertilizer Rates	100-7	Changing Vacuum Gauge Filter	125-11
How To Use Liquid Fertilizer Rate Charts	100-8	Clean Vacuum Pump Motor Guard	125-12
Ballast Tank Attachment	100-21	Clean Vacuum Manifold System	125-12
Double-Disk Fertilizer Opener Attachment		Clean Vacuum Meter Drive	125-13
Double-Disk Fertilizer Openers	105-1	Vacuum Meter Inspection and Service	125-13
Single-Disk Fertilizer Opener Attachment		Vacuum Motor Inspection	125-16
Setting the Gauge Wheel	110-5	Installing New Vacuum Seal	125-17
Adjusting Down Force	110-6	Finger Pickup Mechanism	125-17
Adjusting Cast Spout	110-8	Adjusting Gauge Wheels	125-22
Installing Heavy-Duty Springs	110-9	Replacing Seed Opener Blades and Seed Tube Guard	125-22
Troubleshooting		Dry Fertilizer Drive Shaft	125-24
Planter (Unfolded)	115-1	Cleaning Dry Fertilizer Hoppers	125-24
		Replacing Auger Sections	125-25
		Cleaning Liquid Fertilizer Tanks	125-28
		Metering Pump	125-29

Continued on next page

Contents

Page

Cleaning Liquid Fert. Tank Lid Fittings/Drip Line
Hoses 125-30

Storage

Beginning of the Season Service 130-1
End of Season Service 130-3

Crime Prevention Tips 135-1

Specifications

 
Record Planter Serial Number 140-4

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

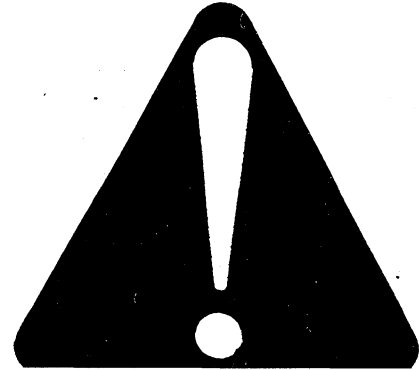

DX,ALERT -19-04JUN90

T81389 -JUN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-04JUN90

TS201 -JUN-23AUG88



DISPOSE OF SPRAY CANS SAFELY

If spray can paint is used for protecting the machine to be put in storage, be careful when discarding empty cans. Do not incinerate or puncture can.

B21,3SA,A -19-18MAY90

OPERATE THE PLANTER SAFELY

Be careful when operating planter to avoid injury.

If the planter must be in a raised position while working on or near it, be certain service locks are installed.

Serious injury or death can result from contact with electric lines. Use care when moving or operating this machine near electric lines to avoid contact.

 
Stand clear of machine when wings are being folded or unfolded. Mechanical or hydraulic failure can allow wings to move rapidly.

Be sure cylinder and attaching hoses are fully charged with oil before operating system.

Be careful when operating system on hillsides; tractor can tip sideways if it strikes a hole, ditch or other irregularity.

Permit only one person, the operator, on tractor platform while tractor and planter are in operation.

Lower planter completely to the ground before unhitching from the tractor. Be sure planter is on a level and firm surface.

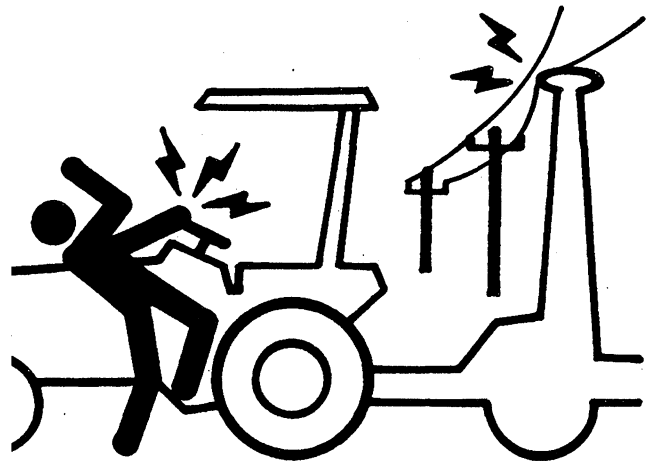

A34331

A34331 -JUN-13OCT88

 
B21,5SA,A -19-28JUN90



KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury, such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view, resulting in the machine being operated in an unsafe manner.

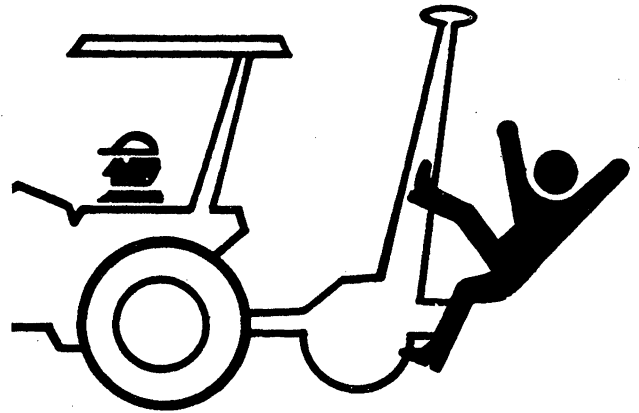

A34332

B21,1SA,F -19-28JUN90

 
-JUN-13OCT88
A34332

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

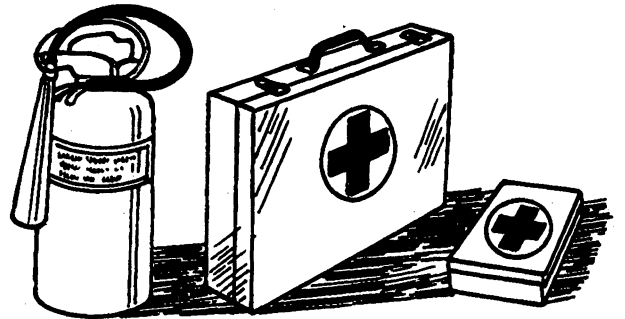

DX,FIRE2 -19-04JUN90

 
-JUN-23AUG88
TS291

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

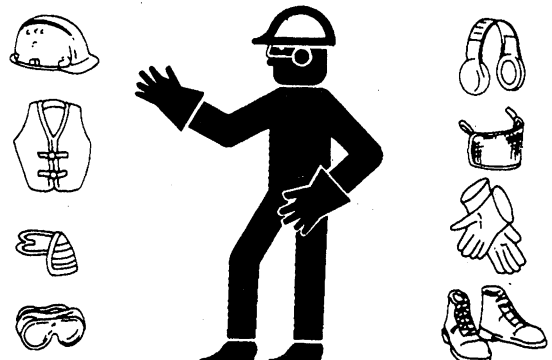

DX,WEAR -19-04JUN90

-JUN-23AUG88
TS206



HANDLE CHEMICALS PROPERLY

Agricultural chemicals can be dangerous. Improper selection or use can injure persons and animals. BE SAFE; handle and apply with care. Follow instructions of the chemical manufacturer.



A34471

B21,1SA,D -19-28JUN90

-UN-11OCT88

 
A34471

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

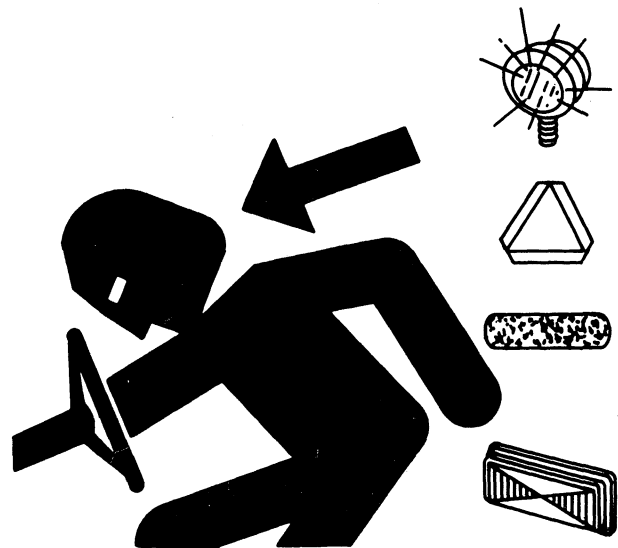

DX,FLASH -19-04JUN90

-UN-12APR90


TS951

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

 See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

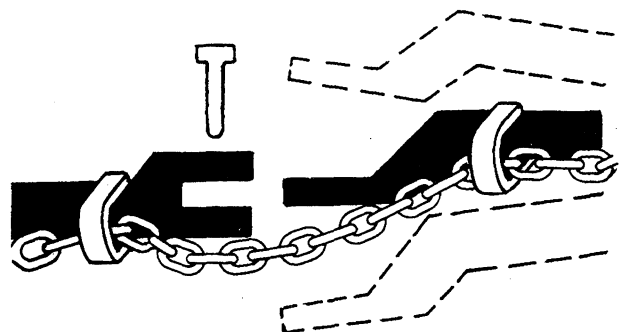

DX,CHAIN -19-04JUN90

-UN-23AUG88

TS217



TRANSPORT SAFELY

Install marker lockup straps to prevent injury from lowered marker.

The maximum transport speed for this planter is 20 mph (32 km/h). **DO NOT EXCEED.** Never travel at any speed which does not permit adequate control of steering and stopping.

Reduce speed over rough ground.

A34333



B21,1SA,G

-19-28JUN90

 
A34333
-UN-13OCT88

REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing load equal to or less in weight than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

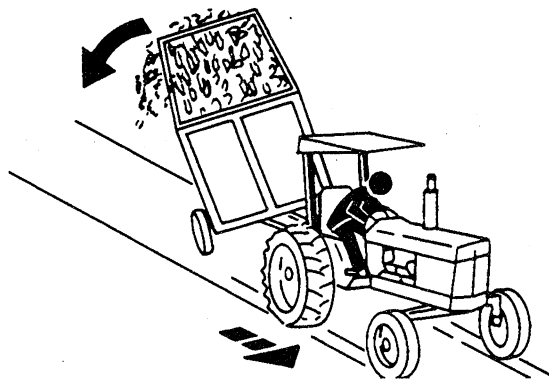

DX,TOW

-19-04JUN90

TS216
-UN-23AUG88



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-04JUN90

TS218 -UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.



DX,PAINT -19-04JUN90

TS220 -UN-23AUG88



AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials.

Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area. Install fire resisting guards to protect hoses or other materials.



TS953 -JUN-15MAY90

DX,TORCH -19-04JUN90

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

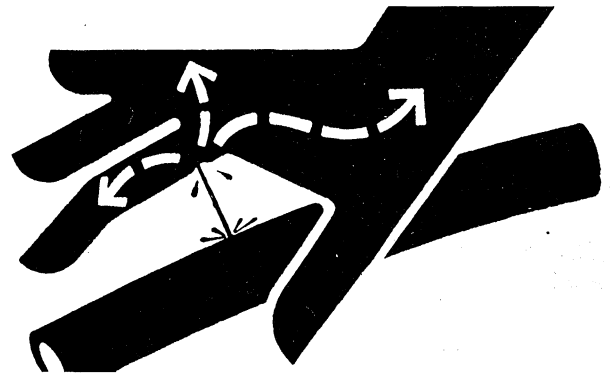

X9811 -JUN-23AUG88

DX,FLUID,NA -19-11JUN90



RELEASING FERTILIZER AUGERS SAFELY

Do not use welding torch to remove build-up of dry fertilizer from auger shaft.

Fertilizers trapped inside augers can cause gas to form and, when heated, can cause augers to explode.

HX,B21,5SA,A -19-28JUN90

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-04JUN90


TS219 -UN-23AUG88

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

 NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

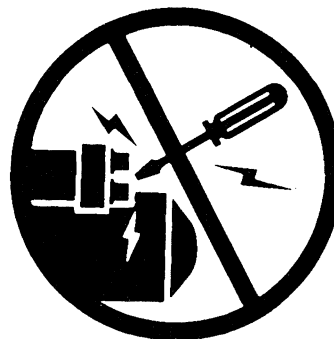

DX,BYPAS1 -19-04JUN90

TS177 -UN-11JAN89

Do not connect auxiliary equipment to starter terminals. Doing so can cause tractor to start in gear and move.

Connect directly to tractor battery only.

B05,15SA,C -19-18MAY90

 


OBSERVE ENVIRONMENTAL PROTECTION REGULATIONS

Be mindful of the environment and ecology.

Before draining any fluids, find out the correct way of disposing of them.

Observe the relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters and batteries.

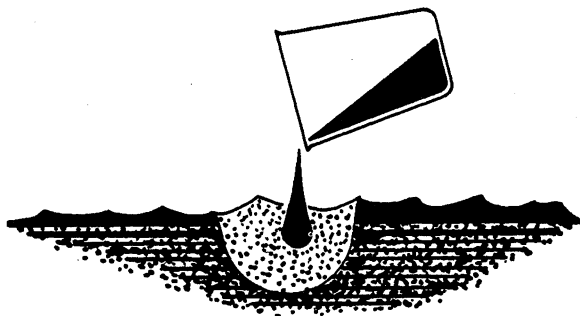

H01,9000SA,L -19-15JUN90

TS222 -JUN-23AUG88

Safety Signs

