

H35332

-UN-01JAN94



*JOHN DEERE 8820 COMBINE WITH 844 CORN HEAD*

*(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)*

## NOTE

IN ADDITION TO TITAN COMBINES, PARTS INFORMATION FOR TITAN II COMBINES IS ALSO LOCATED IN THIS CATALOG. SERIAL NUMBER (610701- ) INDICATES TITAN II PARTS.

THIS CATALOG CONTAINS PARTS INFORMATION FOR THE 6466-03 EXPORT MACHINE.

FOR 200 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 200 SERIES PLATFORM PARTS CATALOG - PC-1558.

FOR 900 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 900 SERIES PLATFORM PARTS CATALOG - PC-2104.

FOR 40 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 40 SERIES CORN HEAD PARTS CATALOG - PC-1223.

FOR 50 SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50 SERIES ROW-CROP HEAD PARTS CATALOG - PC-1549.

FOR 50A SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50A SERIES ROW-CROP HEAD PARTS CATALOG - PC-1747.

FOR THREE-ROLLER BELT PICKUP PARTS INFORMATION, REFER TO JOHN DEERE THREE-ROLLER BELT PICKUP PARTS CATALOG - PC-1189 (200 SERIES) OR PC-2210 (900 SERIES).

## IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 8820 COMBINE. MACHINE VINTAGE IS DETERMINED BY THE COMBINE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

## SERIAL NUMBER AND PRODUCT IDENTIFICATION NUMBER (PIN) PLATES

USE ALL NUMBERS, LETTERS AND SPACES SHOWN ON THE SERIAL NUMBER PLATE OR THE PRODUCT IDENTIFICATION NUMBER PLATE IN WARRANTY CORRESPONDENCE.

COMBINES ( -564100)

ON THESE COMBINES, THE SERIAL NUMBER PLATE IS LOCATED ON THE REAR LEFT-HAND UPRIGHT.

AN EXAMPLE OF THE SERIAL NUMBER ON THIS PLATE IS:

E8820564100H

E - EQUIPMENT  
8820 - COMBINE MODEL  
564100 - COMBINE SEPARATOR SERIAL NUMBER  
H - MANUFACTURING UNIT (HARVESTER WORKS)

COMBINES (564101- )

ON THESE COMBINES, THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR THE RIGHT-HAND SIDE OF THE TOOL BOX. AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

H08820X564101  
COMBINE

(FIRST LINE)

H0 - MANUFACTURING UNIT (HARVESTER WORKS)  
8820 - MODEL IDENTIFIER  
X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX  
564101 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

COMBINE - TYPE OF PRODUCT

## ENGINE SERIAL NUMBER

THE ENGINE SERIAL NUMBER PLATE IS LOCATED ON THE RIGHT-HAND SIDE OF THE ENGINE BLOCK.

ENGINES ( -227599)

AN EXAMPLE OF THE ONE-LINE, SIXTEEN-DIGIT NUMBER ON THIS SERIAL NUMBER PLATE IS:

6466TH01227599RG

6 - NUMBER OF CYLINDERS  
466 - CUBIC INCH DISPLACEMENT  
A - FUEL TYPE (TURBOCHARGED INTERCOOLED DIESEL)  
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)  
01 - ENGINE VERSION  
227599 - ENGINE SERIAL NUMBER  
RG - MANUFACTURING UNIT OF ENGINE (JOHN DEERE ENGINE WORKS)

ENGINES (227600- )

AN EXAMPLE OF THE TWO-LINE NUMBER ON THIS SERIAL NUMBER PLATE IS:

RG6466227600  
6466AH02

(FIRST LINE)

RG - MANUFACTURING UNIT (JOHN DEERE ENGINE WORKS)  
6 - NUMBER OF CYLINDERS  
466 - CUBIC INCH DISPLACEMENT  
A - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX  
227600 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

6 - NUMBER OF CYLINDERS  
466 - CUBIC INCH DISPLACEMENT  
A - FUEL TYPE (TURBOCHARGED INTERCOOLED DIESEL)  
H - MANUFACTURING UNIT OF MACHINE (HARVESTER WORKS)  
02 - ENGINE VERSION

## PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES A PART MAY BE USED. FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.

-000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.

000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.

000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING THE SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER CHANGE WAS MADE, BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

## DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

## BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

## KITS

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM FOR RELATIONSHIP.

## JDM REMANUFACTURED COMPONENTS

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

## BOLT AND CAP SCREW STRENGTH IDENTIFICATION

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER.

## COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE LISTED IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

## SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

## TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-MATIC™  
HARVESTRAK™  
POSI-TORQ™

TORQ-GARD SUPREME®  
QUIK-TATCH™

## CHANGE INDICATOR LINE (MICROFICHE CATALOGS ONLY)

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

## SECTIONAL INDEX

	SECTION
GENERAL INFORMATION . . . . .	10
BASIC ENGINE . . . . .	20
FUEL AND AIR . . . . .	30
ELECTRICAL . . . . .	40
POWER TRAIN . . . . .	50
STEERING AND BRAKES . . . . .	60
HYDRAULICS . . . . .	70
SEPARATOR SHELL . . . . .	80
OPERATOR'S STATION . . . . .	90
HEADERS - REFER TO INDIVIDUAL HEADER PARTS CATALOGS . . . . .	100
FEEDER HOUSE . . . . .	110
SEPARATOR . . . . .	120
GRAIN TANK AND UNLOADING AUGER . . . . .	130
MAJOR DRIVES . . . . .	140
HEADER HEIGHT CONTROL . . . . .	160
DECALS, BELTS AND CHAINS . . . . .	170
NUMERICAL INDEX . . . . .	180

## ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
	A				
2D7	ACCESSORIES, INSTRUMENT PANEL .....	40-55	5I23	AUGER, UPPER TAILINGS AUGER .....	120-154
2B25	ACCUMULATOR PRESSURE GAUGE .....	40-21	6C10	AUGER, VERTICAL, LOWER GEAR CASE .....	130-33
4F11	ACCUMULATOR,PRESSURE CTL.VALVE AND MTG. BRKT. ....	70-107	6C8	AUGER,CROSS,DRIVE TIGHTENERS,GRAIN TANK .....	130-31
2B24	ADAPTER HARNESS, HARVESTRAK .....	40-20	6C18	AUGER,HORIZONTAL UNLDG. DRIVE GEAR CASE .....	130-41
1D22	ADAPTER, ENGINE COOLANT HEATER.....	20-69	6B15	AUGER,HORIZONTAL UNLOADING SWIVEL SHROUD....	130-11
1D7	AFTERCOOLER .....	20-54	5G16	AUGERS, HOUSING, SHOE GRAIN SUPPLY .....	120-95
1F4	AIR CLEANER .....	30-17	5G20	AUGERS, SHOE GRAIN SUPPLY, DRIVE SHAFT .....	120-99
4I21	AIR CONDITIONER EVAPORATOR .....	90-58	5G18	AUGERS, SUPPLY, SHOE GRAIN .....	120-97
4I21	AIR CONDITIONER EXPANSION VALVE.....	90-58	6D21	AUTO.HEADER HEIGHT CONTROL CHECK BLOCK.....	160-1
4I8	AIR CONDITIONER HI PRESSURE SWITCH .....	90-43	6E8	AUTOMATIC HDR.HGT.CTL.WIRING HARNESS .....	160-13
4I16	AIR CONDITIONER LINES .....	90-53	6E2	AUTOMATIC HDR.HGT.CTL.DROP RATE VALVE .....	160-7
4I19	AIR CONDITIONER LINES .....	90-56	6E2	AUTOMATIC HDR.HGT.CTL.FULL FLOW PLUG.....	160-7
4I21	AIR CONDITIONER LINES .....	90-58	6E2	AUTOMATIC HDR.HGT.CTL.HYDRAULIC OIL LINE .....	160-7
4I3	AIR CONDITIONING COMPRESSOR.....	90-38	6E8	AUTOMATIC HEADER HEIGHT CONTROL LINKAGE .....	160-13
4I6	AIR CONDITIONING, O-RING KIT .....	90-41	6E12	AUTOMATIC HEADER HEIGHT CONTROL SWITCH .....	160-17
5H16	AIR DUCTS, CLEANING FAN .....	120-121	6D21	AUTOMATIC HEADER HEIGHT CONTROL VALVE .....	160-1
4H24	AIR FILTER, CAB.....	90-35	3C12	AXLE SHAFT FINAL DRIVE .....	50-31
1F3	AIR INTAKE TUBES (PRECLNR.TO AIR CLNR.) .....	30-16	3B24	AXLE, DRIVE WHEEL .....	50-16
1F5	AIR INTAKE TUBES-AIR CLEANER TO MANIFOLD.....	30-18	3C18	AXLE, FINAL DRIVE (CRAWLER TRACKS).....	50-37
4H22	AIR LOUVER .....	90-32	3I14	AXLE, REAR.....	60-29
2E16	ALTERNATOR ADJUSTING STRAP .....	40-92	3I15	AXLE, REAR.....	60-31
2E17	ALTERNATOR ADJUSTING STRAP .....	40-93	3I18	AXLE,REAR,SPINDLE HSGS-HVY-DTY REAR AXLE .....	60-34
2E16	ALTERNATOR BRACKET .....	40-92			
2E17	ALTERNATOR BRACKET .....	40-93		B	
2E14	ALTERNATOR SHEAVE AND BELT.....	40-90	4B16	BACK PLATE, MAIN HYDRAULIC PUMP.....	70-10
2E15	ALTERNATOR, COMPLETE, 90 AMP .....	40-91	6B18	BAFFLE, GRAIN TANK SUMP .....	130-14
2E10	ALTERNATOR, 72 AMP.....	40-86	5F9	BAR, CYLINDER SHEAR.....	120-58
2E12	ALTERNATOR, 90 AMP.....	40-88	2C5	BATTERY CABLES .....	40-27
2E7	AM AND AM-FM PUSH-BUTTON RADIO (MOTOROLA).....	40-82	2C5	BATTERY MOUNTINGS .....	40-27
2E8	AM PUSH-BUTTON RADIO.....	40-83	2B13	BEACON LIGHTS (EXPORT) .....	40-8
2E8	AM-FM PUSH-BUTTON RADIO.....	40-83	3G19	BEARING AND COVER, QUILL .....	50-144
6E11	AMPLIFIER .....	160-16	3C21	BEARING CAP, FINAL DRIVE (CRAWLER TRACKS) .....	50-40
1G23	ANEROID ACTIVATOR, HYDRAULIC (AH 03).....	30-64	3G12	BEARING, AND SEALS, SHAFT, OUTER COVER .....	50-136
5D20	ARM, CONCAVE ADJUSTING SHAFT .....	120-19	3D16	BEARING,SEAL,HYDRO.DR.PUMP FRONT COVER ASSY (EATON) .....	50-59
5E16	ARM, DUAL-RANGE CYLINDER DRIVE .....	120-40	3F14	BEARINGS, CRAWLER .....	50-109
1C16	ARM, ROCKER (AH 01) .....	20-39	3F16	BEARINGS, CRAWLER .....	50-111
1C17	ARM, ROCKER (AH 02, 03) .....	20-40	3F19	BEARINGS, CRAWLER DRIVE .....	50-115
2E22	ARMATURE, STARTER .....	40-99	3C12	BEARINGS, FINAL DRIVE .....	50-31
4H10	ARMREST (PERSONAL POSTURE SEAT) .....	90-19	3C16	BEARINGS, FINAL DRIVE .....	50-35
2C19	ARMS, PIVOT, TAIL-LAMP (EXPORT) .....	40-41	3C18	BEARINGS, FINAL DRIVE (CRAWLER TRACKS).....	50-37
3H1	ARMS, STEERING, CAM LOBE MOTOR.....	50-150	3C19	BEARINGS, FINAL DRIVE (CRAWLER TRACKS).....	50-38
4H13	ASH TRAY .....	90-22	1C13	BEARINGS, MAIN.....	20-35
1F6	ASPIRATOR .....	30-19	1C13	BEARINGS, MAIN THRUST.....	20-35
6C12	AUGER AND HOUSING, VERTICAL, GRAIN TANK .....	130-35	5I21	BEARINGS, TAILINGS ELEVATOR CONVEYOR.....	120-152
6C19	AUGER HOUSING, HORIZONTAL UNLOADING, 14 FT. AND 17 FT. ....	130-42	3E1	BEARINGS,HYDRO. DRIVE PUMP (EATON) .....	50-69
6C20	AUGER HOUSING, HORIZONTAL UNLOADING, 17 FT. AND 20 FT. ....	130-43	3C5	BEARINGS,TRANSMISSION COUNTERSHAFT,GEARS....	50-23
2B10	AUGER LIGHT, UNLOADING .....	40-5	3C5	BEARINGS,TRANSMISSION INPUT SHAFT,GEARS.....	50-23
4D15	AUGER SWING HYD.OIL LINES AND HOSES .....	70-61	3C7	BEARINGS,TRANSMISSION PINION SHAFT,GEARS.....	50-25
4D16	AUGER SWING HYD.OIL LINES AND HOSES .....	70-62	6F6	BEATER AND CYLINDER TACHOMETER .....	170-13
6B24	AUGER, CROSS, FRONT, GRAIN TANK.....	130-21	5F2	BEATER BEARING LUBE BANK SYS-LH-HYDRO.....	120-51
6B25	AUGER, CROSS, REAR, GRAIN TANK .....	130-22	5F1	BEATER BEARING LUBE BANK SYSTEM-RH .....	120-50
6C14	AUGER, HORIZONTAL UNLOADING SWIVEL .....	130-37	5E23	BEATER BELT .....	120-47
6C15	AUGER, HORIZONTAL UNLOADING SWIVEL .....	130-38	5E24	BEATER BELT .....	120-48
6C21	AUGER, HORIZONTAL UNLOADING, 14 FT. AND 17 FT. ....	130-44	6F6	BEATER BELT .....	170-13
6C22	AUGER, HORIZONTAL UNLOADING, 20 FT. ....	130-45	5F3	BEATER DRIVE .....	120-52
5I9	AUGER, LOADING .....	120-139	5F4	BEATER DRIVE .....	120-53
5I14	AUGER, LOWER TAILINGS .....	120-145	5F5	BEATER DRIVE .....	120-54
5H20	AUGER, LOWER, CLEAN GRAIN.....	120-125	5F6	BEATER DRIVE, DUAL-RANGE .....	120-55
6C17	AUGER, UNLOADING, LUBE BANK SYSTEM.....	130-40	5D12	BEATER GRATE, OPEN-BAR CONCAVE .....	120-9
2B9	AUGER, UNLOADING, WIRING HARNESS .....	40-3	5E23	BEATER, CYLINDER TACHOMETER.....	120-47
			5E24	BEATER, CYLINDER TACHOMETER.....	120-48
			2C16	BECON LIGHTS, DECAL (EXPORT) .....	40-38
			1F2	BELL CRANK, THROTTLE LINKAGE .....	30-15
			6F5	BELT AND SHEAVES .....	170-12





## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1F6	CAP, EXHAUST RAIN .....	30 - 19	2E24	COIL, STARTER.....	40 - 101
4B9	CAP, HYDRAULIC OIL RESERVOIR .....	70 - 3	1E22	COLD WEATHER STARTING AID .....	30 - 11
3G21	CAP, YOKE, PIVOTS AND .....	50 - 146	3H21	COLUMN AND WHEEL, STEERING.....	60 - 11
3G2	CARRIER, FIRST PLANET (FOUR-WHEEL DRIVE).....	50 - 124	2E23	COMMUTATOR END FRAME, STARTER .....	40 - 100
3G14	CARRIER, PISTONS AND CAM .....	50 - 138	4I10	COMPRESSOR BELT .....	90 - 45
1D16	CENTER HOUSING, TURBOCHARGER.....	20 - 63	4I11	COMPRESSOR CLUTCH AND SERVICE VALVES.....	90 - 47
3E18	CENTER SECTION, HYDRO, DRIVE (EATON).....	50 - 86	4I14	COMPRESSOR HARDWARE KIT .....	90 - 51
3E16	CENTER SECTION, HYDROSTATIC DRIVE .....	50 - 84	4I7	COMPRESSOR HARNESS .....	90 - 42
5G23	CHAFFER .....	120 - 102	4I12	COMPRESSOR KIT .....	90 - 48
5H6	CHAFFER FRAME .....	120 - 109	4I9	COMPRESSOR MOUNTING AND SUPPORTS .....	90 - 44
5H8	CHAFFER FRAME BRACKETS.....	120 - 111	4I10	COMPRESSOR MOUNTING AND SUPPORTS .....	90 - 45
5H6	CHAFFER FRAME COVER .....	120 - 109	4I12	COMPRESSOR PARTS .....	90 - 48
5H8	CHAFFER FRAME SWINGERS.....	120 - 111	4I7	COMPRESSOR RELAY .....	90 - 42
5B24	CHAIN GUIDES, FEEDER CONVEYOR DRIVE.....	110 - 19	2C5	COMPRESSOR, WIRING HARNESS .....	40 - 27
5D22	CHAIN, CONCAVE ADJUSTING CONTROLS .....	120 - 21	5D22	CONCAVE ADJUSTING CONTROLS .....	120 - 21
5I4	CHAIN, CONVEYOR .....	120 - 133	5D20	CONCAVE ADJUSTING SHAFT .....	120 - 19
5I3	CHAIN, CONVEYOR, CLEAN GRAIN ELEVATOR .....	120 - 132	5D12	CONCAVE, OPEN-BAR .....	120 - 9
5H11	CHAIN, CRANK SHOE.....	120 - 115	5D17	CONCAVE, SPIKE-TOOTH .....	120 - 15
5B23	CHAIN, DRIVE, FEEDER CONVEYOR.....	110 - 18	4I16	CONDENSER .....	90 - 53
5B22	CHAIN, FEEDER CONVEYOR .....	110 - 17	4I19	CONDENSER .....	90 - 56
6F4	CHAIN, FEEDER HOUSE (LONG) .....	170 - 11	4I19	CONDENSER, RECEIVER AND AIR CONDITIONER LINES.....	90 - 56
5F17	CHAIN, STRAW WALKER .....	120 - 67	1B8	CONDITIONER, COOLANT .....	20 - 3
5I21	CHAIN, TAILINGS ELEVATOR CONVEYOR .....	120 - 152	1C18	CONNECTING RODS .....	20 - 41
5I23	CHAIN, UPPER TAILINGS AUGER .....	120 - 154	2F4	CONNECTOR, ELECTRICAL, SERVICE KIT .....	40 - 106
6F10	CHAINS, DRIVE, STRAW WALKER .....	170 - 17	2C21	CONNECTOR, TRAILER HARNESS (EXPORT) .....	40 - 43
6F1	CHAINS, FEEDER HOUSE (VARIABLE DRIVE .....	170 - 8	1F11	CONNECTORS, FUEL INJECTION PUMP HOUSING (AH 01).....	30 - 24
4G23	CHANNEL SUPPORTS .....	90 - 7	1F18	CONNECTORS, FUEL INJECTION PUMP HOUSING (AH 02).....	30 - 32
6C1	CHANNELS, GRAIN TANK INNER UNLDG. AUGER.....	130 - 23	1G10	CONNECTORS, FUEL INJECTION PUMP HOUSING (AH 02).....	30 - 50
3F1	CHARGE PRESSURE RELIEF VALVE BLOCK, KIT (EATON) .....	50 - 95	1G19	CONNECTORS, FUEL INJECTION PUMP HOUSING (AH 02,03) .....	30 - 60
3D13	CHARGE PUMP MOUNTING, HYDROSTATIC DRIVE .....	50 - 56	2F8	CONNECTORS, SUPPLEMENTARY TERMINALS.....	40 - 110
3D11	CHARGE PUMP, HYDROSTATIC DRIVE.....	50 - 54	6F24	CONSOLE COVER DECALS.....	170 - 33
6D21	CHECK BLOCK, AUTO. HEADER HEIGHT CONTROL .....	160 - 1	4H12	CONSOLE COVERS .....	90 - 21
1G8	CHECK VALVE, FUEL (AH 01, 02).....	30 - 48	4H12	CONSOLE PANEL .....	90 - 21
3G16	CHECK VALVES, CAM LOBE MOTOR .....	50 - 140	2B22	CONSOLE, GRAIN LOSS (HARVESTRAK) .....	40 - 18
5F19	CHOPPER HOUSING, STRAW .....	120 - 69	4E10	CONT. LEVER, PLAT. FORE AND AFT (EXPORT) .....	70 - 81
5F20	CHOPPER HOUSING, STRAW .....	120 - 70	2D1	CONTROL BOX, LOW SHAFT SPEED MONITORING .....	40 - 48
5G3	CHOPPER, STRAW, KNIFE AND SUPPORT .....	120 - 78	3D6	CONTROL CABLE AND LEVER, HYDRO. DRIVE.....	50 - 49
5F23	CHOPPER, STRAW, PLATE AND FINS.....	120 - 73	3D8	CONTROL CABLE MOUNTING HYDRO. DRIVE.....	50 - 51
2D7	CIGAR LIGHTER .....	40 - 55	3E14	CONTROL HANDLE, HYDRO. DR. DISPLACEMENT .....	50 - 82
2B22	CIRCUIT BOX, HARVESTRAK .....	40 - 18	4E10	CONTROL LEVER, HYD. REEL LIFT (EXPORT).....	70 - 81
2C7	CIRCUIT BREAKER AND RELAY PANEL .....	40 - 29	4E9	CONTROL LEVER, HYDRAULIC REEL LIFT .....	70 - 80
2D10	CIRCUIT BREAKER, ELECTRIC CLUTCH.....	40 - 59	4E9	CONTROL LEVER, PLATFORM LIFT .....	70 - 80
2D10	CIRCUIT BREAKER, HARVESTRAK.....	40 - 59	1E24	CONTROL LEVER, THROTTLE LINKAGE .....	30 - 13
2C1	CLAMPS, HARNESS, REAR CAB.....	40 - 23	1G17	CONTROL LINES, FUEL .....	30 - 58
5I4	CLEAN GRAIN ELEVATOR.....	120 - 133	6E9	CONTROL LINKAGE .....	160 - 14
6F13	CLEAN GRAIN ELEVATOR DRIVE.....	170 - 21	2B22	CONTROL PANEL, HARVESTRAK COMBINE MONITOR .....	40 - 18
5I5	CLEAN GRAIN ELEVATOR DRIVE COUNTERSHAFT .....	120 - 135	4C16	CONTROL PLUG, FLOW.....	70 - 35
5I7	CLEAN GRAIN ELEVATOR DRIVE IDLER.....	120 - 137	3H3	CONTROL VALVE .....	50 - 152
5I7	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER.....	120 - 137	3G4	CONTROL VALVE (FOUR-WHEEL DRIVE) .....	50 - 126
5H24	CLEAN GRAIN ELEVATOR HOUSING.....	120 - 129	4D11	CONTROL VALVE KIT, SECONDARY .....	70 - 57
5I2	CLEAN GRAIN ELEVATOR HOUSING.....	120 - 131	4D13	CONTROL VALVE KIT, SECONDARY .....	70 - 59
6F13	CLEAN GRAIN ELEVATOR SHEAVES AND BELTS.....	170 - 21	4E12	CONTROL VALVE LINKAGE, REEL SPEED .....	70 - 83
5H20	CLEAN GRAIN LOWER AUGER AND HOUSING .....	120 - 125	3G5	CONTROL VALVE SOLENOID (FOUR-WHEEL DRIVE) .....	50 - 127
5H22	CLEAN GRAIN LOWER AUGER HOUSING.....	120 - 127	3H4	CONTROL VALVE SOLENOID (FOUR-WHEEL DRIVE) .....	50 - 153
5H13	CLEANING FAN .....	120 - 117	3E12	CONTROL VALVE, HYDRO. DR. DISPLACEMENT (EATON).....	50 - 80
5H16	CLEANING FAN AIR DUCTS .....	120 - 121	3E7	CONTROL VALVE, HYDRO. DRIVE DISPLACEMENT .....	50 - 75
6F10	CLEANING FAN DRIVE BELTS .....	170 - 17	4E24	CONTROL VALVE, HYDROSTATIC DR. REEL FLOW .....	70 - 95
6F10	CLEANING FAN DRIVE SHEAVES.....	170 - 17	4D3	CONTROL VALVE, SECONDARY.....	70 - 49
5H15	CLEANING FAN HOUSING .....	120 - 119			
2C3	CLEANING FAN MAGNETIC SENSOR.....	40 - 25			
5H15	CLEANING FAN PROTECTOR SHIELD.....	120 - 119			
5H18	CLEANING FAN SPEED CONTROL.....	120 - 123			
2B22	CLEANING SHOE SENSOR .....	40 - 18			
4G25	CLUTCH COVER .....	90 - 9			
2D7	CLUTCH, ELECTRIC, SWITCH.....	40 - 55			
2B16	CLUTCH, ELECTROMAGNETIC HEADER.....	40 - 11			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4D4	CONTROL VALVE, SECONDARY.....	70-50	6C3	COVERS, GRASS SEED UNLOADING AUGER .....	130-25
4D6	CONTROL VALVE, SECONDARY.....	70-52	6C1	COVERS, GRAIN TANK INNER UNLOADING AUGER .....	130-23
3H6	CONTROL VALVES, FLOW.....	50-155	1C14	CRANKSHAFT .....	20-36
3G8	CONTROL VALVES, FLOW (FOUR-WHEEL DRIVE) .....	50-131	1C14	CRANKSHAFT DAMPER .....	20-36
2D3	CONTROL, DIAL-A-MATIC HEADER HEIGHT .....	40-50	5H11	CRANKSHAFT DRIVE TIGHTENER, SHOE .....	120-115
6E11	CONTROL, DIAL-A-MATIC HEADER HEIGHT .....	160-16	1C4	CRANKSHAFT OIL SEAL .....	20-26
1E20	CONTROL, FUEL SHUT-OFF .....	30-8	1C4	CRANKSHAFT OIL SEAL HOUSING .....	20-26
1E21	CONTROL, FUEL SHUT-OFF .....	30-9	1C14	CRANKSHAFT PULLEY .....	20-36
5H18	CONTROL, SPEED, CLEANING FAN.....	120-123	5F14	CRANKSHAFT, STRAW WALKER FRONT .....	120-63
4C25	CONTROL, VARIABLE CYLINDER .....	70-45	5F16	CRANKSHAFT, STRAW WALKER REAR.....	120-65
4F11	CONTROL, PRES. VALVE, ACCUMULATOR AND MTG. BRKT. ....	70-107	3F14	CRAWLER BEARINGS.....	50-109
5D22	CONTROLS, CONCAVE ADJUSTING .....	120-21	3F16	CRAWLER BEARINGS.....	50-111
3H11	CONTROLS, PARKING BRAKE .....	60-1	3F19	CRAWLER DRIVE BEARINGS .....	50-115
5J2	CONTROLS, SEPARATOR DRIVE .....	120-159	3F19	CRAWLER DRIVE SHIELD .....	50-115
4E21	CONVERSION HOSES AND COUPLERS .....	70-92	3F19	CRAWLER DRIVE SPROCKET .....	50-115
6E15	CONVERSION, DIAL-A-MATIC HEADER HEIGHT CONTROL CONVERSION.....	160-21	3F11	CRAWLER FRAME, R.H. AND L.H. ....	50-105
5I4	CONVEYOR CHAIN .....	120-133	3F14	CRAWLER IDLER.....	50-109
5I3	CONVEYOR CHAIN, CLEAN GRAIN ELEVATOR .....	120-132	3F11	CRAWLER ROLLERS .....	50-105
1B8	COOLANT CONDITIONER.....	20-3	3F14	CRAWLER SHAFT .....	50-109
1D21	COOLANT HEATER, ENGINE.....	20-68	3F16	CRAWLER SHAFTS.....	50-111
1C23	COOLER, ENGINE OIL .....	20-46	3F9	CRAWLER SHOES .....	50-103
1C24	COOLER, ENGINE OIL .....	20-47	3F10	CRAWLER SHOES .....	50-104
6E6	COOLER, LINES AND HOSE, OIL .....	160-11	3F16	CRAWLER TIGHTENER .....	50-111
1D22	CORD, ENGINE COOLANT HEATER.....	20-69	3F9	CRAWLER TRACKS.....	50-103
4I16	CORE, VALVE .....	90-53	3F10	CRAWLER TRACKS.....	50-104
4G4	CORNER FRAME.....	80-17	6C8	CROSS AUGER DRIVE TIGHTENERS, GRAIN TANK .....	130-31
6D15	COUNTERSHAFT DRIVE IDLER, SECONDARY .....	140-15	6F15	CROSS AUGER DRIVES.....	170-23
6D9	COUNTERSHAFT SHEAVES, PRIMARY .....	140-9	6B24	CROSS AUGER, FRONT, GRAIN TANK .....	130-21
6D10	COUNTERSHAFT SHEAVES, PRIMARY (DUAL- RANGE CYLINDER DRIVE) .....	140-10	6B25	CROSS AUGER, REAR, GRAIN TANK .....	130-22
6D5	COUNTERSHAFT, PRIMARY AND MOUNTINGS .....	140-5	4F23	CROSS BRACES, SEPARATOR.....	80-10
6E24	COUNTERSHAFT, PRIMARY TO HYD. REEL LIFT .....	170-6	5E20	CTRSHAFT.CYL.DR.BRG.HSG.LUBE BANK-RH .....	120-44
6D13	COUNTERSHAFT, SECONDARY .....	140-13	5G2	CURTAIN, STRAW CHOPPER .....	120-77
6B22	COUNTERSHAFT, UNLOADING AUGER.....	130-19	5F10	CURTAINS, SEPARATOR .....	120-59
5I5	COUNTERSHAFT, DRIVE, CLEAN GRAIN ELEVATOR.....	120-135	4H9	CUSHIONS, SEAT (PERSONAL POSTURE SEAT).....	90-18
3C5	COUNTERSHAFT, GEARS, BEARINGS, TRANSMISSION ...	50-23	5E20	CYL.DRIVE CTRSHAFT.BRG.HSG.LUBE BANK-RH .....	120-44
5C18	COUNTERSHAFT, UPPER, FDR.HSE.-VARIABLE DR. ....	110-41	5E19	CYL.SHAFT BRG.HSG.LUBE BANK (R.H.) .....	120-43
5B8	COUPLER, QUIK-TATCH (LONG)(L.H.) .....	110-3	1B10	CYLINDER BLOCK.....	20-6
5B6	COUPLER, QUIK-TATCH (R.H.) .....	110-1	1B14	CYLINDER BLOCK.....	20-10
5B7	COUPLER, QUIK-TATCH (VARIABLE DR.)(L.H.).....	110-2	1B12	CYLINDER BLOCK (6466AH 01) .....	20-8
3D10	COUPLER, HYDROSTATIC DRIVE MOTOR MOUNTING ..	50-53	3D18	CYLINDER BLOCK ASSEMBLY, HYDRO. DR. PUMP .....	50-61
4E19	COUPLERS, HOSES (USED WITH PLATFORMS) .....	70-90	3D21	CYLINDER BLOCK ASSEMBLY, HYDROSTATIC DRIVE PUMP (EATON).....	50-64
2C6	COVER PLATES, ELEC., ENGINE COMPT. FIREWALL.....	40-28	3F25	CYLINDER BLOCK, MOTOR (FOUR-WHEEL DRIVE) .....	50-122
5H6	COVER, CHAFFER FRAME .....	120-109	5F8	CYLINDER COVER DEFLECTOR.....	120-57
4G25	COVER, CLUTCH.....	90-9	5F8	CYLINDER COVERS .....	120-57
5E11	COVER, DUAL-RANGE CYLINDER DRIVE GEAR CASE .....	120-34	5D24	CYLINDER DRIVE INTERMEDIATE SHAFT.....	120-23
3G2	COVER, FIRST PLANET (FOUR-WHEEL DRIVE).....	50-124	5E1	CYLINDER DRIVE INTERMEDIATE SHAFT DUAL-RANGE CYLINDER DRIVE).....	120-24
3D16	COVER, FRONT, HYDRO. DRIVE PUMP (EATON) .....	50-59	5E4	CYLINDER DRIVE SUPPORT BRACES.....	120-27
3D14	COVER, FRONT, HYDROSTATIC DRIVE PUMP.....	50-57	5E6	CYLINDER DRIVE TIGHTENER .....	120-29
6B19	COVER, GRAIN TANK.....	130-15	1C6	CYLINDER HEAD.....	20-28
1C3	COVER, INJECTION PUMP GEAR.....	20-25	1C6	CYLINDER HEAD GASKET.....	20-28
3G16	COVER, INNER .....	50-140	1D11	CYLINDER HEAD GASKET KIT .....	20-58
3G19	COVER, QUILL, BEARING AND .....	50-144	5E9	CYLINDER INTERMEDIATE DRIVE SUPPORT BRACES .....	120-32
1C12	COVER, ROCKER ARM .....	20-34	1C18	CYLINDER LINER .....	20-41
2E20	COVER, STARTER SOLENOID .....	40-97	1B8	CYLINDER LINER PACKING LUBRICANT.....	20-3
1C19	COVER, TACHOMETER DRIVE GEAR .....	20-42	5E18	CYLINDER SHAFT BRG.HSG.LUBE BANK SYS-RH.....	120-42
1D18	COVER, THERMOSTAT .....	20-65	5E21	CYLINDER SHAFT BRG.LUBE BANK-LH-HYDRO .....	120-45
1C3	COVER, TIMING GEAR.....	20-25	5F9	CYLINDER SHEAR BAR .....	120-58
4H19	COVERS AND INNER ROOF .....	90-29	5D19	CYLINDER SPEED TACHOMETER .....	120-17
4H17	COVERS, CAB .....	90-27	5E23	CYLINDER TACHOMETER BEATER .....	120-47
4H12	COVERS, CONSOLE .....	90-21	5E24	CYLINDER TACHOMETER BEATER .....	120-48
5F8	COVERS, CYLINDER.....	120-57	6F6	CYLINDER TACHOMETER BELT .....	170-13
6C2	COVERS, GRAIN TANK FRONT AND REAR ADJ.....	130-24	5E23	CYLINDER TACHOMETER DRIVE .....	120-47
			5E24	CYLINDER TACHOMETER DRIVE .....	120-48
			6F6	CYLINDER TACHOMETER SHEAVE .....	170-13

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3H15	CYLINDER, BRAKE MASTER .....	60 - 5	5I18	DOOR, TAILINGS ELEVATOR HOUSING .....	120 - 149
3H16	CYLINDER, BRAKE SLAVE.....	60 - 6	4G8	DOOR, UPPER, ENGINE COMPARTMENT .....	80 - 21
4F8	CYLINDER, HYDRAULIC, HEADER LIFT.....	70 - 104	4H17	DOORS, CAB .....	90 - 27
5D9	CYLINDER, RASP BAR (DUAL-RANGE CYLINDER DRIVE) .....	120 - 6	6F17	DR.,PRIMARY CTRSHFT TO SECONDARY CTRSHFT ....	170 - 25
5D8	CYLINDER, RASP-BAR .....	120 - 5	4I21	DRAIN TUBES, EVAPORATOR .....	90 - 58
5D15	CYLINDER, SPIKE TOOTH (DUAL-RANGE CYLINDER DRIVE) .....	120 - 13	6E24	DRIVE BELT, HYDRAULIC REEL LIFT .....	170 - 6
5D14	CYLINDER, SPIKE-TOOTH .....	120 - 11	5B24	DRIVE CHAIN GUIDES, FEEDER CONVEYOR.....	110 - 19
3I9	CYLINDER, STEERING .....	60 - 24	5B23	DRIVE CHAIN, FEEDER CONVEYOR .....	110 - 18
4D19	CYLINDER,UNLOADING AUGER SWING HYDRAULIC ....	70 - 65	5I5	DRIVE COUNTERSHAFT,CLEAN GRAIN ELEVATOR .....	120 - 135
4D21	CYLINDER,UNLOADING AUGER SWING HYDRAULIC ....	70 - 67	6D19	DRIVE IDLER, FEEDER HOUSE .....	140 - 19
4D22	CYLINDER,UNLOADING AUGER SWING HYDRAULIC ....	70 - 68	6D15	DRIVE IDLER, SECONDARY COUNTERSHAFT .....	140 - 15
4D24	CYLINDER,UNLOADING AUGER SWING HYDRAULIC ....	70 - 70	5G20	DRIVE SHAFT, SHOE GRAIN SUPPLY AUGERS.....	120 - 99
<b>D</b>					
1C14	DAMPER, CRANKSHAFT .....	20 - 36	6E24	DRIVE SHEAVES, HYDRAULIC REEL LIFT .....	170 - 6
2C16	DECAL, BECON LIGHTS (EXPORT) .....	40 - 38	5G22	DRIVE TGHTR., SHOE GRAIN SUPPLY AUGERS .....	120 - 101
6F22	DECAL, PANEL .....	170 - 31	5I7	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR .....	120 - 137
6F25	DECALS .....	170 - 34	5E6	DRIVE TIGHTENER, CYLINDER.....	120 - 29
6F24	DECALS, CONSOLE COVER .....	170 - 33	5G21	DRIVE TIGHTENERS.....	120 - 100
6F21	DECALS, FRONT AND REAR.....	170 - 29	6C8	DRIVE TIGHTENERS,CROSS AUGER,GRAIN TANK .....	130 - 31
6F24	DECALS, INSTRUMENT PANEL.....	170 - 33	3B24	DRIVE WHEEL AXLE.....	50 - 16
6F19	DECALS, RIGHT-HAND AND LEFT-HAND.....	170 - 27	3B14	DRIVE WHEELS.....	50 - 6
6D17	DECLUTCHING IDLER.....	140 - 17	3B15	DRIVE WHEELS, DUAL.....	50 - 7
5F8	DEFLECTOR, CYLINDER COVER .....	120 - 57	3B17	DRIVE WHEELS, HIGH FLOATATION .....	50 - 9
5I9	DEFLECTOR, LOADING AUGER .....	120 - 139	5F3	DRIVE, BEATER.....	120 - 52
3G24	DESTROKE PUMP, CAM LOBE MOTOR.....	50 - 149	5F4	DRIVE, BEATER.....	120 - 53
6E13	DIAL-A-MATIC HDR. HEIGHT CONTROL SWITCH.....	160 - 19	5F5	DRIVE, BEATER.....	120 - 54
2D3	DIAL-A-MATIC HEADER HEIGHT CONTROL .....	40 - 50	5F6	DRIVE, BEATER, DUAL-RANGE.....	120 - 55
6E9	DIAL-A-MATIC HEADER HEIGHT CONTROL .....	160 - 14	6F13	DRIVE, CLEAN GRAIN ELEVATOR .....	170 - 21
6E11	DIAL-A-MATIC HEADER HEIGHT CONTROL .....	160 - 16	5E23	DRIVE, CYLINDER TACHOMETER .....	120 - 47
6E15	DIAL-A-MATIC HEADER HEIGHT CONTROL CONVERSION .....	160 - 21	5E24	DRIVE, CYLINDER TACHOMETER .....	120 - 48
3C9	DIFFERENTIAL GEARS AND SHAFTS .....	50 - 27	5C3	DRIVE, FIXED .....	110 - 24
3C10	DIFFERENTIAL GEARS AND SHAFTS .....	50 - 28	5C4	DRIVE, FIXED .....	110 - 25
3C1	DIFFERENTIAL HOUSING.....	50 - 18	5C13	DRIVE, FIXED .....	110 - 35
3C3	DIFFERENTIAL HOUSING COVER .....	50 - 21	6F13	DRIVE, LOADING AUGER.....	170 - 21
2E10	DIODE RING, ALTERNATOR, 72 AMP.....	40 - 86	5C16	DRIVE, LONG FEEDER HOUSE FIXED.....	110 - 39
2E12	DIODE TRIO ASSEMBLY, ALTERNATOR, 90 AMP .....	40 - 88	5E8	DRIVE, SLOW SPEED CYLINDER .....	120 - 31
1C1	DIPSTICK TUBE.....	20 - 22	3F21	DRIVE, TRANSMISSION, MUD SHIELDS .....	50 - 117
1C1	DIPSTICK, ENGINE OIL .....	20 - 22	6F15	DRIVES, CROSS AUGER .....	170 - 23
6E22	DISK, ROTARY SCREEN .....	170 - 4	1E10	DRIVES, RADIATOR FAN .....	20 - 81
3E12	DISPLACEMENT CONTROL VALVE, HYDRO. DR. (EATON) .....	50 - 80	6F8	DRIVES, STRAW CHOPPER .....	170 - 15
3E7	DISPLACEMENT CONTROL VALVE, HYDRO. DRIVE .....	50 - 75	6F8	DRIVES, STRAW SPREADER .....	170 - 15
1E4	DISPLACER, ROTARY SCREEN DRIVE BELT .....	20 - 75	6F12	DRIVES, TAILINGS ELEVATOR AND AUGER.....	170 - 19
2D13	DOME LIGHT .....	40 - 63	6F15	DRIVES, UNLOADING AUGER .....	170 - 23
4G14	DOOR AND SEALS, ROTARY SCREEN .....	80 - 27	6F15	DRIVES, VERTICAL UNLOADING AUGER .....	170 - 23
5B12	DOOR LEVER, TOP, FEEDER HOUSE .....	110 - 7	6E2	DROP RATE VALVE,AUTO.HDR.HGT.CONTROL .....	160 - 7
5H24	DOOR, CLEAN GRAIN ELEVATOR .....	120 - 129	6E3	DROP RATE VLV.,AUTO HDR. HGHT. CONTROL .....	160 - 8
5H22	DOOR, CLEAN GRAIN LOWER AUGER .....	120 - 127	6E3	DROP RATE VLV.,DIAL-A MATIC HDR. HGHT. CONTROL .....	160 - 8
4G9	DOOR, ENGINE COMPARTMENT MIDDLE.....	80 - 22	3H19	DRUM, BRAKE SHOES.....	60 - 9
6B9	DOOR, GRAIN TANK.....	130 - 5	5B21	DRUM, FEEDER CONVEYOR.....	110 - 16
6B10	DOOR, GRAIN TANK.....	130 - 6	3B15	DUAL DRIVE WHEELS .....	50 - 7
6B11	DOOR, GRAIN TANK.....	130 - 7	3B16	DUAL WHEELS, WIDE SPACED (PLANETARY FINAL DRIVE) .....	50 - 8
6B17	DOOR, GRAIN TANK.....	130 - 13	5F6	DUAL-RANGE BEATER DRIVE.....	120 - 55
6B19	DOOR, GRAIN TANK COVER.....	130 - 15	5E16	DUAL-RANGE CYLINDER DRIVE ARM .....	120 - 40
4G25	DOOR, INSPECTION, OPERATOR'S PLATFORM.....	90 - 9	5E11	DUAL-RANGE CYLINDER DRIVE GEAR CASE .....	120 - 34
4H12	DOOR, PANEL .....	90 - 21	5E14	DUAL-RANGE CYLINDER DRIVE LOCKOUT ARM.....	120 - 37
4F14	DOOR, SEPARATOR CYLINDER .....	80 - 1	5E13	DUAL-RANGE CYLINDER DRIVE PINION GEARS .....	120 - 36
5D6	DOOR, STONE TRAP .....	120 - 3	5E16	DUAL-RANGE CYLINDER DRIVE TIGHTENER .....	120 - 40
5D12	DOOR, STONE TRAP .....	120 - 9	5E1	DUAL-RANGE CYLINDER DRIVE, CYLINDER DRIVE INTERMEDIATE SHAFT .....	120 - 24
4H2	DOOR, TAILINGS ELEVATOR .....	90 - 11	6D10	DUAL-RANGE CYLINDER DRIVE, PRIMARY COUNTERSHAFT SHEAVES .....	140 - 10
5I19	DOOR, TAILINGS ELEVATOR .....	120 - 150	5D9	DUAL-RANGE CYLINDER DRIVE, RASP-BAR CYLINDER .....	120 - 6
			5H16	DUCTS, AIR, CLEANING FAN .....	120 - 121

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
	E				
2D10	ELECTRIC CLUTCH CIRCUIT BREAKER .....	40 - 59	4G4	FAN SHROUD .....	80 - 17
2D7	ELECTRIC CLUTCH SWITCH .....	40 - 55	2E10	FAN, ALTERNATOR, 72 AMP .....	40 - 86
6E9	ELECTRIC HARNESS .....	160 - 14	2E12	FAN, ALTERNATOR, 90 AMP .....	40 - 88
2F4	ELECTRICAL CONNECTOR SERVICE KIT .....	40 - 106	5H13	FAN, CLEANING .....	120 - 117
2B16	ELECTROMAGNETIC CLUTCH, HEADER .....	40 - 11	5H16	FAN, CLEANING, AIR DUCTS .....	120 - 121
1F4	ELEMENT, AIR CLEANER .....	30 - 17	5H18	FAN, CLEANING, SPEED CONTROL .....	120 - 123
5I2	ELEVATOR HOUSING, CLEAN GRAIN .....	120 - 131	1E10	FAN, RADIATOR .....	20 - 81
5I4	ELEVATOR, CLEAN GRAIN .....	120 - 133	1E10	FAN, RADIATOR, DRIVES .....	20 - 81
5H24	ELEVATOR, HOUSING, CLEAN GRAIN .....	120 - 129	4F14	FEED PLATE, SEPARATOR .....	80 - 1
2E23	END FRAME, STARTER COMMUTATOR .....	40 - 100	5B23	FEEDER CONVEYOR BRACKET .....	110 - 18
4G6	ENGINE COMPARTMENT FIREWALL .....	80 - 19	5B22	FEEDER CONVEYOR CHAIN .....	110 - 17
4G9	ENGINE COMPARTMENT MIDDLE DOOR AND FRAME ..	80 - 22	5B23	FEEDER CONVEYOR DRIVE CHAIN .....	110 - 18
4G6	ENGINE COMPARTMENT REAR SHEETS .....	80 - 19	5B24	FEEDER CONVEYOR DRIVE CHAIN GUIDES .....	110 - 19
4G8	ENGINE COMPARTMENT UPPER DOOR .....	80 - 21	5B21	FEEDER CONVEYOR DRUM .....	110 - 16
4G8	ENGINE COMPARTMENT UPPER DOOR HINGE .....	80 - 21	5B23	FEEDER CONVEYOR IDLER .....	110 - 18
4G12	ENGINE COMPARTMENT WALKWAY .....	80 - 25	5B21	FEEDER CONVEYOR IDLER SHAFT .....	110 - 16
2C5	ENGINE COMPARTMENT WIRING HARNESSSES .....	40 - 27	5B14	FEEDER HOUSE BOTTOM SHEETS .....	110 - 9
2C6	ENGINE COMPT.FIREWALL ELEC.COVER PLATES .....	40 - 28	6F4	FEEDER HOUSE CHAIN (LONG) .....	170 - 11
1D21	ENGINE COOLANT HEATER .....	20 - 68	6F1	FEEDER HOUSE CHAINS (VARIABLE DRIVE) .....	170 - 8
1D22	ENGINE COOLANT HEATER .....	20 - 69	6F2	FEEDER HOUSE DRIVE BELTS (LONG) .....	170 - 9
1D20	ENGINE MOUNTS .....	20 - 67	6F3	FEEDER HOUSE DRIVE BELTS (LONG) .....	170 - 10
1B7	ENGINE OIL .....	20 - 2	6E25	FEEDER HOUSE DRIVE BELTS (VARIABLE DR.) .....	170 - 7
1C23	ENGINE OIL COOLER .....	20 - 46	6D19	FEEDER HOUSE DRIVE IDLER .....	140 - 19
1C24	ENGINE OIL COOLER .....	20 - 47	6F3	FEEDER HOUSE DRIVE IDLERS (LONG) .....	170 - 10
1C1	ENGINE OIL DIPSTICK .....	20 - 22	6F2	FEEDER HOUSE DRIVE SHEAVES (LONG) .....	170 - 9
1C21	ENGINE OIL FILTER .....	20 - 44	6F3	FEEDER HOUSE DRIVE SHEAVES (LONG) .....	170 - 10
1E11	ENGINE OIL PRESSURE GAUGE LINE .....	20 - 82	6E25	FEEDER HOUSE DRIVE SHEAVES (VAR.DR.) .....	170 - 7
1D1	ENGINE OIL PUMP .....	20 - 48	6F3	FEEDER HOUSE DRIVE TIGHTENERS (LONG) .....	170 - 10
1D3	ENGINE OIL PUMP (AH 02, 03) .....	20 - 50	5B20	FEEDER HOUSE FALSE BOTTOM (LONG) .....	110 - 15
1B24	ENGINE OVERHAUL KIT .....	20 - 20	5B18	FEEDER HOUSE FALSE BOTTOM (VARIABLE) .....	110 - 13
1C18	ENGINE OVERHAUL KIT .....	20 - 41	5C16	FEEDER HOUSE FIXED DRIVE, LONG .....	110 - 39
6D3	ENGINE POWERSHAFT .....	140 - 3	5B16	FEEDER HOUSE FRAME AND FALSE BOTTOM .....	110 - 11
6E21	ENGINE R.H. SIDE BELT TIGHTENERS .....	170 - 3	5B10	FEEDER HOUSE FRONT SHEETS .....	110 - 5
6E21	ENGINE R.H. SIDE DRIVE BELTS .....	170 - 3	4F2	FEEDER HOUSE HYD. HOSE, VARIABLE DRIVE .....	70 - 98
6E21	ENGINE R.H. SIDE DRIVE SHEAVES .....	170 - 3	4F3	FEEDER HOUSE HYDRAULIC HOSE .....	70 - 99
1D11	ENGINE REBUILD GASKET KIT .....	20 - 58	6F2	FEEDER HOUSE IDLER (LONG) .....	170 - 9
1B16	ENGINE SHORT BLOCK .....	20 - 12	6E25	FEEDER HOUSE IDLERS (VARIABLE DRIVE) .....	170 - 7
1B20	ENGINE SHORT BLOCK .....	20 - 16	5C1	FEEDER HOUSE L.H.SHIELDS-VARIABLE DR. .....	110 - 21
1B22	ENGINE SHORT BLOCK .....	20 - 18	5C15	FEEDER HOUSE LOWER BELT TIGHTENER-LONG .....	110 - 37
1B9	ENGINE SHORT BLOCK SERIAL NUMBER PLATE .....	20 - 5	5C13	FEEDER HOUSE LOWER MOUNTINGS .....	110 - 35
1D20	ENGINE SUPPORTS .....	20 - 67	5C13	FEEDER HOUSE LOWER SHAFT .....	110 - 35
1C9	ENGINE TEMPERATURE SENDER .....	20 - 31	2C23	FEEDER HOUSE LOWER SHAFT SPEED SENSOR-LG ..	40 - 45
1C9	ENGINE TEMPERATURE SWITCH .....	20 - 31	5C11	FEEDER HOUSE LOWER SHAFT-LONG .....	110 - 33
6F16	ENGINE TO PRIMARY CTRSHAFT.DRIVE BELTS .....	170 - 24	5C10	FEEDER HOUSE LOWER SHAFT-VARIABLE DRIVE .....	110 - 31
1B8	ENGINE VALVE STEM LUBRICANT .....	20 - 3	5C13	FEEDER HOUSE LOWER SHEAVE .....	110 - 35
2D7	ETHER START SWITCH .....	40 - 55	5C10	FEEDER HOUSE LOWER SHEAVE-VARIABLE DRIVE ..	110 - 31
1D9	ETHER STARTING AID .....	20 - 56	5C16	FEEDER HOUSE MIDDLE BELT BRACE .....	110 - 39
4I21	EVAPORATOR .....	90 - 58	5C14	FEEDER HOUSE MIDDLE BELT IDLER-VAR.DRIVE .....	110 - 36
4I21	EVAPORATOR DRAIN TUBES .....	90 - 58	5C16	FEEDER HOUSE MIDDLE BELT IDLERS .....	110 - 39
1D10	EXHAUST MANIFOLD .....	20 - 57	5C14	FEEDER HOUSE MIDDLE IDLER BRACES-VAR.DR. ....	110 - 36
1D10	EXHAUST MANIFOLD GASKET .....	20 - 57	5C6	FEEDER HOUSE REVERSE GEAR BOX .....	110 - 27
1F6	EXHAUST PIPE .....	30 - 19	5C11	FEEDER HOUSE SHEAVE-LONG .....	110 - 33
1C6	EXHAUST VALVES .....	20 - 28	5C22	FEEDER HOUSE SHEAVES (LONG) .....	110 - 45
4I21	EXPANSION VALVE, AIR CONDITIONER .....	90 - 58	5B25	FEEDER HOUSE SHIELD (R.H.) .....	110 - 20
6B17	EXTENSIONS, GRAIN TANK .....	130 - 13	5C2	FEEDER HOUSE SHIELD,L.H.-LONG .....	110 - 23
5E9	EYEBOLTS, CYLINDER INTERMEDIATE DRIVE SUPPORT .....	120 - 32	5C3	FEEDER HOUSE SHIELDS (L.H.) .....	110 - 24
			5C4	FEEDER HOUSE SHIELDS (L.H.) .....	110 - 25
			5B20	FEEDER HOUSE SHIELDS (LONG) .....	110 - 15
			5B18	FEEDER HOUSE SHIELDS (VARIABLE) .....	110 - 13
			5B20	FEEDER HOUSE SIDE SHEETS (LONG) .....	110 - 15
			5B18	FEEDER HOUSE SIDE SHEETS (VARIABLE) .....	110 - 13
			2C9	FEEDER HOUSE SPEED MONITORING HARNESS .....	40 - 31
			5C22	FEEDER HOUSE SPROCKETS (LONG) .....	110 - 45
			6F4	FEEDER HOUSE SPROCKETS (LONG) .....	170 - 11
			5C20	FEEDER HOUSE SPROCKETS (VARIABLE DR.) .....	110 - 43
			6F1	FEEDER HOUSE SPROCKETS (VARIABLE DRIVE) .....	170 - 8
			6F2	FEEDER HOUSE TIGHTENERS (LONG) .....	170 - 9
	F				
5B16	FALSE BOTTOM .....	110 - 11			
5B20	FALSE BOTTOM, FEEDER HOUSE (LONG) .....	110 - 15			
5B18	FALSE BOTTOM, FEEDER HOUSE (VARIABLE) .....	110 - 13			
5H15	FAN HOUSING, CLEANING .....	120 - 119			

## ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
6E25	FEEDER HOUSE TIGHTENERS (VAR. DR.)	170-7	3F3	FOUR-WHEEL DRIVE	50-97
5B12	FEEDER HOUSE TOP DOOR LEVER	110-7	3F22	FOUR-WHEEL DRIVE	50-119
5B12	FEEDER HOUSE TOP SHEETS	110-7	3F24	FOUR-WHEEL DRIVE	50-121
5C18	FEEDER HOUSE UPPER CTRSHAFT.SUPTS-VAR.DR	110-41	3F25	FOUR-WHEEL DRIVE	50-122
5C18	FEEDER HOUSE UPPER CTRSHAFT-VARIABLE DR.	110-41	3G1	FOUR-WHEEL DRIVE	50-123
5C24	FEEDER HOUSE UPPER SHAFT (LONG RICE)	110-47	3G2	FOUR-WHEEL DRIVE	50-124
5C22	FEEDER HOUSE UPPER SHAFT (LONG)	110-45	3G3	FOUR-WHEEL DRIVE	50-125
5C20	FEEDER HOUSE UPPER SHAFT (VARIABLE DR.)	110-43	3G4	FOUR-WHEEL DRIVE	50-126
5C24	FEEDER HOUSE UPPER SHEAVE (LONG RICE)	110-47	3G5	FOUR-WHEEL DRIVE	50-127
4F4	FEEDER HOUSE VARIABLE DRIVE HOSES (EXPORT)	70-100	3G6	FOUR-WHEEL DRIVE	50-129
2C22	FEEDER HSE.LOWER SHAFT SPD.SENSOR-REG	40-44	3G8	FOUR-WHEEL DRIVE	50-131
2C11	FIELD LIGHTS	40-33	3G9	FOUR-WHEEL DRIVE	50-133
4H24	FILTER AND HOUSING, CAB AIR	90-35	3G11	FOUR-WHEEL DRIVE	50-135
4H24	FILTER, CAB AIR	90-35	3H3	FOUR-WHEEL DRIVE	50-152
1C21	FILTER, ENGINE OIL	20-44	3H4	FOUR-WHEEL DRIVE	50-153
1E17	FILTER, FUEL	30-5	3H5	FOUR-WHEEL DRIVE	50-154
1G6	FILTER, FUEL	30-46	3H6	FOUR-WHEEL DRIVE	50-155
1G3	FILTER, FUEL (AH 01)	30-42	3H8	FOUR-WHEEL DRIVE	50-157
1G4	FILTER, FUEL (AH 02, 03)	30-43	3I6	FOUR-WHEEL DRIVE	60-21
1E19	FILTER, FUEL (EXPORT)	30-7	3I9	FOUR-WHEEL DRIVE	60-24
3G11	FILTER, HYDRAULIC OIL RETURN LINES	50-135	3I14	FOUR-WHEEL DRIVE	60-29
4B9	FILTER, HYDRAULIC RESERVOIR	70-3	3I15	FOUR-WHEEL DRIVE	60-31
3F3	FILTER, HYDROSTATIC	50-97	3I19	FOUR-WHEEL DRIVE	60-35
3H8	FILTER, OIL RETURN LINES	50-157	3I20	FOUR-WHEEL DRIVE	60-36
3C17	FINAL DRIVE (CRAWLER TRACKS)	50-36	3I23	FOUR-WHEEL DRIVE	60-39
3C18	FINAL DRIVE AXLE (CRAWLER TRACKS)	50-37	3I24	FOUR-WHEEL DRIVE	60-40
3C12	FINAL DRIVE AXLE SHAFT	50-31	4F16	FRAME AND SIDE SHEET, SEPARATOR R.H.	80-3
3C21	FINAL DRIVE BEARING CAP (CRAWLER TRACKS)	50-40	4F18	FRAME AND SIDE SHEETS, SEPARATOR L.H.	80-5
3C12	FINAL DRIVE BEARINGS	50-31	5H6	FRAME, CHAFFER	120-109
3C16	FINAL DRIVE BEARINGS	50-35	4G4	FRAME, CORNER	80-17
3C18	FINAL DRIVE BEARINGS (CRAWLER TRACKS)	50-37	3F11	FRAME, CRAWLER, R.H. AND L.H.	50-105
3C19	FINAL DRIVE BEARINGS (CRAWLER TRACKS)	50-38	4G9	FRAME, ENGINE COMPARTMENT MIDDLE	80-22
3C18	FINAL DRIVE GEAR (CRAWLER TRACKS)	50-37	5B16	FRAME, FEEDER HOUSE	110-11
3C16	FINAL DRIVE GEARS	50-35	4G25	FRAME, OPERATOR'S PLATFORM	90-9
3C21	FINAL DRIVE HOUSING (CRAWLER TRACKS)	50-40	3I13	FRAME, REAR AXLE	60-28
3C16	FINAL DRIVE INNER HOUSING	50-35	4H4	FRAME, SEALS, AND SEAT CONSOLE	90-13
3C12	FINAL DRIVE OUTER HOUSING	50-31	5H4	FRAME, SIEVE	120-107
3C19	FINAL DRIVE PINION (CRAWLER TRACKS)	50-38	3F12	FRAME, TRACK ROLLER	50-106
3C16	FINAL DRIVE PINION SHAFT	50-35	6C2	FRONT AND REAR GRAIN TANK AUGER COVERS, ADJ.	130-24
3C12	FINAL DRIVE PLANETARY PINION	50-31	3D16	FRONT COVER, HYDRO. DRIVE PUMP (EATON)	50-59
3C19	FINAL DRIVE SHAFTS (CRAWLER TRACKS)	50-38	3D14	FRONT COVER, HYDROSTATIC DRIVE PUMP	50-57
2B22	FINGERS, TRASH (HARVESTRAK)	40-18	6B24	FRONT CROSS AUGER, GRAIN TANK	130-21
5F23	FINS, PLATE, STRAW CHOPPER	120-73	5G21	FRONT DRIVEN SHEAVE SHIELD	120-100
5F24	FINS, STRAW CHOPPER	120-74	4G11	FRONT ENGINE COMPARTMENT PANEL	80-24
4G6	FIREWALL, ENGINE COMPARTMENT	80-19	1C3	FRONT OIL SEAL	20-25
3G2	FIRST PLANET CARRIER (FOUR-WHEEL DRIVE)	50-124	1G8	FUEL CHECK VALVE (AH 01, 02)	30-48
3G2	FIRST PLANET COVER (FOUR-WHEEL DRIVE)	50-124	1G9	FUEL CHECK VALVE (AH-03)	30-49
3G2	FIRST PLANET PINION (FOUR-WHEEL DRIVE)	50-124	1G17	FUEL CONTROL LINES	30-58
5E19	FITTING,CYL.SHAFT BRG.HSG.LUBE BANK-RH	120-43	1E17	FUEL FILTER	30-5
3F4	FITTINGS, HYDROSTATIC DRIVE OIL COOLER	50-98	1G6	FUEL FILTER	30-46
2C16	FLASHER HAZARD WARNING (EXPORT)	40-38	1G3	FUEL FILTER (AH 01)	30-42
2C16	FLASHER, HAZARD WARNING (EXPORT)	40-38	1G4	FUEL FILTER (AH 02, 03)	30-43
2C9	FLASHER, SIGNAL	40-31	1E19	FUEL FILTER (EXPORT)	30-7
1D23	FLAT ROTARY SCREEN	20-70	1G5	FUEL FILTER KIT	30-44
6B17	FLIP-UPS, GRAIN TANK	130-13	2D10	FUEL GAUGE	40-59
4G25	FLOORBOARD, OPERATOR'S PLATFORM	90-9	2C3	FUEL GAUGE SENDING UNIT	40-25
4H2	FLOORMAT, L.H. REAR	90-11	1G15	FUEL INJECTION LINES (AH 03)	30-56
4G25	FLOORMAT, OPERATOR'S PLATFORM	90-9	1G1	FUEL INJECTION NOZZLE	30-40
4C16	FLOW CONTROL PLUG	70-35	1F9	FUEL INJECTION NOZZLES	30-22
4E24	FLOW CONTROL VALVE, HYDROSTATIC DR. REEL	70-95	1F7	FUEL INJECTION NOZZLES (AH 01)	30-20
3H6	FLOW CONTROL VALVES	50-155	1G15	FUEL INJECTION NOZZLES (AH 03)	30-56
3G8	FLOW CONTROL VALVES (FOUR-WHEEL DRIVE)	50-131	1F9	FUEL INJECTION PIPES	30-22
1C14	FLYWHEEL	20-36	1F7	FUEL INJECTION PIPES (AH 01)	30-20
4E10	FORE AND AFT CONT. LEVER, PLAT. (EXPORT)	70-81	1F9	FUEL INJECTION PUMP	30-22
3C1	FORKS, SHIFTER	50-18	1F7	FUEL INJECTION PUMP (AH 01)	30-20
2B9	FOUR-WHEEL DRIVE	40-3			



## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2D3	HARNES, INSTRUMENT PANEL WIRING .....	40-50	1E8	HOSES .....	20-79
2B19	HARNES, LOW SHAFT SPEED MONITOR'S .....	40-15	4E19	HOSES AND COUPLERS (USED WITH PLATFORMS) .....	70-90
2E18	HARNES, MAGNETIC PICK-UP .....	40-95	4D15	HOSES AND LINES, AUGER SWING HYD. OIL .....	70-61
2C3	HARNES, SEPARATOR, RIGHT-HAND .....	40-25	4D16	HOSES AND LINES, AUGER SWING HYD. OIL .....	70-62
2D12	HARNES, WIRING, CAB ROOF .....	40-61	4F7	HOSES AND LINES, HEADER LIFT OIL .....	70-103
2D1	HARNES, WIRING, INSTRUMENT PANEL .....	40-48	3G9	HOSES AND LINES, HYD. (FOUR-WHEEL DR.) .....	50-133
2C9	HARNES, WIRING, LEFT-HAND LIGHTS .....	40-31	4C19	HOSES AND LINES, HYDRAULIC OIL .....	70-38
2C9	HARNES, WIRING, OPERATOR'S PLATFORM .....	40-31	4C23	HOSES AND LINES, HYDRAULIC OIL .....	70-43
2B9	HARNES, WIRING, REAR HOOD .....	40-3	4C20	HOSES AND LINES, HYDRAULIC OIL (EXPORT) .....	70-39
2B9	HARNES, WIRING, SEPARATOR (L.H.) .....	40-3	3G11	HOSES AND LINES, HYDRAULIC OIL RETURN .....	50-135
2B9	HARNES, WIRING, UNLOADING AUGER .....	40-3	3H8	HOSES AND LINES, HYDRAULIC OIL RETURN .....	50-157
6E8	HARNES,WIRING,AUTOMATIC HDT.HGT.CTL. ....	160-13	3I4	HOSES AND LINES,STEERING OIL-FRONT .....	60-19
2D15	HARNES,WIRING,WINDSHIELD WIPER MOTOR .....	40-65	3F4	HOSES AND OIL COOLER,HYDROSTATIC DRIVE .....	50-98
2C5	HARNESSES, WIRING, ENGINE COMPARTMENT .....	40-27	3I6	HOSES AND OIL LINES,STEERING-REAR .....	60-21
2B24	HARVESTRAK ADAPTER HARNES .....	40-20	1E6	HOSES AND RADIATOR .....	20-77
2D10	HARVESTRAK CIRCUIT BREAKER .....	40-59	1E8	HOSES AND RADIATOR .....	20-79
2B22	HARVESTRAK COMBINE MONITOR .....	40-18	4F4	HOSES, FEEDER HOUSE VARIABLE DRIVE (EXPORT) .....	70-100
2B22	HARVESTRAK CONTROL PANEL .....	40-18	4I22	HOSES, HEATER .....	90-59
2B22	HARVESTRAK, PREAMPLIFIER .....	40-18	4I23	HOSES, HEATER .....	90-60
2C16	HAZARD WARNING (EXPORT) .....	40-38	3H6	HOSES, HYDRAULIC .....	50-155
1C6	HEAD, CYLINDER .....	20-28	3G8	HOSES, HYDRAULIC (FOUR-WHEEL DRIVE) .....	50-131
2B16	HEADER ELECTROMAGNETIC CLUTCH .....	40-11	4C21	HOSES, HYDRAULIC OIL .....	70-41
6E9	HEADER HEIGHT CONTRO, DIAL-A-MATIC .....	160-14	4C17	HOSES, MAIN CONTROL VALVE (EXPORT) .....	70-36
6E15	HEADER HEIGHT CONTROL CONVERSION, DIAL-A-MATIC .....	160-21	4E18	HOSES, REEL HYDRAULIC .....	70-89
4F8	HEADER LIFT HYDRAULIC CYLINDER .....	70-104	3I8	HOSES, STEERING OIL .....	60-23
4F7	HEADER LIFT OIL LINES AND HOSES .....	70-103	2D7	HOURLMETER .....	40-55
4H20	HEADLINER, CAB ROOF .....	90-30	5B14	HOUSE, FEEDER, BOTTOM SHEETS .....	110-9
4I22	HEATER CONTROL VALVE .....	90-59	6C12	HOUSING AND AUGER, VERTICAL, GRAIN TANK .....	130-35
4I21	HEATER CORE .....	90-58	4H24	HOUSING AND FILTER, CAB AIR .....	90-35
4I22	HEATER HOSES .....	90-59	6C5	HOUSING AND SHIELD, SUMP, GRAIN TANK .....	130-27
4I23	HEATER HOSES .....	90-60	2E10	HOUSING, ALTERNATOR, 72 AMP .....	40-86
1D21	HEATER, ENGINE COOLANT .....	20-68	2E12	HOUSING, ALTERNATOR, 90 AMP .....	40-88
1D22	HEATER, ENGINE COOLANT .....	20-69	5H24	HOUSING, CLEAN GRAIN ELEVATOR .....	120-129
6E16	HEIGHT INDICATOR, PLATFORM (FRANCE) .....	160-22	5I2	HOUSING, CLEAN GRAIN ELEVATOR .....	120-131
4I24	HI PRESSURE SWITCH LIGHT ASSEMBLY .....	90-61	5H20	HOUSING, CLEAN GRAIN LOWER AUGER .....	120-125
4I8	HI PRESSURE SWITCH, AIR CONDITIONER .....	90-43	5H22	HOUSING, CLEAN GRAIN LOWER AUGER .....	120-127
3B17	HIGH FLOATATION DRIVE WHEELS .....	50-9	5H15	HOUSING, CLEANING FAN .....	120-119
3E25	HIGH PRESSURE RELIEF VALVE (EATON) .....	50-94	1C4	HOUSING, CRANKSHAFT OIL SEAL .....	20-26
6B10	HINGE, GRAIN TANK .....	130-6	3C1	HOUSING, DIFFERENTIAL .....	50-18
4G8	HINGE, UPPER DOOR, ENGINE COMPARTMENT .....	80-21	3C21	HOUSING, FINAL DRIVE (CRAWLER TRACKS) .....	50-40
3I13	HITCH, REAR AXLE SUPPORT .....	60-28	6C19	HOUSING, HORIZONTAL UNLOADING AUGER, 14 FT. AND 17 FT. ....	130-42
3I13	HITCH, TRAILER (EXPORT) .....	60-28	6C20	HOUSING, HORIZONTAL UNLOADING AUGER, 17 FT. AND 20 FT. ....	130-43
4F20	HOOD, REAR .....	80-7	3D18	HOUSING, HYDROSTATIC DRIVE PUMP .....	50-61
4F22	HOOD, REAR .....	80-9	3D21	HOUSING, HYDROSTATIC DRIVE PUMP (EATON) .....	50-64
2B9	HOOD, REAR, WIRING HARNES .....	40-3	3C16	HOUSING, INNER, FINAL DRIVE .....	50-35
6C18	HORIZONTAL UNLDG.AUGER DRIVE GEAR CASE .....	130-41	3G3	HOUSING, KNEE AND MOTOR (FOUR-WHEEL DRIVE) .....	50-125
6B15	HORIZONTAL UNLDG.AUGER SWIVEL SHROUD .....	130-11	5I9	HOUSING, LOADING AUGER .....	120-139
6C19	HORIZONTAL UNLOADING AUGER HOUSING, 14 FT. AND 17 FT. ....	130-42	5I16	HOUSING, LOWER TAILINGS .....	120-147
6C20	HORIZONTAL UNLOADING AUGER HOUSING, 17 FT. AND 20 FT. ....	130-43	3C12	HOUSING, OUTER, FINAL DRIVE .....	50-31
6C14	HORIZONTAL UNLOADING AUGER SWIVEL .....	130-37	5G16	HOUSING, SHOE GRAIN SUPPLY AUGERS .....	120-95
6C15	HORIZONTAL UNLOADING AUGER SWIVEL .....	130-38	2E22	HOUSING, STARTER DRIVE .....	40-99
6C21	HORIZONTAL UNLOADING AUGER, 14 FT. AND 17 FT. ....	130-44	5F19	HOUSING, STRAW CHOPPER .....	120-69
6C22	HORIZONTAL UNLOADING AUGER, 20 FT. ....	130-45	5F20	HOUSING, STRAW CHOPPER .....	120-70
2C9	HORN .....	40-31	5I19	HOUSING, TAILING ELEVATOR .....	120-150
2D7	HORN SWITCH .....	40-55	5I18	HOUSING, TAILINGS ELEVATOR .....	120-149
4E21	HOSE AND COUPLER CONVERSION .....	70-92	1E24	HOUSING, THROTTLE LINKAGE, CONTROL LEVER .....	30-13
6E6	HOSE AND LINES, OIL COOLER .....	160-11	3C1	HOUSING, TRANSMISSION .....	50-18
4F6	HOSE, HYDRAULIC, REEL LIFT (EXPORT) .....	70-102	5I23	HOUSING, UPPER TAILINGS AUGER .....	120-154
1C5	HOSE, OIL DRAIN .....	20-27	3G1	HOUSING,PLANETARY (FOUR-WHEEL DRIVE) .....	50-123
1C11	HOSE, OIL DRAIN .....	20-33	3F24	HOUSING,WHEEL HUB,AND MOTOR (FOUR-WHEEL DRIVE) .....	50-121
5E19	HOSE,CYL.SHAFT BRG.HSG.LUBE BANK (R.H.) .....	120-43	3I19	HOUSING,WHEEL MOTOR (FOUR-WHEEL DRIVE) .....	60-35
4F2	HOSE,HYDRAULIC,VARIABLE DRIVE FDR.HSE. ....	70-98			
1E6	HOSES .....	20-77			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1D15	HOUSINGS, TURBOCHARGER .....	20 - 62	4E23	HYDRAULIC PUMP MTG.,REEL,HYDROSTATIC DR.....	70 - 94
3F24	HUB,MOTOR,AND HOUSING,WHEEL (FOUR-WHEEL DRIVE) .....	50 - 121	4E14	HYDRAULIC PUMP, HYDROSTATIC DRIVE REEL.....	70 - 85
3I17	HUB,REAR AXLE SPINDLES-HVY-DTY REAR AXLE .....	60 - 33	4B11	HYDRAULIC PUMP, MAIN .....	70 - 5
3G9	HYD. LINES AND HOSES (FOUR-WHEEL DR.) .....	50 - 133	4B12	HYDRAULIC PUMP, MAIN .....	70 - 6
6E3	HYD. OIL LINE, DIAL-A-MATIC HDR. HGHT. CONTROL) .....	160 - 8	4E9	HYDRAULIC REEL LIFT CONTROL LEVER .....	70 - 80
6E3	HYD. OIL LINE,AUTO HDR. HGHT.CONTROL .....	160 - 8	6E24	HYDRAULIC REEL LIFT DRIVE SHEAVES .....	170 - 6
4E10	HYD. REEL LIFT CONTROL LEVER (EXPORT) .....	70 - 81	3E18	HYDRO. DR. CENTER SECTION (EATON).....	50 - 86
4C8	HYD.CONTROL VALVE POPPETS,MAIN (EXPORT) .....	70 - 27	3E12	HYDRO. DR. DISPLACEMENT CONTROL VALVE (EATON) .....	50 - 80
4C10	HYD.CONTROL VALVE POPPETS,MAIN (EXPORT) .....	70 - 29	3D10	HYDRO. DR. MOTOR MTG. AND COUPLER .....	50 - 53
4C12	HYD.CONTROL VALVE POPPETS,MAIN-POSI-TORQ .....	70 - 31	3D18	HYDRO. DR. PUMP CYLINDER BLOCK ASSEMBLY .....	50 - 61
4C13	HYD.CONTROL VALVE SPOOLS-MAIN-POSI-TORQ .....	70 - 32	3E3	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES .....	50 - 71
4C9	HYD.CONTROL VALVE SPOOLS,MAIN-POSI-TORQ .....	70 - 28	3E5	HYDRO. DR. PUMP SERVO PISTON ASSEMBLIES (EATON) .....	50 - 73
4C11	HYD.CONTROL VALVE SPOOLS,MAIN-POSI-TORQ .....	70 - 30	3D6	HYDRO. DRIVE CONTROL CABLE AND LEVER .....	50 - 49
4C8	HYD.CONTROL VALVE SPRINGS,MAIN (EXPORT) .....	70 - 27	3D8	HYDRO. DRIVE CONTROL CABLE MOUNTING.....	50 - 51
4C10	HYD.CONTROL VALVE SPRINGS,MAIN (EXPORT) .....	70 - 29	3E7	HYDRO. DRIVE DISPLACEMENT CONTROL VALVE.....	50 - 75
4C12	HYD.CONTROL VALVE SPRINGS,MAIN-POSI-TORQ .....	70 - 31	3E14	HYDRO. DRIVE PRESSURE OVERRIDE VALVE .....	50 - 82
4C9	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ .....	70 - 28	3E2	HYDRO. DRIVE PUMP CYLINDER BLOCK KIT (EATON) .....	50 - 70
4C11	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ .....	70 - 30	3D16	HYDRO. DRIVE PUMP FRONT COVER(EATON) .....	50 - 59
4C13	HYD.CONTROL,MAIN,RELIEF VALVE-POSI-TORQ .....	70 - 32	3E2	HYDRO. DRIVE PUMP HOUSING KIT (EATON).....	50 - 70
4D15	HYD.OIL LINES AND HOSES, AUGER SWING .....	70 - 61	3E1	HYDRO. DRIVE PUMP SWASHPLATE (EATON) .....	50 - 69
4D16	HYD.OIL LINES AND HOSES, AUGER SWING .....	70 - 62	3E1	HYDRO. DRIVE PUMP,SWASHPLATE,BEARINGS, AND TRUNNIONS (EATON) .....	50 - 69
1G23	HYDRAULIC ANEROID ACTIVATOR (AH 03) .....	30 - 64	3E2	HYDRO. DRIVE SHAFT KIT (EATON) .....	50 - 70
3D2	HYDRAULIC BELT TENSIONING SYSTEM .....	50 - 45	3E14	HYDRO.DR.DISPLACEMENT CONTROL HANDLE .....	50 - 82
4B23	HYDRAULIC CONTROL MAIN, RELIEF VALVE .....	70 - 17	3E14	HYDRO.DR.DISPLACEMENT CTL.VALVE GASKET .....	50 - 82
4B25	HYDRAULIC CONTROL MAIN, RELIEF VALVE .....	70 - 19	3E14	HYDRO.DR.DISPLACEMENT CTL.VALVE ORIFICE .....	50 - 82
4B22	HYDRAULIC CONTROL VALVE POPPETS, MAIN .....	70 - 16	3D14	HYDRO.DR.PUMP FRONT COVER-BRG-SEAL ASSY.....	50 - 57
4B24	HYDRAULIC CONTROL VALVE POPPETS, MAIN .....	70 - 18	3D16	HYDRO.DR.PUMP FRONT COVER,BRG,SEAL ASSY (EATON) .....	50 - 59
4B23	HYDRAULIC CONTROL VALVE SPOOLS, MAIN .....	70 - 17	3D24	HYDRO.DR.PUMP SWASHPLATE,BRGS,TRUNNIONS ....	50 - 67
4B25	HYDRAULIC CONTROL VALVE SPOOLS, MAIN .....	70 - 19	4E24	HYDROSTATIC DR. REEL FLOW CONTROL VALVE.....	70 - 95
4C2	HYDRAULIC CONTROL VALVE SPOOLS, MAIN .....	70 - 21	3C24	HYDROSTATIC DR.BELT TENSIONING MECHANISM.....	50 - 43
4C4	HYDRAULIC CONTROL VALVE SPOOLS, MAIN .....	70 - 23	3E16	HYDROSTATIC DRIVE CENTER SECTION.....	50 - 84
4B22	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70 - 16	3D11	HYDROSTATIC DRIVE CHARGE PUMP .....	50 - 54
4B24	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70 - 18	3D13	HYDROSTATIC DRIVE CHARGE PUMP MOUNTING.....	50 - 56
4C1	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70 - 20	3D23	HYDROSTATIC DRIVE CYLINDER BLOCK KIT .....	50 - 66
4C3	HYDRAULIC CONTROL VALVE SPRINGS, MAIN.....	70 - 22	3F7	HYDROSTATIC DRIVE LOWER OIL LINES.....	50 - 101
4C2	HYDRAULIC CONTROL, MAIN RELIEF VALVE .....	70 - 21	3F8	HYDROSTATIC DRIVE LUBE BANK SYSTEM .....	50 - 102
4F8	HYDRAULIC CYLINDER, HEADER LIFT .....	70 - 104	3E20	HYDROSTATIC DRIVE MOTOR .....	50 - 89
4D21	HYDRAULIC CYLINDER,UNLOADING AUGER SWING ....	70 - 67	3E23	HYDROSTATIC DRIVE MOTOR (EATON) .....	50 - 92
4D22	HYDRAULIC CYLINDER,UNLOADING AUGER SWING ....	70 - 68	3F4	HYDROSTATIC DRIVE OIL COOLER AND HOSES .....	50 - 98
4D24	HYDRAULIC CYLINDER,UNLOADING AUGER SWING ....	70 - 70	3F4	HYDROSTATIC DRIVE OIL COOLER FITTINGS.....	50 - 98
4F3	HYDRAULIC HOSE, FEEDER HOUSE.....	70 - 99	3F3	HYDROSTATIC DRIVE OIL RESERVOIR.....	50 - 97
4F4	HYDRAULIC HOSE, FEEDER HOUSE VARIABLE DRIVE (EXPORT) .....	70 - 100	3F3	HYDROSTATIC DRIVE OIL RESERVOIR MOUNTING .....	50 - 97
4F6	HYDRAULIC HOSE, REEL LIFT(EXPORT) .....	70 - 102	3D21	HYDROSTATIC DRIVE PUMP CYLINDER BLOCK ASSEMBLY (EATON) .....	50 - 64
4F2	HYDRAULIC HOSE,VARIABLE DRIVE FDR.HOUSE.....	70 - 98	3D14	HYDROSTATIC DRIVE PUMP FRONT COVER.....	50 - 57
3H6	HYDRAULIC HOSES .....	50 - 155	3D18	HYDROSTATIC DRIVE PUMP HOUSING .....	50 - 61
3G8	HYDRAULIC HOSES (FOUR-WHEEL DRIVE) .....	50 - 131	3D1	HYDROSTATIC DRIVE PUMP HOUSING (EATON) .....	50 - 64
4E18	HYDRAULIC HOSES, REEL .....	70 - 89	3D23	HYDROSTATIC DRIVE PUMP HOUSING KIT .....	50 - 66
4F5	HYDRAULIC HOSES, REEL LIFT .....	70 - 101	3D24	HYDROSTATIC DRIVE PUMP SWASHPLATE.....	50 - 67
3G8	HYDRAULIC LINES (FOUR-WHEEL DRIVE) .....	50 - 131	4E23	HYDROSTATIC DRIVE REEL HYD.PUMP MOUNTING ....	70 - 94
4D21	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70 - 67	4E14	HYDROSTATIC DRIVE REEL HYDRAULIC PUMP .....	70 - 85
4D22	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70 - 68	3D23	HYDROSTATIC DRIVE SHAFT KIT .....	50 - 66
4D24	HYDRAULIC MOUNTING,UNLOADING AUGER SWING....	70 - 70	3D9	HYDROSTATIC DRIVE UNIT.....	50 - 52
3G11	HYDRAULIC OIL FILTER.....	50 - 135	3D9	HYDROSTATIC DRIVE UNIT, SHEAVES .....	50 - 52
4C21	HYDRAULIC OIL HOSES.....	70 - 41	3D9	HYDROSTATIC DRIVE UNIT, SUPPORTS .....	50 - 52
6E2	HYDRAULIC OIL LINE AUTO.HDR.HGT.CONTROL .....	160 - 7	3F5	HYDROSTATIC DRIVE UPPER OIL LINES .....	50 - 99
4C19	HYDRAULIC OIL LINES AND HOSES .....	70 - 38	3F3	HYDROSTATIC FILTER .....	50 - 97
4C23	HYDRAULIC OIL LINES AND HOSES .....	70 - 43	6E23	HYDROSTATIC GROUND DRIVE BELTS .....	170 - 5
4C20	HYDRAULIC OIL LINES AND HOSES (EXPORT).....	70 - 39	6E23	HYDROSTATIC GROUND DRIVE SHEAVES .....	170 - 5
4B9	HYDRAULIC OIL RESERVOIR .....	70 - 3			
3G11	HYDRAULIC OIL RETURN LINES AND HOSES .....	50 - 135			
3H8	HYDRAULIC OIL RETURN LINES AND HOSES .....	50 - 157			
3H7	HYDRAULIC OIL RETURN LINES AND HOSES (FROM RESERVOIR TO WHEEL MOTORS).....	50 - 156			
1E10	HYDRAULIC PUMP DRIVE IDLER .....	20 - 81			



**ALPHABETICAL INDEX - CONTINUED**

GRID		PAGE	GRID		PAGE
<b>I</b>					
5H9	I.D. AH093010 .....	120-112	4C18	KIT, FLOW CONTROL PLUG .....	70-37
3F17	IDLER SUPPORT PLATES, FRONT .....	50-113	1G5	KIT, FUEL FILTER .....	30-44
5F3	IDLER, BEATER .....	120-52	3E2	KIT, HYDRO. DRIVE PUMP CYLINDER BLOCK (EATON) .....	50-70
5F4	IDLER, BEATER .....	120-53	3E2	KIT, HYDRO. DRIVE PUMP HOUSING (EATON) .....	50-70
5F5	IDLER, BEATER .....	120-54	3E2	KIT, HYDRO. DRIVE PUMP SHAFT (EATON) .....	50-70
5I7	IDLER, CLEAN GRAIN ELEVATOR .....	120-137	3D12	KIT, HYDROSTATIC DRIVE CHARGE PUMP .....	50-55
3F14	IDLER, CRAWLER .....	50-109	3D23	KIT, HYDROSTATIC DRIVE CYLINDER BLOCK .....	50-66
6D17	IDLER, DECLUTCHING .....	140-17	3D23	KIT, HYDROSTATIC DRIVE PUMP HOUSING .....	50-66
1E10	IDLER, DRIVE, HYDRAULIC PUMP .....	20-81	3D23	KIT, HYDROSTATIC DRIVE SHAFT .....	50-66
5B23	IDLER, FEEDER CONVEYOR .....	110-18	4C14	KIT, MAIN HYD. CONTROL VALVE (POSI-TORQ) .....	70-33
6F2	IDLER, FEEDER HOUSE (LONG) .....	170-9	4C15	KIT, MAIN HYD. CONTROL VALVE (POSI-TORQ) .....	70-34
6D19	IDLER, FEEDER HOUSE DRIVE .....	140-19	4C1	KIT, MAIN HYDRAULIC CONTROL VALVE .....	70-20
6F16	IDLER, PRIMARY COUNTERSHAFT .....	170-24	4C3	KIT, MAIN HYDRAULIC CONTROL VALVE .....	70-22
6F17	IDLER, SECONDARY COUNTERSHAFT .....	170-25	4C4	KIT, MAIN HYDRAULIC CONTROL VALVE .....	70-23
6D15	IDLER, SECONDARY COUNTERSHAFT DRIVE .....	140-15	4C5	KIT, MAIN HYDRAULIC CONTROL VALVE .....	70-24
5G22	IDLER, SHOE GRAIN SUPPLY AUGERS .....	120-101	4C6	KIT, MAIN HYDRAULIC CONTROL VALVE .....	70-25
5G8	IDLER, STRAW CHOPPER DRIVE .....	120-85	4C7	KIT, MAIN HYDRAULIC CONTROL VALVE .....	70-26
5C14	IDLER,MIDDLE,FDR.HSE.,VARIABLE DRIVE .....	110-36	4B19	KIT, MAIN HYDRAULIC PUMP .....	70-13
5G21	IDLERS .....	120-100	4B21	KIT, MAIN HYDRAULIC PUMP .....	70-15
5C16	IDLERS, BELT, FEEDER HOUSE MIDDLE .....	110-39	6D24	KIT, MAIN VALVE BLOCK SOLENOID .....	160-5
6E25	IDLERS, FEEDER HOUSE (VARIABLE DRIVE) .....	170-7	4I6	KIT, O-RING - AIR CONDITIONING .....	90-41
6F3	IDLERS, FEEDER HOUSE DRIVE (LONG) .....	170-10	2E9	KIT, RADIO EXTERNAL ANTENNA .....	40-85
5C16	IDLERS, FEEDER HOUSE MIDDLE BELT .....	110-39	4B16	KIT, RELIEF VALVE, MAIN HYDRAULIC PUMP .....	70-10
6F8	IDLERS, STRAW CHOPPER .....	170-15	4I4	KIT, SEAL .....	90-39
4I24	INDICATOR LIGHT ASSEMBLY, HI PRESSURE .....	90-61	3D4	KIT, SEAL REPAIR .....	50-47
2B13	INDICATOR LIGHTS,REVOLVING (EXPORT) .....	40-8	4F9	KIT, SEAL REPAIR .....	70-105
2C18	INDICATOR, GRAIN TANK FILL (EXPORT) .....	40-40	4D9	KIT, SECONDARY CONTROL VALVE .....	70-55
1G1	INJECTION NOZZLE, FUEL .....	30-40	4D13	KIT, SECONDARY CONTROL VALVE .....	70-59
1C3	INJECTION PUMP GEAR COVER .....	20-25	2E20	KIT, STARTER SOLENOID COVER .....	40-97
3G16	INNER COVER .....	50-140	3I10	KIT, STEERING CYLINDER .....	60-25
4H19	INNER ROOF .....	90-29	3I2	KIT, STEERING PUMP INPUT SHAFT SEAL .....	60-17
4H19	INNER ROOF AND COVERS .....	90-29	3H25	KIT, STEERING PUMP SEAL .....	60-15
6C1	INNER UNLOADING AUGER COVERS .....	130-23	4I5	KIT, SUPER HEAT .....	90-40
3C5	INPUT SHAFT,GEARS,BEARINGS,TRANSMISSION .....	50-23	2D23	KIT, TAPE PLAYER .....	40-73
1B18	INSTALLATION KIT, SHORT BLOCK .....	20-14	2F2	KIT, TERMINAL AND WIRING .....	40-104
4H12	INSTRUMENT PANEL .....	90-21	4E2	KIT, UNLOADING AUGER SWING HYD. CYLINDER .....	70-73
2D7	INSTRUMENT PANEL ACCESSORIES .....	40-55	4E5	KIT, UNLOADING AUGER SWING HYDRAULIC CYLINDER .....	70-76
6F24	INSTRUMENT PANEL DECALS .....	170-33	4E7	KIT, UNLOADING AUGER SWING HYDRAULIC CYLINDER .....	70-78
2D10	INSTRUMENT PANEL GAUGES .....	40-59	2D25	KIT,AM-FM RADIO,PUSH BUTTON,TAPE PLAYER .....	40-75
2D1	INSTRUMENT PANEL WIRING HARNESS .....	40-48	4E25	KIT,HYDRO.DRIVE REEL FLOW CONTROL VALVE .....	70-96
2D3	INSTRUMENT PANEL WIRING HARNESS .....	40-50	4E16	KIT,HYDROSTATIC DR.REEL HYDRAULIC PUMP .....	70-87
2D5	INSTRUMENT PANEL WIRING HARNESS (EXPORT) .....	40-53	4E16	KIT,HYDROSTATIC DR.REEL HYDRAULIC SHEAVE .....	70-87
4H2	INSULATION, SEAT CONSOLE .....	90-11	2E2	KIT,SPEAKERS,RADIO,TAPE PLAYER,HARNESS .....	40-77
1D7	INTAKE MANIFOLD .....	20-54	4E4	KIT,UNLOADING AUGER SWING HYD.CYLINDER .....	70-75
1D7	INTAKE MANIFOLD GASKET .....	20-54	3G3	KNEE AND MOTOR HOUSING (FOUR-WHEEL DRIVE) .....	50-125
1C6	INTAKE VALVES .....	20-28	5G3	KNIFE AND SUPPORT, STRAW CHOPPER .....	120-78
<b>K</b>					
2D7	KEY, IGNITION SWITCH .....	40-55	1E20	KNOB, FUEL SHUT-OFF CONTROL .....	30-8
4F1	KIT, ADJUSTING SCREW .....	70-97	1E21	KNOB, FUEL SHUT-OFF CONTROL .....	30-9
2E4	KIT, AM RADIO, PUSH BUTTON .....	40-79	6B17	KNOB, GRAIN TANK DOOR .....	130-13
2D19	KIT, AM RADIO, PUSH BUTTON, TAPE PLAYER .....	40-69	4I22	KNOB, HEATER CONTROL .....	90-59
2E6	KIT, AM-FM RADIO, PUSH BUTTON .....	40-81	2E8	KNOB, RADIO .....	40-83
2D21	KIT, ANTENNA WITH CLIPS .....	40-71	4E12	KNOB, REEL SPEED .....	70-83
3H17	KIT, BRAKE SLAVE CYLINDER .....	60-7	4C25	KNOB, VARIABLE CYLINDER CONTROL .....	70-45
6D22	KIT, CHECK BLOCK .....	160-2	<b>L</b>		
4I12	KIT, COMPRESSOR .....	90-48	4G19	LADDER, OPERATOR'S PLATFORM .....	90-3
4I14	KIT, COMPRESSOR HARDWARE .....	90-51	4G21	LADDER, OPERATOR'S PLATFORM (TRACKS) .....	90-5
3G6	KIT, CONTROL VALVE SOLENOID .....	50-129	4F24	LADDER, REAR .....	80-11
3H5	KIT, CONTROL VALVE SOLENOID .....	50-154	2C19	LAMPS, TAIL, TURN SIGNAL AND LICENSE PLATE (EXPORT) .....	40-41
6E5	KIT, DROP RATE VALVE .....	160-10	2C14	LAMPS, TURN SIGNAL FRONT (EXPORT) .....	40-36
2F4	KIT, ELECTRICAL CONNECTOR SERVICE .....	40-106			
1C18	KIT, ENGINE OVERHAUL .....	20-41			





ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4G23	OPERATOR'S PLATFORM .....	90-7	5D20	PLATE, INDICATOR, CONCAVE ADJUSTING .....	120-19
4G25	OPERATOR'S PLATFORM FLOORMAT .....	90-9	5F24	PLATE, STRAW CHOPPER .....	120-74
4G25	OPERATOR'S PLATFORM FRAME .....	90-9	3G1	PLATES, BRAKE (FOUR-WHEEL DRIVE) .....	50-123
4G21	OPERATOR'S PLATFORM HANDRAILS (TRACKS) .....	90-5	3F17	PLATES, FRONT IDLER, SUPPORT .....	50-113
4G21	OPERATOR'S PLATFORM LADDER (TRACKS) .....	90-5	2C6	PLATES,COVER,ELECTRICAL,ENG.COMPT.FIREW. ....	40-28
4G21	OPERATOR'S PLATFORM LANDING (TRACKS) .....	90-5	6E16	PLATFORM HEIGHT INDICATOR (FRANCE) .....	160-22
4G25	OPERATOR'S PLATFORM SHIELD .....	90-9	4E9	PLATFORM LIFT CONTROL LEVER .....	70-80
4G23	OPERATOR'S PLATFORM SUPPORTS .....	90-7	4G23	PLATFORM, OPERATOR'S .....	90-7
2C9	OPERATOR'S PLATFORM WIRING HARNESS .....	40-31	4C16	PLUG, FLOW CONTROL .....	70-35
6C2	OPTIONAL ADJ. FRONT AND REAR GRAIN TANK AUGER COVERS .....	130-24	2C21	PLUG, TRAILER HARNESS (EXPORT) .....	40-43
3E14	ORIFICE,HYDRO.DR.DISPLACEMENT CTL.VALVE .....	50-82	4B22	POPPETS, MAIN HYDRAULIC CONTROL VALVE .....	70-16
3G12	OUTER COVER, BEARING AND SEALS, SHAFT .....	50-136	4B24	POPPETS, MAIN HYDRAULIC CONTROL VALVE .....	70-18
1B24	OVERHAUL KIT, ENGINE .....	20-20	4C1	POPPETS, MAIN HYDRAULIC CONTROL VALVE .....	70-20
			4C3	POPPETS, MAIN HYDRAULIC CONTROL VALVE .....	70-22
			4C8	POPPETS,MAIN HYD.CONTROL VALVE (EXPORT) .....	70-27
			4C10	POPPETS,MAIN HYD.CONTROL VALVE (EXPORT) .....	70-29
			4C12	POPPETS,MAIN HYD.CONTROL VALVE-POSI-TORQ .....	70-31
			2D8	POWER REAR WHEEL DRIVE SWITCH .....	40-57
			6D3	POWERSHAFT, ENGINE .....	140-3
			2B22	PREAMPLIFIER, CIRCUIT BOX, HARVESTRAK COMBINE MONITOR .....	40-18
			1F3	PRECLEANER .....	30-16
			4F11	PRES.CTL.VALVE AND MTG.BKT.,ACCUMULATOR .....	70-107
			2B25	PRESSURE GAUGE, ACCUMULATOR .....	40-21
			3E14	PRESSURE OVERRIDE VALVE, HYDRO. DRIVE .....	50-82
			4I2	PRESSURIZER BLOWER .....	90-37
			6D5	PRIMARY COUNTERSHAFT AND MOUNTINGS .....	140-5
			6F16	PRIMARY COUNTERSHAFT IDLER .....	170-24
			6D6	PRIMARY COUNTERSHAFT LUBE BANK SYSTEM-RH ...	140-6
			6D7	PRIMARY COUNTERSHAFT LUBE BANK-LH-HYDRO. ....	140-7
			6D9	PRIMARY COUNTERSHAFT SHEAVES .....	140-9
			6D10	PRIMARY COUNTERSHAFT SHEAVES (DUAL-RANGE CYLINDER DRIVE) .....	140-10
			6E24	PRIMARY COUNTERSHAFT TO HYD. REEL LIFT .....	170-6
			6F17	PRIMARY CTRSHFT TO SECONDARY CTRSHFT DR. ....	170-25
			6F5	PRIMARY CTRSHFT TO TORQ-SENSING CTRSHFT .....	170-12
			3C22	PROPULSION DRIVE COUNTERSHAFT SHEAVE .....	50-41
			3F21	PROPULSION DRIVE COUNTERSHAFT SHIELD .....	50-117
			1C14	PULLEY, CRANKSHAFT .....	20-36
			1D17	PULLEY, WATER PUMP .....	20-64
			1F11	PUMP HOUSING CONNECTORS, FUEL INJECTION (AH 01) .....	30-24
			1F18	PUMP HOUSING CONNECTORS, FUEL INJECTION (AH 02) .....	30-32
			1G10	PUMP HOUSING CONNECTORS, FUEL INJECTION (AH 02) .....	30-50
			1G19	PUMP HOUSING CONNECTORS, FUEL INJECTION (AH 02,03) .....	30-60
			3D13	PUMP MOUNTING, HYDROSTATIC DRIVE CHARGE .....	50-56
			4E23	PUMP MTG.,HYDROSTATIC DR.REEL HYDRAULIC .....	70-94
			3D11	PUMP, CHARGE, HYDROSTATIC DRIVE .....	50-54
			3G24	PUMP, DESTROKE, CAM LOBE MOTOR .....	50-149
			1D1	PUMP, ENGINE OIL .....	20-48
			1D3	PUMP, ENGINE OIL (AH 02, 03) .....	20-50
			1E17	PUMP, FUEL .....	30-5
			1F9	PUMP, FUEL INJECTION .....	30-22
			1F7	PUMP, FUEL INJECTION (AH 01) .....	30-20
			1F23	PUMP, FUEL TRANSFER .....	30-37
			1G13	PUMP, FUEL TRANSFER .....	30-54
			1F17	PUMP, FUEL TRANSFER (AH 01) .....	30-31
			1F22	PUMP, FUEL TRANSFER (AH 02) .....	30-36
			1G24	PUMP, FUEL TRANSFER (AH 03) .....	30-65
			1G25	PUMP, FUEL TRANSFER (ROBERT BOSCH) .....	30-66
			4E14	PUMP, HYDRAULIC, HYDROSTATIC DRIVE REEL .....	70-85
			4B11	PUMP, MAIN HYDRAULIC .....	70-5
			4B12	PUMP, MAIN HYDRAULIC .....	70-6
			3H23	PUMP, STEERING .....	60-13

P

1B8	PACKING, LUBRICANT, CYLINDER LINER .....	20-3
3G18	PACKINGS, MANIFOLD AND .....	50-143
5F12	PAN, EXTENSION, STRAW WALKER .....	120-61
1C11	PAN, OIL .....	20-33
1C5	PAN, OIL (AH 01) .....	20-27
4H22	PANEL AND AIR LOUVER .....	90-32
6F22	PANEL DECAL .....	170-31
4H12	PANEL DOOR .....	90-21
4H4	PANEL, ACCESS .....	90-13
4H12	PANEL, CONSOLE .....	90-21
4G11	PANEL, ENGINE COMPARTMENT .....	80-24
6B9	PANEL, GRAIN TANK .....	130-5
6B10	PANEL, GRAIN TANK .....	130-6
6B11	PANEL, GRAIN TANK .....	130-7
4H12	PANEL, INSTRUMENT .....	90-21
6F24	PANEL, INSTRUMENT .....	170-33
2D7	PANEL, INSTRUMENT, ACCESSORIES .....	40-55
2D10	PANEL, INSTRUMENT, GAUGES .....	40-59
2C7	PANEL, RELAY .....	40-29
3H11	PARKING BRAKE CONTROLS .....	60-1
2C9	PARKING BRAKE SWITCH .....	40-31
3H12	PEDALS, BRAKE .....	60-2
2E18	PICK-UP, MAGNETIC .....	40-95
3C7	PINION SHAFT,GEARS,BEARINGS,TRANSMISSION .....	50-25
3C19	PINION, FINAL DRIVE (CRAWLER TRACKS) .....	50-38
3G2	PINION,FIRST PLANET (FOUR-WHEEL DRIVE) .....	50-124
3G1	PINION,SECOND PLANET (FOUR-WHEEL DRIVE) .....	50-123
1F6	PIPE, EXHAUST .....	30-19
1F9	PIPES, FUEL INJECTION .....	30-22
1F7	PIPES, FUEL INJECTION (AH 01) .....	30-20
1D13	PIPES, TURBOCHARGER OIL .....	20-60
3E3	PISTON ASSEMBLIES, HYDRO. DR. PUMP SERVO .....	50-71
3E5	PISTON ASSEMBLIES, HYDRO. DR. PUMP SERVO (EATON) .....	50-73
1C18	PISTON RINGS .....	20-41
1C18	PISTONS .....	20-41
3G14	PISTONS AND CAM, CARRIER .....	50-138
5H4	PITMAN, SIEVE .....	120-107
2C19	PIVOT ARMS, TAIL LAMP (EXPORT) .....	40-41
3G21	PIVOTS AND CAP, YOKE .....	50-146
3G1	PLANET PINION,SECOND (FOUR-WHEEL DRIVE) .....	50-123
3B22	PLANETARY FINAL DRIVE, MUD SHIELDS, R.H. SIDE .....	50-14
3G1	PLANETARY HOUSING (FOUR-WHEEL DRIVE) .....	50-123
3C12	PLANETARY PINION, FINAL DRIVE .....	50-31
4E10	PLAT. FORE AND AFT CONTROL LEVER(EXPORT) .....	70-81
5F23	PLATE AND FINS, STRAW CHOPPER .....	120-73
4G25	PLATE, BRAKE .....	90-9
1B9	PLATE, ENGINE SHORT BLOCK SERIAL NUMBER .....	20-5