

H48255

-UN-16MAY97



JOHN DEERE 9610 MAXIMIZER™ COMBINE WITH 900 SERIES CUTTING PLATFORM

MANUFACTURED (1998-)

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)

COPYRIGHT (C) 2000. DEERE & COMPANY. MOLINE, ILLINOIS, USA. ALL RIGHT RESERVED.

NOTE

FOR 900 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 900 SERIES PLATFORM PARTS CATALOG - PC-2104.

FOR 40 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 40 SERIES CORN HEAD PARTS CATALOG - PC-1223.

FOR 50A SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50A SERIES ROW-CROP HEAD PARTS CATALOG - PC-1747.

FOR THREE-ROLLER BELT PICKUP PARTS INFORMATION, REFER TO JOHN DEERE THREE-ROLLER BELT PICKUP PARTS CATALOG - PC-2210.

FOR 918 AND 920 DRAPER PARTS INFORMATION, REFER TO JOHN DEERE 918 AND 920 DRAPER PLATFORMS PARTS CATALOG - PC-2212.

FOR 90 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 90 SERIES CORN HEAD PARTS CATALOG - PC-2404.

IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 9610 MAXIMIZER™ COMBINE. VINTAGE IS DETERMINED BY THE COMBINE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

PRODUCT INFORMATION NUMBER (PIN) PLATE

THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR THE RIGHT-HAND SIDE OF THE TOOL BOX.
AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

HO9610X675000
COMBINE

(FIRST LINE)

HO - MANUFACTURING UNIT (HARVESTER WORKS)

9610 - MODEL IDENTIFIER

X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX

675000 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

COMBINE - TYPE OF PRODUCT

PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES PART MAY BE USED; FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.
- 000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.
- 000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.
- 000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER CHANGE WAS MADE, BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

SHORT BLOCK SERIAL NUMBER PLATE

(-RGSB076882500)

RGP3513 -UN-01JAN94




RGP3513

THE REPLACEMENT SHORT BLOCK ASSEMBLY HAS A SERIAL NUMBER PLATE ATTACHED. THE ORIGINAL ENGINE SERIAL NUMBER MUST BE STAMPED ONTO THE NEW PLATE IN THE BLANK SPACE PROVIDED, AS A REFERENCE FOR YOUR DEALER. THE PLATE CAN BE ATTACHED WITH (2) 37H44 DRIVE SCREWS.

- | | |
|---------------------------------------|----------------------------|
| 1. DESIGNATES ENGINE MANUFACTURER | RG - WATERLOO ENGINE WORKS |
| 2. DESIGNATES REPLACEMENT SHORT BLOCK | SB |
| 3. DESIGNATES LITERS | XXX- 076 (7.6) |
| 4. DESIGNATES THE PRODUCTION DATE | 8825 |
| 5. DESIGNATES COMPONENT SEQUENCE | 00 |

SHORT BLOCK SERIAL NUMBER IDENTIFICATION

RGP4574 -UN-02OCT95

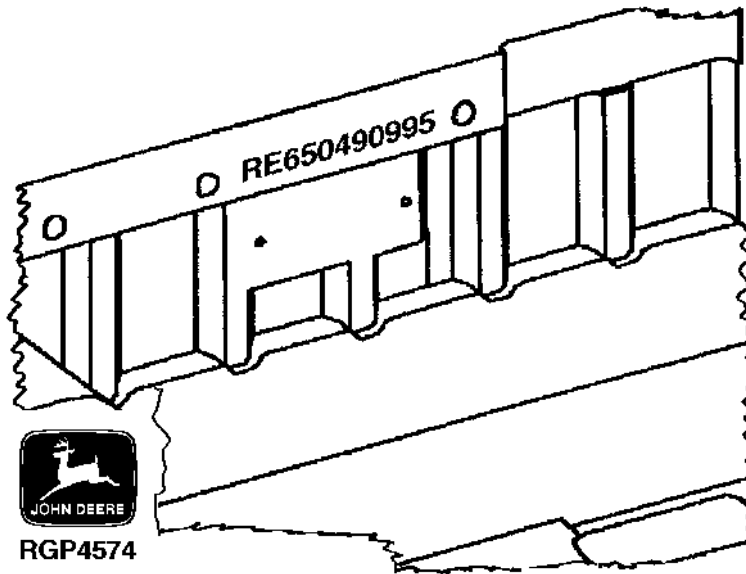

SERIAL NUMBER STAMPED INTO CASTING OF BLOCK NEAR PREVIOUS SERIAL NUMBER PLATE.

EXAMPLE: RE650490995

- | | |
|-----------------------------------|---------|
| 1. DESIGNATES SERVICE PART NUMBER | RE65049 |
| 2. DESIGNATES MONTH ASSEMBLED | 09 |
| 3. DESIGNATES YEAR ASSEMBLED | 95 |

TWO LINE BAR CODED ENGINE SERIAL NUMBER PLATE

RGP4942

-UN-25JUL97



RGP4942

FIRST LINE

RG - WATERLOO ENGINE WORKS

6

081 (8.1 LITERS)

H - AIR-TO-AIR

H

XXXXXX

SECOND LINE

6081HH003

DEFINES

DESIGNATES ENGINE MANUFACTURER.

DESIGNATES NUMBER OF CYLINDERS.

DESIGNATES LITER DISPLACEMENT.

DESIGNATES TYPE OF AIR INTAKE SYSTEM.

DESIGNATES HARVESTER VEHICLE.

DESIGNATES ENGINE SERIAL NUMBER.

APPLICATION

9610

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

BOX-ENCLOSED ILLUSTRATIONS

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

KITS

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM.

JDM REMANUFACTURED COMPONENTS

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

BOLT AND CAP SCREW STRENGTH IDENTIFICATION

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER. BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO PROPERTY CLASS 10.9 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY HS 10.9. ALL STANDARD BOLTS AND CAP SCREWS ARE PROPERTY CLASS 8.8 OR LOWER.

SI UNITS OF MEASURE

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-SPEED™
DIAL-A-MATIC™
HARVESTRAK™
CONTOUR MASTER™

POSI-TORQ™
TORQ-GARD SUPREME®
QUIK-TATCH™

CHANGE INDICATOR LINE

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

FUNCTION CODE

(EXAMPLE - FC: 5000)

FUNCTION CODES ARE LOCATED ON EACH PAGE IN THE UPPER RIGHT-HAND CORNER IN THE BOX. THE CODE LISTED IS A GROUPING CODE THAT CAN BE USED FOR WARRANTIES AND FOR DTAC TO IDENTIFY CERTAIN AREAS.

COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

FOR INDIVIDUAL HEADERS PARTS CATALOGS REFER TO:

PC-2104 - PARTS CATALOG FOR JOHN DEERE 900 SERIES PLATFORMS
PC-2210 - PARTS CATALOG FOR JOHN DEERE THREE ROLLER BELT PICK-UP
PC-2212 - PARTS CATALOG FOR JOHN DEERE 918 AND 920 DRAPER PLATFORMS
PC-1747 - PARTS CATALOG FOR JOHN DEERE 50A SERIES ROW-CROP HEADS
PC-1223 - PARTS CATALOG FOR JOHN DEERE 40 SERIES CORN HEADS
PC-2404 - PARTS CATALOG FOR JOHN DEERE 90 SERIES CORN HEADS

SECTION INDEX

SECTION 10 - GENERAL INFORMATION

SECTION 20 - ENGINE FAN, INTERCOOLER AND SCREENS

SECTION 24 - ENGINE

SECTION 30 - FUEL AND AIR

SECTION 40 - ELECTRICAL

SECTION 50 - POWER TRAIN

SECTION 60 - STEERING AND BRAKES

SECTION 70 - HYDRAULICS

SECTION 80 - SEPARATOR SHELL

SECTION 90 - OPERATOR'S STATION

SECTION 110 - FEEDER HOUSE

SECTION 120 - THRESHING AND SEPARATION

SECTION 121 - DRIVES

SECTION 125 - RESIDUE DISPOSAL

SECTION 130 - CLEAN GRAIN ELEVATOR, GRAIN TANK AND UNLOADING AUGER

SECTION 160 - DIAL-A-MATIC HEADER HEIGHT CONTROL

SECTION 170 - DECALS, BELTS AND CHAINS

SECTION 180 - NUMERICAL INDEX

ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
	A				
3K6	A/C COMPRESSOR HARDWARE R134A	90 - 81	4J5	ARM, CHARGE PUMP MOUNTING	121 - 60
3K4	A/C COMPRESSOR HOSE	90 - 79	4B18	ARM, DRIVE TIGHTENER, FIXED SPEED	110 - 12
3K3	A/C COMPRESSOR MANIFOLD.....	90 - 78	4J1	ARM, FAN DRIVE SPEED CONTROL	121 - 56
3K3	A/C COMPRESSOR R134A	90 - 78	4C10	ARM, FEEDER HOUSE FLOOR	110 - 30
3E11	A/C CONDENSER	70 - 84	4H21	ARM, LOCKOUT, DUAL-RANGE	121 - 28
1H18	A/C HIGH PRESSURE SWITCH.....	40 - 56	3F17	ARM, REAR LADDER LATCH	80 - 16
1E19	ACCESS COVER FUEL INJECTION PUMP	24 - 60	4I7	ARM, SECONDARY COUNTERSHAFT DRIVE	121 - 38
3B9	ACCUMULATOR PRESSURE GAUGE WIRING HARNES	70 - 2	4J7	ARM, STRAW CHOPPER DRIVE (FRONT).....	121 - 62
3C20	ACCUMULATOR, DUAL, ONE HALF GALLON	70 - 40	5F21	ARM, UNLOADING AUGER COUNTERSHAFT DRIVE..	130 - 58
3C22	ACCUMULATOR, ONE GALLON	70 - 42	4H11	ARMATURE, HEADER ELECTROMAGNETIC CLUTCH	121 - 18
3C18	ACCUMULATOR, ONE HALF GALLON	70 - 38	3J13	ARMREST (L.H.)	90 - 62
1D6	ADAPTER, OIL COOLER	24 - 23	3J11	ARMREST ADJUSTING MECHANISM, R.H.	90 - 60
1D10	ADAPTER, OIL COOLER BYPASS	24 - 27	1G3	ARMREST PANEL, OPERATOR'S	40 - 14
1H3	ADAPTER, WIRING HARNESS (CONTOUR MASTER)	40 - 40	1G3	ARMREST ROCKER SWITCHES	40 - 14
1H5	ADAPTER, WIRING HARNESS (CONTOUR MASTER)	40 - 42	1G1	ARMREST WIRING HARNESS.....	40 - 12
1D4	ADHESIVE,ROCKER ARM COVER GASKET	24 - 21	3J9	ARMREST WITH GLOVE BOX (R.H.).....	90 - 58
2G18	ADJUSTABLE REAR AXLE.....	60 - 37	4F19	ARMS, FRAME, PRECLEANER CHAFFER	120 - 56
3I15	ADJUSTER, OPERATOR'S SEAT	90 - 38	1D3	ARMS, ROCKER	24 - 20
3I20	ADJUSTER, OPERATOR'S SEAT LEVER	90 - 44	2D23	ARMS, STEERING, CAM LOBE MOTOR (STEERABLE MOTOR).....	50 - 68
4I5	ADJUSTING BRACKET, CYLINDER DRIVE, DUAL-RANGE	121 - 36	5B12	ARMS, TAILBOARD - CHOP-TO-BALE	125 - 5A
3J11	ADJUSTING MECHANISM, ARMREST, R.H.....	90 - 60	1G3	ASHTRAY	40 - 14
1I8	ADJUSTING MOTOR, CONCAVE.....	40 - 72	1E15	ASSEMBLY, CLUTCH (STARTER).....	24 - 56
1I4	ADJUSTING MOTOR, SEPARATOR FAN DRIVE	40 - 67	2F23	ATTENUATOR, STEERING HOSES.....	60 - 16
1F7	AIR CLEANER AND INTAKE TUBES.....	30 - 10	5G12	AUGER BELTS	170 - 2
1H18	AIR CLEANER PLUGGED SWITCH.....	40 - 56	5C25	AUGER CHAIN TIGHTENER, LOWER TAILINGS	125 - 40
1G11	AIR CONDITIONER AND HEATER SWITCH.....	40 - 22	5F20	AUGER COVERS AND CHANNEL, CROSS	130 - 56
1E18	AIR CONDITIONER COMPRESSOR FAN PULLEY	24 - 59	5D6	AUGER DRIVE SHIELD, UPPER TAILINGS	125 - 48
1E18	AIR CONDITIONER COMPRESSOR IDLER PULLEY....	24 - 59	3F21	AUGER DRIVE SHIELDS (R.H.).....	80 - 20
1E18	AIR CONDITIONER COMPRESSOR SUPPORT	24 - 59	5D6	AUGER DRIVE, UPPER TAILINGS	125 - 48
1G9	AIR CONDITIONER WIRING HARNESS	40 - 20	5E3	AUGER HOUSING, LOADING, UPPER CLEAN GRAIN	130 - 12
3I6	AIR CONDITIONING AND HEATER DUCTS	90 - 29	5E5	AUGER HOUSING, LOADING, UPPER CLEAN GRAIN	130 - 14
3J24	AIR CONDITIONING SYSTEM	90 - 74	1H13	AUGER SENSOR AND WIRING HARNESS, UNLOADING	40 - 50
3J22	AIR CONDITIONING/HEATER AND PRESSURIZING FAN	90 - 72	3D13	AUGER SWING SOLENOID CONTROL VALVE	70 - 60
3J20	AIR CONDITIONING/HEATER HOUSING AND FILTERS.....	90 - 70	5F5	AUGER SWIVEL SUPPORT AND BRACES	130 - 40
1F7	AIR DUCT, AIR CLEANER	30 - 10	5E3	AUGER TRANSITION HOUSING	130 - 12
4F7	AIR DUCT, CLEANING FAN	120 - 44	5C19	AUGER TROUGH, LOWER TAILINGS.....	125 - 34
4F9	AIR DUCT, CLEANING FAN	120 - 46	1H13	AUGER WIRING HARNESS, UNLOADING	40 - 50
1B21	AIR DUCT, RADIATOR	20 - 16	5F1	AUGER, GRAIN TANK, VERTICAL UNLOADING	130 - 36
1B9	AIR DUCT, ROTARY SCREEN DOOR.....	20 - 4	5F14	AUGER, HORIZONTAL UNLOADING (17- AND 20-FT.).....	130 - 50
3I5	AIR FILTER, CAB	90 - 28	5E7	AUGER, LOADING, CLEAN GRAIN	130 - 16
1H18	AIR INLET TEMP SWITCH (253 HP)	40 - 56	5E9	AUGER, LOADING, CLEAN GRAIN FOLD	130 - 18
3I24	AIR SEAT SUSPENSION	90 - 48	5C17	AUGER, LOWER TAILINGS	125 - 32
3J1	AIR SEAT SUSPENSION KITS.....	90 - 50	5G13	AUGER, LOWER TAILINGS, BELTS	170 - 3
3J3	AIR SEAT SUSPENSION KITS.....	90 - 52	5D6	AUGER, UPPER TAILINGS.....	125 - 48
3J5	AIR SEAT SUSPENSION KITS.....	90 - 54	5F18	AUGERS, GRAIN TANK CROSS	130 - 54
3J7	AIR SEAT SUSPENSION KITS.....	90 - 56	4F1	AUGERS, SHOE GRAIN SUPPLY AND HOUSING.....	120 - 38
1G9	AIR SEAT WIRING HARNESS	40 - 20	4F3	AUGERS, SHOE GRAIN SUPPLY AND HOUSING.....	120 - 40
3J1	AIR SUSPENSION KITS, SEAT	90 - 50	1F18	AUX FIELD LIGHTS SWITCH, OPTIONAL	40 - 4
3J3	AIR SUSPENSION KITS, SEAT	90 - 52	1F24	AUXILIARY FIELD LIGHTING	40 - 10
3J5	AIR SUSPENSION KITS, SEAT	90 - 54	2E2	AXLE SHAFT FINAL DRIVE	50 - 72
3J7	AIR SUSPENSION KITS, SEAT	90 - 56	2B19	AXLE SPACERS (RING AND PINION FINAL DRIVE)	50 - 11
3I24	AIR SUSPENSION, SEAT	90 - 48	2B20	AXLE SPACERS, PLANETARY FINAL DRIVE	50 - 12
1E19	ALTERNATOR ADJUSTING STRAP.....	24 - 60	2C9	AXLE, FINAL DRIVE (RING AND PINION)	50 - 26
1E19	ALTERNATOR BRACKET	24 - 60	2B18	AXLE, FRONT (PLANETARY FINAL DRIVE)	50 - 10
1I6	ALTERNATOR MOUNTING.....	40 - 69	2B17	AXLE, FRONT (RING AND PINION FINAL DRIVE)	50 - 9
1E19	ALTERNATOR SUPPORT.....	24 - 60	2G18	AXLE, REAR, ADJUSTABLE.....	60 - 37
1I5	ALTERNATOR, SHEAVE AND BELT - BOSCH.....	40 - 68	2G19	AXLE, REAR, SPINDLES	60 - 38
1I7	ALTERNATOR, VOLTAGE REGULATOR (95 AMP) BOSCH.....	40 - 70	2G16	AXLE, REAR, SUPPORT.....	60 - 34
4C24	ANGLE , RETURN FLOOR, FEEDERHOUSE	110 - 44			
1G18	ANTENNA, SPEAKERS AND RADIO	40 - 30			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
	B				
1J11	BACKSHAFT SPEED SENSOR, FEEDER HOUSE.....	40 - 100	5G12	BELTS, ENGINE DRIVE	170 - 2
3H6	BARRIERS, SOUND	90 - 4	1B13	BELTS, ENGINE FAN DRIVES	20 - 8
1E9	BASE, FUEL FILTER	24 - 50	1B15	BELTS, ENGINE FAN DRIVES (HI POWER).....	20 - 10
5E18	BASE, GRAIN TANK	130 - 28	5G14	BELTS, FAN, CLEANING	170 - 4
1D11	BASE, OIL FILTER	24 - 28	5G12	BELTS, FEEDER CONVEYOR	170 - 2
1I9	BATTERIES, CABLE AND HOLDDOWN	40 - 73	5G14	BELTS, FEEDER HOUSE	170 - 4
4G11	BEARING KIT, STRAW WALKERS	120 - 72	5G14	BELTS, HEADER AND REEL	170 - 4
1E21	BEARING KIT, UNDERSIZED MAIN BEARING CRANKSHAFT	24 - 62	5G15	BELTS, LOWER TAILINGS AUGER	170 - 5
2D18	BEARING, COVER AND QUILL (STEERABLE MOTOR).....	50 - 63	5G13	BELTS, LOWER TAILINGS AUGER	170 - 3
5F9	BEARING, GEARCASE, HORIZONTAL UNLOADING AUGER.....	130 - 44	4H13	BELTS, PRIMARY COUNTERSHAFT.....	121 - 20
4B11	BEARING, REVERSER GEARBOX	110 - 4	5G13	BELTS, ROTARY SCREEN.....	170 - 3
1C21	BEARING, THRUST.....	24 - 13	5G14	BELTS, STRAW CHOPPER	170 - 4
2E2	BEARINGS, FINAL DRIVE	50 - 72	5G14	BELTS, STRAW SPREADER	170 - 4
2C8	BEARINGS, FINAL DRIVE (RING AND PINION)	50 - 25	5G14	BELTS, UNLOADING AUGERS	170 - 4
2C9	BEARINGS, FINAL DRIVE (RING AND PINION)	50 - 26	5G15	BELTS, UNLOADING SYSTEM.....	170 - 5
2C10	BEARINGS, FINAL DRIVE (RING AND PINION)	50 - 28	5G15	BELTS, UPPER TAILINGS AUGER	170 - 5
2E3	BEARINGS, FINAL DRIVE PINION SHAFT	50 - 74	5G12	BELTS, WALKER.....	170 - 2
2E5	BEARINGS, FINAL DRIVE PINION SHAFT	50 - 76	4J23	BLADE, FINE CUT ROTOR (PADDLED WIDE).....	121 - 78
1C21	BEARINGS, MAIN	24 - 13	4J21	BLADE, FINE CUT ROTOR, STRAW CHOPPER	121 - 76
5C23	BEARINGS, TAILINGS ELEVATOR CONVEYOR	125 - 38	5B18	BLADE, STRAW SPREADER	125 - 8
2C1	BEARINGS, TRANSMISSION	50 - 18	4J19	BLADE, TRI ROTOR STRAW CHOPPER	121 - 74
2C3	BEARINGS, TRANSMISSION PINION SHAFT.....	50 - 20	1C2	BLOCK, ENGINE COOLANT HEATER.....	20 - 22
5G15	BEATER BELTS SHEAVES	170 - 5	1C14	BLOCK, SHORT.....	24 - 6
4E24	BEATER COVER	120 - 34	2C24	BLOCK, VALVE	50 - 43
4I19	BEATER DRIVE SHEAVES AND TIGHTENER	121 - 50	2D11	BLOCK, VALVE	50 - 55
4E3	BEATER GRATE CURTAIN	120 - 12	1D1	BOLTS, CYLINDER HEAD	24 - 18
4E22	BEATER SHAFT AND DRIVE BELT.....	120 - 32	1I7	BOSCH ALTERNATOR AND VOLTAGE REGULATOR (95 AMP)	40 - 70
5F23	BELT GUIDE, UNLOADING AUGER DRIVE	130 - 60	1I5	BOSCH ALTERNATOR, SHEAVE AND BELT	40 - 68
4J5	BELT PICKUP / REEL DRIVE, PUMP MOUNTING SHEAVE.....	121 - 60	3H24	BOX, TOOL	90 - 22
1E19	BELT TENSIONER (ALT.).....	24 - 60	3F13	BRACE, ENGINE ACCESS PLATFORM	80 - 12
4I19	BELT, BEATER DRIVE	121 - 50	1B15	BRACE, ENGINE FAN DRIVES (HI POWER)	20 - 10
4B18	BELT, DRIVE TIGHTENER, FIXED SPEED.....	110 - 12	3G5	BRACE, FRONT CORNER SHEET (R.H.)	80 - 30
4E22	BELT, DRIVE, SHAFT AND BEATER.....	120 - 32	3G7	BRACE, REAR CORNER SHEET.....	80 - 32
1B11	BELT, ENGINE FAN AND DRIVES	20 - 6	4B17	BRACE, VARIABLE SPEED DRIVE TIGHTENER	110 - 10
4D3	BELT, FAN, DUST, LH FEEDER HOUSE	110 - 48	3C18	BRACKET, ACCUMULATOR MOUNTING ONE HALF GALLON.....	70 - 38
4J13	BELT, FINE CUT STRAW CHOPPER (REAR)	121 - 68	1F7	BRACKET, AIR CLEANER	30 - 10
4J9	BELT, FINE CUT STRAW CHOPPER DRIVES	121 - 64	1E19	BRACKET, ALTERNATOR	24 - 60
3I17	BELT, OPERATOR'S SEAT	90 - 40	2F20	BRACKET, BRAKE CABLE SUPPORT	60 - 13
1B7	BELT, ROTARY SCREEN DRIVE.....	20 - 2	3F25	BRACKET, DRIVE SHIELD (R.H. REAR).....	80 - 24
3I19	BELT, SEAT - RETROFIT KIT (MACHINES PRIOR TO 1996 MODEL YEAR)	90 - 42	4B20	BRACKET, DRIVE SHIELDS.....	110 - 14
3I18	BELT, SEAT - TRAINING SEAT	90 - 41	4B22	BRACKET, DRIVE SHIELDS, CONTOUR MASTER	110 - 16
4I21	BELT, SEPARATOR FAN DRIVE	121 - 52	4C12	BRACKET, FEEDER CONVEYOR	110 - 32
4H17	BELT, SLOW SPEED CYLINDER DRIVE	121 - 24	4C16	BRACKET, FEEDER CONVEYOR DRIVE	110 - 36
4J7	BELT, STRAW CHOPPER DRIVE (FRONT)	121 - 62	2G5	BRACKET, FRONT STEERING HOSES	60 - 22
4J11	BELT, STRAW CHOPPER DRIVES (REAR)	121 - 66	2G7	BRACKET, L.H. STEERING LINES	60 - 24
4K1	BELT, STRAW CHOPPER ROTOR AND SHEAVE.....	121 - 80	3G11	BRACKET, MUD SHIELDS (R.H.).....	80 - 36
5B18	BELT, STRAW SPREADER	125 - 8	3E13	BRACKET, OIL FILTER ASSEMBLY	70 - 86
4D5	BELT, UPPER DRIVE SHAFT, FIXED SPEED	110 - 50	2G9	BRACKET, R.H. STEERING LINES	60 - 26
4B17	BELT, VARIABLE SPEED DRIVE TIGHTENER.....	110 - 10	3G7	BRACKET, REAR CORNER SHEET	80 - 32
5G13	BELTS, AIR CONDITIONER COMPRESSOR	170 - 3	1J7	BRACKET, REEL SPEED MOTOR.....	40 - 96
5G12	BELTS, AUGER	170 - 2	1H7	BRACKET, STRAW CHOPPER SENSOR	40 - 44
5G15	BELTS, BEATER	170 - 5	5C24	BRACKET, TAILINGS DRIVE AND LOWER TROUGH SUPPORT.....	125 - 39
5G13	BELTS, CLEAN GRAIN ELEVATOR.....	170 - 3	5B12	BRACKETS, CHOP-TO-BALE	125 - 5A
5G12	BELTS, CONVEYOR FEEDER	170 - 2	4E20	BRACKETS, CONCAVE INDICATOR AND CABLE.....	120 - 30
5G13	BELTS, COOLING FAN.....	170 - 3	1H15	BRACKETS, LOW SHAFT SPEED SENSORS	40 - 52
5G13	BELTS, CYLINDER DRIVE	170 - 3	3E11	BRACKETS, OIL COOLER, A/C CONDENSER.....	70 - 84
5G13	BELTS, DRIVE, CYLINDER INTERMEDIATE	170 - 3	3D18	BRACKETS, SOLENOID CONTROL VALVE	70 - 66
			2F20	BRAKE CABLE SUPPORT BRACKET	60 - 13
			2F15	BRAKE CYLINDER, MASTER.....	60 - 8
			2F11	BRAKE CYLINDERS, MASTER AND BRAKE PEDALS	60 - 4
			2F13	BRAKE LINES, MASTER CYLINDER AND RESERVOIR	60 - 6
			2F9	BRAKE PEDAL AND SEAL, PARKING	60 - 2
			2F11	BRAKE PEDALS AND CYLINDERS, MASTER	60 - 4

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
2F17	BRAKE SHOES AND DRUM (LEFT-HAND ILLUSTRATED)	60 - 10	5B20	CHAFF SPREADER DISC (DUAL MOTOR).....	125 - 10
2F19	BRAKE SLAVE CYLINDER	60 - 12	5C7	CHAFF SPREADER LINES AND FITTINGS	125 - 22
1110	BREAKERS, CIRCUIT, ENGINE COMPARTMENT	40 - 74	3B15	CHAFF SPREADER MOTOR (EATON)	70 - 8
1E23	BREATHING, FUEL TANK	30 - 2	5C1	CHAFF SPREADER MOUNTING SUPPORT	125 - 16
1C11	BUSHING, CAMSHAFT	24 - 2	5B24	CHAFF SPREADER PAN AND SEALS	125 - 14
1C25	BUSHING, CAMSHAFT	24 - 17	5C13	CHAFF SPREADER PUMP	125 - 28
1D10	BYPASS TUBES, OIL COOLER	24 - 27	5C11	CHAFF SPREADER, HOSES, LINES AND MOTOR	125 - 26
1D11	BYPASS VALVE, OIL FILTER.....	24 - 28	5C9	CHAFF SPREADER, LINES, HOSES, VALVE AND PUMP	125 - 24
C			4I15	CHAFFER DRIVE, JACKSHAFT, IDLER	121 - 46
3I5	CAB AIR FILTER AND HOUSING	90 - 28	4I17	CHAFFER DRIVE, STRAW WALKER, CONVEYOR AUGERS AND SIEVE	121 - 48
1F15	CAB DOME LIGHT	40 - 1	4F21	CHAFFER ELEMENT.....	120 - 58
3H14	CAB DOOR AND GLASS	90 - 12	4F23	CHAFFER EXTENSION ELEMENT	120 - 60
3H12	CAB DOOR LATCH	90 - 10	4G1	CHAFFER FRAME	120 - 62
3H4	CAB FLOOR MAT	90 - 2	4F19	CHAFFER FRAME ARMS, PRECLEANER	120 - 56
3H16	CAB FRAME AND SUPPORT.....	90 - 14	4F15	CHAFFER FRAME, PRECLEANER	120 - 52
3H10	CAB INTERIOR TRIM PANELS	90 - 8	4F13	CHAFFER, PRE-CLEANING	120 - 50
3I1	CAB LANDING AND MIRROR	90 - 24	4B15	CHAIN SPROCKET, FRONT SHAFT, REVERSER	110 - 8
3I3	CAB LANDING AND MIRROR (R.H.)	90 - 26	5C25	CHAIN TIGHTENER, LOWER TAILINGS AUGER	125 - 40
1F15	CAB LIGHT, DOME	40 - 1	5D5	CHAIN TIGHTENER, UPPER TAILINGS DRIVE	125 - 46
3H4	CAB PANELS AND FLOOR MAT	90 - 2	5D20	CHAIN, CONVEYOR, CLEAN GRAIN LOWER ELEVATOR	130 - 4
1F20	CAB POST INSTRUMENT PANEL	40 - 6	5D22	CHAIN, CONVEYOR, CLEAN GRAIN LOWER ELEVATOR	130 - 6
3I7	CAB POST INSTRUMENT PANEL	90 - 30	5F16	CHAIN, CROSS AUGER	130 - 52
3H8	CAB REAR AND SIDE SEALS	90 - 6	4C12	CHAIN, FEEDER CONVEYOR DRIVE	110 - 32
3H18	CAB ROOF AND SUPPORTS.....	90 - 16	4C16	CHAIN, FEEDER CONVEYOR DRIVE	110 - 36
1F22	CAB ROOF LIGHTS	40 - 8	5F18	CHAIN, GRAIN TANK CROSS AUGERS	130 - 54
3I22	CAB SEAT HEIGHT ADJUSTER (VERTICAL CONTROL).....	90 - 46	5C23	CHAIN, TAILINGS ELEVATOR CONVEYOR	125 - 38
3H6	CAB SOUND DEADENING, FOAM AND SEALS.....	90 - 4	5D3	CHAIN, UPPER TAILINGS	125 - 44
1F16	CAB WIRING HARNESS.....	40 - 2	5F20	CHANNEL, CROSS AUGER	130 - 56
3H14	CAB, COMPLETE	90 - 12	5F16	CHANNEL, CROSS AUGER BEARING	130 - 52
4E20	CABLE, CONCAVE INDICATOR, AND BRACKETS	120 - 30	1B21	CHANNEL, RADIATOR MOUNTING.....	20 - 16
3I9	CABLE, GEARSHIFT LEVER	90 - 32	4K3	CHANNEL, STRAW CHOPPER HOUSING	121 - 82
1I24	CABLE, WIRING	40 - 88	1E23	CHANNEL, SUPPORTS, FUEL TANK	30 - 2
1I9	CABLES, BATTERY.....	40 - 73	5F1	CHARGE HOUSING, VERTICAL UNLOADING AUGER	130 - 36
2B12	CABLES, HYDROSTATIC DRIVE CONTROL	50 - 4	3E20	CHARGE PRESSURE HOSE	70 - 94
2D12	CAM LOBE MOTOR (STEERABLE MOTOR)	50 - 56	5C3	CHECK VALVE, ROD AND KNOB, CHAFF SPREADER CONTROL.....	125 - 18
2D19	CAM, CARRIER, AND PISTON (STEERABLE MOTOR).....	50 - 64	5B14	CHOP-TO-DROP DECLUTCHING LEVER.....	125 - 5C
4B9	CAM, FRONT VARIABLE DRIVE SHEAVE	110 - 2	5B15	CHOPPER COVER AND BRACKETS - CHOP-TO- BALE	125 - 5D
4E12	CAM, SPIKE TOOTH CONCAVE	120 - 22	5E24	CHUTE, GRAIN TANK CLEAN OUT	130 - 34
1C25	CAMSHAFT	24 - 17	1G3	CIGARETTE LIGHTER	40 - 14
1C11	CAMSHAFT BUSHING	24 - 2	1F20	CIRCUIT BOARD, CAB POST INSTRUMENT PANEL	40 - 6
1C25	CAMSHAFT BUSHING	24 - 17	3I7	CIRCUIT BOARD, CAB POST INSTRUMENT PANEL	90 - 30
1C25	CAMSHAFT FOLLOWER.....	24 - 17	1I16	CIRCUIT BOARDS, CENTRAL ELECTRONICS MODULE	40 - 80
1D3	CAMSHAFT FOLLOWER.....	24 - 20	1I10	CIRCUIT BREAKER RELAYS	40 - 74
1C25	CAMSHAFT GEAR.....	24 - 17	1I10	CIRCUIT BREAKERS, ENGINE COMPARTMENT.....	40 - 74
1E23	CAP, FILLER, FUEL TANK	30 - 2	1I1	CLAMPS, UNLOADING AUGER LIGHT	40 - 64
5E24	CAP, GRAIN TANK CLEAN OUT CHUTE	130 - 34	5D20	CLEAN GRAIN CONVEYOR CHAIN.....	130 - 4
1C11	CAPS, MAIN BEARING	24 - 2	5D22	CLEAN GRAIN CONVEYOR CHAIN.....	130 - 6
2D21	CAPS, YOKE AND PIVOTS (STEERABLE MOTOR)	50 - 66	5E12	CLEAN GRAIN ELEVATOR DRIVE IDLER	130 - 22
2D19	CARRIER, PISTON, AND CAM (STEERABLE MOTOR).....	50 - 64	5E12	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER	130 - 22
2E21	CASE DRAIN, 4-WHEEL DRIVE, HYDRAULIC LINES	50 - 92	5E12	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER AND IDLER.....	130 - 22
5E24	CASE, VERTICAL AUGER LOWER GEAR	130 - 34	5E10	CLEAN GRAIN ELEVATOR GEARCASE	130 - 20
1I16	CENTRAL ELECTRONICS MODULE AND CIRCUIT BOARDS	40 - 80	5E14	CLEAN GRAIN ELEVATOR SHIELDS, UPPER.....	130 - 24
1I16	CENTRAL ELECTRONICS MODULE CIRCUIT BOARDS	40 - 80	5E1	CLEAN GRAIN ELEVATOR UPPER SHAFT	130 - 10
5B22	CHAFF SPREADER (DUAL MOTOR) SHIELDS AND HANDLES	125 - 12	5E1	CLEAN GRAIN ELEVATOR UPPER SHAFT, SPROCKET AND SHEAVE.....	130 - 10
5C3	CHAFF SPREADER CONTROL, CHECK VALVE, ROD AND KNOB.....	125 - 18	5E1	CLEAN GRAIN ELEVATOR UPPER SHEAVE.....	130 - 10
			5E1	CLEAN GRAIN ELEVATOR UPPER SPROCKET	130 - 10

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
5D24	CLEAN GRAIN ELEVATOR, UPPER	130-8	1H5	CONTOUR MASTER WIRING HARNESS ADAPTER	40-42
5E7	CLEAN GRAIN LOADING AUGER	130-16	4C1	CONTOUR MASTER, FEEDER HOUSE SHELL, WEAR PLATES AND SEALS	110-20
5E3	CLEAN GRAIN LOADING AUGER HOUSING, UPPER	130-12	4C5	CONTOUR MASTER, LOCKOUT ASSEMBLY (OPTIONAL).....	110-24
5E5	CLEAN GRAIN LOADING AUGER HOUSING, UPPER	130-14	2B12	CONTROL CABLES, HYDROSTATIC DRIVE	50-4
5E9	CLEAN GRAIN LOADING AUGER, FOLD	130-18	1G3	CONTROL PANEL, OPERATOR'S ARMREST	40-14
5D18	CLEAN GRAIN LOWER AUGER	130-2	1E3	CONTROL UNIT, ELECTRONIC	24-44
5D18	CLEAN GRAIN LOWER AUGER AND HINGED DOOR	130-2	1I14	CONTROL UNIT, ELECTRONIC (ECU)	40-78
5D20	CLEAN GRAIN LOWER ELEVATOR	130-4	2D25	CONTROL VALVE	50-70
5D22	CLEAN GRAIN LOWER ELEVATOR	130-6	2E1	CONTROL VALVE SOLENOID (FOUR-WHEEL DR.)	50-71
5D20	CLEAN GRAIN LOWER ELEVATOR AND CONVEYOR CHAIN	130-4	3C17	CONTROL VALVE, HEADER HEIGHT.....	70-37
5D22	CLEAN GRAIN LOWER ELEVATOR AND CONVEYOR CHAIN	130-6	3K1	CONTROL VALVE, HEATER	90-76
5E24	CLEAN OUT CHUTE, GRAIN TANK	130-34	2C19	CONTROL VALVE, HYDRO. DR. DISPLACEMENT	50-38
1F7	CLEANER, AIR AND INTAKE TUBES	30-10	1J9	CONVENIENCE OUTLET	40-98
4I21	CLEANING FAN DRIVE, SEPARATOR	121-52	1G5	CONVENIENCE OUTLET,KIT	40-16
4F7	CLEANING FAN INTAKE SHIELDS	120-44	3B25	CONVERSION PARTS, HUDRAULIC, 200 SERIES CUTTING PLATFORM.....	70-19
4F9	CLEANING FAN INTAKE SHIELDS	120-46	5G12	CONVEYOR AUGER BELTS,	170-2
4F11	CLEANING FAN INTAKE SHIELDS	120-48	4I17	CONVEYOR AUGERS, SIEVE, CHAFFER DRIVE AND STRAW WALKER.....	121-48
4F5	CLEANING FAN LEAF SCREENS (CORN)	120-42	4I15	CONVEYOR AUGERS, STRAW WALKER, SIEVE AND CHAFFER DRIVE	121-46
4F7	CLEANING FANS AND SHROUDS	120-44	5D20	CONVEYOR CHAIN, CLEAN GRAIN	130-4
4F9	CLEANING FANS AND SHROUDS	120-46	5D22	CONVEYOR CHAIN, CLEAN GRAIN	130-6
1J17	CLEANING SHOE LAMP INSTALLATION	40-106	1C2	COOLANT HEATER, ENGINE BLOCK.....	20-22
4C3	CLOSURE PLATES, FEEDER HOUSE - CONTOUR MASTER	110-22	1B19	COOLANT RECOVERY TANK	20-14
1E15	CLUTCH ASSEMBLY(STARTER)	24-56	1D6	COOLER, ENGINE OIL	24-23
3K5	CLUTCH, COMPRESSOR R134A.....	90-80	1F5	COOLER, FUEL	30-8
4H11	CLUTCH, HEADER ELECTROMAGNETIC.....	121-18	3E11	COOLER, OIL.....	70-84
4C20	CLUTCH, SLIP, FEEDER HOUSE	110-40	3B19	COOLER, OIL, FEEDER HOUSE	70-12
2G1	COLD WEATHER START BUTTON	60-18	3B21	COOLER, OIL, FEEDER HOUSE GEARCASE	70-14
3J16	COLD WEATHER START BUTTON	90-66	5G13	COOLING FAN BELTS	170-3
1F6	COLD WEATHER STARTING AID	30-9	4I11	CORN AND SMALL GRAIN CONCAVE INDICATOR	121-42
3F9	COMPARTMENT, ENGINE	80-8	5B8	CORN CURTAIN AND DEFLECTORS	125-2
3K7	COMPRESSOR PARTS (650301-) R134A	90-82	4D22	CORN CYLINDER DOOR (ARGENTINA ONLY).....	120-6
3K4	COMPRESSOR, A/C, HOSE	90-79	3G9	CORNER SHEET (L.H.) FRONT	80-34
5G13	COMPRESSOR, AIR CONDITIONING BELTS.....	170-3	3G5	CORNER SHEET, R.H. FRONT	80-30
3K3	COMPRESSOR, AIR CONDITIONING, R134A	90-78	3G7	CORNER SHEET, REAR (L.H.)	80-32
3K5	COMPRESSOR, CLUTCH R134A.....	90-80	4I7	COUNTERSHAFT DRIVE, SECONDARY.....	121-38
1I8	CONCAVE ADJUSTING MOTOR	40-72	5F21	COUNTERSHAFT DRIVE, UNLOADING AUGER	130-58
3F3	CONCAVE CLEARANCE DOOR.....	80-2	4H7	COUNTERSHAFT GEARCASE, PRIMARY	121-14
4E20	CONCAVE INDICATOR, CABLE AND BRACKETS.....	120-30	4H9	COUNTERSHAFT, PRIMARY, GEARCASE	121-16
4I11	CONCAVE INDICATOR, CORN AND SMALL GRAIN....	121-42	1C1	COUPLING WITH HUB, ENGINE GEARCASE	20-21
4E4	CONCAVE, RASP BAR AND GRATE	120-14	4E24	COVER, BEATER	120-34
4E6	CONCAVE, RASP BAR AND GRATE	120-16	5B15	COVER, CHOPPER - CHOP-TO-BALE	125-5D
4E14	CONCAVE, SPIKE TOOTH	120-24	3F9	COVER, ENGINE	80-8
4E8	CONCAVE, SPIKE-TOOTH	120-18	3F11	COVER, ENGINE	80-10
4E12	CONCAVE, SPIKE-TOOTH	120-22	1E19	COVER, FUEL INJECTION PUMP ACCESS	24-60
3E11	CONDENSER, A/C.....	70-84	5F18	COVER, GRAIN TANK CROSS AUGERS	130-54
1C18	CONNECTING RODS	24-10	2C14	COVER, HYDROSTATIC DRIVE PUMP.....	50-33
1I18	CONNECTORS, ELECTRICAL, WEATHERPACK	40-82	2D5	COVER, HYDROSTATIC DRIVE PUMP.....	50-49
1E5	CONNECTORS, FUEL INJECTION PUMP HOUSING ..	24-46	2D1	COVER, HYDROSTATIC PUMP (PLANETARY)	50-44
1J5	CONNECTORS, HARNESS, UPPER, FOR ENGINE....	40-94	2C12	COVER, HYDROSTATIC PUMP (RING AND PINION)	50-30
1J3	CONNECTORS, LOWER HARNESS FOR ENGINE	40-92	2D15	COVER, INNER	50-60
1J1	CONNECTORS, SUPPLEMENTARY TERMINALS	40-90	1D6	COVER, OIL COOLER	24-23
3J9	CONSOLE GLOVE BOX AND ARM REST, R.H.	90-58	2D18	COVER, QUILL AND BEARING (STEERABLE MOTOR).....	50-63
1F18	CONSOLE PANEL, OVERHEAD.....	40-4	1D4	COVER, ROCKER ARM	24-21
4C3	CONTOUR MASTER - FEEDER HOUSE FRAME, TILT BEAM & CLOSURE PLATES.....	110-22	1D19	COVER, THERMOSTAT	24-36
4D11	CONTOUR MASTER DRIVE SHAFT (FOR 444,494 CORN HEAD AND 914 BPU).....	110-56	4D17	COVER, THRESHING CYLINDER	120-1
4D9	CONTOUR MASTER DRIVESHAFT	110-54	1C24	COVER, TIMING GEAR.....	24-16
3C13	CONTOUR MASTER HOSES, (L.H.)	70-32	5F20	COVERS AND CHANNEL, CROSS AUGER	130-56
4C7	CONTOUR MASTER LOCKOUT ADAPTER KIT (BELT PU & 4R CORN HEADS)	110-26	5C21	CRANK, TAILINGS ELEVATOR	125-36
3E7	CONTOUR MASTER TILT CYLINDER.....	70-80			
1H3	CONTOUR MASTER WIRING HARNESS	40-40			

ALPHABETICAL INDEX - CONTINUED

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
1C4	CRANKCASE, ENGINE, OIL DRAIN.....	20-24	5H6	DECALS, REAR	170-22
4G13	CRANKS, STRAW WALKER, STRAW SPREADER DRIVE AND SHIELD	120-74	5H4	DECALS, REAR WHEEL	170-20
1C19	CRANKSHAFT	24-11	5H1	DECALS, RIGHT-HAND.....	170-16
1E13	CRANKSHAFT DAMPERS	24-54	5G16	DECALS, SAFETY AND LOCATIONS	170-6
1C24	CRANKSHAFT FRONT OIL SEAL	24-16	5G18	DECALS, SAFETY AND LOCATIONS	170-8
1C20	CRANKSHAFT KIT, UNDERSIZE (CONNECTING ROD JOURNAL)	24-12	5G20	DECALS, SAFETY AND LOCATIONS	170-10
1E13	CRANKSHAFT PULLEY AND DAMPERS	24-54	5G22	DECALS, SAFETY AND LOCATIONS	170-12
5F16	CROSS AUGER BEARING PLATE, L.H.	130-52	5G24	DECALS, SAFETY AND LOCATIONS	170-14
5F20	CROSS AUGER COVERS AND CHANNEL.....	130-56	5H8	DECALS, TOP	170-24
5F18	CROSS AUGERS, GRAIN TANK	130-54	4J17	DECK, SUPPORTS AND FINS, STRAW CHOPPER.....	121-72
3F3	CROSS BRACES, SEPARATOR	80-2	5B14	DECLUTCHING LEVER - CHOP-TO-DROP.....	125-5C
5B24	CROSSBAR, CHAFF SPREADER PAN	125-14	4D20	DEFLECTOR, CYLINDER DOOR	120-4
3J15	CUP HOLDER	90-64	4B24	DEFLECTOR, FEEDER HOUSE FRAME	110-18
4E3	CURTAIN, BEATER GRATE	120-12	5B8	DEFLECTORS AND CORN CURTAIN	125-2
5C15	CURTAIN, SPREADER	125-30	4J17	DEFLECTORS, STRAW CHOPPER DECK	121-72
5E20	CURTAINS, GRAIN TANK.....	130-30	4G9	DEFLECTORS, STRAW WALKERS	120-70
3B25	CUTTING PLATFORM , 200 SERIES CONVERSION PARTS	70-19	5G8	DIAL-A-MATIC ELECTRICAL HARNESS	160-4
1C11	CYLINDER BLOCK FITTINGS	24-2	5G6	DIAL-A-MATIC HEADER HEIGHT CONTROL HYDRAULIC LINE AND VALVE BLOCK	160-2
3F3	CYLINDER CLEARANCE DOOR	80-2	5G7	DIAL-A-MATIC HEADER HEIGHT CONTROL VALVE BLOCK SOLENOID	160-3
4D17	CYLINDER COVER, THRESHING	120-1	3C17	DIAL-A-MATIC HEADER HEIGHT CONTROL VALVE....	70-37
4D20	CYLINDER DOOR (WITH CYLINDER BAFFLE)	120-4	2F13	DIAPHRAGM, BRAKE LINES	60-6
4D22	CYLINDER DOOR, CORN (ARGENTINA ONLY).....	120-6	2C5	DIFFERENTIAL GEARS	50-22
415	CYLINDER DRIVE ADJUSTING BRACKET, DUAL-RANGE	121-36	2C5	DIFFERENTIAL SHAFTS.....	50-22
4H19	CYLINDER DRIVE GEAR CASE, DUAL-RANGE.....	121-26	1D15	DIPSTICK, ENGINE OIL	24-32
411	CYLINDER DRIVE INTERMEDIATE SHAFT MOUNTING, DUAL-RANGE	121-32	4B11	DIPSTICK, REVERSER GEARBOX	110-4
413	CYLINDER DRIVE INTERMEDIATE SHEAVE, DUAL-RANGE	121-34	5B20	DISC, CHAFF SPREADER (DUAL MOTOR)	125-10
4H23	CYLINDER DRIVE TIGHTENER, DUAL-RANGE	121-30	2C19	DISPLACEMENT CONTROL VALVE, HYDRO. DR.	50-38
4H15	CYLINDER DRIVE, SINGLE RANGE	121-22	3H12	DOOR LATCH, CAB	90-10
4H17	CYLINDER DRIVE, SLOW SPEED.....	121-24	3G9	DOOR, (L.H.) FRONT CORNER SHEET	80-34
1D1	CYLINDER HEAD	24-18	3H14	DOOR, CAB AND GLASS.....	90-12
1D1	CYLINDER HEAD BOLTS	24-18	5B10	DOOR, CHOPPER STRAW.....	125-4
1D1	CYLINDER HEAD GASKET	24-18	5D18	DOOR, CLEAN GRAIN LOWER AUGER	130-2
1E11	CYLINDER HEAD GASKET KIT	24-52	4D20	DOOR, CYLINDER (WITH CYLINDER BAFFLE)	120-4
1C18	CYLINDER LINERS	24-10	4D22	DOOR, CYLINDER DOOR (ARGENTINA ONLY).....	120-6
4D24	CYLINDER SHEAR BAR	120-8	3F7	DOOR, ENGINE ACCESS.....	80-6
3D6	CYLINDER SPEED HYDRAULIC LINES AND HOSES..	70-52	3F11	DOOR, ENGINE PLATFORM	80-10
3D11	CYLINDER SPEED, SOLENOID CONTROL VALVE	70-58	3G1	DOOR, R.H. SERVICE ACCESS SHIELD	80-26
4E10	CYLINDER THRESHING, SPIKE TOOTH	120-20	3F7	DOOR, RADIATOR	80-6
2F19	CYLINDER, BRAKE SLAVE	60-12	1B21	DOOR, RADIATOR ACCESS	20-16
2F15	CYLINDER, BRAKE, MASTER	60-8	4E25	DOOR, SHOE GRAIN SUPPLY	120-36
3E3	CYLINDER, DRIVE, GRAIN TANK UNLOADING.....	70-76	5B10	DOOR, STRAW CHOPPER.....	125-4
3G1	CYLINDER, GAS, SERVICE ACCESS SHIELD	80-26	5C21	DOOR, TAILINGS ELEVATOR HOUSING	125-36
3G3	CYLINDER, GAS, SERVICE ACCESS SHIELD	80-28	5E14	DOOR, UPPER CLEAN GRAIN ELEVATOR	130-24
3C16	CYLINDER, HEADER LIFT	70-35	4C8	DOOR, UPPER FEEDER HOUSE	110-28
3G7	CYLINDER, REAR CORNER SHEET	80-32	1D19	DRAIN VALVE, CYLINDER HEAD	24-36
2G13	CYLINDER, STEERING	60-30	1D13	DRAIN VALVE, OIL PAN.....	24-30
4E1	CYLINDER, THRESHING, RASP BAR	120-10	5F23	DRIVE BELT GUIDE, UNLOADING AUGER	130-60
3E7	CYLINDER, TILT - CONTOUR MASTER	70-80	5C24	DRIVE BRACKET, TAILINGS AND LOWER TROUGH SUPPORT	125-39
3E5	CYLINDER, UNLOADING AUGER SWING	70-78	5D5	DRIVE CHAIN TIGHTENER, UPPER TAILINGS	125-46
2F11	CYLINDERS, MASTER BRAKE AND BRAKE PEDALS	60-4	2B12	DRIVE CONTROL CABLES, HYDROSTATIC	50-4
	D		1C19	DRIVE GEAR, OIL PUMP	24-11
1C19	DAMPER KEY	24-11	4113	DRIVE GEARCASE, STRAW WALKER	121-44
1E13	DAMPERS, CRANKSHAFT	24-54	5E12	DRIVE IDLER, CLEAN GRAIN ELEVATOR	130-22
5H6	DECALS, FRONT.....	170-22	3D23	DRIVE PUMP, REEL BELT PICKUP	70-72
5H4	DECALS, FRONT WHEEL.....	170-20	4D11	DRIVE SHAFT, CONTOUR MASTER (FOR 444,494 CORN HEAD AND 914 BPU).....	110-56
5H2	DECALS, LEFT-HAND	170-18	4H5	DRIVE SHAFT, GEARCASE AND PRIMARY COUNTERSHAFT	121-12
			5B18	DRIVE SHAFT, STRAW SPREADER	125-8
			2B19	DRIVE SHAFTS	50-11
			2B20	DRIVE SHAFTS	50-12
			3F25	DRIVE SHIELD, R.H. REAR	80-24

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4B22	DRIVE SHIELDS, CONTOUR MASTER FEEDER HOUSE.....	110 - 16	1H20	EITHER START SOLENOID	40 - 58
4B20	DRIVE SHIELDS, SAFETY STOP, FEEDER HOUSE	110 - 14	1I20	ELECTRICAL CONNECTOR SERVICE KIT	40 - 84
4J15	DRIVE SHIELDS, STRAW CHOPPER	121 - 70	1I22	ELECTRICAL CONNECTOR SERVICE KIT	40 - 86
4K5	DRIVE SPROCKETS, STRAW CHOPPER.....	121 - 84	5G8	ELECTRICAL HARNESS, DIAL-A-MATIC.....	160 - 4
5E12	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR.....	130 - 22	1J2	ELECTRICAL SERVICE OUTLET.....	40 - 91
4J3	DRIVE TIGHTENER, FEEDER HOUSE	121 - 58	1I18	ELECTRICAL TERMINALS AND CONNECTORS, WEATHERPACK	40 - 82
4B18	DRIVE TIGHTENER, FIXED SPEED FEEDER HOUSE.....	110 - 12	4H11	ELECTROMAGNETIC HEADER CLUTCH	121 - 18
4B17	DRIVE TIGHTENER, VARIABLE SPEED	110 - 10	1E3	ELECTRONIC CONTROL UNIT	24 - 44
2B14	DRIVE WHEELS	50 - 6	1I14	ELECTRONIC CONTROL UNIT (ECU).....	40 - 78
2B15	DRIVE WHEELS, HIGH FLOATATION PLANETARY FINAL DRIVE	50 - 7	1E3	ELECTRONIC FUEL INJECTION PUMP	24 - 44
4J5	DRIVE, BELT PICKUP / REEL PUMP MOUNTING SHEAVE	121 - 60	1I16	ELECTRONICS MODULE, CENTRAL AND CIRCUIT BOARDS	40 - 80
4I21	DRIVE, CLEANING FAN, SEPARATOR.....	121 - 52	4F21	ELEMENT, CHAFFER	120 - 58
5F21	DRIVE, COUNTERSHAFT, UNLOADING AUGER.....	130 - 58	4F23	ELEMENT, CHAFFER EXTENSION	120 - 60
5G13	DRIVE, CYLINDER INTERMEDIATE, BELTS	170 - 3	4G3	ELEMENT, SIEVE	120 - 64
5G13	DRIVE, CYLINDER, BELTS.....	170 - 3	5E12	ELEVATOR DRIVE IDLER, CLEAN GRAIN	130 - 22
4J1	DRIVE, FAN, SPEED CONTROL SHEAVE LINKAGE....	121 - 56	5E12	ELEVATOR DRIVE TIGHTENER, CLEAN GRAIN.....	130 - 22
4I9	DRIVE, GEARCASE, STRAW WALKER.....	121 - 40	5E14	ELEVATOR SHIELDS, UPPER CLEAN GRAIN.....	130 - 24
2D8	DRIVE, HYDROSTATIC MOTOR, FIXED	50 - 52	5G13	ELEVATOR, CLEAN GRAIN BELTS.....	170 - 3
2C21	DRIVE, HYDROSTATIC MOTOR, FIXED (RING AND PINION)	50 - 40	5D20	ELEVATOR, LOWER, CLEAN GRAIN	130 - 4
2E13	DRIVE, HYDROSTATIC OIL HOSES, UPPER.....	50 - 84	5D22	ELEVATOR, LOWER, CLEAN GRAIN	130 - 6
2E9	DRIVE, HYDROSTATIC, LOWER OIL LINES (FOUR WHEEL DRIVE)	50 - 80	5C21	ELEVATOR, TAILINGS	125 - 36
2E11	DRIVE, HYDROSTATIC, LOWER OIL LINES (TWO WHEEL DRIVE)	50 - 82	5D24	ELEVATOR, UPPER CLEAN GRAIN	130 - 8
4I7	DRIVE, SECONDARY COUNTERSHAFT.....	121 - 38	3F7	ENGINE ACCESS DOOR, HANDRAILS, AND RADIATOR DOOR.....	80 - 6
1B11	DRIVES, ENGINE FAN	20 - 6	3F13	ENGINE ACCESS PLATFORM AND STEP	80 - 12
1B13	DRIVES, ENGINE FAN	20 - 8	1H22	ENGINE AIR FILTER WARNING SWITCH.....	40 - 60
1B15	DRIVES, ENGINE FAN (HI POWER)	20 - 10	1I6	ENGINE ALTERNATOR MOUNTING	40 - 69
4J7	DRIVES, STRAW CHOPPER (FRONT)	121 - 62	1C2	ENGINE BLOCK COOLANT HEATER	20 - 22
4J11	DRIVES, STRAW CHOPPER, (REAR)	121 - 66	1I10	ENGINE CIRCUIT BREAKERS	40 - 74
4J9	DRIVES, STRAW CHOPPER, FINE CUT (FRONT)	121 - 64	3F9	ENGINE COMPARTMENT.....	80 - 8
4J13	DRIVES, STRAW CHOPPER, FINE CUT (REAR).....	121 - 68	5G12	ENGINE DRIVE BELTS.....	170 - 2
4D9	DRIVESHAFT, CONTOUR MASTER	110 - 54	1B11	ENGINE FAN DRIVES	20 - 6
1B13	DRIVESHAFT, ENGINE FAN DRIVES	20 - 8	1B13	ENGINE FAN DRIVES.....	20 - 8
4F1	DRIVESHAFT, SHOE GRAIN SUPPLY AUGERS	120 - 38	1B15	ENGINE FAN DRIVES (HI POWER)	20 - 10
2F17	DRUM, BRAKE.....	60 - 10	1C1	ENGINE GEARCASE COUPLING WITH HUB.....	20 - 21
3C20	DUAL ACCUMULATOR, ONE HALF GALLON	70 - 40	3E13	ENGINE GEARCASE OIL FILTER ASSEMBLY	70 - 86
1I1	DUAL LEVEL MONITOR	40 - 64	3E15	ENGINE GEARCASE PRESSURE REGULATOR	70 - 88
1I1	DUAL LEVEL MONITOR WIRING HARNESS	40 - 64	3E17	ENGINE GEARCASE SOLENOID VALVE (PRESSURE REGULATOR)	70 - 90
2B16	DUAL WHEELS, WIDE-SPACED (PLANETARY FINAL DRIVE)	50 - 8	4G24	ENGINE GEARCASE- SEPARATOR DRIVE WET-CLUTCH AND PUMP DRIVE SHAFT	121 - 6
4I5	DUAL-RANGE CYLINDER DRIVE ADJUSTING BRACKET.....	121 - 36	4G20	ENGINE GEARCASE- STRAW CHOPPER, UNLOADING DRIVE AND SEPARATOR DRIVE GEAR	121 - 2
4H19	DUAL-RANGE CYLINDER DRIVE GEAR CASE	121 - 26	4H1	ENGINE GEARCASE, SEPARATOR AND PUMP DRIVE	121 - 8
4I1	DUAL-RANGE CYLINDER DRIVE INTERMEDIATE SHAFT MOUNTING.....	121 - 32	4H3	ENGINE GEARCASE, SEPARATOR AND PUMP DRIVE	121 - 10
4I3	DUAL-RANGE CYLINDER DRIVE INTERMEDIATE SHEAVE	121 - 34	4G22	ENGINE GEARCASE, STRAW CHOPPER, UNLOADING DRIVE AND SEPARATOR DRIVE GEAR	121 - 4
4H23	DUAL-RANGE CYLINDER DRIVE TIGHTENER	121 - 30	1B23	ENGINE INTERCOOLER.....	20 - 18
4H21	DUAL-RANGE LOCKOUT ARM	121 - 28	1B25	ENGINE MOUNTS	20 - 20
3I6	DUCTS, HEATER AND AIR CONDITIONING	90 - 29	1B25	ENGINE MOUNTS AND REAR SUPPORT	20 - 20
4D3	DUST FAN BELT, LH FEEDER HOUSE	110 - 48	1C10	ENGINE OIL (TORQ-GARD PLUS-50).....	24 - 1
4D1	DUST FAN, LH SIDE FEEDER HOUSE.....	110 - 46	1D6	ENGINE OIL COOLER	24 - 23
3B19	DUST SUPPRESSSION, LUBE OIL PUMP	70 - 12	1D15	ENGINE OIL DIPSTICK.....	24 - 32
			1D15	ENGINE OIL DIPSTICK TUBE	24 - 32
			1D11	ENGINE OIL FILTER	24 - 28
			1H20	ENGINE OIL PRESSURE SENDING UNIT	40 - 58
			1D7	ENGINE OIL PUMP	24 - 24
			1D9	ENGINE OIL PUMP INTAKE.....	24 - 26
			1C16	ENGINE OVERHAUL KIT	24 - 8
			3F11	ENGINE PLATFORM	80 - 10
			1H22	ENGINE PLUGGED AIR FILTER WARNING SWITCH ..	40 - 60
			3F9	ENGINE RAILS	80 - 8
			1E11	ENGINE REBUILD GASKET KIT	24 - 52

E

1E3	E.C.U.	24 - 44
1I12	ECU MOUNTING SUPPORT (-XXXXXX).....	40 - 76
1I14	ECU, ELECTRONIC CONTROL UNIT	40 - 78

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1C13	ENGINE SERVICE PARTS, KEY	24 - 4	4D7	FEEDER HOUSE FRONT DRIVE SHAFT, SHEAVE, MOUNTINGS (FIXED SPEED WITH REVERSER)	110 - 52
1E17	ENGINE SPEED SENSOR	24 - 58	3B21	FEEDER HOUSE GEARCASE OIL COOLER	70 - 14
1H18	ENGINE TACH SENSOR	40 - 56	3B23	FEEDER HOUSE GEARCASE OIL COOLER FITTINGS AND HOSES	70 - 16
1H20	ENGINE TEMP SWITCH	40 - 58	3B17	FEEDER HOUSE OIL COOLER LUBE OIL PUMP	70 - 10
1H20	ENGINE TEMPERATURE SENDING UNIT	40 - 58	3B19	FEEDER HOUSE OIL COOLER, LUBE OIL PUMP	70 - 12
1H20	ENGINE, LOWER HARNESS	40 - 58	3I11	FEEDER HOUSE REVERSER FOOT CONTROL	90 - 34
1H18	ENGINE, UPPER HARNESS	40 - 56	4B13	FEEDER HOUSE REVERSER FOOT CONTROL	110 - 6
2G1	ETHER START BUTTON	60 - 18	4C1	FEEDER HOUSE SHELL - CONTOUR MASTER	110 - 20
3J16	ETHER START BUTTON	90 - 66	4C20	FEEDER HOUSE SLIP CLUTCH	110 - 40
1J3	ETHER START CONNECTOR	40 - 92	4D5	FEEDER HOUSE UPPER DRIVE SHAFT, SHEAVE, MOUNTING (FIXED SPEED WITH REVERSER)	110 - 50
1F6	ETHER STARTING AID	30 - 9	4C8	FEEDER HOUSE UPPER SHAFT	110 - 28
1D24	ETHER STARTING FITTINGS	24 - 41	3B16	FEEDER HOUSE VARIABLE DRIVE HYDRAULIC HOSE	70 - 9
3K1	EVAPORATOR/HEATER UNIT	90 - 76	4C1	FEEDER HOUSE WEAR PLATES - CONTOUR MASTER	110 - 20
1D23	EXHAUST MANIFOLD GASKETS	24 - 40	4D18	FEEDER HOUSE/SEPARATOR SEAL, STONE TRAP AND DOOR	120 - 2
1D23	EXHAUST MANIFOLD HEAT SHIELD	24 - 40	4C22	FEEDER HOUSE, UPPER COUNTERSHAFT VARIABLE DRIVE	110 - 42
1D23	EXHAUST MANIFOLDS	24 - 40	1F24	FIELD LIGHTING, AUXILIARY	40 - 10
1F9	EXHAUST PIPE AND MUFFLER	30 - 12	1J13	FIELD LIGHTS	40 - 102
1D1	EXHAUST VALVE SHIELD	24 - 18	1F18	FIELD LIGHTS SWITCH, AUX, OPTIONAL	40 - 4
1D1	EXHAUST VALVES	24 - 18	1F7	FILTER, AIR AND INTAKE TUBES	30 - 10
2B22	EXPORT, TRANSMISSION	50 - 14	3I5	FILTER, CAB AIR	90 - 28
3E1	EXTEND LINES, HOSES, UNLOADING AUGER	70 - 74	1D11	FILTER, ENGINE OIL	24 - 28
1C2	EXTENSION CORD, ENGINE BLOCK COOLANT HEATER	20 - 22	1E9	FILTER, FUEL	24 - 50
4F23	EXTENSION ELEMENT, CHAFFER	120 - 60	1F1	FILTER, FUEL PUMP	30 - 4
5E22	EXTENSIONS, GRAIN TANK	130 - 32	3C15	FILTER, MAIN HYDRAULIC	70 - 34
F					
3F23	FAN DRIVE SHIELD (L.H.)	80 - 22	3E13	FILTER, OIL, ENGINE GEARCASE	70 - 86
4I23	FAN DRIVE SPEED CONTROL LINKAGE	121 - 54	1C24	FILTER, WATER PUMP (WEEP HOLE)	24 - 16
4J1	FAN DRIVE SPEED CONTROL SHEAVE LINKAGE	121 - 56	3J20	FILTERS, AIR CONDITIONER AND HEATER AND HOUSING	90 - 70
1E8	FAN DRIVE, FIXED	24 - 49	3J20	FILTERS, HEATER AND AIR CONDITIONING AND HOUSING	90 - 70
1B13	FAN DRIVES, ENGINE	20 - 8	2C7	FINAL DRIVE (RING AND PINION)	50 - 24
1B15	FAN DRIVES, ENGINE (HI POWER)	20 - 10	2E2	FINAL DRIVE AXLE SHAFT	50 - 72
1E8	FAN PULLEY HUB	24 - 49	2E3	FINAL DRIVE AXLE SHAFT	50 - 74
1E18	FAN PULLEY, AIR CONDITIONER COMPRESSOR	24 - 59	2C9	FINAL DRIVE AXLE, GEAR AND BEARINGS (RING AND PINION)	50 - 26
3J22	FAN, AIR CONDITIONING/HEATER AND PRESSURIZING	90 - 72	2E2	FINAL DRIVE BEARINGS	50 - 72
5G14	FAN, CLEANING, BELTS	170 - 4	2C8	FINAL DRIVE BEARINGS (RING AND PINION)	50 - 25
4I21	FAN, DRIVE, CLEANING, SEPARATOR	121 - 52	2C8	FINAL DRIVE HOUSING AND BRG. CAP (RING AND PINION)	50 - 25
4D1	FAN, DUST, LH SIDE FEEDER HOUSE	110 - 46	2E5	FINAL DRIVE INNER HOUSING	50 - 76
1B11	FAN, ENGINE	20 - 6	2E2	FINAL DRIVE OUTER HOUSING	50 - 72
4F7	FANS, CLEANING	120 - 44	2E3	FINAL DRIVE OUTER HOUSING	50 - 74
4F9	FANS, CLEANING	120 - 46	2E5	FINAL DRIVE PINION SHAFT	50 - 76
4C18	FEED PLATE LATCH HANDLE	110 - 38	2E3	FINAL DRIVE PINION SHAFT BEARINGS	50 - 74
5G12	FEEDER CONVEYOR BELTS	170 - 2	2E5	FINAL DRIVE PINION SHAFT BEARINGS	50 - 76
4C12	FEEDER CONVEYOR BRACKET	110 - 32	2E5	FINAL DRIVE PINION SHAFT GEARS	50 - 76
4C12	FEEDER CONVEYOR DRIVE CHAIN	110 - 32	2C10	FINAL DRIVE PINION, SHAFTS AND BEARINGS (RING AND PINION)	50 - 28
4C14	FEEDER CONVEYOR DRIVE CHAIN, TIGHTENER AND GUIDES	110 - 34	2E2	FINAL DRIVE PLANETARY PINION	50 - 72
4C12	FEEDER CONVEYOR IDLER	110 - 32	2E23	FINAL DRIVE SHAFT SHIELDS - PLANETARY FINAL DRIVE	50 - 94
1J11	FEEDER HOUSE BACKSHAFT SPEED SENSOR	40 - 100	2E22	FINAL DRIVE SHAFT SHIELDS - SINGLE REDUCTION	50 - 93
5G14	FEEDER HOUSE BELTS	170 - 4	4J23	FINE CUT ROTOR STRAW CHOPPER (PADDLED WIDE	121 - 78
4B22	FEEDER HOUSE DRIVE SHIELDS - CONTOUR MASTER	110 - 16	4J21	FINE CUT ROTOR STRAW CHOPPER (STRAIGHT WIDE	121 - 76
4B20	FEEDER HOUSE DRIVE SHIELDS AND SAFETY STOP	110 - 14	4J9	FINE CUT STRAW CHOPPER DRIVES (FRONT)	121 - 64
4J3	FEEDER HOUSE DRIVE TIGHTENER	121 - 58	4J13	FINE CUT STRAW CHOPPER DRIVES (REAR)	121 - 68
4B18	FEEDER HOUSE DRIVE TIGHTENER (FIXED SPEED)	110 - 12			
4D3	FEEDER HOUSE DUST FAN BELT, LH	110 - 48			
4D1	FEEDER HOUSE DUST FAN, LH SIDE	110 - 46			
4C10	FEEDER HOUSE FLOOR	110 - 30			
4B24	FEEDER HOUSE FRAME	110 - 18			
4C3	FEEDER HOUSE FRAME, TILT BEAM & CLOSURE PLATES, CONTOUR MASTER	110 - 22			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4E16	FINGER GRATE, SPIKE-TOOTH	120 - 26	1E1	FUEL LEAK-OFF LINES	24 - 42
4F23	FINGERS, PLASTIC, CHAFFER	120 - 60	1E3	FUEL LEAK-OFF LINES	24 - 44
4J17	FINS, SUPPORTS AND DECK, STRAW CHOPPER.....	121 - 72	1F1	FUEL PUMP, WATER SEPARATOR, AND FUEL SENDER	30 - 4
3B23	FITTINGS AND HOSES, OIL COOLER FEEDER HOUSE.....	70 - 16	1F1	FUEL SENDER	30 - 4
1C11	FITTINGS, CYLINDER BLOCK	24 - 2	1E3	FUEL SHUT-OFF SOLENOID (FIP)	24 - 44
1D24	FITTINGS, ETHER STARTING	24 - 41	1E23	FUEL TANK, SUPPORTS, AND FITTINGS	30 - 2
1E23	FITTINGS, FUEL TANK	30 - 2	1E6	FUEL TRANSFER PUMP (ROBERT BOSCH)	24 - 47
3E8	FITTINGS, HOSES, TILT CYLINDER CONTOUR MASTER.....	70 - 81			
1F3	FITTINGS, TANK FUEL LINES	30 - 6		G	
1E8	FIXED FAN DRIVE	24 - 49	1D4	GASKET ADHESIVE, ROCKER ARM COVER	24 - 21
2G17	FIXED REAR AXLE	60 - 36	1E11	GASKET KIT, CYLINDER HEAD	24 - 52
2G22	FIXED REAR AXLE STEERING TIE RODS.....	60 - 41	1E11	GASKET KIT, ENGINE REBUILD	24 - 52
4B18	FIXED SPEED FEEDER HOUSE DRIVE TIGHTENER..	110 - 12	1E11	GASKET KIT, SHORT BLOCK	24 - 52
3E18	FLAT O-RING KIT, HYDRAULIC.....	70 - 92	1D1	GASKET, CYLINDER HEAD	24 - 18
3H4	FLOOR MAT, CAB.....	90 - 2	1D16	GASKET, INTAKE MANIFOLD	24 - 33
4C10	FLOOR, FEEDER HOUSE	110 - 30	1D11	GASKET, OIL FILTER HOUSING	24 - 28
3B13	FLOW CONTROL VALVE, REEL DRIVE	70 - 6	1D13	GASKET, OIL PAN	24 - 30
5C5	FLOW CONTROL VALVE, REEL DRIVE	125 - 20	1D7	GASKET, OIL PUMP	24 - 24
1C23	FLYWHEEL.....	24 - 15	1D9	GASKET, OIL PUMP INTAKE	24 - 26
1C23	FLYWHEEL HUB	24 - 15	1C22	GASKET, REAR OIL SEAL	24 - 14
3H6	FOAM, SEALS AND SOUND DEADENING, CAB	90 - 4	1D4	GASKET, ROCKER ARM COVER	24 - 21
1C25	FOLLOWER, CAMSHAFT	24 - 17	1D19	GASKET, THERMOSTAT	24 - 36
1D3	FOLLOWER, CAMSHAFT	24 - 20	1C24	GASKET, TIMING GEAR COVER.....	24 - 16
3I11	FOOT PEDAL, FEEDER HOUSE REVERSER	90 - 34	1D21	GASKET, TURBOCHARGER	24 - 38
4B13	FOOT PEDAL, FEEDER HOUSE REVERSER	110 - 6	1D19	GASKET, WATER MANIFOLD	24 - 36
3D14	FOUR STACK SOLENOID CONTROL VALVE	70 - 62	1D17	GASKET, WATER PUMP	24 - 34
2E17	FOUR WHEEL DRIVE HYDRAULIC LINES AND HOS ES, L.H.	50 - 88	1D23	GASKETS, EXHAUST MANIFOLD	24 - 40
4F19	FRAME ARMS, PRECLEANER CHAFFER	120 - 56	4B11	GEAR BOX, REVERSER.....	110 - 4
3H16	FRAME, CAB AND SUPPORT	90 - 14	4H19	GEAR CASE, DUAL-RANGE CYLINDER DRIVE.....	121 - 26
5B20	FRAME, CHAFF SPREADER DISC	125 - 10	5E24	GEAR CASE, VERTICAL AUGER LOWER	130 - 34
4G1	FRAME, CHAFFER	120 - 62	1C25	GEAR, CAMSHAFT	24 - 17
4B24	FRAME, FEEDER HOUSE	110 - 18	4H19	GEAR, DUAL-RANGE CYLINDER DRIVE	121 - 26
4C3	FRAME, FEEDER HOUSE, CONTOUR MASTER	110 - 22	2C9	GEAR, FINAL DRIVE (RING AND PINION)	50 - 26
1B21	FRAME, RADIATOR	20 - 16	1E3	GEAR, INJECTION PUMP.....	24 - 44
3F3	FRAME, SEPARATOR.....	80 - 2	1C19	GEAR, OIL PUMP DRIVE	24 - 11
4G5	FRAME, SIEVE	120 - 66	1D7	GEAR, OIL PUMP DRIVE	24 - 24
1F23	FRONT AND REAR TURN AND TAIL LIGHTS	40 - 9	4B11	GEAR, REVERSER GEARBOX	110 - 4
2B18	FRONT AXLE (PLANETARY FINAL DRIVE)	50 - 10	1C23	GEAR, STARTER.....	24 - 15
2B17	FRONT AXLE (RING AND PINION FINAL DRIVE)	50 - 9	4I13	GEAR, STRAW WALKER DRIVE GEARCASE	121 - 44
3G5	FRONT CORNER SHEET (R.H.)	80 - 30	4I9	GEARCASE DRIVE, STRAW WALKER	121 - 40
3G9	FRONT CORNER SHEET AND DOOR (L.H.)	80 - 34	5E10	GEARCASE, CLEAN GRAIN ELEVATOR	130 - 20
1C24	FRONT OIL SEAL	24 - 16	4H5	GEARCASE, DRIVE SHAFT AND PRIMARY COUNTERSHAFT	121 - 12
4B15	FRONT SHAFT WITH REVERSER (VARIABLE).....	110 - 8	4G24	GEARCASE, ENGINE	121 - 6
3G13	FRONT SHIELD ASSEMBLY, LEFT SIDE	80 - 38	4H1	GEARCASE, ENGINE	121 - 8
3G19	FRONT SHIELD ASSEMBLY, RIGHT SIDE.....	80 - 44	4H3	GEARCASE, ENGINE	121 - 10
2G5	FRONT STEERING HOSES AND LINES.....	60 - 22	5F9	GEARCASE, HORIZONTAL UNLOADING AUGER DRIVE	130 - 44
4B9	FRONT VARIABLE DRIVE SHEAVE AND MOUNTINGS	110 - 2	4H7	GEARCASE, PRIMARY COUNTERSHAFT	121 - 14
1D19	FRONT WATER MANIFOLD	24 - 36	4H9	GEARCASE, PRIMARY COUNTERSHAFT	121 - 16
5H4	FRONT WHEEL DECALS	170 - 20	2C5	GEARS, DIFFERENTIAL	50 - 22
1E9	FUEL CHECK VALVE	24 - 50	2E3	GEARS, FINAL DRIVE PINION SHAFT	50 - 74
1F5	FUEL COOLER	30 - 8	2E5	GEARS, FINAL DRIVE PINION SHAFT	50 - 76
1E9	FUEL FILTER.....	24 - 50	2C1	GEARS, TRANSMISSION	50 - 18
1E9	FUEL FILTER BASE	24 - 50	2C3	GEARS, TRANSMISSION PINION	50 - 20
1E9	FUEL FILTER LINES	24 - 50	2B24	GEARSHIFT LEVER AND LINKAGE	50 - 16
1E1	FUEL INJ LINES	24 - 42	3I9	GEARSHIFT LEVER AND LINKAGE	90 - 32
1E7	FUEL INJECTION NOZZLE.....	24 - 48	3H14	GLASS, CAB AND DOOR.....	90 - 12
1E1	FUEL INJECTION NOZZLES (ROBERT BOSCH)	24 - 42	3J9	GLOVE BOX AND ARM REST, R.H.	90 - 58
1E3	FUEL INJECTION PUMP.....	24 - 44	5E20	GRAIN TANK AND CURTAINS.....	130 - 30
1H18	FUEL INJECTION PUMP.....	40 - 56	5E18	GRAIN TANK BASE.....	130 - 28
1E19	FUEL INJECTION PUMP ACCESS COVER	24 - 60	5F18	GRAIN TANK CROSS AUGERS.....	130 - 54
1E5	FUEL INJECTION PUMP HOUSING CONNECTORS ...	24 - 46	1I1	GRAIN TANK DUAL LEVEL MONITOR HARNESS.....	40 - 64

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
5E22	GRAIN TANK EXTENSIONS	130 - 32	3C16	HEADER LIFT CYLINDER.....	70 - 35
4F17	GRAIN TANK LEAK KIT	120 - 54	3C11	HEADER LIFT LINES AND HOSES	70 - 30
1H24	GRAIN TANK LEVEL MONITOR.....	40 - 62	3D9	HEADER LIFT MODULE, SOLENOID CONTROL VALVE	70 - 56
1H24	GRAIN TANK LIGHT	40 - 62	2B10	HEADER LIFT/LOWER SWITCH	50 - 2
5E16	GRAIN TANK TOP.....	130 - 26	3H10	HEADLINER, CAB	90 - 8
1H24	GRAIN TANK UNLOADING AUGER LIMIT SWITCH	40 - 62	1F5	HEAT EXCHANGER, FUEL.....	30 - 8
3E3	GRAIN TANK UNLOADING DRIVE CYLINDER.....	70 - 76	1D23	HEAT SHIELD, EXHAUST MANIFOLD.....	24 - 40
3E3	GRAIN TANK UNLOADING DRIVE CYLINDER MOUNTING	70 - 76	1G11	HEATER AND AIR CONDITIONER SWITCH.....	40 - 22
5F1	GRAIN TANK VERTICAL UNLOADING AUGER	130 - 36	3I6	HEATER AND AIR CONDITIONING DUCTS	90 - 29
5F1	GRAIN TANK VERTICAL UNLOADING AUGER HOUSING.....	130 - 36	3J20	HEATER AND AIR CONDITIONING HOUSING AND FILTERS.....	90 - 70
1H24	GRAIN TANK WIRING HARNESS, LIGHT, LIMIT SWITCH AND LEVEL MONITOR	40 - 62	3K1	HEATER SYSTEM.....	90 - 76
4E4	GRATE AND RASP BAR CONCAVE	120 - 14	1G9	HEATER WIRING HARNESS	40 - 20
4E6	GRATE AND RASP BAR CONCAVE	120 - 16	3J22	HEATER/AIR CONDITIONING AND PRESSURIZING FAN	90 - 72
4E3	GRATE CURTAIN, BEATER	120 - 12	1C2	HEATER, COOLANT, ENGINE BLOCK	20 - 22
4E16	GRATE, FINGER, SPIKE-TOOTH.....	120 - 26	3I22	HEIGHT ADJUSTER, CAB SEAT	90 - 46
3I6	GRILLE, AIR DUCTS.....	90 - 29	2B15	HIGH FLOATATION DRIVE WHEELS PLANETARY FINAL DRIVE	50 - 7
3F15	GRIP, REAR LADDER.....	80 - 14	5D18	HINGED DOOR, LOWER AUGER, CLEAN GRAIN.....	130 - 2
5B16	GUARD AND STRAW SPREADER MOUNTING	125 - 6	1I9	HOLDDOWN, BATTERY	40 - 73
5B18	GUARD, STRAW SPREADER	125 - 8	3J15	HOLDER, CUP.....	90 - 64
3G11	GUIDE, FAN DRIVE.....	80 - 36	3F19	HOOD, REAR.....	80 - 18
4C14	GUIDES, TIGHTENER AND FEEDER CONVEYOR DRIVE CHAIN	110 - 34	5F14	HORIZONTAL UNLOADING AUGER (17- AND 20-FT.).....	130 - 50
H					
3I3	HAND RAIL, R.H.....	90 - 26	5F9	HORIZONTAL UNLOADING AUGER DRIVE GEARCASE	130 - 44
3H12	HANDLE, CAB DOOR	90 - 10	5F12	HORIZONTAL UNLOADING AUGER HOUSING (EXPORT) (17 AND 20 FT.)	130 - 48
3H16	HANDLE, FRONT CAB	90 - 14	5F10	HORIZONTAL UNLOADING AUGER HOUSING (20 FT.)	130 - 46
3G13	HANDLE, LEFT SIDE FRONT SHIELD	80 - 38	5F7	HORIZONTAL UNLOADING AUGER HUB SUPPORT ..	130 - 42
3G11	HANDLE, MUD SHIELDS (R.H.).....	80 - 36	5F3	HORIZONTAL UNLOADING AUGER SWIVEL.....	130 - 38
3G15	HANDLE, RIGHT SIDE SHIELD ASSEMBLY.....	80 - 40	2G1	HORN BUTTON	60 - 18
5B22	HANDLES AND SHIELDS, CHAFF SPREADER (DUAL MOTOR).....	125 - 12	3J16	HORN BUTTON	90 - 66
3H20	HANDRAILS, OPERATOR'S PIVOTING PLATFORM	90 - 18	3C20	HOSE AND MOUNTING, DUAL ACCUMULATOR HALF GALLON	70 - 40
3F7	HANDRAILS, REAR LADDER LANDING	80 - 6	3K4	HOSE, A/C COMPRESSOR	90 - 79
3K8	HARDWARE KIT, CAB	90 - 84	3E20	HOSE, CHARGE PRESSURE.....	70 - 94
1J3	HARNESS CONNECTORS, LOWER, FOR ENGINE.....	40 - 92	1B19	HOSE, COOLANT RECOVERY TANK	20 - 14
1J5	HARNESS CONNECTORS, UPPER, FOR ENGINE	40 - 94	1C4	HOSE, ENGINE CRANKCASE OIL DRAIN	20 - 24
1H7	HARNESS FOR REAR LIGHTS AND SHIELDS	40 - 44	3B16	HOSE, HYDRAULIC, VARIABLE DRIVE, FEEDER HOUSE.....	70 - 9
1H3	HARNESS WIRING, MAIN, L.H. CENTER	40 - 40	1B23	HOSE, INTERCOOLER	20 - 18
1H20	HARNESS, LOWER, ENGINE.....	40 - 58	3B23	HOSES AND FITTINGS, OIL COOLER FEEDER HOUSE.....	70 - 16
1E15	HARNESS, STARTER, WIRING	24 - 56	3D6	HOSES AND LINES, CYLINDER SPEED	70 - 52
1H18	HARNESS, UPPER, ENGINE	40 - 56	2E17	HOSES AND LINES, FOUR WHEEL DRIVE HYDRAU LIC, L.H.	50 - 88
1G9	HARNESS, WIRING, A/C, HEATER AND AIRSEAT	40 - 20	3C11	HOSES AND LINES, HEADER LIFT	70 - 30
1I5	HARNESS, WIRING, ALTERNATOR	40 - 68	2E15	HOSES AND LINES, HYDRO. OIL COOLER	50 - 86
1G1	HARNESS, WIRING, ARMREST.....	40 - 12	2E7	HOSES AND LINES, OIL, HYDROSTATIC DRIVE, LOWER (4 WHEEL DRIVE)	50 - 78
1F16	HARNESS, WIRING, CAB	40 - 2	3C1	HOSES AND LINES, REEL DRIVE, HYD., FRONT.....	70 - 20
1J9	HARNESS, WIRING, CONVENIENCE OUTLET	40 - 98	3B11	HOSES AND LINES, REEL DRIVE, HYDRAULIC, L.H. SIDE	70 - 4
1H5	HARNESS, WIRING, MAIN, L.H. CENTER	40 - 42	3C5	HOSES AND LINES, REEL LIFT	70 - 24
1H9	HARNESS, WIRING, R.H. MAIN.....	40 - 46	3C3	HOSES AND LINES, REEL PUMP	70 - 22
1G7	HARNESS, WIRING, STEERING COLUMN.....	40 - 18	2G5	HOSES AND LINES, STEERING, FRONT	60 - 22
1F20	HARVESTRAK GAUGE	40 - 6	2G11	HOSES AND LINES, STEERING, REAR (DUAL CYLINDER)	60 - 28
3I7	HARVESTRAK GAUGE	90 - 30	1B17	HOSES AND RADIATOR	20 - 12
1H16	HARVESTRAK MONITOR WIRING HARNESS	40 - 54	3C13	HOSES, CONTOUR MASTER (L.H.)	70 - 32
1D1	HEAD BOLT KIT	24 - 18	3E8	HOSES, FITTINGS, TILT CYLINDER CONTOUR MASTER.....	70 - 81
1D1	HEAD, CYLINDER	24 - 18	1F3	HOSES, FUEL LINES, TANK	30 - 6
5G14	HEADER BELTS	170 - 4			
4H11	HEADER ELECTROMAGNETIC CLUTCH	121 - 18			
5G7	HEADER HEIGHT CONTROL VALVE	160 - 3			
5G6	HEADER HEIGHT CONTROL, DIAL-A-MATIC HYDRAULIC LINE AND VALVE BLOCK	160 - 2			
5G8	HEADER HEIGHT CONTROL, ELECTRIC HARNESS, DIAL-A-MATIC	160 - 4			

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE
3E3	HOSES, GRAIN TANK UNLOADING DRIVE CYLINDER	70 - 76
3K1	HOSES, HEATER	90 - 76
5C11	HOSES, LINES AND MOTOR, CHAFF SPREADER	125 - 26
3C7	HOSES, LINES, REEL (FORE-AND_AFT), FRONT.....	70 - 26
2G7	HOSES, LINES, STEERING, L.H. SIDE	60 - 24
5D14	HOSES, LUBE, L. H.	125 - 56
5D12	HOSES, LUBE, R. H.	125 - 54
3E11	HOSES, OIL COOLER, A/C CONDENSER	70 - 84
2E9	HOSES, OIL, HYDROSTATIC DRIVE, LOWER (FOUR WHEEL DRIVE)	50 - 80
2E11	HOSES, OIL, HYDROSTATIC DRIVE, LOWER (TWO WHEEL DRIVE)	50 - 82
2E13	HOSES, OIL, HYDROSTATIC DRIVE, UPPER	50 - 84
3D4	HOSES, PRESSURE	70 - 50
2F23	HOSES, STEERING, UPPER	60 - 16
3E1	HOSES, UNLOADING AUGER SWING CYLINDER	70 - 74
3D1	HOSES, UPPER RETURN, RESERVOIR.....	70 - 46
2E19	HOSES, 4-WHEEL DRIVE.....	50 - 90
4K3	HOUSING AND KNIFEBANK, STRAW CHOPPER	121 - 82
4F1	HOUSING AND SHOE GRAIN SUPPLY AUGERS	120 - 38
4F3	HOUSING AND SHOE GRAIN SUPPLY AUGERS	120 - 40
1E5	HOUSING CONNECTORS, FUEL INJECTION PUMP ..	24 - 46
2B23	HOUSING COVER, TRANSMISSION AND DIFFERENTIAL	50 - 15
3J20	HOUSING, AIR CONDITIONER/HEATER AND FILTERS.....	90 - 70
3I5	HOUSING, CAB AIR FILTER	90 - 28
5F1	HOUSING, CHARGE, VERTICAL UNLOADING AUGER.....	130 - 36
2C8	HOUSING, FINAL DRIVE (RING AND PINION)	50 - 25
4B15	HOUSING, FRONT SHAFT	110 - 8
3J20	HOUSING, HEATER/AIR CONDITIONING AND FILTERS.....	90 - 70
5F12	HOUSING, HORIZONTAL UNLOADING AUGER (EXPORT) (17 AND 20 FT.)	130 - 48
5F10	HOUSING, HORIZONTAL UNLOADING AUGER (20 FT.)	130 - 46
2D3	HOUSING, HYDROSTATIC PUMP	50 - 46
2C15	HOUSING, HYDROSTATIC PUMP (RING AND PINION)	50 - 34
1D11	HOUSING, OIL FILTER	24 - 28
2E2	HOUSING, OUTER, FINAL DRIVE	50 - 72
1C22	HOUSING, REAR OIL SEAL.....	24 - 14
4B11	HOUSING, REVERSER GEARBOX	110 - 4
2G21	HOUSING, SPINDLE, REAR AXLE	60 - 40
5C21	HOUSING, TAILINGS ELEVATOR	125 - 36
1D19	HOUSING, THERMOSTAT, FRONT	24 - 36
2B21	HOUSING, TRANSMISSION AND DIFFERENTIAL	50 - 13
5D3	HOUSING, UPPER TAILINGS AUGER	125 - 44
5F7	HUB SUPPORT, HORIZONTAL UNLOADING AUGERQ	130 - 42
4J5	HUB, CHARGE PUMP MOUNTING	121 - 60
1C1	HUB, COUPLING, ENGINE GEARCASE	20 - 21
1E8	HUB, FAN PULLEY	24 - 49
1C23	HUB, FLYWHEEL.....	24 - 15
1B9	HUB, ROTARY SCREEN DOOR	20 - 4
4C20	HUB, SLIP CLUTCH	110 - 40
4I17	HUB, STRAW WALKER DRIVE	121 - 48
4I9	HUB, STRAW WALKER DRIVE GEARCASE.....	121 - 40
5F21	HUB, UNLOADING AUGER COUNTERSHAFT DRIVE ..	130 - 58
3C15	HYDRAULIC FILTER, MAIN	70 - 34
2E17	HYDRAULIC LINES AND HOSES, L.H., FOUR WH EEL DRIVE	50 - 88
2E21	HYDRAULIC LINES, CASE DRAIN, 4-WHEEL DRIVE	50 - 92
1H18	HYDRAULIC OIL TEMP. SWITCH	40 - 56

GRID		PAGE
3D21	HYDRAULIC PUMP, MAIN	70 - 70
3C24	HYDRAULIC RETURN LINES	70 - 44
3D3	HYDRAULIC/HYDROSTATIC OIL RESERVOIR.....	70 - 48
2B10	HYDRO LEVER ASSEMBLY	50 - 2
2C19	HYDRO. DR. DISPLACEMENT CONTROL VALVE	50 - 38
2E15	HYDRO. OIL COOLER LINES AND HOSES	50 - 86
2D6	HYDROSTATIC DRIVE CHARGE PUMP (PLANETARY)	50 - 50
2D7	HYDROSTATIC DRIVE CHARGE PUMP (PLANETARY)	50 - 51
2C17	HYDROSTATIC DRIVE CHARGE PUMP (RING AND PINION)	50 - 36
2C18	HYDROSTATIC DRIVE CHARGE PUMP (RING AND PINION)	50 - 37
2B12	HYDROSTATIC DRIVE CONTROL CABLES	50 - 4
2B10	HYDROSTATIC DRIVE LEVER AND CABLE	50 - 2
2F1	HYDROSTATIC DRIVE MOTOR	50 - 96
2D8	HYDROSTATIC DRIVE MOTOR, FIXED	50 - 52
2C21	HYDROSTATIC DRIVE MOTOR, FIXED (RING AND PINION)	50 - 40
2D10	HYDROSTATIC DRIVE MOTOR, KIT (PLANETARY)	50 - 54
2C23	HYDROSTATIC DRIVE MOTOR, KIT (RING AND PINION)	50 - 42
2E13	HYDROSTATIC DRIVE OIL HOSES, UPPER	50 - 84
2E9	HYDROSTATIC DRIVE OIL LINES AND HOSES, LOWER (FOUR WHEEL DRIVE)	50 - 80
2E11	HYDROSTATIC DRIVE OIL LINES AND HOSES, LOWER (TWO WHEEL DRIVE)	50 - 82
2E7	HYDROSTATIC DRIVE OIL LINES AND HOSES, LOWER (4 WHEEL DRIVE)	50 - 78
2F3	HYDROSTATIC DRIVE PUMP - MAIN HYDRAULIC PUMP CONNECTING HARDWARE	50 - 98
2C14	HYDROSTATIC DRIVE PUMP COVER	50 - 33
2D5	HYDROSTATIC DRIVE PUMP COVER	50 - 49
2D1	HYDROSTATIC DRIVE PUMP COVER (PLANETARY)	50 - 44
2C12	HYDROSTATIC DRIVE PUMP COVER (RING AND PINION)	50 - 30
2D1	HYDROSTATIC DRIVE PUMP SHAFT (PLANETARY)	50 - 44
2C12	HYDROSTATIC DRIVE PUMP SHAFT (RING AND PINION)	50 - 30
3D3	HYDROSTATIC/HYDRAULIC RESERVOIR	70 - 48

I

1B7	IDLER ARMS, ROTARY SCREEN DRIVE	20 - 2
1E18	IDLER PULLEY, AIR CONDITIONER COMPRESSOR ..	24 - 59
4I19	IDLER, BEATER DRIVE	121 - 50
4B18	IDLER, DRIVE TIGHTENER, FIXED SPEED	110 - 12
5E12	IDLER, DRIVE, CLEAN GRAIN ELEVATOR	130 - 22
4H23	IDLER, DUAL RANGE, DRIVE TIGHTENER	121 - 30
4C12	IDLER, FEEDER CONVEYOR	110 - 32
4C16	IDLER, FEEDER CONVEYOR DRIVE CHAIN	110 - 36
4J9	IDLER, FINE CUT STRAW CHOPPER DRIVES	121 - 64
4J7	IDLER, STRAW CHOPPER DRIVE	121 - 62
5B18	IDLER, STRAW SPREADER.....	125 - 8
4I15	IDLER, STRAW WALKER DRIVE	121 - 46
4B17	IDLER, VARIABLE SPEED DRIVE TIGHTENER	110 - 10
2G1	IGNITION SWITCH	60 - 18
3J16	IGNITION SWITCH	90 - 66
4E20	INDICATOR CABLE AND BRACKETS, CONCAVE	120 - 30
4I11	INDICATOR, CONCAVE, CORN AND SMALL GRAIN ..	121 - 42
4E18	INDICATOR, SPIKE TOOTH.....	120 - 28
1E3	INJECTION PUMP GEAR	24 - 44

ALPHABETICAL INDEX - CONTINUED

GRID		PAGE
1E3	INJECTION PUMP LUBE LINE	24 - 44
1E3	INJECTION PUMP, ELECTRONIC FUEL	24 - 44
1H23	INLET AIR TEMPERATURE SWITCH	40 - 61
2D15	INNER COVER.....	50 - 60
2E5	INNER HOUSING, FINAL DRIVE	50 - 76
2C1	INPUT SHAFT, TRANSMISSION	50 - 18
1D1	INSERTS, VALVE SEAT	24 - 18
1F20	INSTRUMENT PANEL, CAB POST	40 - 6
3I7	INSTRUMENT PANEL, CAB POST	90 - 30
1D16	INTAKE MANIFOLD.....	24 - 33
1D16	INTAKE MANIFOLD GASKET	24 - 33
4D13	INTAKE SHIELD.....	110 - 58
4F7	INTAKE SHIELDS, CLEANING FAN.....	120 - 44
4F9	INTAKE SHIELDS, CLEANING FAN.....	120 - 46
1F7	INTAKE TUBES AND AIR CLEANER.....	30 - 10
1D1	INTAKE VALVES	24 - 18
1D9	INTAKE, ENGINE OIL PUMP	24 - 26
1B23	INTERCOOLER	20 - 18
411	INTERMEDIATE SHAFT MOUNTING, CYLINDER DRIVE, DUAL-RANGE.....	121 - 32
4I3	INTERMEDIATE SHEAVE, CYLINDER DRIVE, DUAL-RANGE	121 - 34
J		
4I15	JACKSHAFT, STRAW WALKER DRIVE.....	121 - 46
4C20	JAW, SLIP CLUTCH	110 - 40
1C11	JETS, PISTON COOLING	24 - 2
K		
1C13	KEY ENGINE SERVICE PARTS.....	24 - 4
4K7	KEY STOCK, METRIC KIT	121 - 86
1C19	KEY, DAMPER.....	24 - 11
1G5	KIT-CONVENIENCE, OUTLET	40 - 16
3J1	KIT, AIR SUSPENSION SEAT	90 - 50
3J3	KIT, AIR SUSPENSION SEAT	90 - 52
3J5	KIT, AIR SUSPENSION SEAT	90 - 54
3J7	KIT, AIR SUSPENSION SEAT	90 - 56
1E11	KIT, CYLINDER HEAD	24 - 52
1I20	KIT, ELECTRICAL CONNECTOR SERVICE	40 - 84
1I22	KIT, ELECTRICAL CONNECTOR SERVICE	40 - 86
1C16	KIT, ENGINE OVERHAUL.....	24 - 8
1E11	KIT, ENGINE REBUILD	24 - 52
4F17	KIT, GRAIN TANK LEAK.....	120 - 54
1D1	KIT, HEAD BOLT	24 - 18
2D10	KIT, HYDROSTATIC DRIVE MOTOR (PLANETARY)	50 - 54
2C23	KIT, HYDROSTATIC DRIVE MOTOR (RING AND PINION).....	50 - 42
4C7	KIT, LOCKOUT ADAPTER - CONTOUR MASTER (BELT PU & 4R CORN HEADS)	110 - 26
4K7	KIT, METRIC KEY STOCK	121 - 86
1C18	KIT, PISTON/LINER.....	24 - 10
3I19	KIT, RETROFIT SEAT BELT (MACHINES PRIOR TO 1996 MODEL YEAR)	90 - 42
4G11	KIT, STRAW WALKER BEARING.....	120 - 72
1I24	KIT, TERMINAL AND WIRING	40 - 88
3F5	KIT, UPRIGHT NO.1	80 - 4
3F6	KIT, UPRIGHT NO.5	80 - 5
1D17	KIT, WATER PUMP SEAL.....	24 - 34
1C20	KIT,UNDERSIZE CRANKSHAFT (CONNECTING ROD JOURNAL).....	24 - 12
1E21	KIT,UNDERSIZED MAIN BEARING CRANKSHAFT	24 - 62

GRID		PAGE
4K3	KNIFEBANK AND HOUSING, STRAW CHOPPER	121 - 82
L		
1H1	L H MAIN WIRING HARNESS, L H FRONT	40 - 38
1H7	L.H. AND R.H. MAIN WIRING HARNESS, L.H. AND R.H. REAR	40 - 44
1G24	L.H. MAIN WIRING HARNESS, FRONT.....	40 - 36
1H3	L.H. MAIN WIRING HARNESS, L.H. CENTER	40 - 40
2G7	L.H. SIDE HOSES AND LINES, STEERING	60 - 24
3H22	LADDER AND LATCH, OPERATOR'S PLATFORM	90 - 20
3F15	LADDER, REAR.....	80 - 14
5E16	LADDER, TOP GRAIN TANK	130 - 26
1J20	LAMP ASSEMBLY, REAR - L.H. SIDE.....	40 - 109
1J19	LAMP ASSEMBLY, REAR - R.H. SIDE	40 - 108
1J17	LAMP, INSTALLATION	40 - 106
3H20	LANDING, OPERATOR'S PLATFORM.....	90 - 18
3I3	LANDING, R.H.	90 - 26
3F15	LANDING, REAR LADDER	80 - 14
3H22	LATCH AND LADDER, OPERATOR'S PLATFORM	90 - 20
3F17	LATCH ARM, REAR LADDER LANDING.....	80 - 16
4C18	LATCH HANDLE, FEED PLATE	110 - 38
3H12	LATCH, CAB DOOR	90 - 10
5E24	LATCH, GRAIN TANK CLEAN OUT CHUTE	130 - 34
3F15	LATCH, REAR LADDER	80 - 14
5B12	LATCHES, CHOP-TO-BALE	125 - 5A
4F5	LEAF SCREENS, CLEANING FAN (CORN)	120 - 42
4F17	LEAK KIT, GRAIN TANK.....	120 - 54
3G13	LEFT SIDE FRONT SHIELD ASSEMBLY	80 - 38
3G17	LEFT SIDE SHIELD ASSEMBLY	80 - 42
3J13	LEFT-HAND ARMREST.....	90 - 62
5H2	LEFT-HAND DECALS	170 - 18
3I1	LEFT-HAND LANDING AND MIRROR	90 - 24
1I1	LEVEL MONITOR WIRING HARNESS, DUAL.....	40 - 64
1I1	LEVEL MONITOR, DUAL	40 - 64
1H24	LEVEL MONITOR, GRAIN TANK	40 - 62
2B10	LEVER ASSEMBLY, GEARSHIFT	50 - 2
3I20	LEVER, ADJUSTER, OPERATOR'S SEAT	90 - 44
5B14	LEVER, DECLUTCHING - CHOP-TO-DROP	125 - 5C
2B24	LEVER, GEARSHIFT	50 - 16
3I9	LEVER, GEARSHIFT	90 - 32
3C16	LIFT CYLINDER, HEADER	70 - 35
1D5	LIFT STRAPS, ENGINE.....	24 - 22
1J15	LIGHT SWITCH, SHOE ADJUSTING	40 - 104
1F15	LIGHT, CAB DOME	40 - 1
1H24	LIGHT, GRAIN TANK.....	40 - 62
1I1	LIGHT, UNLOADING AUGER	40 - 64
1G3	LIGHTER, CIGARETTE	40 - 14
1F24	LIGHTING, AUXILIARY FIELD	40 - 10
1F22	LIGHTS, CAB ROOF	40 - 8
1J13	LIGHTS, FIELD	40 - 102
1F23	LIGHTS, FRONT AND REAR TAIL.....	40 - 9
1F23	LIGHTS, FRONT AND REAR TURN	40 - 9
1I3	LIGHTS, SIDE FINDER	40 - 66
1J16	LIGHTS, TRANSPORT WARNING	40 - 105
4E3	LIMIT CURTAIN, BEATER GRATE.....	120 - 12
4D1	LIMIT CURTAIN, DUST FAN.....	110 - 46
1H24	LIMIT SWITCH, GRAIN TANK UNLOADING AUGER	40 - 62
1E3	LINE, INJECTION PUMP LUBE	24 - 44
1C18	LINER O-RINGS.....	24 - 10
1C18	LINER SHIM.....	24 - 10
1C18	LINERS, CYLINDER	24 - 10
5C7	LINES AND FITTING, CHAFF SPREADER	125 - 22
3D6	LINES AND HOSES, CYLINDER SPEED	70 - 52
2E17	LINES AND HOSES, FOUR WHEEL DRIVE HYDRAU LIC, L.H.....	50 - 88