Part of Cargotec Corporation



# READING RTG WIRING DIAGRAM

### SINGLE LINE DIAGRAM

The single line diagram is used to understand the basic construction of the system. It displays the main electrical components and how they connect together. It also display different ratings of devices (fuse size, motor rating, etc.)



## THE CIRCUIT DIAGRAM

TERMS	TITLE	SHEET	TITLE	SHEET TITLE	
dia	AC POWER DISTRIBUTION	m	TROLLEY INPUTS		
mes	AC POWER DISTRIBUTION	m/a	TROLLEY INPUTS		1
ria an	AC POWER DISTRIBUTION	2794	TROLLEY INPUTS		1
716	AC POWER DISTRIBUTION	## F	TROLLEY INPUTS		
AD	AC POWER DISTRIBUTION	7701	SPREADER INPUTS/OUTPUTS		l l
ME	AC POWER DISTRIBUTION	792	SPREADER INPUTS/OUTPUTS		
ME	AC POWER DISTRIBUTION	77M	TROLLEY OUTPUTS		
MG	AC POWER DISTRIBUTION	TN	TROLLEY OUTPUTS		1
/106	AC POWER DISTRIBUTION	(GA	CARM		
MI	AC POWER DISTRIBUTION	.00	CARM		
	AC POWER DISTRIBUTION				
PH.	2272 329 3700 000 000 536 536 50	.00	CABIN		l l
Lar. 4	AC POWER DISTRIBUTION	.00	CABIN		l l
CIN	AC POWER DISTRIBUTION	OC.	CABIN		
HB	AC POWER DISTRIBUTION	or	CABIN		
119	AC POWER DISTRIBUTION	ASK.	CABIN		
OT -	24VDC POWER DISTRIBUTION	/04,	CABIN		
MIL	24VDC POWER DISTRIBUTION	SA.	TELEPHONE SYSTEM		
/1U2	24VDC POWER DISTRIBUTION	SEN .	STABILIZER		
MV	24VDC POWER DISTRIBUTION	/10A	CARLE LIST		
72A	HOIGT DRIVE	7100	CARLE LIST		
CSA	GANTRY DRIVE	/100	CABLE LIST		
/36	GANTRY DRIVE	/100	CARLE LIST		1
768	TROLLEY DRIVE	ADE:	CABLE LIST		
SA	EM.STOP CIRCUIT	// DK	CONNECTORS		1
(50)	BRAKES CONTROL CIRCUIT	// OL	CONNECTORS		
MA	EE-HOUSE PLO	MON	CONNECTORS		
MAI	EE-HOUSE PLC MONITOR+PRINTER	/10N	SPARE CONNECTIONS		
/SA2	EE-HOUSE PLC POWER SUPPLY	AttA	DEVICE LIST		l l
rate:	POWER UNIT	/11/18	DEVICE LIST		l l
/6B2	POWER UNIT	//10	DEVICE LIST		
/6B3	POWER UNIT	#1D	DEVICE LIST		l l
/6B4	POWER UNIT	4116	DEVICE LIST		
/60S	POWER UNIT	A1F	DEVICE LIST		
#SC1	POWER UNIT	TIG	DEVICE LIST		l l
(60)	ES-HOUSE INPUTS	8194	DEVICE LIST		
ISE ISE	EE-HOUSE INPUTS	21.11	DEVICE UST		
	EE-HOUSE INPUTS				l l
/6G	EE-HOUSE INPUTS				
<b>(991)</b>	EE-HOUSE INPUTS				
7004	EE-HOUSE INPUTS STEERING				
Ma	EE-HOUSE INPUTS STEERING				
/OH	EE-HOUSE INPUTS ANTICOLLISION				
/0N	EE-HOUSE INPUTS				
/EP	EE-HOUSE OUTPUTS CONTACTORS				
/6R	EE-HOUSE OUTPUTS CONTACTORS				
166	EE-HOUSE OUTPUTS CONTACTORS				
167	ES-HOUSE OUTPUTS				
/7A	TROLLEY PLC				
7			\$ 40% La	Topicas Mr. Indiana Topicas	
		3 3	50 000 25 000	975 S01 N4160470 See 51190	0 14



### THE CIRCUIT DIAGRAM

The circuit displays all circuits in detail. It shows all the electrical components and circuit that are used on the RTG.

The diagram includes the index pages, circuit diagram, cable list, connector list and device list.




Part of Cargotec Corporation

Full download: http://manualplace.com/download/kalmar-reading-rtg-wiring-diagram/

Kalmar Reading Rtg Wiring Diagram

### THE INDEX PAGE

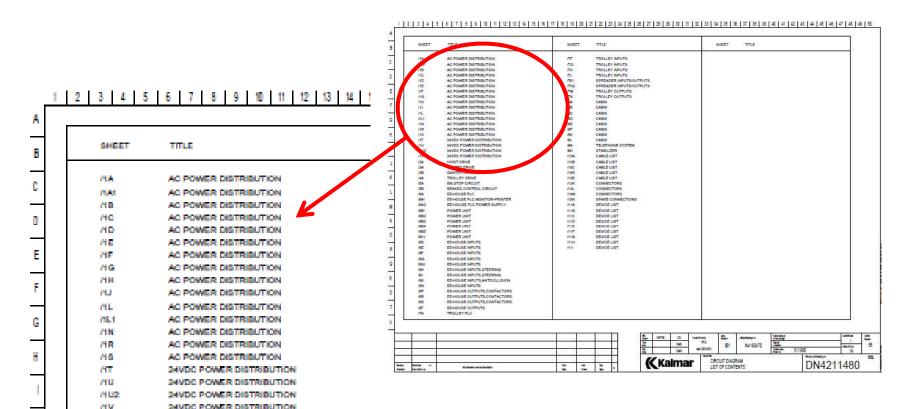

The index page is the first page of the circuit diagram, it displays all the pages in the diagram. It shown the page ID and the title.

