

# CRAWLER CRANE

SHOP  
MANUAL

model

**CK2500-II**  
**CKE2500-II**

**KOBELCO**

---

BOOK CODE : S5JD00002ZE06



**SAFETY**

**1. SPECIFICATION**

1.1	CK2500-II SPECIFICATION .....	1-3
1.1.1	PERFORMANCE .....	1-3
1.1.2	PERFORMANCE OF LUFFING JIB .....	1-3
1.1.3	OUTSIDE DIMENSIONS .....	1-4
1.1.4	DIMENSIONS AND WEIGHT OF EACH PARTS .....	1-6
1.1.4.1	BASE MACHINE .....	1-6
1.1.4.2	COUNTERWEIGHT .....	1-7
1.1.4.3	ATTACHMENT .....	1-9
1.1.5	CK2500-II STABILITY IN SWINGING AND TRAVELING .....	1-14
1.2	CKE2500-II SPECIFICATION .....	1-15
1.2.1	PERFORMANCE .....	1-15
1.2.2	PERFORMANCE OF LUFFING JIB .....	1-15
1.2.3	OUTSIDE DIMENSIONS .....	1-16
1.2.4	DIMENSIONS AND WEIGHT OF EACH PARTS .....	1-18
1.2.4.1	BASE MACHINE .....	1-18
1.2.4.2	COUNTERWEIGHT .....	1-19
1.2.4.3	ATTACHMENT .....	1-21
1.2.5	CKE2500-II STABILITY IN SWINGING AND TRAVELING .....	1-28

**2. MAINTENANCE STANDARDS**

**TEST PROCEDURES**

2.1	MAINTENANCE STANDARD .....	2-3
2.1.1	PIN, BUSHING, SPRING, LINING AND SHEAVE .....	2-3
2.1.2	PROPEL DEVICE .....	2-10
2.2	PERFORMANCE STANDARD AND TEST PROCEDURE .....	2-16
2.2.1	OPERATING SPEED .....	2-16
2.2.2	POINT AND METHOD OF MEASURING PRESSURE .....	2-17
2.2.3	SLEWING RING .....	2-23

**3. GENERAL WORK STANDARD**

3.1	TIGHTENING TORQUE OF CAPSCREWS AND NUTS .....	3-3
3.1.1	METRIC COARSE THREADS .....	3-3
3.1.2	METRIC FINE THREADS .....	3-3
3.1.3	COARSE THREDS UNC .....	3-4
3.1.4	FINE THREADS UNF .....	3-4
3.1.5	TIGHTENING TORQUE OF HYDRAULIC FITTINGS .....	3-5
3.2	STANDARD PARTS .....	3-7
3.2.1	BOLT .....	3-7

## TABLE OF CONTENTS

---

3.2.2	O-RING.....	3-8
3.2.3	BACK-UP RING.....	3-9
3.2.4	BITE FITTING.....	3-10
3.3	CONVERSION TABLE.....	3-12
3.3.1	UNIT CONVERSION.....	3-12
3.3.2	MILLIMETER : INCH CONVERSION TABLE.....	3-13
3.3.3	METER-FOOT CONVERSION TABLE.....	3-15
3.3.4	GRADIENT CONVERSION TABLE.....	3-16
3.4	TABLE OF UNIT WEIGHT.....	3-17
 <b>4. POWER TRAIN</b>		
4.1	INTRODUCTION.....	4-3
4.2	ENGINE.....	4-5
4.2.1	INTRODUCTION.....	4-5
4.2.2	REMOVAL.....	4-5
4.2.3	REPAIR AND MAINTENANCE.....	4-6
4.2.4	RE-INSTALLATION.....	4-7
4.3	PUMP DRIVE ASSEMBLY.....	4-10
4.3.1	INTRODUCTION.....	4-10
4.3.2	REMOVAL.....	4-10
4.3.3	DISASSEMBLING THE POWER DIVIDER.....	4-12
4.3.4	CHECK AND REPAIR OF THE POWER DIVIDER.....	4-13
4.3.5	ASSEMBLING THE POWER DIVIDER.....	4-14
4.3.6	RE-INSTALLATION.....	4-15
 <b>5. HYDRAULIC SYSTEM</b>		
5.1	LOCATION OF MAIN HYDRAULIC COMPONENTS.....	5-3
5.2	HYDRAULIC CIRCUITS AND COMPONENTS.....	5-4
5.2.1	HYDRAULIC CIRCUIT.....	5-4
5.2.2	COMPONENT SPECIFICATIONS.....	5-8
5.2.3	LOCATION OF HYDRAULIC COMPONENTS.....	5-12
5.3	HYDRAULIC SYSTEM.....	5-20
5.3.1	PREFACE.....	5-20
5.3.2	OUTLINE.....	5-20
5.3.3	OIL FLOW FROM No.1 and No. 2 PUMPS.....	5-22
5.3.4	OIL FLOW FROM No.3 AND No.4 PUMPS.....	5-24
5.3.5	OIL FLOW FROM No.5 PUMP (CONTROL PUMP).....	5-27
5.3.6	OIL FLOW FROM No.6 PUMP (FOR AUXILIARY ACTUATOR CIRCUIT).....	5-31
5.4	VALVES.....	5-34

---

---

## TABLE OF CONTENTS

---

### 6. HOIST SYSTEM

6.1	APPARATUS AND LOCATION OF COMPONENTS .....	6-3
6.2	CONSTRUCTION AND FUNCTION .....	6-4
6.2.1	HYDRAULIC SCHEMATIC .....	6-4
6.2.2	LIFTING A LOAD .....	6-6
6.2.3	HOLDING A RAISED LOAD .....	6-8
6.2.4	LOWERING A LOAD (POWERED LOWERING) .....	6-10
6.2.5	FREE FALL OPERATION .....	6-13
6.2.6	FREE FALL ACCELERATION.....	6-16
6.3	DRUM LOCK .....	6-18
6.3.1	ASEMBLY DRAWING .....	6-18
6.3.2	ADJUSTMENT OF DRUM LOCK .....	6-19
6.4	WINCH ASSEMBLY .....	6-20
6.4.1	WINCH INSTAL .....	6-20
6.4.2	WINCH ASSEMBLY / REDUCTION UNIT WITHOUT FREE FALL (STD.).....	6-21
6.4.3	WINCH ASSEMBLY WITH FREE FALL (OPT.).....	6-23
6.5	BRAKE PEDAL.....	6-24
6.5.1	ASSEMBLY DRAWING .....	6-24
6.5.2	ADJUSTING THE BRAKE PEDAL .....	6-26
6.6	BLEEDING AIR FROM BRAKE CIRCUIT .....	6-27

### 7. BOOM HOIST SYSTEM

7.1	APPARATUS AND LOCATION OF COMPONENTS .....	7-3
7.2	CONSTRUCTION AND FUNCTION .....	7-5
7.2.1	HYDRAULIC SCHEMATIC.....	7-5
7.2.2	RAISING THE BOOM.....	7-6
7.2.3	NEUTRAL (MAINTAINING THE BOOM POSITION) .....	7-8
7.2.4	LOWERING THE BOOM.....	7-10
7.3	BOOM DRUM LOCK .....	7-12
7.3.1	ASSEMBLY DRAWING .....	7-12
7.3.2	ADJUSTING THE BOOM DRUM LOCK.....	7-13
7.4	DRUM AND REDUCTION UNIT .....	7-14
7.4.1	BOOM WINCH ASSEMBLY .....	7-14
7.4.2	BOOM DRUM AND REDUCTION UNIT ASSEMBLY .....	7-15

### 8. SWING SYSTEM

8.1	APPARATUS AND LOCATION OF COMPONENTS .....	8-3
8.2	CONSTRUCTION AND FUNCTION .....	8-4

## TABLE OF CONTENTS

---

8.2.1	HYDRAULIC SCHEMATIC.....	8-4
8.2.2	SWING .....	8-5
8.2.3	STOPPING .....	8-9
8.3	SWING REDUCTION UNIT .....	8-12
8.4	SWING BEARING .....	8-14
8.5	SWING LOCK .....	8-16
<b>9. PROPEL SYSTEM</b>		
9.1	LOCATION OF THE MAJOR COMPONENTS .....	9-3
9.2	CONSTRUCTION AND FUNCTION .....	9-4
9.2.1	HYDRAULIC SCHEMATIC.....	9-4
9.2.2	PROPELLING (RIGHT SIDE FORWARD).....	9-6
9.2.3	STOPPING .....	9-8
9.3	PROPEL REDUCTION UNIT .....	9-10
9.3.1	REDUCTION UNIT .....	9-12
9.3.2	MOTOR.....	9-14
9.4	ADJUSTMENT .....	9-16
<b>10. ELECTRIC SYSTEM</b>		
10.1	ELECTRICAL WIRING SCHEMATIC.....	10-3
10.2	CONNECTOR LIST.....	10-17
10.3	ARRANGEMENT OF ELECTRICAL PART.....	10-69
10.3.1	ELECTRICAL PART OF CAB .....	10-69
10.3.2	ELECTRICAL PART OF RIGHT DECK.....	10-73
10.3.3	ELECTRICAL PART OF FLOOR PLATE & LEFT SIDE STAND PANEL .....	10-77
10.3.4	ELECTRICAL PART OF REVOLVING FRAME .....	10-82
10.3.5	ELECTRICAL PART OF LEFT DECK .....	10-84
10.3.6	ELECTRICAL PART OF LEFT GUARD .....	10-90
10.3.7	HARNESS PART NUMBER LIST (ALL MODELS) .....	10-91
10.4	ELECTRICAL PART .....	10-93
10.4.1	LOCATION AND USE OF FUSE.....	10-93
10.4.2	FUSE BOX (GG73E00004F1).....	10-95
10.4.3	WIPER CONTROL RELAY(2480U1366) .....	10-97
10.4.4	SWING FLASHER UNIT (2480U306) .....	10-98
10.5	PRESSURE SWITCH (CONTROL PRESSURE CUT & FREE FALL).....	10-99
10.6	PRESSURE SENSOR .....	10-101
10.7	RELAY BOX (GG24E00024F1) .....	10-103
10.7.1	ARRANGEMENT OF CONNECTOR .....	10-103

---

## TABLE OF CONTENTS

---

10.7.2 RELAY BOX SCHEMATIC .....	10-105
10.8 LEFT SIDE STAND PANEL (WITH FREE FALL).....	10-108
10.9 BYPASS SWITCH PANEL .....	10-112
10.10 TROUBLESHOOTING OF EXHAUST GAS THIRD REGULATION ENGINE .....	10-113
10.10.1 FAILURE DIAGNOSIS FUNCTION .....	10-113
10.10.2 HOW TO CHECK THE FAILURE CONTENTS .....	10-114
10.10.3 CHECKING OF DIAGNOSIS LAMP FUNCTION .....	10-119
10.10.4 ENGINE ECU .....	10-120

## 11. LOAD SAFETY DEVICE

11.1 PART NAMES AND FUNCTIONS.....	11-3
11.1.1 FRONT VIEW .....	11-3
11.1.2 CONFIGURATION OF SCREENS [CKE SERIES] .....	11-8
11.1.3 DATA TRANSMISSION BETWEEN CONTROLLER AND CARDS .....	11-13
11.1.4 DETAILS OF INDICATORS ON MAIN DISPLAY SCREEN .....	11-15
11.1.5 REAR VIEW.....	11-19
11.1.6 ITEMS REQUIRED TO BE EXECUTED FOR REPLACEMENT OF CONTROLLER OR DATA CARD AND INSTRUCTIONS (IN A SIMILAR MANNER TO UPGRADE OF PROGRAM) .....	11-24
11.2 PREPARATION FOR USE.....	11-25
11.3 TURN THE POWER ON .....	11-26
11.4 UPGRADING PROGRAMS.....	11-27
11.4.1 PROCEDURES .....	11-27
11.4.2 UPGRADING OF INDICATION PROGRAMS .....	11-29
11.4.3 UPGRADING OF CONTROL PROGRAMS .....	11-32
11.5 STATUS CHECK.....	11-34
11.5.1 SIGNAL CHECK.....	11-35
11.5.2 OPERATION PROGRESS .....	11-37
11.5.3 COMMUNICATION DATA.....	11-40
11.5.4 INDICATION OF ADJUSTMENT VALUE .....	11-41
11.5.4.1 ANGLE SENSOR ADJUSTMENT VALUE.....	11-42
11.5.4.2 LOAD CELL ZERO POINT ADJUSTMENT VALUE .....	11-43
11.5.4.3 ADJUSTMENT VALUE OF LOAD CELL FOR LINE-PULL .....	11-44
11.5.4.4 RESULT OF MANUFACTURE ADJUSTMENTS "NO LOAD" AND "SOME LOAD" .....	11-45
11.5.4.5 RESULT OF LOAD ADJUSTMENTS "NO LOAD" AND "SOME LOAD" ..	11-46
11.5.4.6 ADJUSTMENT VALUE OF WORKING RADIUS.....	11-47
11.5.4.7 ALTERATION OF ADJUSTED VALUE.....	11-48
11.5.4.8 DELETION OF ADJUSTED VALUE .....	11-49
11.5.5 TROUBLE RECORD .....	11-50
11.5.6 CHOICE OF LANGUAGE (CKE SERIES ONLY).....	11-52

## TABLE OF CONTENTS

---

11.5.7 LOAD RECORD (LOAD RECORD IN THE MAIN MENU) .....	11-53
11.6 ADJUSTMENTS .....	11-54
11.6.1 REMOVING THE INNER PANEL .....	11-54
11.6.2 ADJUSTMENT .....	11-55
11.6.2.1 ANGLE SENSOR ADJUSTMENT .....	11-58
11.6.2.2 LOAD CELL ZERO POINT ADJUSTMENT .....	11-62
11.6.2.3 LOAD-LESS ADJUSTMENT & SOME LOAD ADJUSTMENT .....	11-64
11.6.2.4 LVL ADJUSTMENT (LVL SETTING).....	11-71
11.6.2.5 RADIUS ADJUSTMENT .....	11-74
11.6.3 LOAD ADJUSTMENT.....	11-76
11.6.4 ADJUSTMENT DATA COPY (INITIALIZATION).....	11-79
11.6.4.1 READING OF THE ADJUSTMENT DATA .....	11-81
11.6.4.2 WRITING OF ADJUSTMENT DATA .....	11-83
11.6.4.3 INITIALIZATION OF ADJUSTMENT DATA.....	11-84
11.6.5 VERSION CHECK.....	11-85
11.7 ERROR CODE (ABNORMALITY DETECTION) AND COUNTERMEASURES ....	11-86
11.8 CONTROL OUTPUT .....	11-90
11.9 RELEASES .....	11-102
11.9.1 RELEASE FUNCTION .....	11-102
11.9.1.1 CRANE RELEASE CHART .....	11-102
11.9.1.2 ALARM SOUND .....	11-108
11.9.1.3 EXTERNAL INDICATOR LAMPS IN RELEASE CONDITION .....	11-109
11.10 MECHANICAL SPECIFICATION.....	11-110
11.10.1 ENVIRONMENTAL PERFORMANCE PARAMETERS.....	11-110
11.10.2 LOAD CELL (CRANE).....	11-111
11.10.3 ANGLE SENSOR .....	11-112
11.10.4 CONTROLLER.....	11-113
11.10.4.1 MODEL NAME.....	11-113
11.10.4.2 SYSTEM INPUT/OUTPUT .....	11-113
11.10.4.3 MONITOR DISPLAY.....	11-115
11.10.4.4 OPERATION SWITCH .....	11-115
11.10.4.5 INTERNAL PROCESSING SYSTEM .....	11-115
11.10.4.6 MEMORY.....	11-115
11.10.4.7 EXTERNAL STORAGE ELEMENT .....	11-116
11.10.4.8 OTHERS.....	11-116
11.11 EXTERNAL DIMENSIONS .....	11-117
11.12 ELECTRIC SCHEMATIC DIAGRAM .....	11-118
11.12.1 CRANE TYPE.....	11-118
11.12.2 LUFFING TYPE.....	11-119
11.13 CONTROLLER MALFUNCTION EMERGENCY MEASURES.....	11-120
11.14 LOAD SAFETY DEVICE CHECK PROCEDURES.....	11-121

## 12. GAUGE CLUSTER



---

## TABLE OF CONTENTS

---

12.1 CONFIGURATION OF DISPLAY .....	12-3
12.2 PRIORITY.....	12-4
12.3 STATUS DISPLAY .....	12-6
12.4 FAULT LOG DISPLAY .....	12-16
<b>13. TOTAL CONTROLLER</b>	
13.1 ARRANGEMENT OF TOTAL CONTROLLER .....	13-3
13.2 COMPOSITION OF SYSTEM .....	13-4
13.2.1 OUTPUT RELATION TO CONTROLLER .....	13-5
13.3 FUNCTION OF TOTAL CONTROLLER.....	13-6
13.4 TOTAL CONTROLLER (HARDWARE).....	13-31
13.4.1 OUTLINE .....	13-31
13.4.2 SPECIFICATIONS OF TOTAL CONTROLLER OUTPUT .....	13-32
13.4.3 DETAILS OF TOTAL CONTROLLER CONNECTOR .....	13-36
13.4.4 ARRANGEMENT OF TOTAL CONTROLLER CONNECTOR PIN .....	13-37
13.4.5 PROPORTIONAL SOLENOID VALVE MEASURING POSITION (VOLTAGE).....	13-44
13.5 ADJUSTMENT OF TOTAL CONTROLLER .....	13-46
13.5.1 NECESSITY OF ADJUSTMENT .....	13-46
13.5.2 ADJUSTMENT PROCEDURES OF TOTAL CONTROLLER .....	13-46
13.5.2.1 OPTION SETTING.....	13-46
13.5.2.2 ADJUSTMENT OF HAND THROTTLE AND FOOT THROTTLE .....	13-48
13.5.2.3 ENGINE SPEED ADJUSTMENT .....	13-49
13.5.2.4 WHEN ADJUSTMENT OF TOTAL CONTROLLER IS IMPOSSIBLE .....	13-50
13.5.2.5 INITIAL ADJUSTMENT OF LIFTING HEIGHT GAUGE .....	13-51
13.6 CONTROLLER MALFUNCTION EMERGENCY MEASURES.....	13-53
<b>14. AIR CONDITIONER</b>	
14.1 OPERATION ITEMS .....	14-3
14.2 SAFETY MONITOR FUNCTIONS.....	14-4
14.3 DISASSEMBLY AND ASSEMBLY PROCEDURE .....	14-7
14.3.1 SPECIAL CONSIDERATIONS DURING REPLACEMENT .....	14-7
14.3.2 INTERIOR UNIT .....	14-9
14.3.2.1 CASE DISASSEMBLY.....	14-9
14.3.2.2 THERMOSTAT REPLACEMENT .....	14-12
14.3.2.3 EVAPORATOR OR EXPANSION VALVE REPLACEMENT .....	14-13
14.3.2.4 HEATER CORE REPLACEMENT .....	14-14
14.3.2.5 INTAKE DUMPER ACTUATOR REPLACEMENT.....	14-15
14.3.2.6 WATER VALVE ACTUATOR OR WATER VALVE REPLACEMENT.....	14-16
14.3.2.7 MODE ACTUATOR REPLACEMENT .....	14-17
14.3.2.8 BLOWER MOTOR ASSEMBLY REPLACEMENT.....	14-17
14.4 OPERATIONAL PRECAUTIONS .....	14-18
14.5 INSPECTION AND MAINTENANCE.....	14-19

---

## TABLE OF CONTENTS

---

14.5.1 INSPECTION/MAINTENANCE LIST .....	14-19
14.5.2 INSPECTION/MAINTENANCE PROCEDURES .....	14-19
14.6 ELECTRIC SYSTEM SCHEMATIC.....	14-23
<b>15. TRANSLIFTER SYSTEM</b>	
15.1 LOCATION OF MAIN COMPONENTS .....	15-3
15.2 CONSTRUCTION AND WORKING PRINCIPLE .....	15-6
15.2.1 OUTLINE .....	15-6
15.3 WORKING PRINCIPLE .....	15-8
15.3.1 RAISING THE TRANSLIFTER .....	15-8
15.3.2 LOWERING THE TRANSLIFTER .....	15-10
15.4 REMOTE CONTROL SWITCH .....	15-12
<b>16. JIB HOIST SYSTEM</b>	
16.1 APPARATUS AND LOCATION OF COMPONENTS .....	16-3
16.2 CONSTRUCTION AND FUNCTION .....	16-4
16.2.1 HYDRAULIC SCHEMATIC.....	16-4
16.2.2 RAISING THE JIB .....	16-6
16.2.3 NEUTRAL (MAINTAINING THE JIB POSITION) .....	16-8
16.2.4 LOWERING THE JIB.....	16-10
16.3 JIB DRUM LOCK.....	16-12
16.3.1 ASSEMBLY DRAWING .....	16-12
16.3.2 ADJUSTING THE JIB DRUM LOCK .....	16-13

---

# **SAFETY**



This section explains "Explanation of Warning Description", "Warning Labels" and "General safety"

### EXPLANATION OF WARNING DESCRIPTION

This manual indicates the contents of warnings concerned in safety with the following three stages according to the degree of personal harm and material damage.

Since the very important matters for safety are described, understand the contents sufficiently and observe them without fail.



Warning to avoid dangerous condition resulting in instantaneous death or serious personal injury.



Warning to avoid dangerous condition which has possibility of death or serious personal injury.



Warning to avoid dangerous condition which has possibility to cause slight or medium injury or damage of the machine and equipments.

This manual describes safety warnings sufficiently, but dangerous conditions which are impossible to be anticipated are considered.

Therefore, take measures for safety not only regarding the machine, but also including the working environment.


### EXPLANATION OF WARNING LABELS

Since the warning labels are installed in the machine and indicated with the three stages in the same way as the warning description, confirm the positions and contents all warning labels first.


Put them to the practical use to secure safety when operating, checking and performing maintenance.

- HANDLING OF WARNING LABELS


1. When the warning label is damaged or stained, order it to the designated service shop.
2. Do not remove the warning labels.
3. When the surface of the warning label is soiled and difficult to be seen, wipe it cleanly.

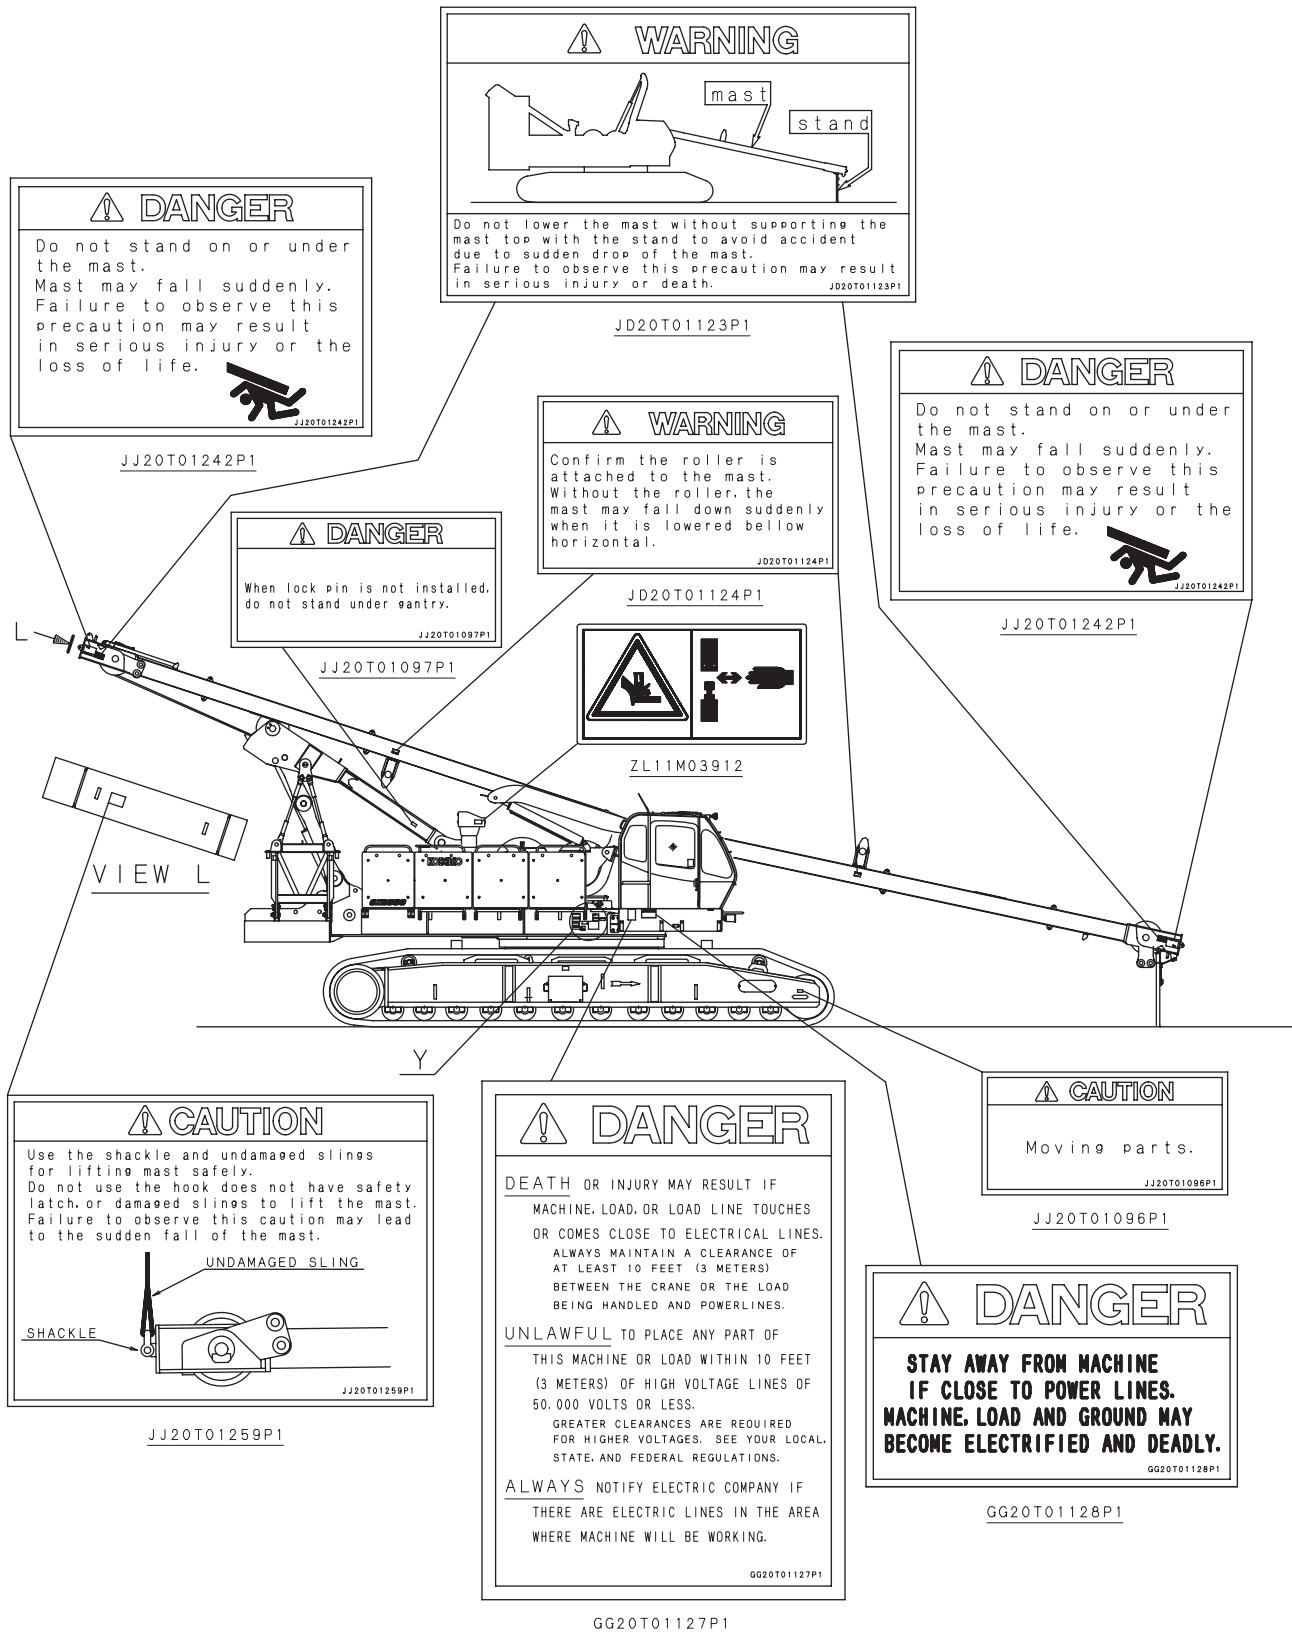

**CK2500-II**

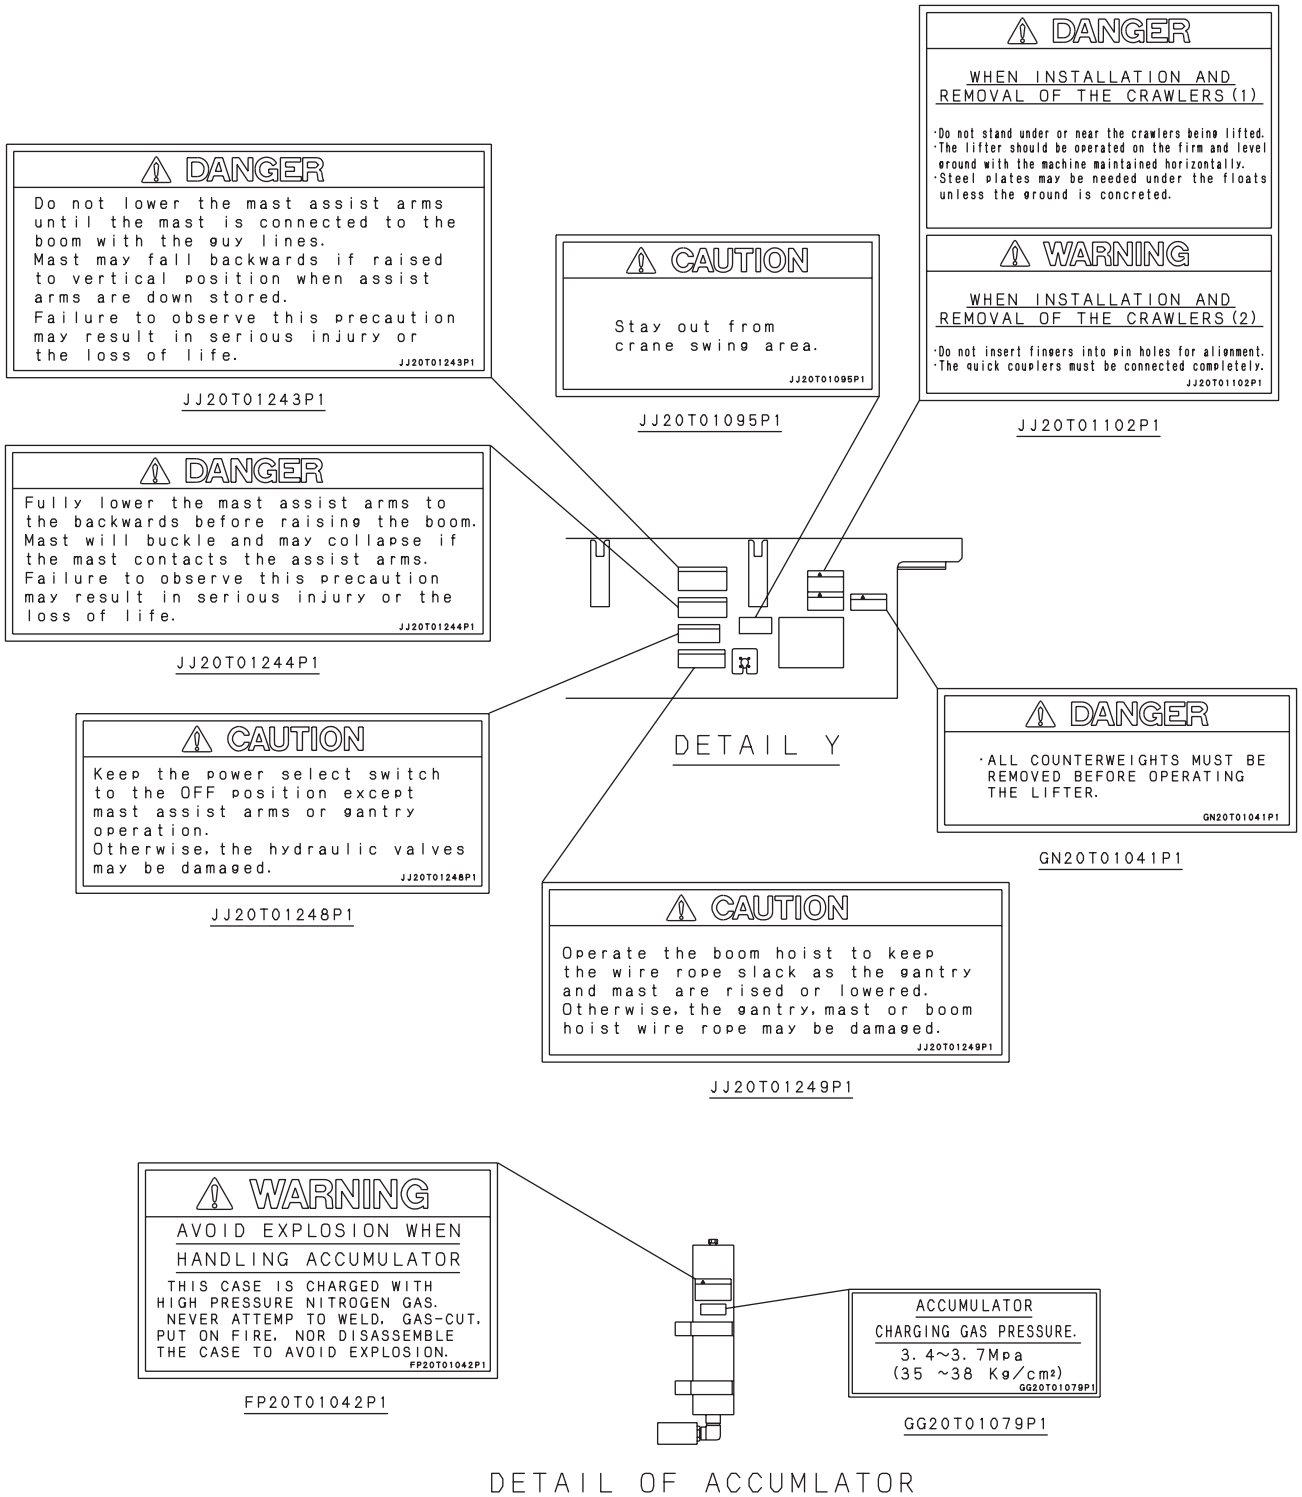

**CK2500-II**

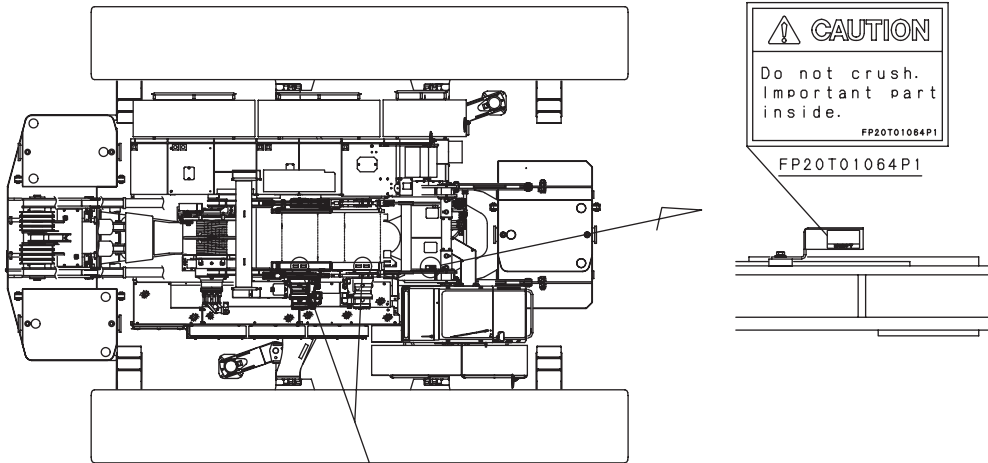

**CAUTION**  
Do not crush.  
Important part  
inside.

FP20T01064P1

FP20T01064P1

**CAUTION**  
Moving parts.


JJ20T01096P1

JJ20T01096P1

**CAUTION**  
Only to open when  
machine is stopped.

JJ20T01100P1

JJ20T01100P1

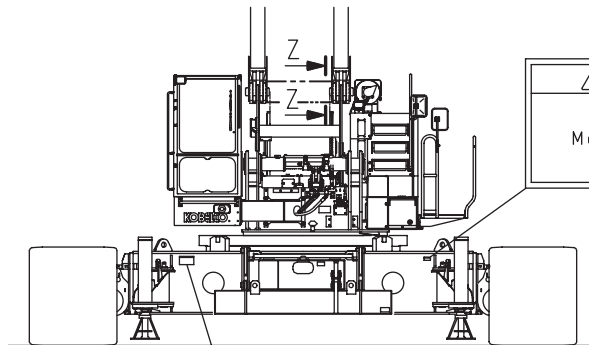

**CAUTION**  
Moving parts.

JJ20T01096P1

JJ20T01096P1

**DANGER**

Strictly observe following precautions whenever operating the machine when raised on the translifter cylinders to avoid turning over the machine.

**GROUND CONDITIONS**  
Make sure that the ground under the float of the translifter cylinders is firm and level, and capable of supporting machine weight. Level the machine by adjusting the translifter cylinders.

**INSTALLING CARBODY WEIGHTS AND CRAWLERS**  
When on translifters.  
Be sure to install the CARBODY WEIGHTS FIRST and then install the crawlers.  
Be sure to remove the CRAWLERS FIRST and then remove the carbody weights.

Failure to observe above precautions may result in serious accident and injury or death.

Note: See section 4. ASSEMBLY OF THE MACHINE in the operators manual for further information.

JD20T01122P1


JD20T01122P1

**CAUTION**

The bushing in the foot of mast is coated with plastic material. Insert a pin after the pin hole is aligned completely, and do not hit the pin hard. Failure to observe this caution may lead to damage of the coating of the bushing.

JJ20T01257P1


JJ20T01257P1

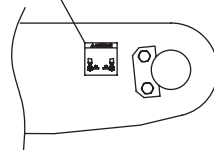


SECTION Z-Z



**CK2500-II**

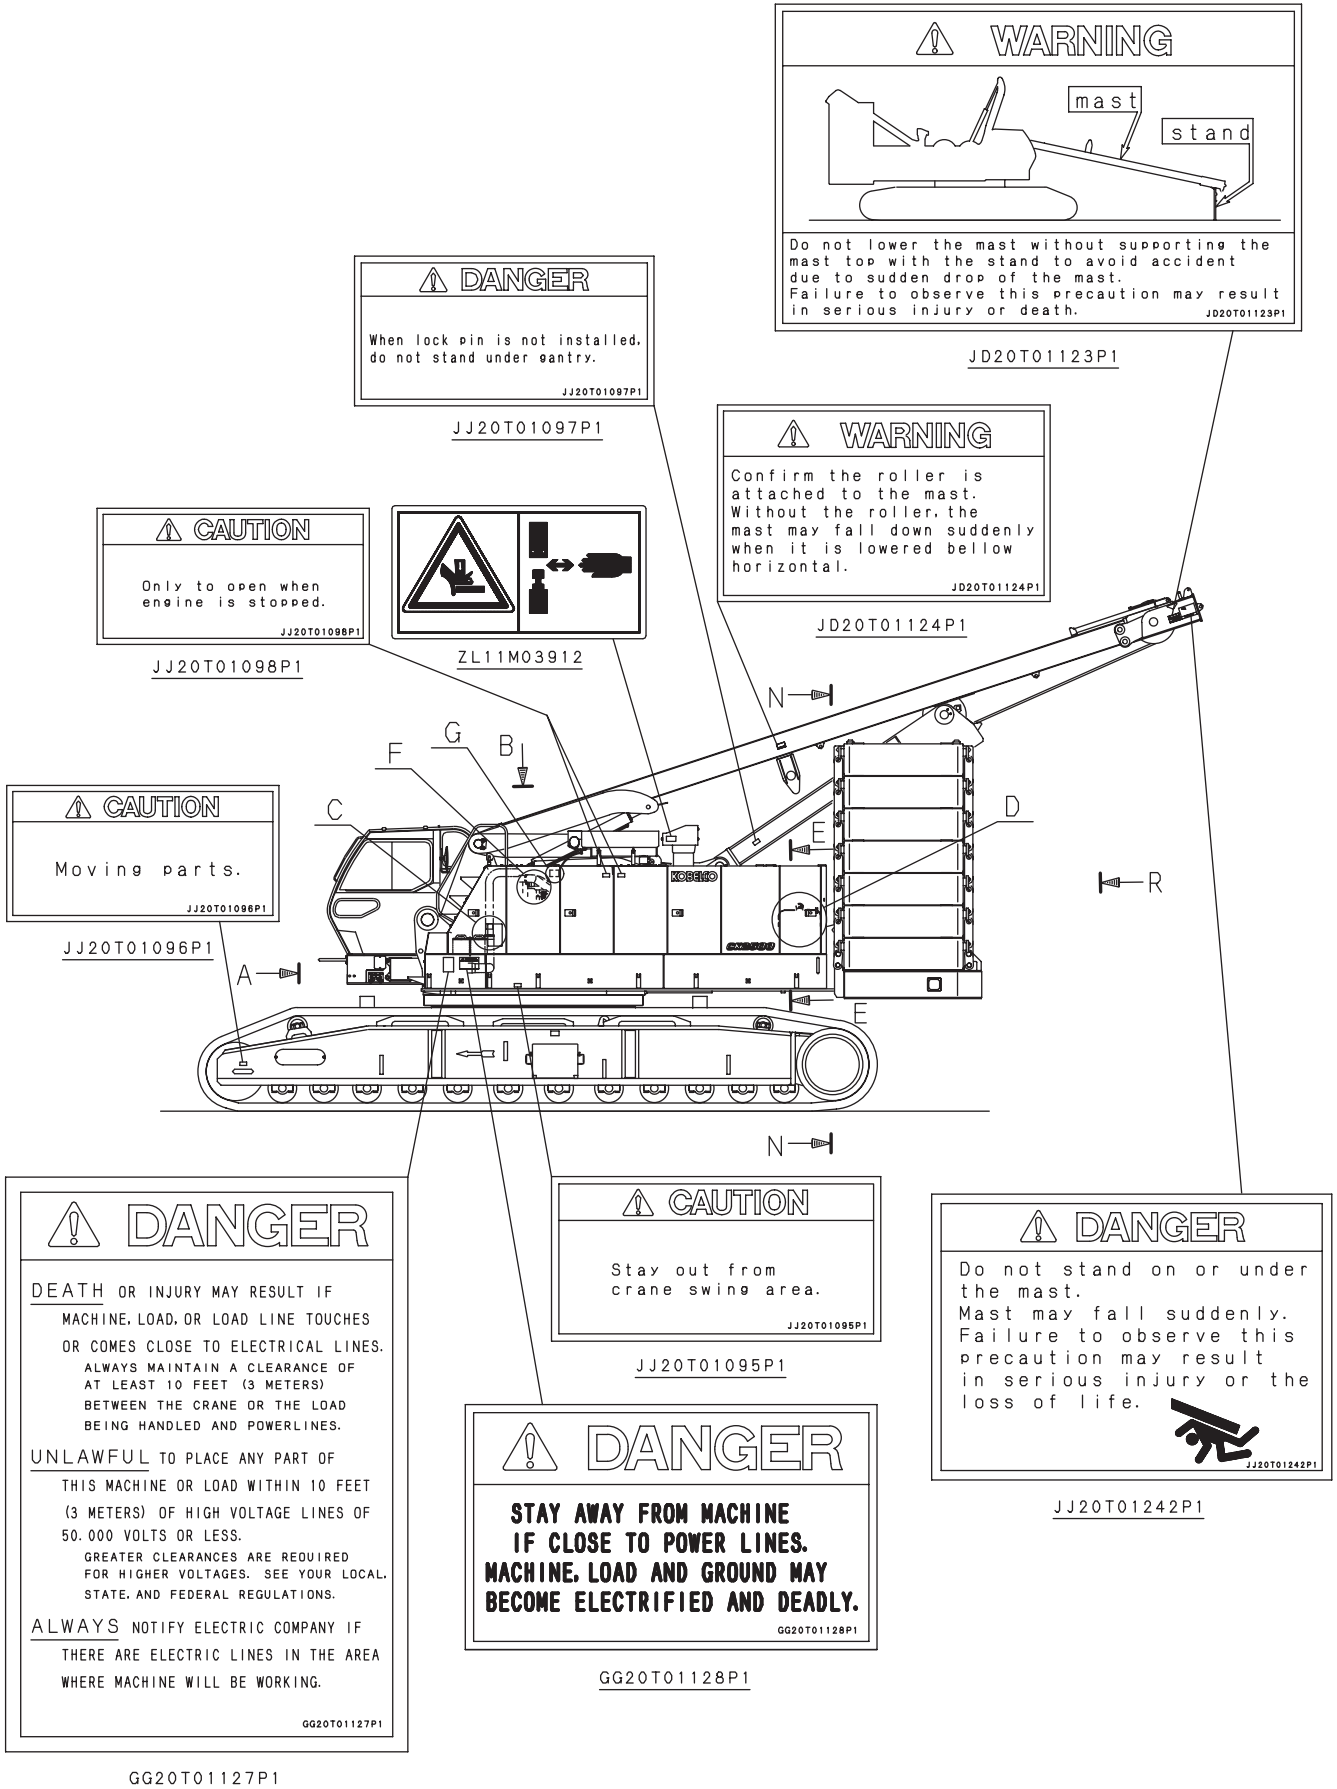

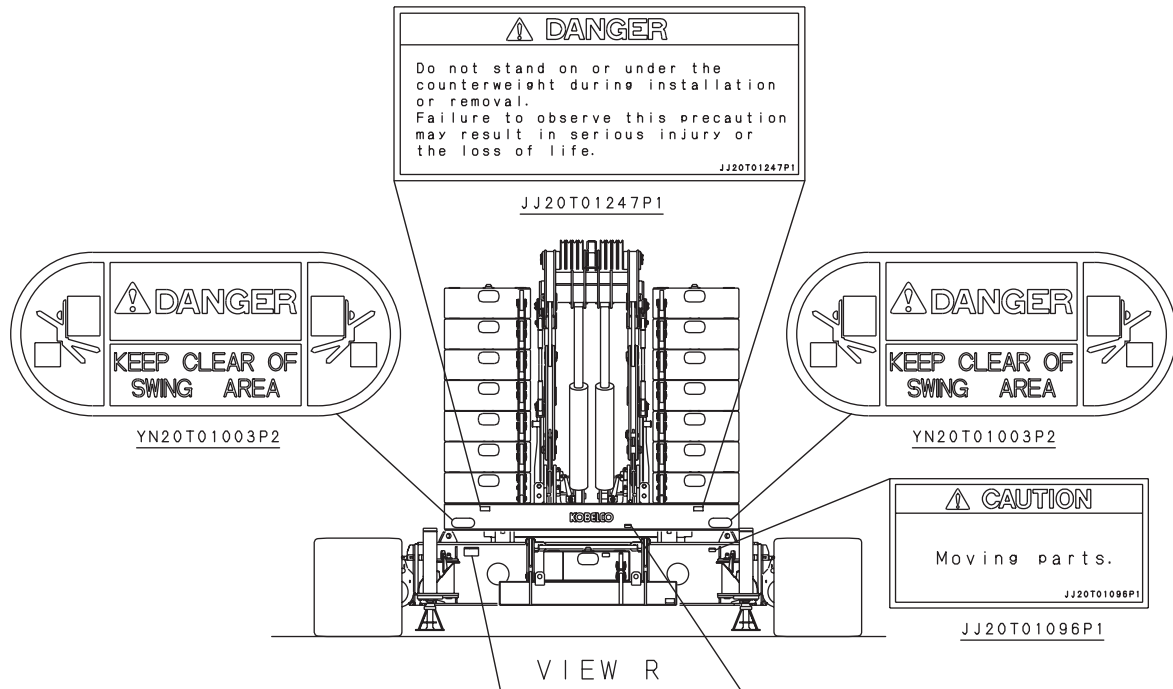

**⚠ DANGER**

Strictly observe following precautions whenever operating the machine when raised on the translifter cylinders to avoid turning over the machine.

**GROUND CONDITIONS**  
Make sure that the ground under the float of the translifter cylinders is firm and level, and capable of supporting machine weight. Level the machine by adjusting the translifter cylinders.

**INSTALLING CARBODY WEIGHTS AND CRAWLERS**  
When on translifters.  
Be sure to install the CARBODY WEIGHTS FIRST and then install the crawlers.  
Be sure to remove the CRAWLERS FIRST and then remove the carbody weights.

Failure to observe above precautions may result in serious accident and injury or death.

Note: See section 4. ASSEMBLY OF THE MACHINE in the operators manual for further information.

JD20T01122P1


JJ20T01122P1

**⚠ CAUTION**

Stay out from crane swing area.

JJ20T01095P1

JJ20T01095P1

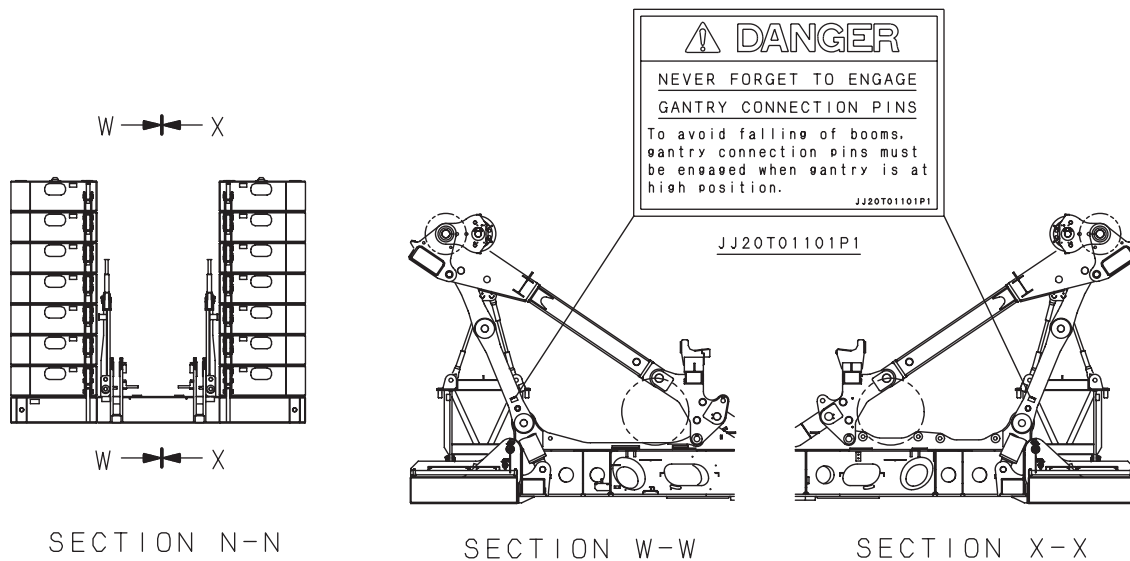


**CK2500-II**




**WARNING**

WALKING ON GUARDS MAY CAUSE STUMBLING AT PROJECTED ITEMS AND SLIPPING BY OIL, WATER, OR GREASE.  
 PROTECTOR SHOULD BE EMPLOYED WHEN WALKING FOR MAINTENANCE JOB. TO AVOID TIPPING OVER AND FALLING DOWN FROM THE MACHINE.

FP20T01051P1

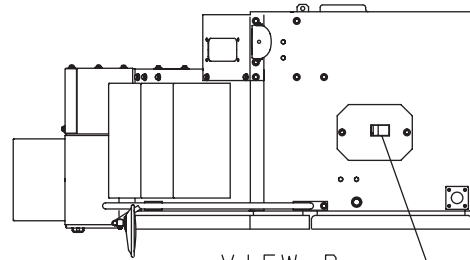

VIEW B

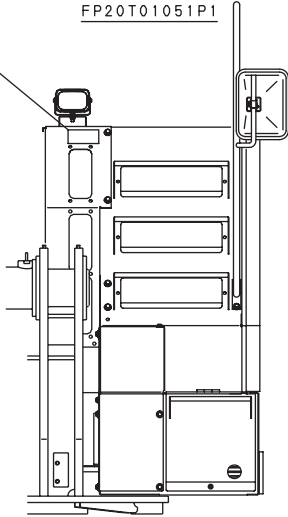

VIEW A




**FUEL TANK**

**CAUTION**


USE DIESEL FUEL ONLY

FP20T01050P1

FP20T01050P1

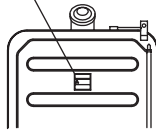

DETAIL D




**HYDRAULIC TANK**

**CAUTION**


HIGH TEMPERATURE DO NOT TOUCH

FP20T01049P1

FP20T01049P1

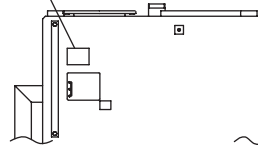

SECTION E-E

 


**WARNING**

Steam of hot coolant can cause injury or blindness.  
 Never loosen or open radiator cap when coolant is hot and under pressure.  
 Before opening radiator cap:  
 ·Cool down engine completely.  
 ·Cover radiator with cloth rag.  
 ·Loosen cap slowly to relieve pressure.

YN20T01010P1

YN20T01010P1





**PREVENT BATTERY EXPLOSION**

- Batteries gives off hydrogen gases that can explode and cause personal injury.
- Keep sparks, open flames and cigarettes away from batteries.
- Keep metallic articles away from batteries.
- Keep all ventilation caps tightly secured.
- Never check charge by placing metal articles across battery terminals.
- Leave battery box open to improve ventilation when charging.

YN20T01001P1


YN20T01001P1


**Rotating parts can cause personal injury.**  
 Keep away from fan and belt when engine is running.  
 Stop engine before servicing.

YN20T01009P1

YN20T01009P1




**CAUTION**

**CAUTION FOR HIGH TEMPERATURE**

AS ENGINES AND MUFFLERS MAY BE HEATED TO HIGH TEMPERATURES. DO NOT DIRECTLY TOUCH THEM BY HAND.

FP20T01043P1

FP20T01043P1




**AVOID ACID BURNS**


- Electrolyte is an acid and can cause injury or blindness if it contacts skin or eyes.
- Wear eye protection and protective clothing when handling or servicing batteries.
- If electrolyte contacts skin or eyes, flush affected areas immediately with clean water and seek medical attention immediately.

YN20T01017P1


YN20T01017P1

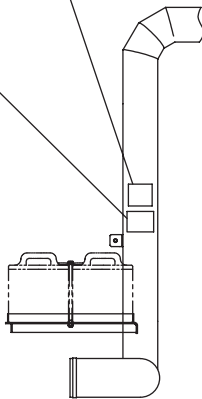

DETAIL C

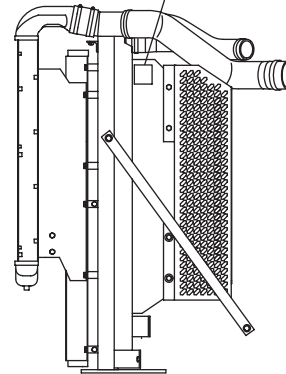

DETAIL F

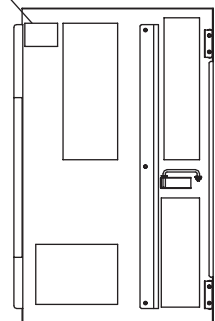

DETAIL G

**SAFETY**

**CK2500-II**

**CAUTION**

BE SURE TO SET THE FREE FALL INCREASED SELECTOR SWITCH TO THE "LOCK" SIDE WHEN RE-REEVING THE WIRE ROPE.

WHEN THE BRAKE IS RELEASED WITH THE FREE FALL INCREASED SELECTOR SWITCH SET TO THE "RELEASE" SIDE, THE DRUM IS AUTOMATICALLY ROTATED WITHOUT LOAD.

GG20T01291P1

**WARNING**

Do not support the boom in cantilever style, when the gantry is in the middle or low position.

JJ20T01344P1

**CAUTION**

**LIMIT FOR BOOM CONNECTING LENGTH**


WHEN BOOM IS SUPPORTED IN CANTILEVER STYLE, AND ATTEMPTING TO INCREASE BOOM LENGTH, STRICTLY FOLLOW RESTRICTED LENGTH AS SHOWN.

With boom tip  
36.6m (120ft) and shorter

With aux. sheave  
33.5m (110ft) and shorter

With insert boom only  
41.1m (135ft) and shorter

JD20T01004P1

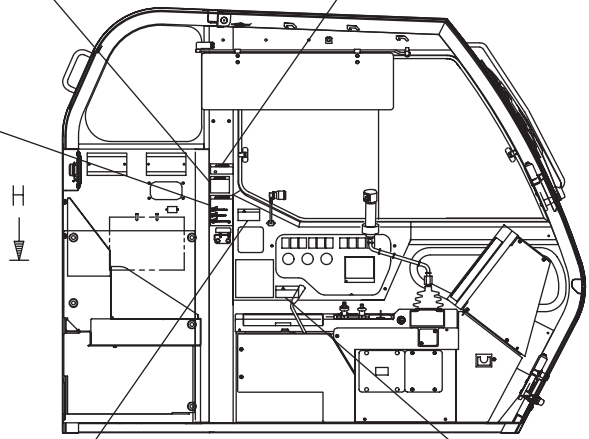

**DANGER**

WHEN THE GANTRY IS IN THE MIDDLE LOWERD POSITION, DO NOT HOIST THE BOOM, NOR DO NOT LIFT ANY LOAD.

JJ20T01325P1

**CAUTION**


**READ BEFORE OPERATION**

OPERATORS MANUAL SHOULD BE READ AND UNDERSTOOD BEFORE OPERATION. DAILY MAINTENANCE SHOULD ALWAYS BE EXERCISED. ALSO, CAUTIONS NOTED IN RATING PLATES MUST BE OBSERVED DURING OPERATION.

FP20T01047P1

JJ20T01325P1

FP20T01047P1

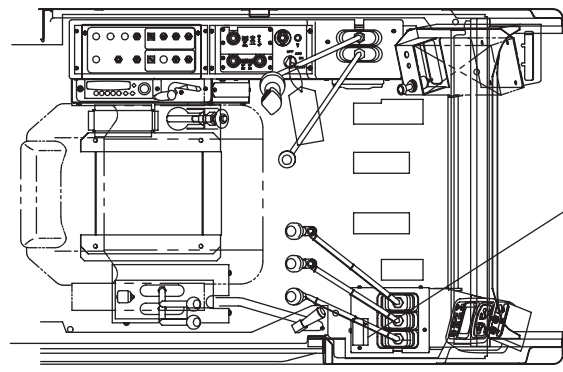

**DANGER**

CRANE WORK SHOULD BE EXERCISED ON "NEUTRAL BRAKE MODE". OPERATIONS ON "FREE FALL MODE" MAY CAUSE FALLING OF LOADS DUE TO OPERATIONAL ERROR.

FP20T01045P1

FP20T01045P1