

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-3

SERIAL NUMBERS 3001 and up

KOMATSU

ARTICULATED DUMP TRUCK

HM400-3

Model Serial Number

HM400-3 3001 and up

00 Index and foreword

00 Index and foreword

Index

Index (ALL-0310-001-A-00-A)

| | |
|--|--------|
| 00 Index and foreword | 00-1 |
| Index | 00-2 |
| Foreword, safety and general information | 00-17 |
| Important safety notice | 00-17 |
| How to read the shop manual | 00-24 |
| Explanation of terms for maintenance standard | 00-26 |
| Handling equipment of fuel system devices | 00-28 |
| Handling of intake system parts | 00-29 |
| Handling of hydraulic equipment | 00-30 |
| Method of disconnecting and connecting of push-pull type coupler | 00-32 |
| Handling of electrical equipment | 00-35 |
| How to read electric wire code | 00-43 |
| Precautions when performing operation | 00-46 |
| Practical use of KOMTRAX | 00-51 |
| Standard tightening torque table | 00-52 |
| List of abbreviation | 00-58 |
| Conversion table | 00-63 |
| 01 Specification | 01-1 |
| Table of contents | 01-2 |
| Specifications | 01-3 |
| Specification drawing | 01-3 |
| Specifications | 01-5 |
| Weight table | 01-11 |
| Table of fuel, coolant, and lubricants | 01-12 |
| 10 Structure and function | 10-1 |
| Table of contents | 10-2 |
| Engine and cooling system | 10-4 |
| Engine related parts | 10-4 |
| Output shaft | 10-6 |
| KVTG | 10-7 |
| EGR system piping drawing | 10-13 |
| EGR system circuit diagram | 10-15 |
| EGR valve | 10-16 |
| EGR cooler | 10-18 |
| KCCV layout drawing | 10-20 |
| KCCV ventilator | 10-22 |
| KDPF | 10-24 |
| Cooling system | 10-30 |
| Radiator fan pump | 10-32 |
| Aftercooler fan motor | 10-40 |
| Radiator fan motor | 10-51 |
| Oil cooler bypass valve | 10-60 |
| Power train | 10-61 |
| Power train system | 10-61 |
| Drive shaft | 10-63 |
| Torque converter and transmission hydraulic piping | 10-64 |
| Torque converter | 10-65 |
| Transmission | 10-71 |
| Transmission control valve | 10-96 |
| Forward and reverse clutch ECMV and gear speed clutch ECMV | 10-99 |
| Lockup clutch ECMV | 10-106 |
| Differential lock clutch ECMV | 10-110 |
| Main relief valve, torque converter relief valve, and main flow selector valve | 10-114 |
| Axle | 10-120 |
| Differential | 10-123 |
| Final drive | 10-127 |
| Steering system | 10-130 |

| | |
|---|--------|
| Layout of steering devices | 10-130 |
| Steering column | 10-131 |
| Flow amplifier valve | 10-132 |
| Steering valve | 10-136 |
| Emergency steering pump | 10-141 |
| Brake system | 10-143 |
| Layout of brake parts | 10-143 |
| Parking brake solenoid and accumulator charge valve | 10-145 |
| Accumulator | 10-151 |
| Shut off solenoid valve | 10-152 |
| Brake valve | 10-153 |
| Proportional pressure reducing valve | 10-158 |
| Slack adjuster | 10-160 |
| Brake | 10-164 |
| Brake system tank | 10-167 |
| Parking brake | 10-168 |
| Undercarriage and frame | 10-171 |
| Suspension | 10-171 |
| Suspension cylinder | 10-175 |
| Oscillation hitch | 10-178 |
| Hydraulic system | 10-179 |
| Hydraulic component layout | 10-179 |
| Dump body control | 10-181 |
| Hydraulic tank | 10-182 |
| Steering and hoist pump | 10-183 |
| Hoist valve | 10-194 |
| Steering pump selector solenoid valve | 10-200 |
| Dump EPC valve | 10-201 |
| Center brake cooling remote motor | 10-203 |
| Front brake cooling relief valve | 10-212 |
| Center brake cooling relief valve | 10-213 |
| Cab and its attachments | 10-214 |
| ROPS cab | 10-214 |
| Cab tilt | 10-215 |
| Electrical system | 10-216 |
| Electrical control system | 10-216 |
| Machine monitor system | 10-245 |
| Rear view monitor system | 10-268 |
| KOMTRAX system | 10-272 |
| System component parts | 10-276 |
| Sensor | 10-303 |
| 20 Standard value tables | 20-1 |
| Table of contents | 20-2 |
| Standard service value table | 20-3 |
| Standard value table for engine | 20-3 |
| Standard value table for machine | 20-5 |
| 30 Testing and adjusting | 30-1 |
| Table of contents | 30-2 |
| Related information on testing and adjusting | 30-4 |
| Tools for testing and adjusting | 30-4 |
| Sketch of tools for testing and adjusting | 30-10 |
| Engine and cooling system | 30-13 |
| Testing engine speed | 30-13 |
| Testing boost pressure | 30-14 |
| Testing exhaust gas temperature | 30-16 |
| Testing exhaust gas color | 30-18 |
| Adjusting valve clearance | 30-20 |
| Testing compression pressure | 30-22 |
| Testing blowby pressure | 30-24 |

| | |
|---|--------|
| Testing engine oil pressure | 30-26 |
| Testing EGR valve and KVGT driving oil pressure | 30-28 |
| Testing fuel pressure | 30-29 |
| Handling cylinder cutout mode operation | 30-30 |
| Handling no-injection cranking operation | 30-31 |
| Testing fuel return rate and leakage | 30-32 |
| Bleeding air from fuel circuit | 30-35 |
| Testing fuel circuit for leakage | 30-36 |
| Testing radiator fan and aftercooler fan speed | 30-37 |
| Replacing and adjusting belt for alternator and air conditioner compressor | 30-38 |
| Procedures for cleaning fuel doser | 30-39 |
| Writing compensation values at replacement of injector and engine controller | 30-42 |
| Power train | 30-46 |
| Testing torque converter stall speed | 30-46 |
| Testing power train oil pressure | 30-48 |
| Adjusting transmission speed sensor | 30-59 |
| Adjusting transmission controller | 30-62 |
| Retrieval of disabled machine that resulted from a trouble in electrical system | 30-63 |
| Retrieval of disabled machine due to traction control system (KTCS) failure | 30-67 |
| Steering system | 30-69 |
| Testing and adjusting steering circuit oil pressure | 30-69 |
| Brake system | 30-71 |
| Testing and adjusting brake oil pressure | 30-71 |
| Testing accumulator nitrogen gas pressure and charging procedure for accumulator nitrogen gas | 30-75 |
| Testing braking performance | 30-79 |
| Bleeding air from brake circuit | 30-80 |
| Testing wear of wheel brake disc | 30-81 |
| Parking brake emergency releasing procedure | 30-82 |
| Testing wear of parking brake pad and adjusting clearance | 30-83 |
| Hydraulic system | 30-85 |
| Testing and adjusting suspension cylinder | 30-85 |
| Testing and adjusting dump circuit oil pressure | 30-90 |
| Work equipment | 30-93 |
| Adjusting dump body positioner sensor | 30-93 |
| Testing and adjusting body mount | 30-94 |
| Cab and its attachments | 30-96 |
| Cab tilt-up procedure | 30-96 |
| Electrical system | 30-99 |
| Setting and adjusting each equipment | 30-99 |
| Special functions of machine monitor | 30-110 |
| KOMTRAX terminal start-up procedure | 30-183 |
| Handling voltage circuit of engine controller | 30-187 |
| Handling battery disconnect switch | 30-188 |
| Pm clinic | 30-189 |
| Pm Clinic service | 30-189 |
| 40 Troubleshooting | 40-1 |
| Table of contents | 40-2 |
| Related information on troubleshooting | 40-11 |
| Troubleshooting points | 40-11 |
| Sequence of events in troubleshooting | 40-13 |
| Check before troubleshooting | 40-15 |
| Inspection procedure before troubleshooting | 40-17 |
| Classification and procedures for troubleshooting | 40-36 |
| Symptom and troubleshooting numbers | 40-39 |
| Information in troubleshooting table | 40-42 |
| Preparation for troubleshooting of electrical system | 40-44 |
| Connector list and layout | 40-50 |
| Connector contact identification | 40-66 |

| | |
|--|--------|
| T-branch box and T-branch adapter table | 40-104 |
| Fuse location table | 40-109 |
| Precautions for KDPF (KCSF and KDOC) Cleaning and Replacement | 40-113 |
| Precautions on troubleshooting of machine monitor | 40-116 |
| Processing procedure of harness checker for troubleshooting of machine monitor LCD unit..... | 40-118 |
| Preparation of dummy temperature sensor (for KDOC and KDPF temperature sensors)..... | 40-123 |
| Preparation of short circuit electrical connector (for failure codes [CA1883] and [CA3135]) | 40-124 |
| Failure codes table..... | 40-125 |
| Troubleshooting by failure code (Display of code)..... | 40-146 |
| Failure code [1500L0] Double Engagement of T/M Clutches | 40-146 |
| Failure code [15B0NX] Transmission Oil Filter Clogging | 40-147 |
| Failure code [15F0KM] Abuse 1 of Gear Shifting from R to F..... | 40-148 |
| Failure code [15F0MB] Abuse 2 of Gear Shifting from R to F..... | 40-149 |
| Failure code [15F7KM] Abuse of TM Forward Clutch Disk | 40-150 |
| Failure code [15G0MW] Failure of Clutch (Reverse)..... | 40-151 |
| Failure code [15G7KM] Abuse of TM Reverse Clutch Disk..... | 40-154 |
| Failure code [15H0MW] Failure of Clutch (High) | 40-155 |
| Failure code [15J0MW] Failure of Clutch (Low) | 40-158 |
| Failure code [15K0MW] Failure of Clutch (1st)..... | 40-161 |
| Failure code [15L0MW] Failure of Clutch (2nd) | 40-164 |
| Failure code [15M0MW] Failure of Clutch (3rd) | 40-167 |
| Failure code [15SBL1] Release Trouble of ECMV (Reverse)..... | 40-170 |
| Failure code [15SBMA] Malfunction of ECMV (Reverse)..... | 40-173 |
| Failure code [15SCL1] Release Trouble of ECMV (High) | 40-174 |
| Failure code [15SCMA] Malfunction of ECMV (High) | 40-177 |
| Failure code [15SDL1] Release Trouble of ECMV (Low)..... | 40-178 |
| Failure code [15SDMA] Malfunction of ECMV (Low)..... | 40-181 |
| Failure code [15SEL1] Release Trouble of ECMV (1st)..... | 40-182 |
| Failure code [15SEMA] Malfunction of ECMV (1st)..... | 40-185 |
| Failure code [15SFL1] Release Trouble of ECMV (2nd)..... | 40-186 |
| Failure code [15SFMA] Malfunction of ECMV (2nd)..... | 40-189 |
| Failure code [15SGL1] Release Trouble of ECMV (3rd)..... | 40-190 |
| Failure code [15SGMA] Malfunction of ECMV (3rd)..... | 40-193 |
| Failure code [15SJMA] Malfunction of ECMV (Lockup)..... | 40-194 |
| Failure code [15SKMA] Malfunction of ECMV (Inter-Axle Diff.) | 40-196 |
| Failure code [2F00KM] Dragging of Parking Brake | 40-198 |
| Failure code [2G42ZG] Accumulator Oil Pressure Low (Front) | 40-200 |
| Failure code [2G43ZG] Accumulator Oil Pressure Low (Rear)..... | 40-201 |
| Failure code [879AKA] A/C Inner Sensor Open Circuit | 40-202 |
| Failure code [879AKB] A/C Inner Sensor Short Circuit..... | 40-203 |
| Failure code [879BKA] A/C Outer Sensor Open Circuit..... | 40-204 |
| Failure code [879BKB] A/C Outer Sensor Short Circuit..... | 40-205 |
| Failure code [879CKA] Ventilating Sensor Open Circuit..... | 40-206 |
| Failure code [879CKB] Ventilating Sensor Short Circuit..... | 40-207 |
| Failure code [879EMC] Ventilation Damper Abnormality..... | 40-208 |
| Failure code [879FMC] Air Mix Damper Abnormality | 40-209 |
| Failure code [879GKX] Refrigerant Abnormality..... | 40-210 |
| Failure code [989D00] Tilt Caution..... | 40-211 |
| Failure code [989L00] Engine Controller Lock Caution1..... | 40-212 |
| Failure code [989M00] Engine Controller Lock Caution2..... | 40-213 |
| Failure code [989N00] Engine Controller Lock Caution3 | 40-214 |
| Failure code [A1U0N3] HC Desorb Request 1 | 40-215 |
| Failure code [A1U0N4] HC Desorb Request 2 | 40-217 |
| Failure code [AA10NX] Air Cleaner Clogging..... | 40-219 |
| Failure code [AB00KE] Charge Voltage Low..... | 40-221 |
| Failure code [AB00KY] Hot Short of Alternator R Terminal | 40-223 |

00 Index and foreword

Index

| | |
|--|--------|
| Failure code [B@BAZG] Eng Oil Press Low | 40-225 |
| Failure code [B@BAZK] Engine Oil Level Low | 40-226 |
| Failure code [B@BCNS] Eng Water Overheat | 40-227 |
| Failure code [B@BCZK] Eng Water Level Low | 40-228 |
| Failure code [B@C6NS] Retarder Oil Overheat (Front)..... | 40-230 |
| Failure code [B@C8NS] Retarder Oil Overheat (Center) | 40-231 |
| Failure code [B@CENS] T/C Oil Temp. Overheat..... | 40-232 |
| Failure code [B@JANS] Steering Oil Overheat | 40-233 |
| Failure code [CA115] Eng Ne and Bkup Speed Sens Error | 40-234 |
| Failure code [CA122] Chg Air Press Sensor High Error | 40-235 |
| Failure code [CA123] Chg Air Press Sensor Low Error | 40-237 |
| Failure code [CA131] Throttle Sensor High Error..... | 40-239 |
| Failure code [CA132] Throttle Sensor Low Error | 40-241 |
| Failure code [CA135] Eng Oil Press Sensor High Error..... | 40-244 |
| Failure code [CA141] Eng Oil Press Sensor Low Error | 40-246 |
| Failure code [CA144] Coolant Temp Sens High Error | 40-248 |
| Failure code [CA145] Coolant Temp Sens Low Error | 40-250 |
| Failure code [CA153] Chg Air Temp Sensor High Error..... | 40-252 |
| Failure code [CA154] Chg Air Temp Sensor Low Error..... | 40-254 |
| Failure code [CA187] Sensor 2 Supply Volt Low Error | 40-256 |
| Failure code [CA221] Ambient Press Sens High Error | 40-258 |
| Failure code [CA222] Ambient Press Sens Low Error | 40-260 |
| Failure code [CA227] Sensor 2 Supply Volt High Error..... | 40-262 |
| Failure code [CA234] Eng Overspeed | 40-263 |
| Failure code [CA238] Ne Speed Sensor Supply Volt Error | 40-264 |
| Failure code [CA239] Ne Speed Sens Supply Volt High Error..... | 40-265 |
| Failure code [CA271] IMV/PCV1 Short Error | 40-266 |
| Failure code [CA272] IMV/PCV1 Open Error | 40-267 |
| Failure code [CA273] PCV2 Short Error | 40-268 |
| Failure code [CA274] PCV2 Open Error | 40-269 |
| Failure code [CA322] Inj #1(L#1) Open/Short Error | 40-270 |
| Failure code [CA323] Inj #5(L#5) Open/Short Error | 40-272 |
| Failure code [CA324] Inj #3(L#3) Open/Short Error | 40-274 |
| Failure code [CA325] Inj #6(L#6) Open/Short Error | 40-276 |
| Failure code [CA331] Inj #2(L#2) Open/Short Error | 40-278 |
| Failure code [CA332] Inj #4(L#4) Open/Short Error | 40-280 |
| Failure code [CA343] ECM Critical Internal Failure | 40-282 |
| Failure code [CA351] Injectors Drive Circuit Error | 40-283 |
| Failure code [CA352] Sensor 1 Supply Volt Low Error | 40-284 |
| Failure code [CA356] Mass Air Flow Sensor High Error | 40-286 |
| Failure code [CA357] Mass Air Flow Sensor Low Error..... | 40-288 |
| Failure code [CA386] Sensor 1 Supply Volt High Error..... | 40-290 |
| Failure code [CA431] Idle Validation Sw Error | 40-291 |
| Failure code [CA432] Idle Validation Process Error | 40-294 |
| Failure code [CA441] Battery Voltage Low Error | 40-297 |
| Failure code [CA442] Battery Voltage High Error..... | 40-299 |
| Failure code [CA449] Rail Press Very High Error..... | 40-300 |
| Failure code [CA451] Rail Press Sensor High Error..... | 40-301 |
| Failure code [CA452] Rail Press Sensor Low Error | 40-303 |
| Failure code [CA515] Rail Press Sens Sup Volt High Error | 40-305 |
| Failure code [CA516] Rail Press Sens Sup Volt Low Error | 40-307 |
| Failure code [CA553] Rail Press High Error | 40-309 |
| Failure code [CA555] Crankcase Press High Error 1 | 40-310 |
| Failure code [CA556] Crankcase Press High Error 2 | 40-311 |
| Failure code [CA559] Rail Press Low Error..... | 40-312 |
| Failure code [CA595] Turbo Speed High Error 2 | 40-316 |
| Failure code [CA687] Turbo Speed Low Error..... | 40-317 |
| Failure code [CA689] Eng Ne Speed Sensor Error..... | 40-319 |
| Failure code [CA691] Intake Air Temp Sens High Error..... | 40-321 |

| | |
|---|--------|
| Failure code [CA692] Intake Air Temp Sens Low Error..... | 40-323 |
| Failure code [CA697] ECM Internal Temp Sensor High Error..... | 40-325 |
| Failure code [CA698] ECM Int Temp Sensor Low Error..... | 40-326 |
| Failure code [CA731] Eng Bkup Speed Sens Phase Error | 40-327 |
| Failure code [CA778] Eng Bkup Speed Sensor Error..... | 40-328 |
| Failure code [CA1117] Persistent Data Lost Error..... | 40-330 |
| Failure code [CA1664] KDOC Malfunction..... | 40-331 |
| Failure code [CA1691] Regeneration Ineffective | 40-334 |
| Failure code [CA1695] Sensor 5 Supply Volt High Error..... | 40-337 |
| Failure code [CA1696] Sensor 5 Supply Volt Low Error | 40-339 |
| Failure code [CA1843] Crankcase Press Sens High Error..... | 40-341 |
| Failure code [CA1844] Crankcase Press Sens Low Error | 40-343 |
| Failure code [CA1879] KDPF Delta P Sensor High Error | 40-345 |
| Failure code [CA1881] KDPF Delta P Sensor Low Error | 40-347 |
| Failure code [CA1883] KDPF Delta P Sens In Range Error..... | 40-349 |
| Failure code [CA1921] KDPF Soot Load High Error 1 | 40-354 |
| Failure code [CA1922] KDPF Soot Load High Error 2 | 40-357 |
| Failure code [CA1923] Dosing Fuel Valve 1 High Error | 40-362 |
| Failure code [CA1924] Dosing Fuel Valve 1 Low Error..... | 40-364 |
| Failure code [CA1925] Dosing Fuel Valve 1 In Range Error | 40-366 |
| Failure code [CA1927] Dosing Fuel Press Sens High Error..... | 40-368 |
| Failure code [CA1928] Dosing Fuel Press Sens Low Error..... | 40-370 |
| Failure code [CA1942] Crankcase Press Sens In Range Error | 40-372 |
| Failure code [CA1963] Dosing Fuel Valve 1 Servo Error | 40-373 |
| Failure code [CA1977] Fuel Doser Open/Short Error | 40-375 |
| Failure code [CA1993] KDPF Delta Pressure Low Error | 40-377 |
| Failure code [CA2185] Throt Sensor Sup Volt High Error | 40-381 |
| Failure code [CA2186] Throt Sensor Sup Volt Low Error..... | 40-383 |
| Failure code [CA2249] Rail Press Very Low Error | 40-385 |
| Failure code [CA2265] Fuel Feed Pump Open Error..... | 40-386 |
| Failure code [CA2266] Fuel Feed Pump Short Error..... | 40-388 |
| Failure code [CA2271] EGR Valve Pos Sens High Error | 40-390 |
| Failure code [CA2272] EGR Valve Pos Sens Low Error..... | 40-392 |
| Failure code [CA2349] EGR Valve Solenoid Open Error | 40-394 |
| Failure code [CA2353] EGR Valve Solenoid Short Error | 40-396 |
| Failure code [CA2357] EGR Valve Servo Error | 40-398 |
| Failure code [CA2381] KVGt Pos Sens High Error | 40-399 |
| Failure code [CA2382] KVGt Pos Sens Low Error..... | 40-401 |
| Failure code [CA2383] KVGt Solenoid Open Error | 40-403 |
| Failure code [CA2386] KVGt Solenoid Short Error | 40-405 |
| Failure code [CA2387] KVGt Servo Error | 40-407 |
| Failure code [CA2555] Grid Htr Relay Volt Low Error..... | 40-408 |
| Failure code [CA2556] Grid Htr Relay Volt High Error..... | 40-410 |
| Failure code [CA2637] KDOC Face Plugging | 40-412 |
| Failure code [CA2639] Manual Stationary Regeneration Request..... | 40-414 |
| Failure code [CA2732] Dosing Fuel Valve 2 High Error..... | 40-417 |
| Failure code [CA2733] Dosing Fuel Valve 2 Low Error..... | 40-419 |
| Failure code [CA2741] Dosing Fuel Valve Swap Error | 40-421 |
| Failure code [CA2765] Inj Trim Data Error | 40-423 |
| Failure code [CA2878] Dosing Fuel Valve 2 Servo Error | 40-424 |
| Failure code [CA2881] Dosing Fuel Pressure Low Error 1..... | 40-427 |
| Failure code [CA3133] KDPF Outlet Press Sens High Error | 40-432 |
| Failure code [CA3134] KDPF Outlet Press Sens Low Error..... | 40-434 |
| Failure code [CA3135] KDPF Outlet Press Sens In Range Error | 40-436 |
| Failure code [CA3167] Fuel Doser Degradation | 40-440 |
| Failure code [CA3251] KDOC Inlet Temp High Error..... | 40-443 |
| Failure code [CA3253] KDOC Temp Error - Non Regeneration..... | 40-446 |
| Failure code [CA3254] KDOC Outlet Temp High Error 1 | 40-449 |
| Failure code [CA3255] KDPF Temp Error - Non Regeneration..... | 40-452 |

| | |
|--|--------|
| Failure code [CA3256] KDPF Outlet Temp High Error 1 | 40-456 |
| Failure code [CA3311] KDOC Outlet Temp High Error 2 | 40-459 |
| Failure code [CA3312] KDPF Outlet Temp High Error 2 | 40-462 |
| Failure code [CA3313] KDOC Inlet Temp Sensor Low Error | 40-465 |
| Failure code [CA3314] KDOC Inlet Temp Sens High Error | 40-468 |
| Failure code [CA3315] KDOC Inlet Temp Sens In Range Error | 40-472 |
| Failure code [CA3316] KDOC Outlet Temp Sens Low Error | 40-477 |
| Failure code [CA3317] KDOC Outlet Temp Sens High Error | 40-480 |
| Failure code [CA3318] KDOC Outlet Temp Sens In Range Error | 40-484 |
| Failure code [CA3319] KDPF Outlet Temp Sens High Error | 40-489 |
| Failure code [CA3321] KDPF Outlet Temp Sens Low Error | 40-493 |
| Failure code [CA3322] KDPF Outlet Temp Sens In Range Error | 40-496 |
| Failure code [CA3419] Mass Air Flow Sensor Sup Volt High Error | 40-501 |
| Failure code [CA3421] Mass Air Flow Sensor Sup Volt Low Error | 40-503 |
| Failure code [D150KB] Ground Fault of Emerg. Steering Relay | 40-505 |
| Failure code [D150KZ] Failure of Emerg. Steering Relay | 40-506 |
| Failure code [D151KB] Ground Fault of Emerg. Steering Relay 2 | 40-507 |
| Failure code [D151KZ] Failure of Emerg. Steering Relay 2 | 40-508 |
| Failure code [D164KY] Hot Short of Head Light High Selector | 40-509 |
| Failure code [D19HKZ] Failure of Stop Lamp (R&L) | 40-510 |
| Failure code [D19JKZ] Personal Code Relay Abnormality | 40-512 |
| Failure code [D1EHKA] Disconnection of Engine Start Relay | 40-513 |
| Failure code [D1EHKB] Ground Fault of Engine Start Relay | 40-514 |
| Failure code [D1EHKY] Hot Short of Engine Start Relay | 40-515 |
| Failure code [D1EMKA] Disconnection of Parking Interlock Relay | 40-516 |
| Failure code [D1EMKB] Ground Fault of Parking Interlock Relay | 40-517 |
| Failure code [D1EMKY] Hot Short of Parking Interlock Relay | 40-518 |
| Failure code [D1FBKB] Ground Fault of Sol. Self-Holding Relay | 40-519 |
| Failure code [D5ZHL6] Disconnection of Key SW C | 40-520 |
| Failure code [D811MC] KOMTRAX Error | 40-522 |
| Failure code [D862KA] GPS Antenna Open Circuit | 40-523 |
| Failure code [D8ALKA] Operating Lamp Open Circuit (KOMTRAX) | 40-524 |
| Failure code [D8ALKB] Operating Lamp Short Circuit (KOMTRAX) | 40-526 |
| Failure code [D8AQK4] CAN2 Discon (KOMTRAX) 2 | 40-528 |
| Failure code [D8AQKR] CAN2 Discon (KOMTRAX) | 40-529 |
| Failure code [DAF0KT] Abnormality of Non-volatile Memory (MON) | 40-530 |
| Failure code [DAF0MB] Monitor ROM Abnormality | 40-531 |
| Failure code [DAF0MC] Monitor Error | 40-532 |
| Failure code [DAF3KK] Controller Power Source Low (MON) | 40-533 |
| Failure code [DAF8KB] Camera Power Supply Short Circuit | 40-535 |
| Failure code [DAFDKB] Monitor 12V Power Output Short Circuit | 40-536 |
| Failure code [DAFGMC] GPS Module Error | 40-538 |
| Failure code [DAFLKA] Operating Lamp Open Circuit (MON) | 40-539 |
| Failure code [DAFLKB] Operating Lamp Short Circuit (MON) | 40-541 |
| Failure code [DAFQKR] CAN2 Discon (Monitor) | 40-543 |
| Failure code [DAQ0KK] Controller Power Source Low (T/M) | 40-544 |
| Failure code [DAQ0KT] Abnormality of Non-volatile Memory (T/M) | 40-546 |
| Failure code [DAQ0MC] T/M Con Error | 40-547 |
| Failure code [DAQ1KA] Disconnection of Key SW ACC (T/M) | 40-548 |
| Failure code [DAQ2KK] Solenoid Power Source Low (T/M) | 40-550 |
| Failure code [DAQ9KQ] Inconsistency of Model Selection (T/M) | 40-552 |
| Failure code [DAQLKA] Operating Lamp Open Circuit (T/M) | 40-553 |
| Failure code [DAQLKB] Operating Lamp Short Circuit (T/M) | 40-555 |
| Failure code [DAQQKR] CAN2 Discon (Transmission Con) | 40-557 |
| Failure code [DAQRKR] CAN1 Discon (Transmission Con) | 40-558 |
| Failure code [DAQRMA] Inconsistency of Option Selection (T/M) | 40-559 |
| Failure code [DAZ9KQ] A/C Model Selection Abnormality | 40-560 |
| Failure code [DAZQKR] CAN2 Discon (Aircon ECU) | 40-561 |
| Failure code [DB10KT] Abnormality of Non-volatile Memory (RHC) | 40-562 |

| | |
|--|--------|
| Failure code [DB10MC] RHC Error | 40-563 |
| Failure code [DB11KA] Disconnection of Key SW ACC (RHC) | 40-564 |
| Failure code [DB12KK] Solenoid Power Source Low (RHC)..... | 40-566 |
| Failure code [DB13KK] Controller Power Source Low (RHC) | 40-568 |
| Failure code [DB19KQ] Inconsistency of Model Selection (RHC)..... | 40-570 |
| Failure code [DB1LKA] Disconnection of System Ope. Lamp (RHC)..... | 40-571 |
| Failure code [DB1LKB] Short Circuit of System Ope. Lamp (RHC) | 40-573 |
| Failure code [DB1QKR] CAN2 Discon (Retarder Hoist Con) | 40-575 |
| Failure code [DB1QMA] Inconsistency of Option Selection (RHC)..... | 40-576 |
| Failure code [DB1RKR] CAN1 Discon (Retarder Hoist Con)..... | 40-577 |
| Failure code [DB2QKR] CAN2 Discon (Engine Con) | 40-578 |
| Failure code [DB2RKR] CAN1 Discon (Engine Con) | 40-583 |
| Failure code [DBSQKR] CAN2 Discon (PLM) | 40-588 |
| Failure code [DBSQKQ] Inconsistency of Model Selection (PLM)..... | 40-593 |
| Failure code [DD1ML4] Failure of ARAC SW | 40-594 |
| Failure code [DDAAL6] Discon of Engine Shutdown Secondary Switch | 40-596 |
| Failure code [DDTHKA] Disconnection of Fill Switch (High) | 40-598 |
| Failure code [DDTJKA] Disconnection of Fill Switch (Low) | 40-600 |
| Failure code [DDTKKA] Disconnection of Fill Switch (1st)..... | 40-602 |
| Failure code [DDTLKA] Disconnection of Fill Switch (2nd) | 40-604 |
| Failure code [DDTMKA] Disconnection of Fill Switch (3rd) | 40-606 |
| Failure code [DDTNKA] Disconnection of Fill Switch (Reverse)..... | 40-608 |
| Failure code [DF10KA] Disconnection of Shift Lever Input | 40-610 |
| Failure code [DF10KB] Ground Fault of Shift Lever Input..... | 40-613 |
| Failure code [DGF1KX] Out of Range of T/M Oil Temp. Sensor | 40-617 |
| Failure code [DGR3KB] Ground Fault of Retarder Oil Temp. S.(C)..... | 40-619 |
| Failure code [DGR3L8] Failure of Retarder Oil Temp. Sensor (C) | 40-620 |
| Failure code [DGR4KB] Ground Fault of Retarder Oil Temp. S.(F)..... | 40-621 |
| Failure code [DGR4L8] Failure of Retarder Oil Temp. Sensor (F)..... | 40-622 |
| Failure code [DGR6KB] Ground Fault of Steering Oil Temp. S..... | 40-624 |
| Failure code [DGR6L8] Failure of Steering Oil Temp. Sensor | 40-625 |
| Failure code [DGR7KX] Out of Range of Piston Pump Oil Temp. S. | 40-627 |
| Failure code [DGT1KX] Out of Range of T/C Oil Temp. Sensor | 40-629 |
| Failure code [DHP4KY] Hot Short of Suspension Press. S. (FR) | 40-631 |
| Failure code [DHP4KZ] Failure of Suspension Press. S. (FR) | 40-633 |
| Failure code [DHP5KY] Hot Short of Suspension Press. S. (FL)..... | 40-635 |
| Failure code [DHP5KZ] Failure of Suspension Press. S. (FL)..... | 40-637 |
| Failure code [DHP6KY] Hot Short of Suspension Press. S. (RR)..... | 40-639 |
| Failure code [DHP6KZ] Failure of Suspension Press. S. (RR)..... | 40-641 |
| Failure code [DHP7KY] Hot Short of Suspension Press. S. (RL)..... | 40-643 |
| Failure code [DHP7KZ] Failure of Suspension Press. S. (RL)..... | 40-645 |
| Failure code [DHQ2KX] Out of Range of Main Flow Sel. Valve S. | 40-647 |
| Failure code [DHT5KX] Out of Range of T/C Input Pressure Sensor | 40-649 |
| Failure code [DHT5L6] Failure of T/C Oil Press Sensor | 40-651 |
| Failure code [DHT8KX] Out of Range of Steering Oil Press. S..... | 40-653 |
| Failure code [DHT8ZG] Steering Oil Pressure Low..... | 40-655 |
| Failure code [DHU2KX] Out of Range of Acc. Oil Press. S. (F)..... | 40-656 |
| Failure code [DHU3KX] Out of Range of Acc. Oil Press. S. (R)..... | 40-658 |
| Failure code [DHUAKX] Out of Range of Retarder Press. S. (CR)..... | 40-660 |
| Failure code [DHUBKX] Out of Range of Retarder Press. S. (FR)..... | 40-662 |
| Failure code [DHUCKX] Out of Range of Parking Brake Press. S. | 40-664 |
| Failure code [DHUDKX] Out of Range of Emerg. Steering Press. S.1 | 40-666 |
| Failure code [DHUEKX] Out of Range of Emerg. Steering Press. S.2 | 40-668 |
| Failure code [DHUQKX] Out of Range of Retarder Press. S. (FL)..... | 40-670 |
| Failure code [DHURKX] Out of Range of Retarder Press. S. (CL)..... | 40-672 |
| Failure code [DJF1KA] Disconnection of Fuel Level Sensor..... | 40-674 |
| Failure code [DK30KX] Out of Range of Steering Angle Pot..... | 40-676 |
| Failure code [DK51L5] Failure of Retarder Lever Pot. and RVS..... | 40-678 |
| Failure code [DK52KX] Out of Range of Hoist Lever Potentio..... | 40-681 |

| | |
|---|--------|
| Failure code [DK53L8] Failure of Hoist Lever Potentio. | 40-683 |
| Failure code [DK54KX] Out of Range of Body Potentio. | 40-684 |
| Failure code [DK60KX] Out of Range of Acceleration Sensor..... | 40-686 |
| Failure code [DKH0KX] Out of Range of Inclination Angle Sensor | 40-688 |
| Failure code [DKH1KX] Out of Range of Long. Inclination Angle S. | 40-690 |
| Failure code [DLF1KA] Disconnection of T/M Input Speed Sensor..... | 40-692 |
| Failure code [DLF1LC] Failure of T/M Input Speed Sensor..... | 40-694 |
| Failure code [DLF2KA] Disconnection of T/M Inter. Speed Sensor..... | 40-696 |
| Failure code [DLF2LC] Failure of T/M Intermediate Speed Sensor..... | 40-698 |
| Failure code [DLF400] T/M Diff. Overrun Prevention Activated | 40-700 |
| Failure code [DLF4KA] Disconnection of T/M Diff. Speed Sensor | 40-701 |
| Failure code [DLF4LC] Failure of T/M Diff. Speed Sensor | 40-703 |
| Failure code [DLF6LC] Failure of Wheel Speed Sensor (FR)..... | 40-705 |
| Failure code [DLF7LC] Failure of Wheel Speed Sensor (FL) | 40-707 |
| Failure code [DLFDLC] Failure of Wheel Speed Sensor (CR)..... | 40-709 |
| Failure code [DLFELC] Failure of Wheel Speed Sensor (CL) | 40-711 |
| Failure code [DLFFLC] Failure of Wheel Speed Sensor (Front) | 40-713 |
| Failure code [DLFGLC] Failure of Wheel Speed Sensor (Center) | 40-714 |
| Failure code [DLM3KA] Disconnection of Radiator Fan Speed Sensor..... | 40-715 |
| Failure code [DLM3LC] Failure of Radiator Fan Speed Sensor..... | 40-717 |
| Failure code [DLM3MB] Radiator Fan Control Mismatch..... | 40-719 |
| Failure code [DLM4KA] Disconnection of CAC Fan Speed Sensor | 40-720 |
| Failure code [DLM4LC] Failure of CAC Fan Speed Sensor | 40-722 |
| Failure code [DLM4MB] CAC Fan Control Mismatch | 40-724 |
| Failure code [DLT3KA] Disconnection of Output Speed Sens. (Main)..... | 40-725 |
| Failure code [DLT3LC] Failure of Output Speed Sensor (Main)..... | 40-727 |
| Failure code [DPQ1KR] LIN Discon (Switch Panel) | 40-729 |
| Failure code [DPQ2KR] LIN Discon (LED Unit) | 40-732 |
| Failure code [DPQ3KR] LIN Discon (Rear View Monitor) | 40-735 |
| Failure code [DSJ0KR] CAN2 Discon (Meter Unit) | 40-738 |
| Failure code [DV00KB] Ground Fault of Buzzer Output..... | 40-739 |
| Failure code [DW2BKA] Disconnection of Main Flow Selector Sol. | 40-741 |
| Failure code [DW2BKB] Ground Fault of Main Flow Selector Sol. | 40-742 |
| Failure code [DW2BKY] Hot Short of Main Flow Selector Sol. | 40-743 |
| Failure code [DW2BL1] Release Trouble of Main Flow Sel. Valve | 40-744 |
| Failure code [DW2BLH] Malfunction of Main Flow Selector Valve | 40-745 |
| Failure code [DW4BK4] Release Trouble of Parking Brake Valve | 40-746 |
| Failure code [DW4BMA] Malfunction of Parking Brake Valve | 40-748 |
| Failure code [DW72KZ] Failure of Kick out Solenoid..... | 40-749 |
| Failure code [DW73KA] Disconnection of Hoist Selector Sol. | 40-751 |
| Failure code [DW73KB] Ground Fault of Hoist Selector Sol. | 40-753 |
| Failure code [DW73KY] Hot Short of Hoist Selector Sol. | 40-755 |
| Failure code [DW7BKB] Ground Fault of Radiator Fan Rev. Sol. | 40-757 |
| Failure code [DW7BKY] Hot Short of Radiator Fan Rev. Sol. | 40-759 |
| Failure code [DW7BKZ] Failure of Radiator Fan Rev. Sol. | 40-760 |
| Failure code [DW7LKB] Ground Fault of CAC Fan Rev. Sol. | 40-762 |
| Failure code [DW7LKY] Hot Short of CAC Fan Rev. Sol. | 40-763 |
| Failure code [DW7LKZ] Failure of CAC Fan Rev. Sol. | 40-764 |
| Failure code [DW7NKZ] Failure of Steering Pump Selector Sol. | 40-765 |
| Failure code [DWNJKZ] Failure of TCS Shut off Sol. (Front)..... | 40-767 |
| Failure code [DWNKKZ] Failure of TCS Shut off Sol. (Center)..... | 40-769 |
| Failure code [DX13KA] Disconnection of Hoist EPC Solenoid | 40-771 |
| Failure code [DX13KB] Ground Fault of Hoist EPC Solenoid..... | 40-773 |
| Failure code [DX13KY] Hot Short of Hoist EPC Solenoid | 40-775 |
| Failure code [DX16KA] Disconnection of Rad. Fan Pump EPC Sol. | 40-777 |
| Failure code [DX16KB] Ground Fault of Rad. Fan Pump EPC Sol. | 40-778 |
| Failure code [DX16KY] Hot Short of Radiator Fan Pump EPC Sol. | 40-780 |
| Failure code [DX29KA] Disconnection of CAC Fan Pump EPC Sol. | 40-781 |
| Failure code [DX29KB] Ground Fault of CAC Fan Pump EPC Sol. | 40-782 |

| | |
|--|--------|
| Failure code [DX29KY] Hot Short of CAC Fan Pump EPC Sol..... | 40-783 |
| Failure code [DX30K4] Release Trouble of Retarder EPC Valve(FL)..... | 40-784 |
| Failure code [DX30KA] Disconnection of Retarder EPC Sol. (FL)..... | 40-786 |
| Failure code [DX30KB] Ground Fault of Retarder EPC Sol. (FL)..... | 40-788 |
| Failure code [DX30KY] Hot Short of Retarder EPC Sol. (FL)..... | 40-790 |
| Failure code [DX30MA] Malfunction of Retarder EPC Valve (FL)..... | 40-792 |
| Failure code [DX31K4] Release Trouble of Retarder EPC Valve(CR)..... | 40-794 |
| Failure code [DX31KA] Disconnection of Retarder EPC Sol. (CR)..... | 40-796 |
| Failure code [DX31KB] Ground Fault of Retarder EPC Sol. (CR)..... | 40-798 |
| Failure code [DX31KY] Hot Short of Retarder EPC Sol. (CR)..... | 40-800 |
| Failure code [DX31MA] Malfunction of Retarder Valve (CR)..... | 40-802 |
| Failure code [DX32K4] Release Trouble of Retarder EPC Valve(CL)..... | 40-804 |
| Failure code [DX32KA] Disconnection of Retarder EPC Sol. (CL)..... | 40-806 |
| Failure code [DX32KB] Ground Fault of Retarder EPC Sol. (CL)..... | 40-808 |
| Failure code [DX32KY] Hot Short of Retarder EPC Sol. (CL)..... | 40-810 |
| Failure code [DX32MA] Malfunction of Retarder EPC Valve (CL)..... | 40-812 |
| Failure code [DX33K4] Release Trouble of Retarder EPC Valve (FR)..... | 40-814 |
| Failure code [DX33KA] Disconnection of Retarder EPC Sol. (FR)..... | 40-816 |
| Failure code [DX33KB] Ground Fault of Retarder EPC Sol. (FR)..... | 40-818 |
| Failure code [DX33KY] Hot Short of Retarder EPC Sol. (FR)..... | 40-820 |
| Failure code [DX33MA] Malfunction of Retarder EPC Valve (FR)..... | 40-822 |
| Failure code [DX34KA] Disconnection of Remote Cooling EPC Sol. | 40-824 |
| Failure code [DX34KB] Ground Fault of Remote Cooling EPC Sol..... | 40-825 |
| Failure code [DX34KY] Hot Short of Remote Cooling EPC Sol. | 40-827 |
| Failure code [DXH0KA] Disconnection of ECMV (Inter-Axle Diff.)..... | 40-828 |
| Failure code [DXH0KB] Ground Fault of ECMV (Inter-Axle Diff.)..... | 40-830 |
| Failure code [DXH0KY] Hot Short of ECMV (Inter-Axle Diff.)..... | 40-832 |
| Failure code [DXH1KA] Disconnection of ECMV Solenoid (Lockup)..... | 40-834 |
| Failure code [DXH1KB] Ground Fault of ECMV Solenoid (Lockup)..... | 40-836 |
| Failure code [DXH1KY] Hot Short of ECMV Solenoid (Lockup)..... | 40-838 |
| Failure code [DXH2KA] Disconnection of ECMV Solenoid (High)..... | 40-840 |
| Failure code [DXH2KB] Ground Fault of ECMV Solenoid (High)..... | 40-842 |
| Failure code [DXH2KY] Hot Short of ECMV Solenoid (High)..... | 40-844 |
| Failure code [DXH3KA] Disconnection of ECMV Solenoid (Low)..... | 40-845 |
| Failure code [DXH3KB] Ground Fault of ECMV Solenoid (Low)..... | 40-847 |
| Failure code [DXH3KY] Hot Short of ECMV Solenoid (Low)..... | 40-849 |
| Failure code [DXH4KA] Disconnection of ECMV Solenoid (1st)..... | 40-852 |
| Failure code [DXH4KB] Ground Fault of ECMV Solenoid (1st)..... | 40-854 |
| Failure code [DXH4KY] Hot Short of ECMV Solenoid (1st)..... | 40-856 |
| Failure code [DXH5KA] Disconnection of ECMV Solenoid (2nd)..... | 40-859 |
| Failure code [DXH5KB] Ground Fault of ECMV Solenoid (2nd)..... | 40-861 |
| Failure code [DXH5KY] Hot Short of ECMV Solenoid (2nd)..... | 40-863 |
| Failure code [DXH6KA] Disconnection of ECMV Solenoid (3rd)..... | 40-866 |
| Failure code [DXH6KB] Ground Fault of ECMV Solenoid (3rd)..... | 40-868 |
| Failure code [DXH6KY] Hot Short of ECMV Solenoid (3rd)..... | 40-870 |
| Failure code [DXH7KA] Disconnection of ECMV Solenoid (Reverse)..... | 40-873 |
| Failure code [DXH7KB] Ground Fault of ECMV Solenoid (Reverse)..... | 40-875 |
| Failure code [DXH7KY] Hot Short of ECMV Solenoid (Reverse)..... | 40-877 |
| Failure code [DY30MA] Malfunction 1 of Emerg. Steering Motor..... | 40-880 |
| Failure code [DY30MC] Malfunction 2 of Emerg. Steering Motor..... | 40-883 |
| Failure code [DY30ME] Emerg. Steering Long-Time Activated..... | 40-886 |
| Failure code [DY32MC] Malfunction 2 of Emerg. Steering Motor 2..... | 40-888 |
| Troubleshooting of electrical system (E-mode)..... | 40-891 |
| E-1 Engine does not start (Engine does not rotate)..... | 40-891 |
| E-2 Manual preheating system does not work..... | 40-897 |
| E-3 Automatic preheating system does not work..... | 40-900 |
| E-4 While preheating is working, preheating pilot lamp does not light up. | 40-902 |
| E-5 All of LCD unit, LED unit and meter unit on machine monitor display nothing..... | 40-904 |
| E-6 LCD unit on machine monitor displays nothing..... | 40-907 |

| | |
|---|---------|
| E-7 Backlight of LCD unit on machine monitor is abnormal (Backlight goes out or flickers) | 40-909 |
| E-8 LCD on machine monitor does not display properly | 40-911 |
| E-9 Meter unit display on machine monitor is abnormal | 40-913 |
| E-10 Night lighting lamp of meter unit on machine monitor is abnormal | 40-916 |
| E-11 LED unit lamp on machine monitor is abnormal | 40-919 |
| E-12 Night lighting lamp of switch panel on machine monitor is abnormal or switches does not operate properly | 40-921 |
| E-13 2 switches operation of switch panel on machine monitor does not function | 40-923 |
| E-14 Switch panel buzzer of machine monitor is abnormal | 40-925 |
| E-15 Rear view monitor does not light up or backlight flickers | 40-927 |
| E-16 Rear view monitor images are not displayed clearly | 40-929 |
| E-17 Rear view monitor brightness cannot be adjusted | 40-932 |
| E-18 Night lighting lamp of rear view monitor is abnormal | 40-935 |
| E-19 Rearview monitor does not display images while reverse linked display function is enabled | 40-937 |
| E-20 Guide line on rear view monitor is not displayed while guide line is set | 40-940 |
| E-21 Some items of gauges and caution lamps on machine monitor are not displayed properly | 40-942 |
| E-22 Fuel level gauge does not indicate correct level | 40-943 |
| E-23 Seat belt caution lamp indication is abnormal | 40-945 |
| E-24 Machine monitor cannot be operated when starting switch is in OFF position | 40-946 |
| E-25 Alarm buzzer does not sound | 40-947 |
| E-26 Alarm buzzer does not stop sounding | 40-949 |
| E-27 Engine mode selector function does not operate properly | 40-951 |
| E-28 AISS function does not operate properly | 40-952 |
| E-29 Hoist lever does not operate properly | 40-953 |
| E-30 Turn signal lamp and winker lamp (hazard lamp) do not operate properly | 40-955 |
| E-31 None of headlamp, clearance lamp, and tail lamp lights | 40-959 |
| E-32 Clearance lamp does not light up | 40-961 |
| E-33 Tail lamp does not light up | 40-963 |
| E-34 Low beam of headlamp does not light up | 40-965 |
| E-35 High beam of headlamp does not light up | 40-967 |
| E-36 Neither Low beam nor High beam of headlamp lights up | 40-969 |
| E-37 High beams do not light up while passing switch is operated | 40-971 |
| E-38 KOMTRAX does not operate properly | 40-973 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | 40-974 |
| Information described in troubleshooting table (H-mode) | 40-974 |
| System chart of hydraulic and mechanical systems | 40-975 |
| Failure mode and cause table | 40-977 |
| H-1 Machine does not start | 40-981 |
| H-2 Machine does not travel smoothly (engine hunts) | 40-983 |
| H-3 Lockup clutch is not disengaged | 40-984 |
| H-4 Abnormally large shocks result from starting of machine and gear shifting | 40-985 |
| H-5 Machine does not upshift | 40-986 |
| H-6 Machine lacks travel speed or power during travel in lockup drive mode through all gear speeds | 40-988 |
| H-7 Machine lacks travel speed or power during travel in torque converter drive mode | 40-989 |
| H-8 Machine lacks travel speed or power during travel in specific gear speed | 40-990 |
| H-9 Machine starts or gear speed shifts with long time lag | 40-991 |
| H-10 Torque converter oil temperature is high | 40-993 |
| H-11 Torque converter oil pressure is low | 40-994 |
| H-12 Front brake does not work sufficiently | 40-995 |
| H-13 Center brake does not work sufficiently | 40-996 |
| H-14 Steering wheel is heavy to turn | 40-997 |
| H-15 Steering wheel does not move | 40-998 |
| H-16 Steering wheel swings | 40-999 |
| H-17 Dump body raise speed or power is slow | 40-1000 |

| | |
|---|---------|
| H-18 Dump body does not move | 40-1002 |
| H-19 Hydraulic drift of dump body is large | 40-1003 |
| H-20 Radiator fan speed is abnormal (high, low, or stationary) | 40-1004 |
| H-21 Aftercooler fan speed is abnormal (high, low, or stationary) | 40-1005 |
| H-22 Unusual noise is heard from around radiator fan | 40-1006 |
| H-23 Unusual noise is heard from around aftercooler fan | 40-1007 |
| Troubleshooting of engine (S-mode)..... | 40-1008 |
| Information mentioned in troubleshooting table (S mode)..... | 40-1008 |
| S-1 When starting switch is turned to START position, engine is not cranked..... | 40-1009 |
| S-2 The engine cranks but exhaust smoke does not come out | 40-1010 |
| S-3 Fuel is injected but engine does not start (incomplete combustion, engine seems to start but does not) | 40-1011 |
| S-4 Engine startability is poor | 40-1012 |
| S-5 Engine does not pick-up smoothly | 40-1014 |
| S-6 Engine stops during operation | 40-1016 |
| S-7 Engine runs rough or is unstable | 40-1018 |
| S-8 Engine lacks power | 40-1019 |
| S-9 KDPF gets clogged in a short time | 40-1021 |
| S-10 Engine oil consumption is excessive | 40-1023 |
| S-11 Engine oil becomes contaminated early | 40-1024 |
| S-12 Fuel consumption is excessive | 40-1025 |
| S-13 Oil is in coolant (or coolant spurts or coolant level goes down)..... | 40-1026 |
| S-14 Oil pressure drops | 40-1027 |
| S-15 Fuel mixes into engine oil | 40-1028 |
| S-16 Water mixes into engine oil (milky) | 40-1029 |
| S-17 Coolant temperature rises too high (overheating) | 40-1030 |
| S-18 Unusual noise is heard | 40-1031 |
| S-19 Vibration is excessive | 40-1032 |
| S-20 Air cannot be bled from fuel circuit | 40-1033 |
| S-21 Active regeneration is executed frequently | 40-1034 |
| S-22 Active regeneration takes a long time | 40-1035 |
| 50 Disassembly and assembly | 50-1 |
| Table of contents | 50-2 |
| Related information on disassembly and assembly | 50-4 |
| How to read this manual | 50-4 |
| Coating materials list | 50-6 |
| Special tools list | 50-10 |
| Sketches of special tools | 50-18 |
| Engine and cooling system | 50-39 |
| Removal and installation of supply pump assembly | 50-39 |
| Removal and installation of injector assembly | 50-42 |
| Removal and installation of cylinder head assembly | 50-57 |
| Removal and installation of radiator assembly | 50-76 |
| Removal and installation of cooling fan and fan motor assembly for radiator | 50-81 |
| Removal and installation of aftercooler assembly | 50-86 |
| Removal and installation of cooling fan and fan motor assembly for aftercooler | 50-89 |
| Removal and installation of engine assembly | 50-91 |
| Removal and installation of engine front oil seal | 50-99 |
| Removal and installation of engine rear oil seal | 50-101 |
| Removal and installation of output shaft assembly | 50-107 |
| Disassembly and assembly of output shaft assembly | 50-111 |
| Removal and installation of KDPF assembly | 50-114 |
| Disassembly and assembly of KDPF assembly | 50-117 |
| Removal and installation of KCCV assembly | 50-126 |
| Removal and installation of air cleaner assembly | 50-128 |
| Power train..... | 50-130 |
| Removal and installation of transmission and front differential assembly | 50-130 |
| Disconnection and connection of front differential assembly and transmission assembly | 50-142 |

| | |
|--|--------|
| Disassembly and assembly of front differential assembly | 50-144 |
| Disassembly and assembly of torque converter assembly | 50-159 |
| Disassembly and assembly of transmission assembly | 50-166 |
| Removal and installation of center differential assembly | 50-206 |
| Disassembly and assembly of center differential assembly | 50-210 |
| Removal and installation of rear differential assembly | 50-224 |
| Disassembly and assembly of rear differential assembly | 50-226 |
| Removal and installation of front final drive and brake assembly | 50-236 |
| Disassembly and assembly of front final drive and brake assembly | 50-238 |
| Removal and installation of center final drive and brake assembly | 50-250 |
| Disassembly and assembly of center final drive and brake assembly | 50-252 |
| Removal and installation of rear final drive assembly | 50-262 |
| Disassembly and assembly of rear final drive assembly | 50-263 |
| Removal and installation of center axle assembly | 50-268 |
| Removal and installation of rear axle assembly | 50-271 |
| Steering system | 50-274 |
| Disassembly and assembly of steering cylinder assembly | 50-274 |
| Disassembly and assembly of steering valve | 50-280 |
| Undercarriage and frame | 50-290 |
| Removal and installation of front suspension cylinder assembly | 50-290 |
| Removal and installation of rear suspension cylinder assembly | 50-291 |
| Disassembly and assembly of suspension cylinder assembly | 50-292 |
| Removal and installation of equalizer bar assembly | 50-294 |
| Removal and installation of front wheel assembly | 50-296 |
| Removal and installation of rear (front side) wheel assembly | 50-302 |
| Removal and installation of rear (back side) wheel assembly | 50-303 |
| Removal and installation of hitch frame assembly | 50-304 |
| Disassembly and assembly of hitch frame assembly | 50-311 |
| Hydraulic system | 50-316 |
| Removal and installation of flow amplifier valve assembly | 50-316 |
| Removal and installation of hoist valve assembly | 50-319 |
| Disassembly and assembly of hoist valve assembly | 50-323 |
| Disassembly and assembly of hoist cylinder assembly | 50-327 |
| Body | 50-333 |
| Removal and installation of dump body assembly | 50-333 |
| Cab and its attachments | 50-336 |
| Removal and installation of operator's cab assembly | 50-336 |
| Removal and installation of operator's cab glass (adhered glass) | 50-340 |
| Removal and installation of operator's seat assembly | 50-346 |
| Removal and installation of seat belt | 50-348 |
| Electrical system | 50-349 |
| Removal and installation of machine monitor assembly | 50-349 |
| Removal and installation of engine controller assembly | 50-351 |
| Removal and installation of retarder and hoist controller assembly | 50-352 |
| Removal and installation of transmission controller assembly | 50-353 |
| Removal and installation of mass air flow and temperature sensor | 50-354 |
| Removal and installation of KOMTRAX terminal assembly | 50-355 |
| Air conditioner unit | 50-356 |
| 60 Maintenance standard | 60-1 |
| Table of contents | 60-2 |
| Engine and cooling system | 60-3 |
| Engine mount | 60-3 |
| Output shaft | 60-4 |
| Radiator fan pump | 60-5 |
| Radiator fan motor | 60-7 |
| Aftercooler fan motor | 60-8 |
| Power train | 60-10 |
| Drive shaft | 60-10 |
| Torque converter and transmission mount | 60-12 |

| | |
|---|-------|
| Torque converter | 60-13 |
| Transmission | 60-16 |
| Transmission control valve | 60-24 |
| Forward and reverse clutch ECMV and gear speed clutch ECMV | 60-25 |
| Lockup clutch ECMV | 60-26 |
| Differential lock clutch ECMV | 60-27 |
| Main relief valve, torque converter relief valve, and main flow selector valve | 60-28 |
| Differential | 60-30 |
| Axle | 60-33 |
| Final drive | 60-35 |
| Steering system | 60-40 |
| Steering column | 60-40 |
| Steering cylinder | 60-41 |
| Emergency steering pump | 60-42 |
| Brake system | 60-43 |
| Slack adjuster | 60-43 |
| Brake | 60-45 |
| Parking brake | 60-48 |
| Undercarriage and frame | 60-50 |
| Suspension | 60-50 |
| Suspension cylinder | 60-54 |
| Oscillation hitch | 60-56 |
| Hydraulic system | 60-58 |
| Steering and hoist pump | 60-58 |
| Pump for driving torque converter, transmission, aftercooler fan, and center brake cooling motors | 60-61 |
| Center brake cooling pump | 60-63 |
| Brake charge pump | 60-64 |
| Center brake cooling remote pump | 60-65 |
| Center brake cooling remote motor | 60-66 |
| Hoist valve | 60-68 |
| Hoist cylinder | 60-70 |
| 80 Appendix | 80-1 |
| Table of contents | 80-2 |
| Air conditioner components | 80-3 |
| Precautions for refrigerant | 80-3 |
| Air conditioner component | 80-4 |
| Configuration and function of refrigeration cycle | 80-7 |
| Outline of refrigeration cycle | 80-8 |
| Air conditioner unit | 80-10 |
| Dual pressure switch | 80-15 |
| Air conditioner controller | 80-16 |
| Compressor | 80-17 |
| Condenser | 80-18 |
| Receiver drier | 80-19 |
| Outer temperature sensor (outside air temperature sensor) | 80-20 |
| Procedure for testing and troubleshooting | 80-21 |
| Circuit diagram and arrangement of connector pins | 80-23 |
| System diagram | 80-25 |
| Input and output signals of the air conditioner controller | 80-26 |
| Parts and connectors layout | 80-28 |
| Testing air leakage (duct) | 80-33 |
| Testing with self-diagnosis function | 80-36 |
| How to open the electrical system abnormality record screen in service mode of the machine monitor | 80-37 |
| Testing vent (mode) changeover | 80-39 |
| Testing FRESH/RECIRC air changeover | 80-40 |
| Testing (dual) pressure switch for refrigerant | 80-41 |
| Testing relays | 80-43 |

00 Index and foreword


Index

| | |
|--|-------|
| Troubleshooting chart 1 | 80-45 |
| Troubleshooting chart 2 | 80-46 |
| Information in troubleshooting table | 80-49 |
| Failure code list related to air conditioner | 80-50 |
| Failure code [879AKA] A/C Inner sensor Open Circuit | 80-51 |
| Failure code [879AKB] A/C Inner sensor Short Circuit | 80-52 |
| Failure code [879BKA] A/C Outer sensor Open Circuit | 80-53 |
| Failure code [879BKB] A/C Outer sensor Short Circuit | 80-55 |
| Failure code [879CKA] Ventilating sensor Open Circuit | 80-57 |
| Failure code [879CKB] Ventilating sensor Short Circuit | 80-58 |
| Failure code [879EMC] Ventilating Damper Abnormality | 80-59 |
| Failure code [879FMC] Air Mix Damper Abnormality | 80-60 |
| Failure code [879GKX] Refrigerant Abnormality | 80-61 |
| A-1 Troubleshooting for power supply system (Air conditioner does not operate) | 80-63 |
| A-2 Troubleshooting for compressor and refrigerant system (Air is not cooled) | 80-65 |
| A-3 Troubleshooting for blower motor system (No air comes out or air flow is abnormal) | 80-68 |
| A-4 Troubleshooting for FRESH/RECIRC air changeover | 80-70 |
| Troubleshooting with gauge pressure | 80-72 |
| Connection of service tool | 80-75 |
| Precautions for disconnecting and connecting air conditioner piping | 80-77 |
| Handling of compressor oil | 80-79 |
| 90 Diagrams and drawings | 90-1 |
| Table of contents | 90-2 |
| Hydraulic circuit diagram | 90-3 |
| Symbols in hydraulic circuit diagram | 90-3 |
| Power train hydraulic circuit diagram | 90-7 |
| Hydraulic circuit diagram | 90-9 |
| Electric circuit diagram | 90-11 |
| Symbols in electric circuit diagram | 90-11 |
| Inside cab electric circuit diagram | 90-15 |
| Outside cab electric circuit diagram | 90-29 |
| Circuit diagram related to payload meter | 90-43 |
| Index | 1 |


Foreword, safety and general information (ALL-0370-001-A-00-A)

Important safety notice (ALL-1120-012-A-01-A)

(Rev. 2012/10)

- Appropriate servicing and repair are extremely important to ensure safe operation of the machine. The shop manual describes the effective and safe servicing and repair methods recommended by Komatsu. Some of these methods require the use of the special tools designed by Komatsu for the specific purpose.
- The symbol mark  is used for such matters that require special cautions during the work. The work indicated by the caution mark should be performed according to the instructions with special attention to the cautions. Should hazardous situation occur or be anticipated during such work, be sure to keep safe first and take every necessary measure.

General precautions

 Inappropriate handling causes an extreme danger. Read and understand what is described in the operation and maintenance manual before operating the machine. Read and understand what is described in this manual before starting the work.

- Before performing any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the operation and maintenance manual.
- Locate a place in the repair workshop to keep the tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- When performing any work, always wear the safety shoes and helmet. Do not wear loose work cloths, or clothes with buttons missing.
 1. Always wear the protective eyeglasses when hitting parts with a hammer.
 2. Always wear the protective eyeglasses when grinding parts with a grinder, etc.
- When performing any work with two or more workers, always agree on the working procedure before starting. While working, always keep conversations of the work between your fellow workers and your self on any step of the work. During the work, hang the warning tag of "UNDER WORKING" in the operator's compartment.
- Only qualified workers must perform the work and operation which require license or qualification.
- Keep the tools in good condition. And learn the correct way to use the tools, and use the proper ones among them. Before starting the work, thoroughly check the tools, lift truck, service vehicle, etc.
- If welding repairs is required, always have a trained and experienced welder with good

knowledge of welding perform the work. When performing welding work, always wear welding gloves, apron, shielding goggles, cap, etc.

- Before starting work, warm up your body thoroughly to start work under good condition.
- Avoid continuing work for long hours and take rests with proper intervals to keep your body in good condition. Take a rest in a specified safe place.

Safety points

| | |
|-----------|--|
| 1 | Good arrangement |
| 2 | Correct work clothes |
| 3 | Observance of work standard |
| 4 | Practice of making and checking signals |
| 5 | Prohibition of operation and handling by unlicensed workers |
| 6 | Safety check before starting work |
| 7 | Wearing protective goggles (for cleaning or grinding work) |
| 8 | Wearing shielding goggles and protectors (for welding work) |
| 9 | Good physical condition and preparation |
| 10 | Precautions against work which you are not used to or you are used to too much |

Preparation

- Before adding oil or making any repairs, place the machine on a firm and level ground, and apply the parking brake and chock the wheels or tracks to prevent the machine from moving.
- Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If it is not possible to lower the equipment to the ground, insert the lock pin or use blocks to prevent the work equipment from falling. And be sure to lock all the work equipment control levers and hang a warning tag on them.
- When performing the disassembling or assembling work, support the machine securely with blocks, jacks, or stands before starting the work.
- Remove all of mud and oil from the steps or other places used to get on and off the machine completely. Always use the handrails, ladders of

00 Index and foreword**Foreword, safety and general information**

steps when getting on or off the machine. Never jump on or off the machine. When the scaffold is not provided, use steps or stepladder to secure your footing.

Precautions during work

- For the machine equipped with the battery disconnect switch, check that the system operating lamp is turned off before starting the work. Then, turn the battery disconnect switch to OFF (○) position and remove the switch key. For the machine not equipped with the battery disconnect switch, remove the cable from the battery before starting the work. Be sure to remove the negative end (-) of the battery cable first.
- Release the remaining pressure in the circuits completely before the work when the parts in the circuits of oil, fuel, coolant and air are disconnected or removed. When the cap of the oil filter, drain plug or oil pressure pickup plug is removed, loose them slowly to prevent the oil from spurting out.
- When removing or installing the checking plug or the piping in the fuel circuit, wait 30 seconds or longer after the engine is shut down and start the work after the remaining pressure is released from the fuel circuit.
- Immediately after the engine is shut down, the coolant and oil in the circuits are hot. Be careful not to get scalded by the hot coolant and oil. Start the work after checking that the coolant and oil are cooled down sufficiently.
- Start the work after the engine is shut down. Be sure to shut down the engine when working on or around the rotating parts in particular. When checking the machine without shutting down the engine (measuring oil pressure, rotational speed, oil or coolant temperature), take extreme care not to get caught in the rotating parts or the working equipment.
- The hoist or crane must be used to sling the components weighing 25 kg or heavier. Check the slings (wire rope, nylon sling, chain and hook) for damage before the work. Use the slings with ample capacity and install them to the proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- When removing the part which is under internal pressure or reaction force of the spring, always leave 2 bolts in diagonal positions. Loosen those 2 bolts gradually and alternately and release the pressure, then, remove the part.
- When removing the part, be careful not to break or damage the electrical wiring. The damaged wiring may cause electrical fires.
- When removing piping, prevent the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it off immediately. Fuel or oil on the floor can cause you to slip and can even cause fires.
- As a general rule, do not use gasoline to wash parts. Do not use gasoline to clean the electrical parts, in particular.
- Reinstall the parts removed to their original places. Replace the damaged parts and the parts which must not be used with new ones. When installing the hoses and wiring harnesses, be careful that they are not damaged by contacting with other parts when the machine is operated.
- When connecting the high pressure hoses and tubes, make sure that they are not twisted. The damaged high pressure hoses and tubes are very dangerous when they are installed. So, be extremely careful when connecting the high pressure pipings. In addition, check that their connections are correct.
- When assembling or installing the parts, be sure to tighten the bolts to the specified torque. When installing the protective parts such as guards, or the parts which vibrate violently or rotate at high speeds, be sure to check that they are installed correctly.
- When aligning 2 holes, never insert your fingers or hand into the holes. Align the holes with care so that your fingers are not caught in the hole.
- When measuring hydraulic pressure, check that the measuring tools are correctly installed.
- Pay attention to safety when removing and installing the tracks of the track type machines. When removing the track, it separates suddenly. The workers should not stand at either end of the track.
- If the engine is operated for a long time in a closed place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate the place well.

Precautions for slinging work and making signals

- Only one appointed worker must make signals and co-worker must communicate with each other frequently. The appointed signaler must make specified signals clearly at the place where the signaler is well seen from the operator's seat and where the signaler can see the working condition easily. The signaler must always stand in front of the load and guide the operator safely.
 1. Do not stand under the load.
 2. Do not step on the load.
- Check the slings before starting sling work.