

Shop Manual

BULLDOZER

GALEO

D65EX -15E0

D65PX -15E0

D65WX-15E0

SERIAL NUMBERS	D65EX-	69001	
	D65PX-	69001	and up
	D65WX-	69001	

KOMATSU

BULLDOZER

D65EX-15E0

D65PX-15E0

D65WX-15E0

Machine model	Serial number
---------------	---------------

D65EX-15E0	69001 and up
D65PX-15E0	69001 and up
D65WX-15E0	69001 and up

00 Index and foreword

Index

Organization list of the shop manual.....	2
Table of contents	4

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00046-02
00 Index and foreword	SEN00047-02
Index	SEN00055-02 ●
Foreword and general information	SEN00056-01
01 Specification	SEN00048-01
Specification and technical data	SEN00057-01
10 Structure, function and maintenance standard	SEN00049-01
Engine and cooling system	SEN00281-01
Power train, Part 1	SEN00282-01
Power train, Part 2	SEN00283-01
Undercarriage and frame	SEN00284-01
Hydraulic system, Part 1	SEN00285-01
Hydraulic system, Part 2	SEN00286-01
Hydraulic system, Part 3	SEN00287-01
Work equipment	SEN00288-00
Cab and its attachments	SEN00289-00
Electrical system	SEN00290-01
20 Standard value table	SEN00050-00
Standard service value table	SEN00584-00
30 Testing and adjusting	SEN00051-00
Testing and adjusting, Part 1	SEN00585-00
Testing and adjusting, Part 2	SEN00586-00
Testing and adjusting, Part 3	SEN00587-00

40 Troubleshooting	SEN00052-00
General information on troubleshooting	SEN00588-00
Troubleshooting by failure code (Display of code), Part 1	SEN00589-00
Troubleshooting by failure code (Display of code), Part 2	SEN00590-00
Troubleshooting by failure code (Display of code), Part 3	SEN00591-00
Troubleshooting by failure code (Display of code), Part 4	SEN00592-00
Troubleshooting of electrical system (E-mode)	SEN00593-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00594-00
Troubleshooting of engine (S-mode)	SEN00595-00
50 Disassembly and assembly	SEN00053-00
General information on disassembly and assembly	SEN00944-00 ○
Engine and cooling system, Part 1	SEN00945-00 ○
Engine and cooling system, Part 2	SEN00946-00 ○
Power train, Part 1	SEN00947-00 ○
Power train, Part 2	SEN00948-00 ○
Undercarriage and frame, Part 1	SEN00949-00 ○
Undercarrigage and frame, Part 2	SEN00950-00 ○
Hydraulic system	SEN00951-00 ○
Work equipment	SEN00952-00 ○
Cab and its attachments	SEN00953-00 ○
Electrical system	SEN00954-00 ○
90 Diagrams and drawings	SEN00054-01
Hydraulic diagrams and drawings	SEN00058-00
Electrical diagrams and drawings	SEN00059-01

Table of contents

00 Index and foreword	
Index	SEN00055-02
Organization list of the shop manual	2
Table of contents.....	4
Foreword and general information	SEN00056-01
Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard	8
Handling electric equipment and hydraulic component	10
How to read electric wire code.....	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table	24
Conversion table.....	28
01 Specification	
Specification and technical data	SEN00057-01
Specification and technical data	2
Specification dimensions	2
Specifications	3
Weight table	8
Table of fuel, coolant and lubricants	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00281-01
Engine and cooling system	2
Cooling system	2
Cooling fan pump.....	4
Cooling fan motor	12
Power train, Part 1	SEN00282-01
Power train, Part 1.....	2
Power train.....	2
HSS system	4
General view of power train unit	6
Power train hydraulic piping drawing	8
Transmission, steering and brake control	10
Damper and universal joint	12
Torque converter and PTO.....	15
Transmission.....	20
Transmission clutch ECMV	32
Main relief valve and torque converter relief valve	38
Lubrication relief valve	40
Power train, Part 2	SEN00283-01
Power train, Part 2.....	2
Bevel gear shaft, HSS and brake	2
Brake valve	18
Final drive	24

Undercarriage and frame	SEN00284-01	
Undercarriage and frame		2
Main frame		2
Suspension		4
Track frame and idler cushion		10
Idler		14
Track roller		16
Carrier roller		17
Sprocket		18
Track shoe		20
Hydraulic system, Part 1	SEN00285-01	
Hydraulic system, Part 1		2
Work equipment hydraulic piping diagram		2
Work equipment control		4
Hydraulic tank and filter		6
Scavenging pump		8
Power train and steering lubrication pump		9
HSS pump		10
HSS motor		28
Hydraulic system, Part 2	SEN00286-01	
Hydraulic system, Part 2		2
Control valve		2
Self pressure reducing valve		36
Hydraulic system, Part 3	SEN00287-01	
Hydraulic system, Part 3		2
PPC valve (blade lift, blade tilt)		2
PPC valve (ripper)		8
Electric lever (steering)		12
Quick drop valve		16
PPC lock valve		18
Accumulator		19
Work equipment	SEN00288-00	
Work equipment		2
Blade		2
Cutting edge and end bit		6
Ripper		7
Hydraulic cylinder		8
Piston valve		11
Cab and its attachments	SEN00289-00	
Cab and its attachments		2
Cab mount		2
Cab		3
Air conditioner		5
Electrical system	SEN00290-01	
Electrical system		2
Monitor system		2
Monitor panel		4
Engine control		9
Engine control system		10
Cooling system control system		12
System components		14
Palm command control system		23
KOMTRAX terminal system		25
KOMTRAX terminal		26
Sensor		27

20 Standard value table	
Standard service value table	SEN00584-00
Standard service value table for engine	2
Standard service value table for chassis	4
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN00585-00
Testing and adjusting, Part 1	3
Tools for testing, adjusting, and troubleshooting	3
Measuring engine speed	5
Measuring intake air pressure (boost pressure)	7
Measuring exhaust temperature	9
Measuring exhaust gas color	11
Adjusting valve clearance	12
Measuring compression pressure	15
Measuring blow-by pressure	19
Measuring engine oil pressure	20
Handling of fuel system devices	21
Releasing residual pressure from fuel system	21
Testing fuel pressure	22
Testing fuel return and leak amount	26
Bleeding air from fuel circuit	28
Testing fuel circuit for leakage	29
Handling of reduced cylinder mode operation	30
Testing and adjusting air conditioner compressor belt tension	31
Adjusting fuel control dial and decelerator pedal	32
Measuring power train oil pressure	34
Adjusting transmission speed sensor (replacement procedure)	38
Simple method to test brake performance	39
Adjusting brake pedal	40
Adjusting parking brake lever	42
Emergency escape method when power train has trouble	43
Adjusting clearance of idler	46
Inspecting wear of sprocket	47
Testing and adjusting track shoe tension	47
Testing and adjusting work equipment and HSS oil pressure	48
Testing control circuit basic pressure	51
Measuring PPC valve output pressure	52
Adjusting play of work equipment PPC valve	54
Measuring internal leakage of work equipment cylinder	55
Bleeding air from work equipment cylinder	55
Releasing residual pressure in work equipment cylinder	56
Checking parts which caused hydraulic drift of blade or ripper	57
Adjusting work equipment lock lever	58
Measuring fan motor speed	59
Measuring fan pump circuit pressure	60
Bleeding air from fan pump	61
Adjusting straight tiltdozer	62
Testing and adjusting operator cab	64
Testing and adjusting, Part 2	SEN00586-00
Testing and adjusting, Part 2	2
Special functions of monitor panel (EMMS)	2
Testing and adjusting, Part 3	SEN00587-00
Testing and adjusting, Part 3	2
Handling of voltage circuit of engine controller	2
Adjustment method when controller has been replaced	2
Preparation work for troubleshooting for electric system	4

Inspection procedure of diode	9
Pm-Clinic service.....	10
How to start operation of KOMTRAX terminal	20
Lamp display of KOMTRAX terminal.....	24
40 Troubleshooting	
General information on troubleshooting	SEN00588-00
Points to remember when troubleshooting	2
How to proceed troubleshooting	3
Checks before troubleshooting.....	4
Classification and procedures of troubleshooting.....	5
How to distinguish wire code	8
Wiring table for connector pin numbers.....	12
T-adapter box and T-adapter table	35
Troubleshooting by failure code (Display of code), Part 1	SEN00589-00
Troubleshooting by failure code (Display of code), Part 1.....	3
Failure code table	3
Before troubleshooting by failure codes	10
Contents of troubleshooting table	12
Failure code [1500L0] Transmission clutch: Dual engagement.....	14
Failure code [15SAL1] Forward clutch: Fill signal is ON when command current is OFF	16
Failure code [15SALH] Forward clutch: Fill signal is OFF when command current is ON	18
Failure code [15SBL1] Reverse clutch: Fill signal is ON when command current is OFF.....	20
Failure code [15SBLH] Reverse clutch: Fill signal is OFF when command current is ON	22
Failure code [15SEL1] 1st clutch: Fill signal is ON when command current is OFF	24
Failure code [15SELH] 1st clutch: Fill signal is OFF when command current is ON.....	25
Failure code [15SFL1] 2nd clutch: Fill signal is ON when command current is OFF	26
Failure code [15SFLH] 2nd clutch: Fill signal is OFF when command current is ON.....	28
Failure code [15SGL1] 3rd clutch: Fill signal is ON when command current is OFF.....	30
Failure code [15SGLH] 3rd clutch: Fill signal is OFF when command current is ON	32
Failure code [AB00MA] Alternator: Malfunction.....	34
Failure code [B@BAZG] Engine oil: Oil pressure too low	34
Failure code [B@BCNS] Radiator coolant: Overheat.....	35
Failure code [B@CENS] Power train oil: Overheat	35
Failure code [B@HANS] Hydraulic oil: Overheat	36
Failure code [CA111] Engine controller: Abnormality in controller.....	37
Failure code [CA115] Abnormal engine Ne and Bkup speed sensors: Abnormal speed sensor signal.....	37
Failure code [CA122] Charge pressure sensor tool high: Excessively high voltage detected.	38
Failure code [CA123] Charge pressure sensor too low: Excessively low voltage detected	40
Failure code [CA131] Decelerator pedal sensor tool high: Excessively high voltage detected	42
Failure code [CA132] Decelerator pedal sensor too low: Excessively low voltage detected...	44
Failure code [CA144] Coolant temperature sensor too high: Excessively high voltage detected	46
Failure code [CA145] Coolant temperature sensor too low: Excessively low voltage detected	48
Failure code [CA153] Charge temperature sensor too high: Excessively high voltage detected	50
Failure code [CA154] Charge temperature sensor too low: Excessively low voltage detected	52
Failure code [CA155] Charge temperature too high and engine speed derated: Exceeded upper control limit of temperature	54
Failure code [CA187] Sensor power source 2 too low: Excessively low voltage detected	56
Failure code [CA221] Atmospheric pressure sensor too high: Excessivley high voltage detected	58
Failure code [CA222] Atmospheric pressure sensor too low: Excessively low voltage detected	60
Failure code [CA227] Sensor power source No. 2 too high: Excessively high voltage detected	62

Failure code [CA234] Engine over speed: Excessively high speed.....	64
Failure code [CA238] Abnormal power source for Ne speed sensor: Excessively low voltage detected.....	65
Failure code [CA271] IMV/PCV1 short circuit: Short circuit.....	66
Failure code [CA272] IMV/PCV1 disconnection: Disconnection.....	68
Failure code [CA281] Abnormal supply pump pressure balance: Abnormal pressure feed of fuel.....	70
Troubleshooting by failure code (Display of code), Part 2	SEN00590-00
Troubleshooting by failure code (Display of code), Part 2.....	4
Failure code [CA322] Injector No. 1 system disconnection or short circuit: disconnection, short circuit.....	4
Failure code [CA323] Injector No. 5 system disconnection or short circuit: disconnection, short circuit.....	6
Failure code [CA324] Injector No. 3 system disconnection or short circuit: disconnection, short circuit.....	8
Failure code [CA325] Injector No. 6 system disconnection or short circuit: disconnection, short circuit.....	10
Failure code [CA331] Injector No. 2 system disconnection or short circuit: disconnection, short circuit.....	12
Failure code [CA332] Injector No. 4 system disconnection or short circuit: disconnection, short circuit.....	14
Failure code [CA342] Engine controller data matching error: matching error.....	16
Failure code [CA352] Sensor power source 1 too low: Excessively low voltage detected.....	18
Failure code [CA386] Sensor power source 1 too high: Excessively high voltage detected ...	20
Failure code [CA428] Water detection sensor too high: Excessively high voltage detected ...	22
Failure code [CA429] Water detection sensor too low: Excessively low voltage detected.....	24
Failure code [CA435] Abnormal engine oil pressure switch: Abnormal signal circuit.....	26
Failure code [CA441] Power source voltage too low: Excessively low voltage detected.....	28
Failure code [CA442] Power source voltage too high: Excessively high voltage has occurred in the controller power source circuit.....	30
Failure code [CA449] Common rail pressure too high (2): Excessively high pressure trouble occurred.....	32
Failure code [CA451] Common rail pressure sensor too high: Excessively high voltage detected.....	36
Failure code [CA452] Common rail pressure sensor too low: Excessively low voltage detected.....	38
Failure code [CA488] Charge temperature too high and torque derated: Exceeded upper control limit of temperature.....	40
Failure code [CA553] Common rail pressure too high (1): Excessively high pressure detected.....	41
Failure code [CA559] Loss of pressure feed from supply pump (1): Loss of pressure feed detected.....	42
Failure code [CA689] Abnormal engine Ne speed sensor: Abnormal signal.....	44
Failure code [CA731] Abnormal engine Bkup speed sensor phase: Abnormal phase.....	46
Failure code [CA757] Loss of all engine controller data: Loss of all data.....	48
Failure code [CA778] Abnormal engine Bkup speed sensor: Abnormal Bkup signal.....	50
Failure code [CA1633] Abnormal KOMNET: Abnormal communication.....	52
Failure code [CA2185] Decelerator pedal sensor power source too high: Excessively high voltage detected.....	54
Failure code [CA2186] Decelerator pedal sensor power source too low: Excessively low voltage detected.....	55
Failure code [CA2249] Loss of pressure feed from supply pump (2): Loss of pressure feed detected.....	56
Failure code [CA2265] Electric lift pump disconnection: Disconnection.....	58
Failure code [CA2266] Electric lift pump short circuit: Short circuit.....	60
Failure code [CA2311] Abnormal IMV solenoid: Abnormal resistance.....	62
Failure code [CA2555] Air intake heater relay disconnection: Disconnection.....	64
Failure code [CA2556] Air intake heater relay short circuit: Short circuit.....	66

Troubleshooting by failure code (Display of code), Part 3	SEN00591-00
Troubleshooting by failure code (Display of code), Part 3	4
Failure code [D110KA] Battery relay: Short circuit	4
Failure code [D110KB] Battery relay: Disconnection	6
Failure code [D130KA] Neutral safety relay: Disconnection	8
Failure code [D130KB] Neutral safety relay: Short circuit	10
Failure code [D161KA] Back-up alarm relay: Disconnection	12
Failure code [D161KB] Back-up alarm relay: Short circuit	14
Failure code [DAFRKR] Monitor panel CAN communication: Defective communication	16
Failure code [DAQ0KT] [DB30KT] Steering and transmission controller: Abnormality in controller	18
Failure code [DAQ1KK] [DB31KK] Main power source of steering and transmission controller: Power source voltage drop and input	20
Failure code [DAQ2KK] [DB32KK] Load power source of steering and transmission controller: Power source voltage drop and input	22
Failure code [DAQ5KK] [DB35KK] Steering and transmission controller sensor 5 V power source: Power source voltage drop and input	24
Failure code [DAQ6KK] [DB36KK] Steering and transmission controller sensor 24 V power source: Power source voltage drop and input	26
Failure code [DAQ9KQ] [DB39KQ] Steering and transmission controller model selection: Inconsistency in model select signal	28
Failure code [DB2RKR] Steering and transmission controller CAN communication: Defective communication	30
Failure code [DB30KT] [DAQ0KT] Steering and transmission controller: Abnormality in controller	32
Failure code [DB31KK] [DAQ1KK] Main power source of steering and transmission controller: Power source voltage drop and input	32
Failure code [DAB32KK] [DAQ2KK] Load power source of steering and transmission controller: Power source voltage drop and input	32
Failure code [DB35KK] [DAQ5KK] Steering and transmission controller sensor 5 V power source: Power source voltage drop and input	32
Failure code [DB36KK] [DAQ6KK] Steering and transmission controller sensor 24 V power source: Power source voltage drop and input	32
Failure code [DB39KQ] [DAQ9KQ] Steering and transmission controller model selection: Inconsistency in model select signal	32
Failure code [DD12KA] Shift up switch: Disconnection	34
Failure code [DD12KB] Shift up switch: Short circuit	36
Failure code [DD13KA] Shift down switch: Disconnection	38
Failure code [DD13KB] Shift down switch: Short circuit	40
Failure code [DD14KA] [DDQ2KA] Parking brake lever switch: Disconnection	42
Failure code [DD14KB] [DDQ2KB] Parking brake lever switch: Short circuit	44
Failure code [DDN7KA] Pitch control switch: Disconnection	46
Failure code [DDN7KB] Pitch control switch: Short circuit	48
Failure code [DDQ2KA] [DD14KA] Parking brake lever switch: Disconnection	50
Failure code [DDQ2KB] [DD14KB] Parking brake lever switch: Short circuit	50
Failure code [DGS1KX] Hydraulic oil temperature sensor: Input signal is out of normal range	52
Failure code [DGT1KA] Power train oil temperature sensor: Disconnection	54
Failure code [DGT1KX] Power train oil temperature sensor: Input signal is out of normal range	55
Failure code [DK10KA] Fuel dial: Disconnection	56
Failure code [DK10KB] Fuel dial: Short circuit	58
Failure code [DK30KA] Steering potentiometer (1): Disconnection	60
Failure code [DK30KB] Steering potentiometer (1): Short circuit	62
Failure code [DK30KX] Steering potentiometer: Input signal is out of normal range	64
Failure code [DK30KZ] Steering potentiometer: Disconnection or short circuit (Double failure)	65
Failure code [DK30L8] Steering potentiometer: Inconsistent analog signal	65
Failure code [DK31KA] Steering potentiometer (2): Disconnection	66

Failure code [DK31KB] Steering potentiometer (2): Short circuit.....	68
Failure code [DK40KA] Brake potentiometer: Disconnection	70
Failure code [DK40KB] Brake potentiometer: Short circuit.....	71
Failure code [DK55KX] Forward-reverse potentiometer: Input signal is out of normal range..	72
Failure code [DK55KZ] Forward-reverse potentiometer: Disconnection or short circuit (Double failure)	73
Failure code [DK55L8] Forward-reverse potentiometer: Inconsistent analog signal	74
Failure code [DK56KA] Forward-reverse potentiometer (1): Short circuit	76
Failure code [DK56KB] Forward-reverse potentiometer (1): Disconnection.....	78
Failure code [DK57KA] Forward-reverse potentiometer (2): Disconnection.....	80
Failure code [DK57KB] Forward-reverse potentiometer (2): Short circuit	82
Troubleshooting by failure code (Display of code), Part 4	SEN00592-00
Troubleshooting by failure code (Display of code), Part 4.....	3
Failure code [DKH1KA] [DKH1KX] Pitch angle sensor: Short circuit.....	3
Failure code [DKH1KX], [DKH1KA] or [DKH1KB] Pitch angle sensor: Input signal out of range.....	5
Failure code [DLT3KA] Transmission output speed sensor: Disconnection	6
Failure code [DLT3KB] Transmission output speed sensor: Short circuit.....	7
Failure code [DV00KB] Alarm buzzer: Short circuit	8
Failure code [DW5AKA] Pitch control solenoid: Disconnection	9
Failure code [DW5AKB] Pitch control solenoid: Short circuit.....	10
Failure code [DW5AKY] Pitch control solenoid: Short circuit to power source line	11
Failure code [DW7BKA] Fan reverse solenoid: Disconnection.....	12
Failure code [DW7BKB] Fan reverse solenoid: Short circuit	13
Failure code [DWN1KA] HSS EPC solenoid right: Disconnection.....	14
Failure code [DWN1KB] HSS EPC solenoid right: Short circuit	15
Failure code [DWN1KY] HSS EPC solenoid right: Short circuit to power source line	16
Failure code [DWN2KA] HSS EPC solenoid left: Disconnection	17
Failure code [DWN2KB] HSS EPC solenoid left: Short circuit.....	18
Failure code [DWN2KY] HSS EPC solenoid left: Short circuit to power source line	19
Failure code [DWN5KA] Fan pump TVC solenoid: Disconnection	20
Failure code [DWN5KB] Fan pump TVC solenoid: Short circuit.....	21
Failure code [DWN5KY] Fan pump TVC solenoid: Short circuit in power source line.....	22
Failure code [DXA0KA] HSS pump TVC solenoid: Disconnection	23
Failure code [DXA0KB] HSS pump TVC solenoid: Short circuit.....	24
Failure code [DXA0KY] HSS pump TVC solenoid: Short circuit to power source line.....	25
Failure code [DXH4KA] 1st clutch ECMV: Disconnection.....	26
Failure code [DXH4KB] 1st clutch ECMV: Short circuit	27
Failure code [DXH4KY] 1st clutch ECMV: Short circuit to power source line	28
Failure code [DXH5KA] 2nd clutch ECMV: Disconnection	29
Failure code [DXH5KB] 2nd clutch ECMV: Short circuit.....	30
Failure code [DXH5KY] 2nd clutch ECMV: Short circuit to power source line.....	31
Failure code [DXH6KA] 3rd clutch ECMV: Disconnection	32
Failure code [DXH6KB] 3rd clutch ECMV: Short circuit.....	33
Failure code [DXH6KY] 3rd clutch ECMV: Short circuit to power source line.....	34
Failure code [DXH7KA] Reverse clutch ECMV: Disconnection	35
Failure code [DXH7KB] Reverse clutch ECMV: Short circuit.....	36
Failure code [DXH7KY] reverse clutch ECMV: Short circuit to power source line.....	37
Failure code [DXH8KA] Forward clutch ECMV: Disconnection	38
Failure code [DXH8KB] Forward clutch ECMV: Short circuit.....	39
Failure code [DXH8KY] forward clutch ECMV: Short circuit to power source line.....	40
Troubleshooting of electrical system (E-mode)	SEN00593-00
Troubleshooting of electrical system (E-mode).....	3
Contents of troubleshooting table	5
Contents of troubleshooting table	5
E-1 The engine does not start (the starting motor does not turn).....	6
E-2 The preheater does not operate.....	10

E-3	The monitor panel does not light up at all when the starting switch is turned ON.....	14
E-4	When the starting switch is turned on, the monitor panel completely remains lighted and does not go out.	15
E-5	While the engine is running, the battery charge level caution lamp flashes.	16
E-6	While the engine is running, the emergency warning item flashes.	18
E-7	While the preheater is operating, the preheating pilot lamp does not light up.	22
E-8	The coolant temperature gauge does not indicate correctly.	24
E-9	The power train oil temperature gauge does not indicate correctly.....	26
E-10	Hydraulic oil temperature gauge does not indicate properly.	28
E-11	Fuel gauge does not indicate properly.	30
E-12	Gear speed and engine speed are not indicated properly.	31
E-13	The preset mode service meter does not indicate normally.....	31
E-14	The warning lamp does not flash or does not go out.	31
E-15	The alarm buzzer does not sound or does not stop.....	32
E-16	Auto shift down is not possible or is not released.	34
E-17	The buzzer cancel switch does not work.	36
E-18	The information switch does not work.....	38
E-19	The fan cleaning does not operate or cannot be reset.	40
E-20	The preset mode does not operate or cannot be reset.....	42
E-21	The monitor panel cannot be set in the service mode or cannot be set out of the service mode.....	44
E-22	The back-up alarm does not sound.	46
E-23	The head lamp and rear lamp do not light up.	48
E-24	The horn does not sound or does not stop.	51
E-25	Malfunction of wipers	52
E-26	Washer does not spray water	68
E-27	The air conditioner does not operate	74
E-28	KOMTRAX system does not operate normally.....	78
Troubleshooting of hydraulic and mechanical system (H-mode)		SEN00594-00
Troubleshooting of hydraulic and mechanical system (H-mode)		3
Contents of troubleshooting table		3
H-1	There is no travel power (no drawbar pull).	4
H-2	Machine does not move (at 2nd or 3rd speed).....	5
H-3	Machine does not move at any gear speed.....	6
H-4	Machine travels only in one direction, forward or in reverse.....	7
H-5	When gear is shifted or travel direction is changed, large time lag is made.....	8
H-6	Machine cannot be steered (Machine does not turn leftward or rightward).....	9
H-7	Steering speed or power is low.....	9
H-8	Brake does not work.....	10
H-9	Overheat of power train oil.....	11
H-10	Abnormal sound comes out from around HSS and work equipment pump or HSS motor	12
H-11	All work equipment speeds are slow.....	12
H-12	Work equipment does not move	13
H-13	Blade lift speed is slow or lacks power	13
H-14	Blade tilt speed is slow or lacks power	14
H-15	Ripper lift speed is slow or lacks power.....	14
H-16	Excessive hydraulic drift of blade lift.....	15
H-17	Excessive hydraulic drift of blade tilt.....	15
H-18	Excessive hydraulic drift of ripper lift.....	16
Troubleshooting of engine (S-mode)		SEN00595-00
Troubleshooting of engine (S-mode).....		3
Method of using troubleshooting charts.....		3
S-1	Starting performance is poor.	6
S-2	Engine does not start	7
S-3	Engine does not pick up smoothly	10
S-4	Engine stops during operations	11

S-5 Engine does not rotate smoothly.....	12
S-6 Engine lacks output (or lacks power)	13
S-7 Exhaust smoke is black (imcomplete combustion)	14
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	15
S-9 Oil becomes contaminated quickly.....	16
S-10 Fuel consumption is excessive	17
S-11 Oil is in coolant (or coolant spurts back, or coolant level goes down).....	18
S-12 Oil pressure drops.....	19
S-13 Oil level rises (water, fuel in oil).....	20
S-14 Coolant temperature becomes too high (overheating).....	21
S-15 Abnormal noise is made.....	22
S-16 Vibration is excessive.....	23
50 Disassembly and assembly	
General information on disassembly and assembly	SEN00944-00
How to read this manual	2
Coating materials list	4
Special tool list.....	7
Sketches of special tools	12
Engine and cooling system, Part 1	SEN00945-00
Removal and installation of fuel supply pump assembly	2
Removal and installation of cylinder head assembly	6
Removal and installation of fuel injector assembly	18
Removal and installation of engine front seal	20
Removal and installation of engine rear seal.....	23
Engine and cooling system, Part 2	SEN00946-00
Removal and installation of engine assembly.....	2
Removal and installation of radiator assembly	9
Removal and installation of air aftercooler assembly	13
Removal and installation of fan drive assembly.....	14
Removal and installation of fan motor assembly	15
Removal and installation of fuel tank assembly	16
Removal and installation of damper assembly	18
Removal and installation of engine hood assembly.....	19
Power train, Part 1	SEN00947-00
Removal and installation of power train unit assembly.....	2
Disconnection and connection of power train unit assembly	5
Disassembly and assembly of PTO assembly.....	9
Disassembly and assembly of torque converter assembly.....	15
Disassembly and assembly of TORQFLOW transmission assembly	20
Power train, Part 2	SEN00948-00
Disassembly and assembly of HSS assembly.....	2
Removal and installation of final drive assembly	20
Disassembly and assembly of final drive assembly.....	22
Undercarriage and frame, Part 1	SEN00949-00
Removal and installation of track frame assembly	2
Removal and installation of idler assembly.....	4
Disassembly and assembly of idler assembly	5
Removal and installation of recoil spring assembly	9
Disassembly and assembly of recoil spring assembly.....	10
Removal and installation of track roller assembly.....	14
Disassembly and assembly of track roller assembly	15
Removal and installation of carrier roller assembly	19
Disassembly and assembly of carrier roller assembly.....	20

Undercarrriage and frame, Part 2	SEN00950-00
Expansion and installation of track shoe assembly	2
Whole disassembly and whole assembly of track shoe assembly	5
Field disassembly and assembly of one link	20
Removal and installation of pivot shaft assembly	27
Removal and installation of equalizer bar assembly	28
Disassembly and assembly of equalizer bar side bushing	30
Hydraulic system	SEN00951-00
Removal and installation of control valve assembly	2
Disassembly and assembly of control valve assembly	4
Removal and installation of HSS pump assembly	5
Removal and installation of power train and lubricating oil pump assembly	6
Removal and installation of cooling fan pump assembly	7
Removal and installation of scavenging pump assembly	9
Removal and installation of HSS motor assembly	10
Disassembly and assembly of hydraulic cylinder assembly	11
Work equipment	SEN00952-00
Removal and installation of blade assembly	2
Cab and its attachments	SEN00953-00
Removal and installation of ROPS guard	2
Removal and installation of operator's cab assembly	3
Removal and installation of operator's cab glass (Stuck glass).....	9
Removal and installation of floor frame assembly	17
Electrical system	SEN00954-00
Removal and installation of engine controller	2
Removal and installation of steering and transmission controller assembly.....	4
Removal and installation of KOMTRAX terminal	5
90 Diagrams and drawings	
Hydraulic diagrams and drawings	SEN00058-00
Hydraulic diagrams and drawings	2
Power train hydraulic circuit diagram.....	2
Hydraulic circuit diagram	3
Electrical diagrams and drawings	SEN00059-01
Electrical diagrams and drawings	3
Electrical circuit diagram.....	3
Connector arrangement diagram.....	5

D65EX, PX, WX-15E0 Bulldozer

Form No. SEN00055-02

© 2006 KOMATSU
All Rights Reserved
Printed in Japan 03-06 (01)

BULLDOZER

D65EX-15E0

D65PX-15E0

D65WX-15E0

Machine model Serial number

D65EX-15E0	69001 and up
D65PX-15E0	69001 and up
D65WX-15E0	69001 and up

00 Index and foreword

Foreword and general information

Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard.....	8
Handling electric equipment and hydraulic component.....	10
How to read electric wire code	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table	24
Conversion table	28

Foreword and general information

(Rev. 2005/11)

Safety notice

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **▲** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

▲ Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine.

- 1) Before carrying out any greasing or repairs, read all the safety plates stuck to the machine. For the locations of the safety plates and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.

- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.

- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is seen well from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

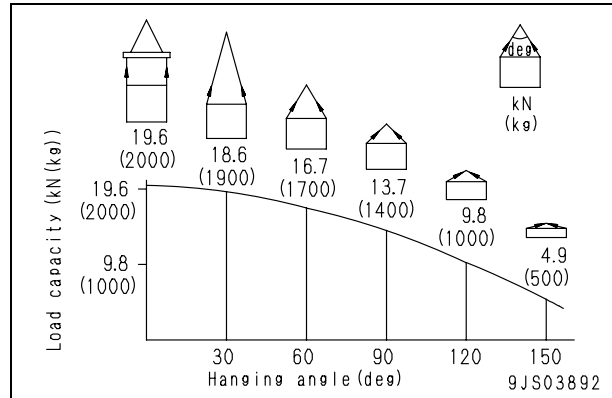

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
 - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

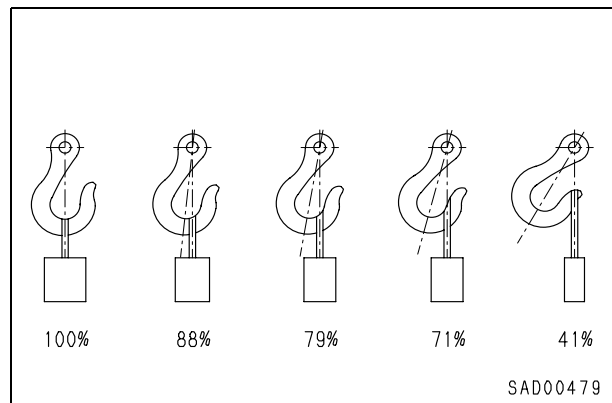


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
 - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope	Allowable load	
	kN	ton
mm		
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).