

# SHOP MANUAL

**KOMATSU**

**D60F-8,8A**

MACHINE MODEL	SERIAL No.
<b>D60F-8</b>	<b>45001 and up</b>
<b>D60F-8A</b>	<b>45001 and up</b>

This Shop Manual is mentioned only different part of Shop Manual for D60A-8.  
Please refer to SEBM01440801 for other systems not mentioned in this Shop  
Manual.

 **KOMATSU**


# CONTENTS

	No. of page
<b>01 GENERAL</b> .....	01-1
<b>20 POWER TRAIN</b>	
21 STRUCTURE AND FUNCTION .....	21-1
24 MAINTENANCE STANDARD .....	24-1
<b>30 UNDERCARRIAGE</b>	
31 STRUCTURE AND FUNCTION .....	31-1
<b>60 HYDRAULIC SYSTEM</b>	
61 STRUCTURE AND FUNCTION .....	61-1
64 MAINTENANCE STANDARD .....	64-1
<b>90 OTHERS</b>	
91 ELECTRICAL SYSTEM .....	91-1

---

# 01 GENERAL

---

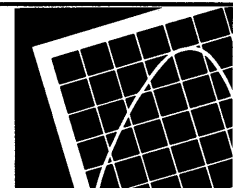

General view . . . . .	01- 2
Assembly drawing . . . . .	01- 3
Operator's compartment . . . . .	01- 4
Instruments and controls . . . . .	01- 4
Specifications . . . . .	01- 5
Engine specifications . . . . .	01- 7
Table of oil and coolant quantities . . . . .	01- 8