

Shop Manual

BULLDOZER

D155AX-8

SERIAL NUMBERS 100001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-21
HOW TO READ THE SHOP MANUAL	00-21
SAFETY NOTICE FOR OPERATION	00-23
PRECAUTIONS TO PREVENT FIRE	00-29
ACTION IF FIRE OCCURS	00-31
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-32
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-33
PRECAUTIONS FOR AdBlue/DEF	00-34
STORE AdBlue/DEF	00-35
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-36
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-38
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-44
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-47
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-48
PRACTICAL USE OF KOMTRAX	00-49
METHOD FOR DISCONNECTING AND CONNECTING PUSH-PULL TYPE COUPLER	00-50
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-53
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-57
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-61
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-63
HOW TO READ ELECTRICAL WIRE CODE	00-64
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-68
LIST OF ABBREVIATION	00-71
STANDARD TIGHTENING TORQUE TABLE	00-76
CONVERSION TABLE	00-83
01 SPECIFICATION	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
SPECIFICATIONS	01-5
WEIGHT TABLE	01-13
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-16
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-5
LAYOUT DRAWING OF UREA SCR SYSTEM	10-5
UREA SCR SYSTEM DIAGRAM	10-7
FUNCTION OF UREA SCR SYSTEM	10-8
COMPONENT PARTS OF UREA SCR SYSTEM	10-23
BOOT-UP SYSTEM	10-32
SYSTEM OPERATING LAMP SYSTEM	10-32
BATTERY DISCONNECT SWITCH	10-34
ENGINE SYSTEM	10-36
LAYOUT DRAWING OF ENGINE RELATED PARTS	10-36
ENGINE CONTROL SYSTEM	10-38
AUTOMATIC IDLE STOP SYSTEM	10-41
COMPONENT PARTS OF ENGINE SYSTEM	10-44
COOLING SYSTEM	10-64
LAYOUT DRAWING OF COOLING SYSTEM	10-64
COMPONENT PARTS OF COOLING SYSTEM	10-66
CONTROL SYSTEM	10-82
LAYOUT OF ELECTRICAL CONTROL SYSTEM	10-82

PALM COMMAND CONTROL SYSTEM	10-83
MACHINE MONITOR SYSTEM	10-87
KOMTRAX SYSTEM.....	10-90
COMPONENT PARTS OF CONTROL SYSTEM.....	10-91
HYDRAULIC SYSTEM.....	10-125
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-125
CLSS	10-126
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-129
POWER TRAIN SYSTEM	10-188
LAYOUT OF POWER TRAIN SYSTEM	10-188
OPERATE POWER TRAIN SYSTEM.....	10-191
TRANSMISSION, STEERING, AND BRAKE CONTROL	10-193
HSS SYSTEM.....	10-196
CENTRALIZED PRESSURE PICKUP PORT.....	10-199
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-201
WORK EQUIPMENT SYSTEM	10-282
WORK EQUIPMENT CONTROL	10-282
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-287
UNDERCARRIAGE AND FRAME.....	10-304
MAIN FRAME	10-304
SUSPENSION	10-305
TRACK FRAME AND IDLER CUSHION	10-308
WORK EQUIPMENT.....	10-310
STRUCTURE OF CYLINDER STAY	10-310
STRUCTURE OF BLADE	10-311
STRUCTURE OF VARIABLE GIANT RIPPER.....	10-313
STRUCTURE OF VARIABLE FIXED MULTI-SHANK RIPPER.....	10-314
CAB AND ITS ATTACHMENTS	10-315
ROPS CAB	10-315
CAB MOUNT	10-316
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: D155AX-8	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-8
STANDARD VALUE TABLE FOR MACHINE: D155AX-8	20-8
STANDARD VALUE TABLE FOR ELECTRICAL	20-28
STANDARD VALUE TABLE FOR ELECTRICITY	20-28
30 TESTING AND ADJUSTING.....	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-12
ENGINE AND COOLING SYSTEM.....	30-14
TEST ENGINE SPEED	30-14
TEST BOOST PRESSURE.....	30-18
TEST EXHAUST GAS TEMPERATURE	30-20
TEST EXHAUST GAS COLOR.....	30-23
TEST AND ADJUST VALVE CLEARANCE	30-25
TEST COMPRESSION PRESSURE.....	30-28
TEST BLOWBY PRESSURE	30-31
TEST ENGINE OIL PRESSURE	30-33
TEST EGR VALVE AND KVGT OIL PRESSURE	30-35
TEST FUEL PRESSURE	30-37
TEST FUEL RETURN RATE AND LEAKAGE.....	30-39
BLEED AIR FROM FUEL SYSTEM	30-44
TEST FUEL CIRCUIT FOR LEAKAGE	30-46
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-48

HANDLE NO-INJECTION CRANKING OPERATION	30-49
CLEAN FUEL DOSER	30-50
WRITE INJECTOR COMPENSATION VALUE TO ENGINE CONTROLLER.....	30-52
WRITE ASH IN SOOT ACCUMULATION CORRECTION TO ENGINE CONTROLLER	30-58
TEST SCR RELATED FUNCTIONS.....	30-59
CLEAN AdBlue/DEF TANK	30-82
ADJUST DECELERATOR PEDAL	30-88
POWER TRAIN.....	30-91
TEST POWER TRAIN OIL PRESSURE.....	30-91
ADJUST TRANSMISSION OUTPUT SHAFT SPEED SENSOR	30-102
TEST BRAKE PERFORMANCE SIMPLY	30-103
TEST AND ADJUST BRAKE PEDAL.....	30-104
ADJUST PARKING BRAKE LEVER.....	30-107
MOVE MACHINE BY RELEASING PARKING BRAKE WHEN MACHINE DOES NOT TRAVEL...30-109	
UNDERCARRIAGE AND FRAME.....	30-113
ADJUSTING IDLER CLEARANCE.....	30-113
TEST AND ADJUST TRACK TENSION.....	30-115
HYDRAULIC SYSTEM.....	30-116
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM.....	30-116
TEST AND ADJUST WORK EQUIPMENT AND HSS OIL PRESSURES	30-117
TEST OIL PRESSURE OF CONTROL CIRCUIT	30-122
TEST WORK EQUIPMENT LOCK SOLENOID VALVE OUTPUT PRESSURE	30-124
TEST RIPPER PIN PULLER SOLENOID VALVE OUTPUT PRESSURE.....	30-126
CHECK COOLING FAN SPEED	30-128
TEST COOLING FAN CIRCUIT OIL PRESSURE	30-129
BLEED AIR FROM COOLING FAN PUMP	30-131
TEST THE PARTS CAUSING HYDRAULIC DRIFT IN WORK EQUIPMENT.....	30-132
TEST INTERNAL OIL LEAKAGE OF WORK EQUIPMENT CYLINDER	30-134
BLEED AIR FROM WORK EQUIPMENT CYLINDERS.....	30-136
OPERATION WHEN WORK EQUIPMENT IS NOT EFFECTIVE	30-137
WORK EQUIPMENT.....	30-139
ADJUST WORK EQUIPMENT LOCK LEVER.....	30-139
CAB AND ITS ATTACHMENTS	30-141
TEST AND ADJUST OPERATOR'S CAB.....	30-141
ELECTRICAL SYSTEM	30-146
SETTING AND OPERATION OF MACHINE MONITOR.....	30-146
METHOD FOR STARTING UP KOMTRAX.....	30-269
ADJUST REARVIEW CAMERA ANGLE	30-274
HANDLING VOLTAGE CIRCUIT OF ENGINE CONTROLLER	30-275
HANDLE BATTERY DISCONNECT SWITCH	30-276
TEST DIODES.....	30-277
Pm CLINIC.....	30-278
Pm CLINIC SERVICE	30-278
40 TROUBLESHOOTING	40-1
CONTENTS	40-2
RELATED INFORMATION ON TROUBLESHOOTING	40-14
GENERAL TROUBLESHOOTING POINTS	40-14
TROUBLESHOOTING POINTS FOR UREA SCR SYSTEM.....	40-15
SEQUENCE OF EVENTS IN TROUBLESHOOTING.....	40-28
CHECKS BEFORE TROUBLESHOOTING	40-30
CHECKS BEFORE TROUBLESHOOTING.....	40-32
TESTING IN ACCORDANCE WITH TESTING PROCEDURE.....	40-34
PROCEDURE FOR TESTING AND TROUBLESHOOTING	40-58
SYMPTOM AND TROUBLESHOOTING NUMBERS	40-61
INFORMATION IN TROUBLESHOOTING TABLE	40-64
CONNECTORS LIST AND LAYOUT.....	40-66
CONNECTOR PIN NUMBERS - CONNECTION TABLE.....	40-82
T-BOXES AND T-ADAPTERS LIST	40-121

FUSE LOCATION TABLE	40-127
PRECAUTIONS FOR KDPF (KCSF, KDOC) CLEANING AND CHANGE	40-130
PREPARATION OF SHORT CIRCUIT ELECTRICAL CONNECTOR (FOR FAILURE CODES [CA1883] AND [CA3135]).....	40-134
FAILURE CODES TABLE	40-136
TROUBLESHOOTING BY FAILURE CODE (DISPLAY OF CODE)	40-159
FAILURE CODE [1500L0] T/M Clutches Double Engagement	40-159
FAILURE CODE [15SAL1] ECMV Release Trouble (Forward)	40-160
FAILURE CODE [15SALH] ECMV Engage Trouble (Forward)	40-162
FAILURE CODE [15SBL1] ECMV Release Trouble (Reverse).....	40-164
FAILURE CODE [15SBLH] ECMV Engage Trouble (Reverse).....	40-166
FAILURE CODE [15SEL1] ECMV Release Trouble (1st)	40-168
FAILURE CODE [15SELH] ECMV Engage Trouble (1st)	40-170
FAILURE CODE [15SFL1] ECMV Release Trouble (2nd)	40-172
FAILURE CODE [15SFLH] ECMV Engage Trouble (2nd)	40-174
FAILURE CODE [15SGL1] ECMV Release Trouble (3rd)	40-176
FAILURE CODE [15SGLH] ECMV Engage Trouble (3rd).....	40-178
FAILURE CODE [15S JL1] ECMV Release Trouble (Lock Up Clutch).....	40-180
FAILURE CODE [15S JLH] ECMV Engage Trouble (Lock Up Clutch).....	40-182
FAILURE CODE [1800MW] P/T Clutch Slip	40-184
FAILURE CODE [2300NR] Brake Thermal Load Abnormality	40-185
FAILURE CODE [2301L1] ECMV Release Trouble (RH Brake)	40-186
FAILURE CODE [2301LH] ECMV Engage Trouble (RH Brake).....	40-188
FAILURE CODE [2302L1] ECMV Release Trouble (LH Brake)	40-190
FAILURE CODE [2302LH] ECMV Engage Trouble (LH Brake)	40-192
FAILURE CODE [879AKA] A/C Recirculation Air Temperature Sensor Open Circuit.....	40-194
FAILURE CODE [879AKB] A/C Recirculation Air Temperature Sensor Short Circuit.....	40-195
FAILURE CODE [879BKA] A/C Fresh Air Temperature Sensor Open Circuit	40-196
FAILURE CODE [879BKB] A/C Fresh Air Temperature Sensor Short Circuit	40-198
FAILURE CODE [879CKA] Ventilating Sensor Open Circuit.....	40-200
FAILURE CODE [879CKB] Ventilating Sensor Short Circuit.....	40-201
FAILURE CODE [879DKZ] Sunlight Sensor Open Circuit or Short Circuit.....	40-202
FAILURE CODE [879EMC] Ventilation Damper Malfunction	40-204
FAILURE CODE [879FMC] Air Mix Damper Malfunction	40-205
FAILURE CODE [879GKX] Refrigerant Pressure Input Signal Out of Range	40-206
FAILURE CODE [989L00] Engine Controller Lock Caution 1	40-208
FAILURE CODE [989M00] Engine Controller Lock Caution 2	40-209
FAILURE CODE [989N00] Engine Controller Lock Caution 3.....	40-210
FAILURE CODE [A1U0N3] Hydrocarbon Desorb Request 1	40-211
FAILURE CODE [A1U0N4] Hydrocarbon Desorb Request 2.....	40-213
FAILURE CODE [AA10NX] Air Cleaner Clogging.....	40-215
FAILURE CODE [AB00KE] Charge Voltage Low.....	40-217
FAILURE CODE [AQ10N3] Manual Stationary Regeneration Request (KDOC Face Plugging)	40-219
FAILURE CODE [AS00N3] Manual Stationary Regeneration Request (SCR)	40-221
FAILURE CODE [AS00R2] Warning 2 (SCR Device Abnormality)	40-223
FAILURE CODE [AS00R3] Inducement 1 (SCR Device Abnormality)	40-224
FAILURE CODE [AS00R4] Inducement 2 (SCR Device Abnormality)	40-225
FAILURE CODE [AS00R5] Inducement 3 (SCR Device Abnormality)	40-226
FAILURE CODE [AS00R6] Temporary Recovery of Inducement.....	40-227
FAILURE CODE [AS00ZK] AdBlue/DEF Level Low Error 5.....	40-228
FAILURE CODE [AS10KM] AdBlue/DEF Injector Overheat Warning	40-229
FAILURE CODE [AS10NR] AdBlue/DEF Injector High Temperature Warning	40-230
FAILURE CODE [AS10NT] AdBlue/DEF Injector Overheat Caution.....	40-231
FAILURE CODE [B@BAZG] Engine Oil Pressure Low	40-232
FAILURE CODE [B@BCNS] Engine Coolant Overheat	40-233
FAILURE CODE [B@BCZK] Engine Coolant Level Low	40-234
FAILURE CODE [B@CENS] Power Train Oil Overheat	40-236
FAILURE CODE [B@HANS] Hydraulic Oil Overheat	40-237

FAILURE CODE [CA115] Engine NE and Backup Speed Sensor Error.....	40-238
FAILURE CODE [CA122] Charge Air Pressure Sensor High Error.....	40-239
FAILURE CODE [CA123] Charge Air Pressure Sensor Low Error.....	40-241
FAILURE CODE [CA131] Throttle Sensor High Error.....	40-243
FAILURE CODE [CA132] Throttle Sensor Low Error.....	40-245
FAILURE CODE [CA135] Engine Oil Pressure Sensor High Error	40-247
FAILURE CODE [CA141] Engine Oil Pressure Sensor Low Error	40-249
FAILURE CODE [CA144] Coolant Temperature Sensor High Error.....	40-251
FAILURE CODE [CA145] Coolant Temperature Sensor Low Error.....	40-253
FAILURE CODE [CA153] Charge Air Temperature Sensor High Error	40-255
FAILURE CODE [CA154] Charge Air Temperature Sensor Low Error	40-258
FAILURE CODE [CA187] Sensor 2 Supply Voltage Low Error	40-261
FAILURE CODE [CA221] Ambient Pressure Sensor High Error.....	40-263
FAILURE CODE [CA222] Ambient Pressure Sensor Low Error	40-265
FAILURE CODE [CA227] Sensor 2 Supply Voltage High Error	40-267
FAILURE CODE [CA234] Engine Overspeed.....	40-268
FAILURE CODE [CA238] NE Speed Sensor Supply Voltage Error	40-269
FAILURE CODE [CA239] NE Speed Sensor Supply Voltage High Error	40-271
FAILURE CODE [CA249] Ambient Air Temp Sensor High Error.....	40-273
FAILURE CODE [CA256] Ambient Air Temp Sensor Low Error.....	40-275
FAILURE CODE [CA271] IMV/PCV 1 Short Circuit Error	40-277
FAILURE CODE [CA272] IMV/PCV 1 Open Circuit Error	40-279
FAILURE CODE [CA273] PCV 2 Short Circuit Error.....	40-280
FAILURE CODE [CA274] PCV 2 Open Circuit Error	40-282
FAILURE CODE [CA322] Injector #1 (L#1) Open Circuit Error or Short Circuit Error	40-283
FAILURE CODE [CA323] Injector #5 (L#5) Open Circuit Error or Short Circuit Error	40-285
FAILURE CODE [CA324] Injector #3 (L#3) Open Circuit Error or Short Circuit Error	40-287
FAILURE CODE [CA325] Injector #6 (L#6) Open Circuit Error or Short Circuit Error	40-289
FAILURE CODE [CA331] Injector #2 (L#2) Open Circuit Error or Short Circuit Error	40-291
FAILURE CODE [CA332] Injector #4 (L#4) Open Circuit Error or Short Circuit Error	40-293
FAILURE CODE [CA343] Engine Controller Internal Failure	40-295
FAILURE CODE [CA351] Injectors Drive Circuit Error.....	40-296
FAILURE CODE [CA352] Sensor 1 Supply Voltage Low Error	40-297
FAILURE CODE [CA356] MAF Sensor High Error	40-300
FAILURE CODE [CA357] MAF Sensor Low Error	40-302
FAILURE CODE [CA386] Sensor 1 Supply Voltage High Error	40-305
FAILURE CODE [CA441] Power Voltage Low Error	40-306
FAILURE CODE [CA442] Power Voltage High Error	40-309
FAILURE CODE [CA449] Common Rail Pressure High Error 2	40-310
FAILURE CODE [CA451] Common Rail Pressure Sensor High Error	40-311
FAILURE CODE [CA452] Common Rail Pressure Sensor Low Error	40-313
FAILURE CODE [CA515] Common Rail Pressure Sensor Supply Voltage High Error.....	40-315
FAILURE CODE [CA516] Common Rail Pressure Sensor Supply Voltage Low Error.....	40-317
FAILURE CODE [CA553] Common Rail Pressure High Error 1	40-319
FAILURE CODE [CA555] Crankcase Pressure High Error 2.....	40-320
FAILURE CODE [CA556] Crankcase Pressure High Error 3.....	40-321
FAILURE CODE [CA559] Common Rail Pressure Low Error 1	40-322
FAILURE CODE [CA595] Turbocharger Speed High Error 2.....	40-327
FAILURE CODE [CA687] Turbocharger Speed Low Error	40-328
FAILURE CODE [CA689] Engine NE Speed Sensor Error.....	40-330
FAILURE CODE [CA691] Intake Air Temperature Sensor High Error.....	40-332
FAILURE CODE [CA692] Intake Air Temperature Sensor Low Error.....	40-334
FAILURE CODE [CA697] Engine Controller Internal Temperature Sensor High Error.....	40-336
FAILURE CODE [CA698] Engine Controller Internal Temperature Sensor Low Error.....	40-337
FAILURE CODE [CA731] Engine Backup Speed Sensor Phase Error	40-338
FAILURE CODE [CA778] Engine Backup Speed Sensor Error	40-339
FAILURE CODE [CA1117] Engine Controller Partial Data Lost Error	40-342
FAILURE CODE [CA1664] KDOC Abnormality	40-343

FAILURE CODE [CA1669] AdBlue/DEF Level Sensor Voltage High Error	40-346
FAILURE CODE [CA1673] AdBlue/DEF Level Low Error 3	40-347
FAILURE CODE [CA1677] AdBlue/DEF Temperature Sensor Low Error	40-348
FAILURE CODE [CA1678] AdBlue/DEF Temperature Sensor High Error	40-349
FAILURE CODE [CA1682] AdBlue/DEF Pump Priming Error	40-350
FAILURE CODE [CA1683] AdBlue/DEF Tank Heating Valve Voltage High Error	40-352
FAILURE CODE [CA1684] AdBlue/DEF Tank Heating Valve Voltage Low Error	40-354
FAILURE CODE [CA1686] AdBlue/DEF Quality Sensor Voltage High Error	40-356
FAILURE CODE [CA1691] Defective Regeneration	40-357
FAILURE CODE [CA1694] SCR Outlet NOx Sensor In Range Error	40-360
FAILURE CODE [CA1695] Sensor 5 Supply Voltage High Error	40-363
FAILURE CODE [CA1696] Sensor 5 Supply Voltage Low Error	40-364
FAILURE CODE [CA1712] AdBlue/DEF Tank Thawing Error	40-366
FAILURE CODE [CA1713] AdBlue/DEF Tank Heater Valve Open Stuck Error	40-369
FAILURE CODE [CA1714] AdBlue/DEF Quality Sensor Out of Calibration Error	40-371
FAILURE CODE [CA1715] AdBlue/DEF Quality Sensor Internal Circuit Error	40-372
FAILURE CODE [CA1776] Sensor Supply Relay Voltage High Error	40-373
FAILURE CODE [CA1777] Sensor Supply Relay Voltage Low Error	40-376
FAILURE CODE [CA1843] Crankcase Pressure Sensor High Error	40-379
FAILURE CODE [CA1844] Crankcase Pressure Sensor Low Error	40-381
FAILURE CODE [CA1879] KDPF Differential Pressure Sensor High Error	40-384
FAILURE CODE [CA1881] KDPF Differential Pressure Sensor Low Error	40-387
FAILURE CODE [CA1883] KDPF Differential Pressure Sensor In Range Error	40-389
FAILURE CODE [CA1885] Turbo Outlet NOx Sensor Circuit Error	40-393
FAILURE CODE [CA1887] SCR Outlet NOx Sensor Circuit Error	40-395
FAILURE CODE [CA1921] KDPF Soot Accumulation High Error 1	40-397
FAILURE CODE [CA1922] KDPF Soot Accumulation High Error 2	40-400
FAILURE CODE [CA1923] Fuel Doser Solenoid 1 High Error	40-405
FAILURE CODE [CA1924] Fuel Doser Solenoid 1 Low Error	40-407
FAILURE CODE [CA1925] Fuel Doser Solenoid 1 In Range Error	40-409
FAILURE CODE [CA1927] Dosing Fuel Pressure Sensor High Error	40-411
FAILURE CODE [CA1928] Dosing Fuel Pressure Sensor Low Error	40-413
FAILURE CODE [CA1942] Crankcase Pressure Sensor In Range Error	40-415
FAILURE CODE [CA1963] Fuel Doser Solenoid 1 Servo Error	40-416
FAILURE CODE [CA1977] Fuel Doser Open Circuit Error or Short Circuit Error	40-419
FAILURE CODE [CA1993] KDPF Differential Pressure Low Error	40-422
FAILURE CODE [CA2185] Throttle Sensor Supply Voltage High Error	40-425
FAILURE CODE [CA2186] Throttle Sensor Supply Voltage Low Error	40-427
FAILURE CODE [CA2249] Common Rail Pressure Low Error 2	40-429
FAILURE CODE [CA2265] Fuel Feed Pump Open Circuit Error	40-430
FAILURE CODE [CA2266] Fuel Feed Pump Short Circuit Error	40-432
FAILURE CODE [CA2271] EGR Valve Position Sensor High Error	40-435
FAILURE CODE [CA2272] EGR Valve Position Sensor Low Error	40-437
FAILURE CODE [CA2349] EGR Valve Solenoid Open Circuit Error	40-439
FAILURE CODE [CA2353] EGR Valve Solenoid Short Circuit Error	40-441
FAILURE CODE [CA2357] EGR Valve Servo Error	40-443
FAILURE CODE [CA2381] KVGT Position Sensor High Error	40-444
FAILURE CODE [CA2382] KVGT Position Sensor Low Error	40-446
FAILURE CODE [CA2383] KVGT Solenoid Open Circuit Error	40-448
FAILURE CODE [CA2386] KVGT Solenoid Short Circuit Error	40-450
FAILURE CODE [CA2387] KVGT Servo Error	40-452
FAILURE CODE [CA2555] Intake Air Heater Relay Open Circuit Error	40-453
FAILURE CODE [CA2556] Intake Air Heater Relay Short Circuit Error	40-456
FAILURE CODE [CA2637] KDOC Face Plugging	40-458
FAILURE CODE [CA2639] Manual Stationary Regeneration Request	40-460
FAILURE CODE [CA2732] Fuel Doser Solenoid 2 High Error	40-462
FAILURE CODE [CA2733] Fuel Doser Solenoid 2 Low Error	40-464
FAILURE CODE [CA2741] Fuel Dozer Solenoid Valve Swap Error	40-466

FAILURE CODE [CA2765] Injector Trim Data Mismatch	40-467
FAILURE CODE [CA2771] SCR Outlet NOx Sensor Datalink Timeout Error.....	40-468
FAILURE CODE [CA2777] Manual Stationary Regeneration Request but KDPF Regeneration Disable	40-474
FAILURE CODE [CA2878] Fuel Doser Solenoid 2 Servo Error	40-477
FAILURE CODE [CA2881] Dosing Fuel Pressure Low Error 1.....	40-480
FAILURE CODE [CA2976] AdBlue/DEF Pump Temperature Sensor Signal Error.....	40-483
FAILURE CODE [CA3133] KDPF Outlet Pressure Sensor High Error	40-485
FAILURE CODE [CA3134] KDPF Outlet Pressure Sensor Low Error.....	40-487
FAILURE CODE [CA3135] KDPF Outlet Pressure Sensor In Range Error.....	40-489
FAILURE CODE [CA3142] SCR Temperature Sensor High Error.....	40-493
FAILURE CODE [CA3143] SCR Temperature Sensor Low Error	40-494
FAILURE CODE [CA3144] SCR Temperature Sensor In Range Error	40-495
FAILURE CODE [CA3146] SCR Outlet Temperature Sensor High Error	40-497
FAILURE CODE [CA3147] SCR Outlet Temperature Sensor Low Error.....	40-498
FAILURE CODE [CA3148] SCR Outlet Temperature Sensor In Range Error	40-499
FAILURE CODE [CA3151] SCR Catalyst Efficiency Low Error 2.....	40-501
FAILURE CODE [CA3165] SCR Outlet Temperature High Error	40-507
FAILURE CODE [CA3167] Fuel Doser Degradation.....	40-509
FAILURE CODE [CA3229] SCR Temperature High Error.....	40-512
FAILURE CODE [CA3231] SCR Temperature High Error - Non Regeneration	40-514
FAILURE CODE [CA3232] Turbo Outlet NOx Sensor Datalink Timeout Error	40-516
FAILURE CODE [CA3235] SCR Outlet Temperature High Error - Non Regeneration.....	40-520
FAILURE CODE [CA3239] AdBlue/DEF Line Heater 2 Voltage High Error.....	40-522
FAILURE CODE [CA3241] AdBlue/DEF Line Heater 2 Voltage Low Error	40-525
FAILURE CODE [CA3242] AdBlue/DEF Tank Heating Error	40-528
FAILURE CODE [CA3251] KDOC Inlet Temperature High Error	40-531
FAILURE CODE [CA3253] KDOC Temperature Error - Non Regeneration	40-534
FAILURE CODE [CA3254] KDOC Outlet Temperature High Error 1.....	40-538
FAILURE CODE [CA3255] KDPF Temperature Error - Non Regeneration	40-541
FAILURE CODE [CA3256] KDPF Outlet Temperature High Error 1	40-544
FAILURE CODE [CA3311] KDOC Outlet Temperature High Error 2.....	40-546
FAILURE CODE [CA3312] KDPF Outlet Temperature High Error 2	40-548
FAILURE CODE [CA3313] KDOC Inlet Temperature Sensor Low Error.....	40-551
FAILURE CODE [CA3314] KDOC Inlet Temperature Sensor High Error	40-552
FAILURE CODE [CA3315] KDOC Inlet Temperature Sensor In Range Error	40-553
FAILURE CODE [CA3316] KDOC Outlet Temperature Sensor Low Error	40-556
FAILURE CODE [CA3317] KDOC Outlet Temperature Sensor High Error	40-557
FAILURE CODE [CA3318] KDOC Outlet Temperature Sensor In Range Error	40-558
FAILURE CODE [CA3319] KDPF Outlet Temperature Sensor High Error	40-561
FAILURE CODE [CA3321] KDPF Outlet Temperature Sensor Low Error.....	40-562
FAILURE CODE [CA3322] KDPF Outlet Temperature Sensor In Range Error	40-564
FAILURE CODE [CA3419] MAF Sensor Supply Voltage High Error.....	40-567
FAILURE CODE [CA3421] MAF Sensor Supply Voltage Low Error.....	40-569
FAILURE CODE [CA3497] AdBlue/DEF Level Low Error 1	40-571
FAILURE CODE [CA3498] AdBlue/DEF Level Low Error 2.....	40-572
FAILURE CODE [CA3543] AdBlue/DEF Quality Error (SCR Catalyst Efficiency Low).....	40-573
FAILURE CODE [CA3545] SCR Outlet NOx Sensor Unstable Error	40-580
FAILURE CODE [CA3547] AdBlue/DEF Level Low Error 4	40-582
FAILURE CODE [CA3558] AdBlue/DEF Pump Voltage High Error.....	40-583
FAILURE CODE [CA3559] AdBlue/DEF Pump Voltage Low Error	40-585
FAILURE CODE [CA3562] AdBlue/DEF LineHeater Relay 1 Voltage High Error.....	40-587
FAILURE CODE [CA3563] AdBlue/DEF LineHeater Relay 1 Voltage Low Error	40-589
FAILURE CODE [CA3567] AdBlue/DEF Injector Open Circuit Error or Short Circuit Error	40-592
FAILURE CODE [CA3568] AdBlue/DEF Injector Malfunction	40-595
FAILURE CODE [CA3571] AdBlue/DEF Pump Pressure Sensor High Error	40-599
FAILURE CODE [CA3572] AdBlue/DEF Pump Pressure Sensor Low Error.....	40-601
FAILURE CODE [CA3574] AdBlue/DEF Pump Pressure Too Low Error	40-603

FAILURE CODE [CA3575]	AdBlue/DEF Pump Pressure Too High Error.....	40-605
FAILURE CODE [CA3577]	AdBlue/DEF FCV Voltage High Error.....	40-607
FAILURE CODE [CA3578]	AdBlue/DEF FCV Voltage Low Error	40-609
FAILURE CODE [CA3582]	SCR Catalyst Efficiency Low Error 1.....	40-611
FAILURE CODE [CA3583]	SCR Outlet NOx Sensor Heater Warming up Error.....	40-617
FAILURE CODE [CA3596]	AdBlue/DEF Pump Pressure Unstable Error.....	40-619
FAILURE CODE [CA3649]	Turbo Outlet NOx Sensor Heater Warming up Error	40-621
FAILURE CODE [CA3681]	SCR Outlet NOx Sensor Power Voltage Error	40-623
FAILURE CODE [CA3682]	Turbo Outlet NOx Sensor Power Voltage Error.....	40-628
FAILURE CODE [CA3713]	AdBlue/DEF Line Heater 1 Voltage High Error.....	40-634
FAILURE CODE [CA3717]	SCR Outlet NOx Sensor Voltage Mismatch Error	40-637
FAILURE CODE [CA3718]	Turbo Outlet NOx Sensor Voltage Mismatch Error.....	40-638
FAILURE CODE [CA3725]	Turbo Outlet NOx Sensor Unstable Error.....	40-639
FAILURE CODE [CA3748]	Turbo Outlet NOx Sensor Stuck In Range Error	40-642
FAILURE CODE [CA3751]	SCR Catalyst Degradation Error.....	40-645
FAILURE CODE [CA3755]	AdBlue/DEF Dosing Performance Degradation Error	40-647
FAILURE CODE [CA3866]	AdBlue/DEF Low Concentration Error 2	40-649
FAILURE CODE [CA3867]	AdBlue/DEF Low Concentration Error 1	40-652
FAILURE CODE [CA3868]	AdBlue/DEF Tank Sensor Datalink Timeout Error	40-655
FAILURE CODE [CA3899]	SCR NH3 Sensor Circuit Error.....	40-659
FAILURE CODE [CA3911]	SCR NH3 Sensor Datalink Timeout Error	40-661
FAILURE CODE [CA3912]	SCR NH3 Sensor Heater Warming up Error	40-665
FAILURE CODE [CA3932]	SCR NH3 Sensor Heater Voltage High Error.....	40-667
FAILURE CODE [CA3933]	SCR NH3 Sensor Heater Voltage Low Error.....	40-669
FAILURE CODE [CA3934]	SCR NH3 Sensor Power Interrupt Error	40-671
FAILURE CODE [CA3935]	SCR NH3 Sensor Trim Resistance Error	40-674
FAILURE CODE [CA3936]	SCR NH3 Sensor Internal Circuit Error.....	40-676
FAILURE CODE [CA4151]	KDOC and KDPF Temperature Sensor Datalink Timeout Error	40-678
FAILURE CODE [CA4152]	SCR Temperature Sensor Datalink Timeout Error	40-683
FAILURE CODE [CA4155]	AdBlue/DEF Pump Heater Relay Voltage High Error.....	40-687
FAILURE CODE [CA4156]	AdBlue/DEF Pump Heater Relay Voltage Low Error.....	40-690
FAILURE CODE [CA4157]	AdBlue/DEF FCV Malfunction	40-693
FAILURE CODE [CA4158]	KDOC and KDPF Temperature Sensor Internal Circuit Error	40-695
FAILURE CODE [CA4159]	SCR Temperature Sensor Internal Circuit Error	40-696
FAILURE CODE [CA4161]	KDOC and KDPF Temperature Sensor ECU Voltage High Error	40-697
FAILURE CODE [CA4162]	KDOC and KDPF Temperature Sensor ECU Voltage Low Error	40-700
FAILURE CODE [CA4163]	KDOC and KDPF Temperature Sensor ECU Over Temperature Error.....	40-703
FAILURE CODE [CA4164]	SCR Temperature Sensor ECU Voltage High Error	40-706
FAILURE CODE [CA4165]	SCR Temperature Sensor ECU Voltage Low Error	40-708
FAILURE CODE [CA4166]	SCR Temperature Sensor ECU High Temperature Error	40-710
FAILURE CODE [CA4168]	AdBlue/DEF Pump Heater ON Stuck Error.....	40-712
FAILURE CODE [CA4169]	AdBlue/DEF Pump Heater OFF Stuck Error	40-715
FAILURE CODE [CA4171]	AdBlue/DEF Pump Thawing Error	40-717
FAILURE CODE [CA4249]	AdBlue/DEF Pump Temperature Sensor 1 In Range Error	40-720
FAILURE CODE [CA4251]	AdBlue/DEF Pump Temperature Sensor 2 In Range Error	40-722
FAILURE CODE [CA4259]	KDOC and KDPF Temperature Sensor Power Interrupt Error.....	40-724
FAILURE CODE [CA4261]	SCR Temperature Sensor Power Interrupt Error.....	40-727
FAILURE CODE [CA4277]	AdBlue/DEF Quality Sensor Liquid Distinction Impossible Error	40-730
FAILURE CODE [CA4281]	SCR NH3 Sensor Stuck Response Error.....	40-733
FAILURE CODE [CA4459]	AdBlue/DEF LineHeater Relay 2 Voltage High Error.....	40-737
FAILURE CODE [CA4461]	AdBlue/DEF LineHeater Relay 2 Voltage Low Error	40-740
FAILURE CODE [CA4658]	AdBlue/DEF Flow Low Error.....	40-743
FAILURE CODE [CA4731]	AdBlue/DEF Temperature Sensor Transmission Data Error.....	40-747
FAILURE CODE [CA4732]	AdBlue/DEF Level Sensor Transmission Data Error	40-748
FAILURE CODE [CA4739]	AdBlue/DEF Level Sensor Internal Circuit Error	40-749
FAILURE CODE [CA4768]	Fuel in AdBlue/DEF Tank Error.....	40-750
FAILURE CODE [CA4769]	AdBlue/DEF Level Measurement Impossible.....	40-752
FAILURE CODE [CA4842]	AdBlue/DEF High Concentration Error.....	40-755

FAILURE CODE [CA4952] System Operating Lamp Short Circuit (Engine Controller).....	40-758
FAILURE CODE [CA5115] AdBlue/DEF Line Heater 1 Voltage Low Error.....	40-760
FAILURE CODE [CA5383] Ash Accumulation High Error.....	40-763
FAILURE CODE [D130KA] Neutral Safety Relay Open Circuit.....	40-765
FAILURE CODE [D130KB] Neutral Safety Relay Short Circuit.....	40-768
FAILURE CODE [D190KA] Engine Controller Accessory Signal Hold Relay Open Circuit	40-770
FAILURE CODE [D190KB] Engine Controller Accessory Signal Hold Relay Short Circuit.....	40-772
FAILURE CODE [D19JKZ] Personal Code Relay Open or Short	40-774
FAILURE CODE [D811MC] KOMTRAX Malfunction.....	40-777
FAILURE CODE [D862KA] GPS Antenna Open Circuit	40-778
FAILURE CODE [D8ALKA] System Operating Lamp Open Circuit (KOMTRAX).....	40-779
FAILURE CODE [D8ALKB] System Operating Lamp Short Circuit (KOMTRAX).....	40-781
FAILURE CODE [D8AQKR] CAN 2 Defective Communication (KOMTRAX).....	40-783
FAILURE CODE [DAF0MB] Monitor ROM Abnormality.....	40-784
FAILURE CODE [DAF0MC] Monitor Malfunction	40-785
FAILURE CODE [DAF8KB] Camera Power Supply Short Circuit	40-786
FAILURE CODE [DAF9KQ] Model Selection Signal Mismatch (Monitor).....	40-787
FAILURE CODE [DAFGMC] GPS Module Malfunction	40-788
FAILURE CODE [DAFLKA] System Operating Lamp Open Circuit (Monitor)	40-789
FAILURE CODE [DAFLKB] System Operating Lamp Short Circuit (Monitor)	40-791
FAILURE CODE [DAFQKR] CAN 2 Defective Communication (Monitor)	40-793
FAILURE CODE [DAZ9KQ] Model Selection Signal Mismatch (A/C)	40-794
FAILURE CODE [DAZQKR] CAN 2 Defective Communication (A/C ECU).....	40-795
FAILURE CODE [DB2QKR] CAN 2 Defective Communication (Engine Controller).....	40-796
FAILURE CODE [DB2RKR] CAN 1 Defective Communication (Engine Controller)	40-802
FAILURE CODE [DB90KT] W/E Controller Internal Abnormality	40-808
FAILURE CODE [DB90MC] W/E Controller Malfunction	40-809
FAILURE CODE [DB91KK] W/E Controller Source Voltage Low Error	40-810
FAILURE CODE [DB92KK] W/E Controller Solenoid Power Voltage Low Error.....	40-813
FAILURE CODE [DB95KK] W/E Controller 5V Sensor 0 Power Voltage Out of Range	40-816
FAILURE CODE [DB97KK] W/E Controller 5V Sensor 1 Power Voltage Out of Range	40-819
FAILURE CODE [DB99KQ] Model Selection Signal Mismatch (W/E Controller).....	40-821
FAILURE CODE [DB9LKA] System Operating Lamp Open Circuit (W/E Controller)	40-823
FAILURE CODE [DB9LKB] System Operating Lamp Short Circuit (W/E Controller)	40-825
FAILURE CODE [DB9QKR] CAN 2 Defective Communication (W/E Controller)	40-827
FAILURE CODE [DB9RKR] CAN 1 Defective Communication (W/E Controller).....	40-828
FAILURE CODE [DBE0KT] P/T Controller Internal Abnormality.....	40-830
FAILURE CODE [DBE1KK] P/T Controller Source Voltage Low Error.....	40-831
FAILURE CODE [DBE2KK] P/T Controller Solenoid Power Voltage Low Error	40-834
FAILURE CODE [DBE5KK] P/T Controller 5V Sensor 0 Power Voltage Out of Range	40-837
FAILURE CODE [DBE6KK] P/T Controller 24V Sensor Power Voltage Out of Range.....	40-839
FAILURE CODE [DBE9KQ] Model Selection Signal Mismatch (P/T Controller)	40-841
FAILURE CODE [DBELKA] System Operating Lamp Open Circuit (P/T Controller).....	40-843
FAILURE CODE [DBELKB] System Operating Lamp Short Circuit (P/T Controller)	40-845
FAILURE CODE [DBEQKR] CAN 2 Defective Communication (P/T Controller).....	40-847
FAILURE CODE [DBERKR] CAN 1 Defective Communication (P/T Controller)	40-848
FAILURE CODE [DD12KA] Shift Up SW Open Circuit	40-850
FAILURE CODE [DD12KB] Shift Up SW Short Circuit	40-852
FAILURE CODE [DD13KA] Shift Down SW Open Circuit.....	40-854
FAILURE CODE [DD13KB] Shift Down SW Short Circuit.....	40-856
FAILURE CODE [DD14KA] Parking Brake Lever SW Open Circuit.....	40-858
FAILURE CODE [DD14KB] Parking Brake Lever SW Short Circuit.....	40-861
FAILURE CODE [DDDDKA] Brake Pedal SW Open Circuit	40-863
FAILURE CODE [DDDDKB] Brake Pedal SW Short Circuit.....	40-866
FAILURE CODE [DDDDKX] Brake Pedal SW Signal Mismatch	40-869
FAILURE CODE [DDKAKA] Blade Float SW Open Circuit	40-870
FAILURE CODE [DDKAKB] Blade Float SW Short Circuit	40-872
FAILURE CODE [DDKBKA] Blade Auto Pitch SW Open Circuit.....	40-874

FAILURE CODE [DDKBKB] Blade Auto Pitch SW Short Circuit	40-876
FAILURE CODE [DDKCL4] Ripper Tilt In SW Signal Mismatch	40-878
FAILURE CODE [DDKEL4] Ripper Tilt Back SW Signal Mismatch.....	40-881
FAILURE CODE [DDN7L4] Blade Pitch Back SW Signal Mismatch.....	40-884
FAILURE CODE [DDN8L4] Blade Pitch Dump SW Signal Mismatch	40-887
FAILURE CODE [DDNLKA] W/E Lock SW Open Circuit	40-890
FAILURE CODE [DDNLKB] W/E Lock SW Short Circuit	40-892
FAILURE CODE [DDTSL1] Stator Clutch Release Trouble	40-894
FAILURE CODE [DDTSLH] Stator Clutch Engage Trouble	40-896
FAILURE CODE [DFA4KX] Blade Lift Lever Potentiometer 1 and 2 Open Circuit or Hot Short Circuit	40-898
FAILURE CODE [DFA4KZ] Blade Lift Lever Potentiometer 1 and 2 Open Circuit or Hot Short Circuit.....	40-899
FAILURE CODE [DFA4L8] Blade Lift Lever Potentiometer 1 or 2 Signal Abnormality	40-900
FAILURE CODE [DFA5KA] Blade Lift Lever Potentiometer 1 Open Circuit	40-901
FAILURE CODE [DFA5KY] Blade Lift Lever Potentiometer 1 Hot Short Circuit.....	40-904
FAILURE CODE [DFA6KA] Blade Lift Lever Potentiometer 2 Open Circuit	40-906
FAILURE CODE [DFA6KY] Blade Lift Lever Potentiometer 2 Hot Short Circuit.....	40-909
FAILURE CODE [DFA7KX] Blade Tilt Lever Potentiometer 1 and 2 Open Circuit or Hot Short Circuit.....	40-911
FAILURE CODE [DFA7KZ] Blade Tilt Lever Potentiometer 1 and 2 Open Circuit or Hot Short Circuit.....	40-912
FAILURE CODE [DFA7L8] Blade Tilt Lever Potentiometer 1 or 2 Signal Abnormality	40-913
FAILURE CODE [DFA8KA] Blade Tilt Lever Potentiometer 1 Open Circuit	40-914
FAILURE CODE [DFA8KY] Blade Tilt Lever Potentiometer 1 Hot Short Circuit	40-917
FAILURE CODE [DFA9KA] Blade Tilt Lever Potentiometer 2 Open Circuit	40-919
FAILURE CODE [DFA9KY] Blade Tilt Lever Potentiometer 2 Hot Short Circuit.....	40-922
FAILURE CODE [DFAAKX] Ripper Lift Lever Potentiometer 1 and 2 Open Circuit or Hot Short Circuit....	40-924
FAILURE CODE [DFAAKZ] Ripper Lift Lever Potentiometer 1 and 2 Open Circuit or Hot Short Circuit....	40-925
FAILURE CODE [DFAAL8] Ripper Lift Lever Potentiometer 1 or 2 Signal Abnormality	40-926
FAILURE CODE [DFABKA] Ripper Lift Lever Potentiometer 1 Open Circuit	40-927
FAILURE CODE [DFABKY] Ripper Lift Lever Potentiometer 1 Hot Short Circuit	40-930
FAILURE CODE [DFACKA] Ripper Lift Lever Potentiometer 2 Open Circuit	40-932
FAILURE CODE [DFACKY] Ripper Lift Lever Potentiometer 2 Hot Short Circuit.....	40-935
FAILURE CODE [DGS1KA] Hydraulic Oil Temperature Sensor Open Circuit.....	40-937
FAILURE CODE [DGS1KX] Hydraulic Oil Temperature Sensor Input Signal Out of Range.....	40-939
FAILURE CODE [DGT1KA] T/C Oil Temperature Sensor Open Circuit.....	40-941
FAILURE CODE [DGT1KX] T/C Oil Temperature Sensor Input Signal Out of Range.....	40-944
FAILURE CODE [DH21KA] W/E Pump Pressure Sensor Open Circuit	40-946
FAILURE CODE [DH21KY] W/E Pump Pressure Sensor Hot Short Circuit.....	40-949
FAILURE CODE [DHA4KA] Air Cleaner Clog Sensor Open Circuit.....	40-951
FAILURE CODE [DHAAMA] KDPF Differential Pressure Sensor Frozen	40-953
FAILURE CODE [DHACMA] KDPF Outlet Pressure Sensor Frozen	40-954
FAILURE CODE [DHT5KA] T/C Inlet Pressure Sensor Open Circuit.....	40-955
FAILURE CODE [DHT5KY] T/C Inlet Pressure Sensor Hot Short Circuit	40-958
FAILURE CODE [DHT7KA] T/C Outlet Pressure Sensor Open Circuit.....	40-960
FAILURE CODE [DHT7KY] T/C Outlet Pressure Sensor Hot Short Circuit.....	40-963
FAILURE CODE [DK10KA] Fuel Control Dial Open Circuit	40-965
FAILURE CODE [DK10KB] Fuel Control Dial Short Circuit.....	40-968
FAILURE CODE [DK30KA] S/T Potentiometer 1 Open Circuit	40-970
FAILURE CODE [DK30KY] S/T Potentiometer 1 Hot Short Circuit.....	40-973
FAILURE CODE [DK30KX] S/T Potentiometer 1 and 2 Open Circuit or Hot Short Circuit	40-975
FAILURE CODE [DK30KZ] S/T Potentiometer 1 and 2 Open Circuit or Hot Short Circuit.....	40-976
FAILURE CODE [DK30L8] S/T Potentiometer 1 or 2 Signal Abnormality	40-977
FAILURE CODE [DK31KA] S/T Potentiometer 2 Open Circuit	40-978
FAILURE CODE [DK31KY] S/T Potentiometer 2 Hot Short Circuit.....	40-981

FAILURE CODE [DK40KA] Brake Pedal Potentiometer Open Circuit	40-983
FAILURE CODE [DK40KY] Brake Pedal Potentiometer Hot Short Circuit	40-986
FAILURE CODE [DK55KX] F/R Potentiometer 1 and 2 Open Circuit or Hot Short Circuit	40-988
FAILURE CODE [DK55KZ] F/R Potentiometer 1 and 2 Open Circuit or Hot Short Circuit	40-989
FAILURE CODE [DK55L8] F/R Potentiometer 1 or 2 Signal Abnormality	40-990
FAILURE CODE [DK56KA] F/R Potentiometer 1 Open Circuit	40-991
FAILURE CODE [DK56KY] F/R Potentiometer 1 Hot Short Circuit	40-994
FAILURE CODE [DK57KA] F/R Potentiometer 2 Open Circuit	40-996
FAILURE CODE [DK57KY] F/R Potentiometer 2 Hot Short Circuit	40-999
FAILURE CODE [DKH1KA] Inclination Angle Sensor Open Circuit	40-1001
FAILURE CODE [DKH1KY] Inclination Angle Sensor Hot Short Circuit	40-1004
FAILURE CODE [DLM3KA] Fan Speed Sensor Open Circuit	40-1006
FAILURE CODE [DLM3KB] Fan Speed Sensor Short Circuit	40-1008
FAILURE CODE [DLM3MB] Fan Speed Sensor Function Deterioration	40-1009
FAILURE CODE [DLT3KA] T/M Output Speed Sensor Open Circuit	40-1010
FAILURE CODE [DLT3KB] T/M Output Speed Sensor Ground Fault	40-1012
FAILURE CODE [DR21KX] Camera 2 Picture Reverse Drive Input Out of Range	40-1014
FAILURE CODE [DR31KX] Camera 3 Picture Reverse Drive Input Out of Range	40-1015
FAILURE CODE [DV20KB] Back Alarm Buzzer Short Circuit	40-1016
FAILURE CODE [DW7BKA] Fan Reverse Solenoid Open Circuit	40-1018
FAILURE CODE [DW7BKB] Fan Reverse Solenoid Short Circuit	40-1020
FAILURE CODE [DWN1KA] S/T Control Valve Right EPC Solenoid Open Circuit	40-1022
FAILURE CODE [DWN1KB] S/T Control Valve Right EPC Solenoid Short Circuit	40-1024
FAILURE CODE [DWN1KY] S/T Control Valve Right EPC Solenoid Hot Short Circuit	40-1026
FAILURE CODE [DWN2KA] S/T Control Valve Left EPC Solenoid Open Circuit	40-1027
FAILURE CODE [DWN2KB] S/T Control Valve Left EPC Solenoid Short Circuit	40-1029
FAILURE CODE [DWN2KY] S/T Control Valve Left EPC Solenoid Hot Short Circuit	40-1031
FAILURE CODE [DWN3KA] Sudden Stop Prevention Valve Solenoid Open Circuit	40-1032
FAILURE CODE [DWN3KB] Sudden Stop Prevention Valve Solenoid Short Circuit	40-1034
FAILURE CODE [DWN3KY] Sudden Stop Prevention Valve Solenoid Hot Short Circuit	40-1036
FAILURE CODE [DWN5KA] Fan Control Solenoid 1 Open Circuit	40-1038
FAILURE CODE [DWN5KB] Fan Control Solenoid 1 Short Circuit	40-1040
FAILURE CODE [DWN5KY] Fan Control Solenoid 1 Hot Short Circuit	40-1042
FAILURE CODE [DXA2KA] HSS Pump TVC Solenoid 1 Open Circuit	40-1044
FAILURE CODE [DXA2KB] HSS Pump TVC Solenoid 1 Short Circuit	40-1046
FAILURE CODE [DXA2KY] HSS Pump TVC Solenoid 1 Hot Short Circuit	40-1048
FAILURE CODE [DXH1KA] Lockup Clutch ECMV Solenoid Open Circuit	40-1050
FAILURE CODE [DXH1KB] Lockup Clutch ECMV Solenoid Short Circuit	40-1052
FAILURE CODE [DXH1KY] Lockup Clutch ECMV Solenoid Hot Short Circuit	40-1054
FAILURE CODE [DXH4KA] T/M 1st Clutch ECMV Solenoid Open Circuit	40-1056
FAILURE CODE [DXH4KB] T/M 1st Clutch ECMV Solenoid Short Circuit	40-1058
FAILURE CODE [DXH4KY] T/M 1st Clutch ECMV Solenoid Hot Short Circuit	40-1060
FAILURE CODE [DXH5KA] T/M 2nd Clutch ECMV Solenoid Open Circuit	40-1062
FAILURE CODE [DXH5KB] T/M 2nd Clutch ECMV Solenoid Short Circuit	40-1064
FAILURE CODE [DXH5KY] T/M 2nd Clutch ECMV Solenoid Hot Short Circuit	40-1066
FAILURE CODE [DXH6KA] T/M 3rd Clutch ECMV Solenoid Open Circuit	40-1068
FAILURE CODE [DXH6KB] T/M 3rd Clutch ECMV Solenoid Short Circuit	40-1070
FAILURE CODE [DXH6KY] T/M 3rd Clutch ECMV Solenoid Hot Short Circuit	40-1071
FAILURE CODE [DXH7KA] T/M Reverse Clutch ECMV Solenoid Open Circuit	40-1073
FAILURE CODE [DXH7KB] T/M Reverse Clutch ECMV Solenoid Short Circuit	40-1075
FAILURE CODE [DXH7KY] T/M Reverse Clutch ECMV Solenoid Hot Short Circuit	40-1077
FAILURE CODE [DXH8KA] T/M Forward Clutch ECMV Solenoid Open Circuit	40-1079
FAILURE CODE [DXH8KB] T/M Forward Clutch ECMV Solenoid Short Circuit	40-1081
FAILURE CODE [DXH8KY] T/M Forward Clutch ECMV Solenoid Hot Short Circuit	40-1083
FAILURE CODE [DXHBKA] Right Brake ECMV Solenoid Open Circuit	40-1085
FAILURE CODE [DXHBKB] Right Brake ECMV Solenoid Short Circuit	40-1087
FAILURE CODE [DXHBKY] Right Brake ECMV Solenoid Hot Short Circuit	40-1089
FAILURE CODE [DXHCKA] Left Brake ECMV Solenoid Open Circuit	40-1091

FAILURE CODE [DXHCKB] Left Brake ECMV Solenoid Short Circuit.....	40-1093
FAILURE CODE [DXHCKY] Left Brake ECMV Solenoid Hot Short Circuit	40-1095
FAILURE CODE [DXHRKA] Blade Lift Raise EPC Solenoid Open Circuit.....	40-1097
FAILURE CODE [DXHRKB] Blade Lift Raise EPC Solenoid Short Circuit.....	40-1099
FAILURE CODE [DXHRKY] Blade Lift Raise EPC Solenoid Hot Short Circuit	40-1100
FAILURE CODE [DXHSKA] Blade Lift Lower EPC Solenoid Open Circuit	40-1102
FAILURE CODE [DXHSKB] Blade Lift Lower EPC Solenoid Short Circuit.....	40-1104
FAILURE CODE [DXHSKY] Blade Lift Lower EPC Solenoid Hot Short Circuit	40-1105
FAILURE CODE [DXHTKA] Blade Tilt Right Head EPC Solenoid Open Circuit.....	40-1107
FAILURE CODE [DXHTKB] Blade Tilt Right Head EPC Solenoid Short Circuit.....	40-1109
FAILURE CODE [DXHTKY] Blade Tilt Right Head EPC Solenoid Hot Short Circuit	40-1111
FAILURE CODE [DXHUKA] Blade Tilt Right Bottom EPC Solenoid Open Circuit.....	40-1113
FAILURE CODE [DXHUKB] Blade Tilt Right Bottom EPC Solenoid Short Circuit.....	40-1115
FAILURE CODE [DXHUKY] Blade Tilt Right Bottom EPC Solenoid Hot Short Circuit	40-1117
FAILURE CODE [DXHWKA] Ripper Lift Raise EPC Solenoid Open Circuit.....	40-1119
FAILURE CODE [DXHWKB] Ripper Lift Raise EPC Solenoid Short Circuit.....	40-1121
FAILURE CODE [DXHWKY] Ripper Lift Raise EPC Solenoid Hot Short Circuit	40-1122
FAILURE CODE [DXHXKA] Ripper Lift Lower EPC Solenoid Open Circuit	40-1124
FAILURE CODE [DXHXKB] Ripper Lift Lower EPC Solenoid Short Circuit	40-1126
FAILURE CODE [DXHXKY] Ripper Lift Lower EPC Solenoid Hot Short Circuit.....	40-1127
FAILURE CODE [DXHYKA] Ripper Tilt In EPC Solenoid Open Circuit.....	40-1129
FAILURE CODE [DXHYKB] Ripper Tilt In EPC Solenoid Short Circuit.....	40-1131
FAILURE CODE [DXHYKY] Ripper Tilt In EPC Solenoid Hot Short Circuit.....	40-1132
FAILURE CODE [DXHZKA] Ripper Tilt Back EPC Solenoid Open Circuit	40-1134
FAILURE CODE [DXHZKB] Ripper Tilt Back EPC Solenoid Short Circuit	40-1136
FAILURE CODE [DXHZKY] Ripper Tilt Back EPC Solenoid Hot Short Circuit.....	40-1137
FAILURE CODE [DXJ4KA] W/E Lock Solenoid Open Circuit	40-1139
FAILURE CODE [DXJ4KB] W/E Lock Solenoid Short Circuit	40-1141
FAILURE CODE [DXJ8KA] Blade Tilt Left Bottom EPC Solenoid Open Circuit	40-1142
FAILURE CODE [DXJ8KB] Blade Tilt Left Bottom EPC Solenoid Short Circuit	40-1144
FAILURE CODE [DXJ8KY] Blade Tilt Left Bottom EPC Solenoid Hot Short Circuit.....	40-1146
FAILURE CODE [DXJ9KA] Blade Tilt Left Head EPC Solenoid Open Circuit	40-1148
FAILURE CODE [DXJ9KB] Blade Tilt Left Head EPC Solenoid Short Circuit	40-1150
FAILURE CODE [DXJ9KY] Blade Tilt Left Head EPC Solenoid Hot Short Circuit.....	40-1152
FAILURE CODE [DXJAKA] Quick drop solenoid: Open	40-1154
FAILURE CODE [DXJAKB] Quick Drop EPC Solenoid Short Circuit.....	40-1156
FAILURE CODE [DXJAKY] Quick Drop EPC Solenoid Hot Short Circuit.....	40-1158
FAILURE CODE [DXJBKA] T/C Stator Clutch ECMV Solenoid Open Circuit	40-1160
FAILURE CODE [DXJBKB] T/C Stator Clutch ECMV Solenoid Short Circuit.....	40-1162
FAILURE CODE [DXJBKY] T/C Stator Clutch ECMV Solenoid Hot Short Circuit	40-1164
TROUBLESHOOTING OF ELECTRICAL SYSTEM (E-MODE)	40-1166
E-1 ENGINE DOES NOT START (ENGINE DOES NOT CRANK)	40-1166
E-2 MANUAL PREHEATING SYSTEM DOES NOT WORK.....	40-1173
E-3 AUTOMATIC PREHEATING SYSTEM DOES NOT WORK	40-1176
E-4 WHILE PREHEATING IS WORKING, PREHEATING MONITOR DOES NOT LIGHT UP.....	40-1178
E-5 WHEN STARTING SWITCH IS TURNED TO ON POSITION, MACHINE MONITOR DISPLAYS NOTHING.....	40-1180
E-6 WHILE STARTING SWITCH IS TURNED TO ON POSITION (WITH ENGINE STOPPED), RADI- ATOR COOLANT LEVEL MONITOR LIGHTS UP IN YELLOW	40-1184
E-7 AIR CLEANER CLOGGING MONITOR LIGHTS UP IN YELLOW WHILE ENGINE IS RUNNING.....	40-1186
E-8 CHARGE LEVEL MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING	40-1187
E-9 ENGINE COOLANT TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUN- NING	40-1189
E-10 ENGINE OIL PRESSURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING	40-1190
E-11 POWER TRAIN OIL TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUN- NING	40-1191

E-12 HYDRAULIC OIL TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING	40-1192
E-13 ENGINE COOLANT TEMPERATURE GAUGE DOES NOT INDICATE CORRECT TEMPERATURE	40-1193
E-14 FUEL LEVEL GAUGE DOES NOT INDICATE CORRECT LEVEL	40-1194
E-15 POWER TRAIN OIL TEMPERATURE GAUGE DOES NOT INDICATE CORRECT TEMPERATURE	40-1197
E-16 HYDRAULIC OIL TEMPERATURE GAUGE DOES NOT INDICATE CORRECT TEMPERATURE..	40-1198
E-17 OPERATION MODE DOES NOT CHANGE.....	40-1199
E-18 OPERATION MODE DOES NOT CHANGE.....	40-1200
E-19 OPERATING CUSTOMIZE SWITCH DOES NOT DISPLAY CUSTOMIZE SCREEN.....	40-1201
E-20 MODIFYING SETTING ON CUSTOMIZE SCREEN DOES NOT CHANGE SETTING OF MACHINE	40-1202
E-21 SOME AREAS OF MACHINE MONITOR SCREEN ARE NOT DISPLAYED	40-1203
E-22 ALARM BUZZER DOES NOT SOUND OR DOES NOT STOP SOUNDING.....	40-1204
E-23 SERVICE METER IS NOT DISPLAYED, WHILE STARTING SWITCH IS IN OFF POSITION.....	40-1205
E-24 SERVICE MODE CANNOT BE SELECTED	40-1206
E-25 HORN DOES NOT SOUND.....	40-1207
E-26 HORN DOES NOT STOP SOUNDING.....	40-1209
E-27 BACKUP ALARM DOES NOT SOUND	40-1210
E-28 BACKUP ALARM DOES NOT STOP SOUNDING.....	40-1211
E-29 HEADLAMP DOES NOT LIGHT UP	40-1212
E-30 REAR LAMP AND RIPPER POINT LAMP DO NOT LIGHT UP	40-1216
E-31 NO WIPER OPERATES CONTINUOUSLY OR INTERMITTENTLY	40-1219
E-32 FRONT WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1224
E-33 REAR WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1228
E-34 LEFT DOOR WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1232
E-35 RIGHT DOOR WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1236
E-36 FUEL FEED PUMP DOES NOT OPERATE OR STOP AUTOMATICALLY	40-1240
E-37 FAN DOES NOT ROTATE IN REVERSE.....	40-1241
E-38 GEAR CANNOT BE SHIFTED	40-1242
E-39 FRONT WASHER DOES NOT OPERATE.....	40-1243
E-40 REAR WASHER DOES NOT OPERATE.....	40-1246
E-41 LEFT DOOR WASHER DOES NOT OPERATE.....	40-1249
E-42 RIGHT DOOR WASHER DOES NOT OPERATE	40-1252
E-43 RIPPER PIN PULLER DOES NOT WORK	40-1255
E-44 KOMTRAX SYSTEM DOES NOT OPERATE NORMALLY	40-1257
TROUBLESHOOTING FOR HYDRAULIC AND MECHANICAL SYSTEMS (H MODE)	40-1258
INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (H MODE).....	40-1258
SYSTEM CHART OF HYDRAULIC AND MECHANICAL SYSTEMS	40-1259
FAILURE MODE AND CAUSE TABLE.....	40-1263
H-1 MACHINE LACKS POWER (INSUFFICIENT DRAWBAR PULL)	40-1271
H-2 MACHINE DOES NOT TRAVEL (AT 2ND OR 3RD GEAR SPEED).....	40-1274
H-3 MACHINE DOES NOT MOVE OFF AT ALL GEAR SPEEDS	40-1276
H-4 MACHINE TRAVELS ONLY IN ONE DIRECTION, EITHER FORWARD OR IN REVERSE	40-1279
H-5 LARGE TIME LAG IS IN GEAR SHIFTING OR DIRECTIONAL CHANGE	40-1281
H-6 MACHINE CANNOT BE STEERED (MACHINE DOES NOT TURN LEFT OR RIGHT).....	40-1283
H-7 STEERING SPEED OR POWER IS INSUFFICIENT.....	40-1285
H-8 BRAKE DOES NOT WORK.....	40-1287
H-9 TORQUE CONVERTER LOCKUP CLUTCH DOES NOT ENGAGE	40-1288
H-10 POWER TRAIN OIL OVERHEATS.....	40-1289

H-11 UNUSUAL NOISE IS HEARD FROM AROUND WORK EQUIPMENT AND HSS PUMP OR HSS MOTOR	40-1291
H-12 ALL WORK EQUIPMENTS OPERATE SLOWLY	40-1292
H-13 ALL WORK EQUIPMENTS DO NOT OPERATE	40-1294
H-14 BLADE LIFT SPEED OR POWER IS LOW	40-1296
H-15 BLADE TILT SPEED OR POWER IS LOW	40-1298
H-16 RIPPER LIFT SPEED OR POWER IS LOW	40-1300
H-17 RIPPER TILT SPEED OR POWER IS LOW	40-1302
H-18 HYDRAULIC DRIFT OF LIFTED BLADE IS LARGE	40-1304
H-19 HYDRAULIC DRIFT OF TILTED BLADE IS LARGE	40-1305
H-20 HYDRAULIC DRIFT OF LIFTED RIPPER IS LARGE	40-1306
H-21 RIPPER PIN PULLER CYLINDER DOES NOT OPERATE	40-1307
H-22 BLADE PITCH CYLINDER DOES NOT OPERATE	40-1308
H-23 FAN SPEED IS ABNORMAL (TOO HIGH OR LOW, OR STATIONARY)	40-1309
H-24 UNUSUAL NOISE IS HEARD FROM AROUND FAN	40-1310
TROUBLESHOOTING OF ENGINE (S-MODE)	40-1311
INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (S MODE)	40-1311
S-1 ENGINE DOES NOT CRANK WHEN STARTING SWITCH IS TURNED TO START POSITION	40-1312
S-2 ENGINE CRANKS BUT NO EXHAUST GAS COMES OUT	40-1313
S-3 FUEL IS BEING INJECTED BUT ENGINE DOES NOT START (MISFIRING: ENGINE CRANKS BUT DOES NOT START)	40-1314
S-4 ENGINE STARTABILITY IS POOR	40-1315
S-5 ENGINE DOES NOT PICK UP SMOOTHLY	40-1317
S-6 ENGINE STOPS DURING OPERATION	40-1319
S-7 ENGINE RUNS ROUGH OR IS UNSTABLE	40-1321
S-8 ENGINE LACKS POWER	40-1322
S-9 KDPF GETS CLOGGED IN A SHORT TIME	40-1324
S-10 ENGINE OIL CONSUMPTION IS EXCESSIVE	40-1326
S-11 OIL BECOMES CONTAMINATED QUICKLY	40-1327
S-12 FUEL CONSUMPTION IS EXCESSIVE	40-1328
S-13 OIL IS IN COOLANT (OR COOLANT SPURTS BACK OR COOLANT LEVEL GOES DOWN)	40-1329
S-14 OIL PRESSURE DROPS	40-1330
S-15 FUEL MIXES INTO ENGINE OIL	40-1332
S-16 WATER MIXES INTO ENGINE OIL (MILKY)	40-1333
S-17 COOLANT TEMPERATURE RISES TOO HIGH (OVERHEATING)	40-1334
S-18 UNUSUAL NOISE IS HEARD	40-1335
S-19 VIBRATION IS EXCESSIVE	40-1336
S-20 AIR CANNOT BE BLED FROM FUEL CIRCUIT	40-1337
S-21 ACTIVE REGENERATION IS EXECUTED FREQUENTLY	40-1338
S-22 ACTIVE REGENERATION TAKES TIME	40-1340
S-23 WHITE SMOKE IS EXHAUSTED DURING ACTIVE REGENERATION	40-1341
S-24 AdBlue/DEF CONSUMPTION IS EXCESSIVE	40-1342
S-25 THERE IS UNUSUAL SMELL (IRRITATING ODOR)	40-1344
S-26 FOREIGN MATERIALS ENTER AdBlue/DEF (AdBlue/DEF INCREASES)	40-1345
50 DISASSEMBLY AND ASSEMBLY	50-1
CONTENTS	50-2
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY	50-8
HOW TO READ THIS MANUAL	50-8
COATING MATERIALS LIST	50-9
SPECIAL TOOLS LIST	50-14
SKETCHES OF SPECIAL TOOLS	50-39
ENGINE AND COOLING SYSTEM	50-62
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY	50-62
REMOVE AND INSTALL INJECTOR ASSEMBLY	50-70
REMOVE AND INSTALL FUEL DOSER ASSEMBLY	50-85
REMOVE AND INSTALL CYLINDER HEAD ASSEMBLY	50-87

REMOVE AND INSTALL EGR VALVE ASSEMBLY.....	50-114
REMOVE AND INSTALL EGR COOLER ASSEMBLY.....	50-117
REMOVE AND INSTALL STARTING MOTOR ASSEMBLY	50-122
REMOVE AND INSTALL ALTERNATOR BELT	50-125
REMOVE AND INSTALL RADIATOR ASSEMBLY	50-128
REMOVE AND INSTALL HYDRAULIC OIL COOLER ASSEMBLY	50-137
REMOVE AND INSTALL AFTERCOOLER ASSEMBLY.....	50-140
REMOVE AND INSTALL COOLING FAN DRIVE ASSEMBLY	50-144
REMOVE AND INSTALL COOLING FAN MOTOR ASSEMBLY	50-148
REMOVE AND INSTALL ENGINE ASSEMBLY.....	50-151
REMOVE AND INSTALL ENGINE FRONT OIL SEAL	50-165
REMOVE AND INSTALL ENGINE REAR OIL SEAL.....	50-171
REMOVE AND INSTALL ENGINE HOOD ASSEMBLY	50-177
REMOVE AND INSTALL FUEL TANK ASSEMBLY	50-184
REMOVE AND INSTALL AdBlue/DEF TANK ASSEMBLY	50-191
REMOVE AND INSTALL AdBlue/DEF TANK SENSOR FLANGE ASSEMBLY.....	50-202
REMOVE AND INSTALL AdBlue/DEF TANK SENSOR	50-213
REMOVE AND INSTALL AdBlue/DEF TANK STRAINER	50-215
REMOVE AND INSTALL KDPF ASSEMBLY.....	50-217
DISASSEMBLE AND ASSEMBLE OF KDPF ASSEMBLY	50-225
REMOVE AND INSTALL SCR ASSEMBLY.....	50-234
REMOVE AND INSTALL KDPF, SCR ASSEMBLY.....	50-242
REMOVE AND INSTALL KCCV ASSEMBLY	50-253
REMOVE AND INSTALL AdBlue/DEF MIXING TUBE	50-258
REMOVE AND INSTALL AdBlue/DEF INJECTOR.....	50-266
REMOVE AND INSTALL AdBlue/DEF PUMP	50-272
REMOVE AND INSTALL AdBlue/DEF HOSE	50-279
REMOVE AND INSTALL AIR CLEANER ASSEMBLY.....	50-291
REMOVE AND INSTALL AIR CONDITIONER COMPRESSOR ASSEMBLY	50-294
REMOVE AND INSTALL AIR CONDITIONER CONDENSER ASSEMBLY	50-297
POWER TRAIN.....	50-301
REMOVE AND INSTALL DAMPER ASSEMBLY	50-301
DISASSEMBLE AND ASSEMBLE DAMPER ASSEMBLY	50-306
REMOVE AND INSTALL POWER TRAIN UNIT ASSEMBLY	50-311
DISCONNECTING AND CONNECTING POWER TRAIN UNIT ASSEMBLY	50-321
DISASSEMBLE AND ASSEMBLE PTO ASSEMBLY	50-333
DISASSEMBLE AND ASSEMBLE TORQUE CONVERTER ASSEMBLY	50-344
DISASSEMBLE AND ASSEMBLE TRANSMISSION ASSEMBLY.....	50-358
DISASSEMBLE AND ASSEMBLE HSS ASSEMBLY	50-382
REMOVAL AND INSTALLATION OF HSS MOTOR	50-407
REMOVE AND INSTALL FINAL DRIVE ASSEMBLY	50-410
DISASSEMBLE AND ASSEMBLE FINAL DRIVE ASSEMBLY.....	50-415
UNDERCARRIAGE AND FRAME.....	50-435
REMOVE AND INSTALL TRACK FRAME ASSEMBLY.....	50-435
REMOVE AND INSTALL IDLER ASSEMBLY.....	50-445
DISASSEMBLE AND ASSEMBLE IDLER ASSEMBLY	50-448
REMOVE AND INSTALL RECOIL SPRING ASSEMBLY	50-454
DISASSEMBLE AND ASSEMBLE RECOIL SPRING.....	50-455
REMOVE AND INSTALL TRACK ROLLER ASSEMBLY	50-462
DISASSEMBLE AND ASSEMBLE TRACK ROLLER ASSEMBLY	50-466
REMOVE AND INSTALL NO. 1 BOGIE ASSEMBLY.....	50-470
REMOVE AND INSTALL NO. 2, 3, 4 BOGIE ASSEMBLIES	50-479
DISASSEMBLE AND ASSEMBLE TRACK ROLLER BOGEY ASSEMBLY	50-488
REMOVE AND INSTALL CARRIER ROLLER ASSEMBLY	50-492
DISASSEMBLE AND ASSEMBLE CARRIER ROLLER ASSEMBLY	50-495
REMOVE AND INSTALL PIVOT SHAFT ASSEMBLY.....	50-500
SEPARATION AND CONNECTION OF TRACK ASSEMBLY.....	50-503
DISASSEMBLY AND ASSEMBLY OF TRACK ASSEMBLY GENERALLY	50-508

DISASSEMBLE AND ASSEMBLE ONE TRACK LINK ASSEMBLY IN FIELD.....	50-521
DISASSEMBLE AND ASSEMBLE MASTER LINK.....	50-527
REMOVE AND INSTALL EQUALIZER BAR ASSEMBLY.....	50-531
DISASSEMBLE AND ASSEMBLE EQUALIZER BAR BUSHINGS.....	50-535
REMOVE AND INSTALL SPROCKET.....	50-537
HYDRAULIC SYSTEM.....	50-538
REMOVE AND INSTALL HYDRAULIC TANK ASSEMBLY.....	50-538
REMOVE AND INSTALL WORK EQUIPMENT PUMP AND HSS PUMP ASSEMBLY.....	50-541
REMOVE AND INSTALL POWER TRAIN PUMP AND STEERING LUBRICATION PUMP ASSEMBLY ..	50-545
REMOVE AND INSTALL COOLING FAN PUMP ASSEMBLY.....	50-549
REMOVE AND INSTALL SCAVENGING PUMP ASSEMBLY.....	50-554
REMOVE AND INSTALL CONTROL VALVE ASSEMBLY.....	50-556
WORK EQUIPMENT.....	50-560
REMOVE AND INSTALL BLADE ASSEMBLY.....	50-560
DISASSEMBLE AND ASSEMBLE BLADE ASSEMBLY.....	50-565
DISASSEMBLE AND ASSEMBLE FIXED MULTI-SHANK RIPPER ASSEMBLY.....	50-571
DISASSEMBLE AND ASSEMBLE GIANT RIPPER ASSEMBLY.....	50-576
METHOD FOR DISASSEMBLING AND ASSEMBLING BLADE LIFT CYLINDER ASSEMBLY.....	50-582
METHOD FOR DISASSEMBLING AND ASSEMBLING BLADE TILT CYLINDER ASSEMBLY.....	50-589
METHOD FOR DISASSEMBLING AND ASSEMBLING RIPPER CYLINDER ASSEMBLY.....	50-595
CAB AND ITS ATTACHMENTS.....	50-602
REMOVE AND INSTALL OPERATOR'S CAB ASSEMBLY.....	50-602
REMOVE AND INSTALL OPERATOR'S CAB GLASS (ADHERED GLASS).....	50-621
REMOVE AND INSTALL AIR CONDITIONER UNIT ASSEMBLY.....	50-628
REMOVE AND INSTALL OPERATOR'S SEAT.....	50-641
REMOVE AND INSTALL SEAT BELT.....	50-643
ELECTRICAL SYSTEM.....	50-645
REMOVE AND INSTALL ENGINE CONTROLLER ASSEMBLY.....	50-645
REMOVE AND INSTALL POWER TRAIN CONTROLLER ASSEMBLY.....	50-651
REMOVE AND INSTALL WORK EQUIPMENT CONTROLLER ASSEMBLY.....	50-654
REMOVE AND INSTALL MACHINE MONITOR ASSEMBLY.....	50-657
REMOVE AND INSTALL MASS AIR FLOW AND TEMPERATURE SENSOR.....	50-660
REMOVE AND INSTALL KCCV CRANKCASE PRESSURE SENSOR.....	50-663
REMOVE AND INSTALL SCR TEMPERATURE SENSOR.....	50-665
REMOVE AND INSTALL BATTERY RELAY.....	50-669
REMOVE AND INSTALL KOMTRAX TERMINAL ASSEMBLY.....	50-682
60 MAINTENANCE STANDARD.....	60-1
CONTENTS.....	60-2
ENGINE AND COOLING SYSTEM.....	60-4
MAINTENANCE STANDARD OF ENGINE MOUNT.....	60-4
MAINTENANCE STANDARD OF DAMPER.....	60-6
MAINTENANCE STANDARD OF COOLING SYSTEM.....	60-8
MAINTENANCE STANDARD OF COOLING FAN PUMP.....	60-10
MAINTENANCE STANDARD OF COOLING FAN MOTOR.....	60-14
POWER TRAIN.....	60-16
MAINTENANCE STANDARD OF UNIVERSAL JOINT.....	60-16
MAINTENANCE STANDARD OF POWER TRAIN MOUNT.....	60-17
MAINTENANCE STANDARD OF TORQUE CONVERTER AND PTO.....	60-19
MAINTENANCE STANDARD OF TORQUE CONVERTER CONTROL VALVE.....	60-26
MAINTENANCE STANDARD OF LOCKUP CLUTCH ECMV.....	60-27
MAINTENANCE STANDARD OF STATOR CLUTCH ECMV.....	60-28
MAINTENANCE STANDARD OF TRANSMISSION.....	60-29
MAINTENANCE STANDARD OF TRANSMISSION ECMV.....	60-34
MAINTENANCE STANDARD OF MAIN RELIEF VALVE AND TORQUE CONVERTER RELIEF VALVE ..	60-35
MAINTENANCE STANDARD OF TRANSMISSION LUBRICATION RELIEF VALVE.....	60-36
MAINTENANCE STANDARD OF BEVEL GEAR SHAFT, HSS, AND BRAKE.....	60-37

MAINTENANCE STANDARD OF BRAKE CONTROL VALVE	60-43
MAINTENANCE STANDARD OF BRAKE ECMV	60-45
MAINTENANCE STANDARD OF BRAKE SOLENOID VALVE	60-46
MAINTENANCE STANDARD OF SUDDEN STOP PREVENTION VALVE	60-47
MAINTENANCE STANDARD OF FINAL DRIVE	60-48
MAINTENANCE STANDARD OF SPROCKET	60-51
MAINTENANCE STANDARD OF SPROCKET TOOTH PROFILE FULL-SCALE DRAWING	60-52
UNDERCARRIAGE AND FRAME	60-54
MAINTENANCE STANDARD OF MAIN FRAME	60-54
MAINTENANCE STANDARD OF SUSPENSION	60-56
MAINTENANCE STANDARD OF TRACK FRAME AND IDLER CUSHION	60-58
MAINTENANCE STANDARD OF IDLER	60-60
MAINTENANCE STANDARD OF TRACK ROLLER	60-62
MAINTENANCE STANDARD OF CARRIER ROLLER	60-64
MAINTENANCE STANDARD OF TRACK SHOE (SEALED AND LUBRICATED TYPE)	60-65
MAINTENANCE STANDARD OF TRACK SHOE (GREASE FILLING TYPE)	60-67
MAINTENANCE STANDARD OF SINGLE SHOE AND HEAVY DUTY SHOE	60-69
HYDRAULIC SYSTEM	60-70
MAINTENANCE STANDARD OF HYDRAULIC TANK	60-70
MAINTENANCE STANDARD OF SCAVENGING PUMP	60-71
MAINTENANCE STANDARD OF STEERING LUBRICATION PUMP AND POWER TRAIN PUMP	60-72
MAINTENANCE STANDARD OF WORK EQUIPMENT AND HSS PUMP	60-74
MAINTENANCE STANDARD OF PC-EPC VALVE	60-76
MAINTENANCE STANDARD OF HSS MOTOR	60-77
MAINTENANCE STANDARD OF CONTROL VALVE	60-80
MAINTENANCE STANDARD OF SELF-PRESSURE REDUCING VALVE	60-94
MAINTENANCE STANDARD OF QUICK DROP VALVE	60-97
WORK EQUIPMENT	60-99
MAINTENANCE STANDARD OF CYLINDER STAY	60-99
MAINTENANCE STANDARD OF FRONT WORK EQUIPMENT	60-101
MAINTENANCE STANDARD OF CUTTING EDGE AND END BIT	60-103
MAINTENANCE STANDARD OF BLADE LIFT CYLINDER	60-104
MAINTENANCE STANDARD OF BLADE TILT CYLINDER	60-105
MAINTENANCE STANDARD OF VARIABLE MULTI-SHANK RIPPER	60-106
MAINTENANCE STANDARD OF VARIABLE GIANT RIPPER	60-108
MAINTENANCE STANDARD OF RIPPER LIFT CYLINDER	60-110
MAINTENANCE STANDARD OF RIPPER TILT CYLINDER	60-111
CAB AND ITS ATTACHMENTS	60-112
MAINTENANCE STANDARD OF CAB MOUNT	60-112
80 APPENDIX	80-1
CONTENTS	80-2
AIR CONDITIONER SYSTEM	80-4
PRECAUTIONS FOR REFRIGERANT	80-4
AIR CONDITIONER COMPONENT	80-5
SPECIFICATIONS OF AIR CONDITIONER	80-7
CONFIGURATION AND FUNCTION OF REFRIGERATION CYCLE	80-8
OUTLINE OF REFRIGERATION CYCLE	80-9
COMPONENT PARTS OF AIR CONDITIONER SYSTEM	80-11
AIR CONDITIONER UNIT	80-11
COMPONENT PARTS OF AIR CONDITIONER UNIT	80-15
AIR CONDITIONER CONTROLLER	80-18
COMPRESSOR	80-19
CONDENSER	80-21
RECEIVER DRIER	80-22
SENSORS FOR AIR CONDITIONER SYSTEM	80-23
EXPLANATION OF PROCEDURE FOR TESTING AND TROUBLESHOOTING OF AIR CONDITIONER	80-25