

# **Shop Manual**

# **D51EXi-22**

# **D51PXi-22**

## **CRAWLER DOZER**

**SERIAL NUMBERS D51EXi-22 B13500 and up**  
**ENGINE 6D107E-1**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2014 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

July 2014



# SHOP MANUAL

# BULLDOZER

**D51EXi-22**

**D51PXi-22**

Model	Serial Number
-------	---------------

D51EXi-22	B13500 and up
-----------	---------------

D51PXi-22	B13500 and up
-----------	---------------

---

## 00 INDEX AND FOREWORD

---

---

## INDEX

## 00 INDEX AND FOREWORD

FOREWORD, SAFETY AND GENERAL INFORMATION . . . . .	0-15
IMPORTANT SAFETY NOTICE . . . . .	0-15
HOW TO READ THE SHOP MANUAL . . . . .	0-23
EXPLANATION OF TERMS FOR MAINTENACE STANDARD . . . . .	0-25
HANDLING EQUIPMENT OF FUEL SYSTEM DEVICES . . . . .	0-27
HANDLING OF INTAKE SYSTEM PARTS . . . . .	0-27
HANDLING OF HYDRAULIC EQUIPMENT . . . . .	0-28
METHOD OF DISCONNECTING AND CONNECTING OF PUSH-PULL TYPE COUPLER . . . . .	0-30
HANDLING OF ELECTRICAL EQUIPMENT . . . . .	0-33
HOW TO READ ELECTRIC WIRE CODE . . . . .	0-41
PRECAUTIONS WHEN PERFORMING OPERATION . . . . .	0-44
PRACTICAL USE OF KOMTRAX . . . . .	0-49
STANDARD TIGHTENING TORQUE TABLE . . . . .	0-50
LIST OF ABBREVIATION . . . . .	0-56
CONVERSION TABLE . . . . .	0-61
01 SPECIFICATION	
TABLE OF CONTENTS . . . . .	1-2
SPECIFICATION DRAWING . . . . .	1-3
D51EXi, PXi-22 POWER ANGLE, POWER TILT DOZER WITH ROPS CAB . . . . .	1-3
SPECIFICATION . . . . .	1-4
WEIGHT TABLE . . . . .	1-8
TABLE OF FUEL, COOLANT AND LUBRICANTS . . . . .	1-10
RECOMMENDED PRODUCTS OTHER THAN KOMATSU GENUINE OILS . . . . .	1-12
10 STRUCTURE AND FUNCTION	
TABLE OF CONTENTS . . . . .	10-2
ENGINE AND COOLING SYSTEM . . . . .	10-5
ENGINE RELATED PARTS . . . . .	10-5
COOLING SYSTEM . . . . .	10-7
COOLING FAN PUMP - SEE HYDRAULIC SYSTEM 2 (WORK EQUIPMENT AND FAN PUMP) . . . . .	10-10
COOLING FAN MOTOR . . . . .	10-11
OIL COOLER BYPASS VALVE . . . . .	10-16
CHARGE SAFETY VALVE . . . . .	10-19
POWER TRAIN . . . . .	10-21
POWER TRAIN . . . . .	10-21
HST CLOSED CIRCUIT . . . . .	10-23
DAMPER . . . . .	10-24
HST HYDRAULIC EQUIPMENT ARRANGEMENT DIAGRAM . . . . .	10-25
STEERING AND BRAKE CONTROL . . . . .	10-26
HST PUMP . . . . .	10-28
SAFETY-SUCTION VALVE . . . . .	10-36
TOWING VALVE . . . . .	10-39
HST MOTOR . . . . .	10-40
MOTOR CONTROL VALVE . . . . .	10-52
SOLENOID VALVE (3-SPOOL), EPC VALVE (2-SPOOL) AND TOWING VALVE . . . . .	10-52
SOLENOID VALVE . . . . .	10-54
EPC VALVE . . . . .	10-55
CHARGE PUMP . . . . .	10-59
FINAL DRIVE . . . . .	10-61
PATH OF POWER TRANSMISSION . . . . .	10-64
UNDER CARRIAGE AND FRAME . . . . .	10-65
MAIN FRAME . . . . .	10-65
TRACK FRAME AND RECOIL SPRING . . . . .	10-66
IDLER . . . . .	10-68
TRACK ROLLER . . . . .	10-70
CARRIER ROLLER . . . . .	10-74
SPROCKET . . . . .	10-76
SINGLE SHOE . . . . .	10-82

SUSPENSION .....	10-83
HYDRAULIC SYSTEM .....	10-86
HYDRAULIC COMPONENT LAYOUT OF WORK EQUIPMENT .....	10-86
WORK EQUIPMENT CONTROL SYSTEM .....	10-87
HYDRAULIC SYSTEM (WORK EQUIPMENT) .....	10-89
WORK EQUIPMENT AND FAN PUMP .....	10-92
SERVO VALVE .....	10-96
CONTROL VALVE .....	10-98
HYDRAULIC CIRCUIT DIAGRAM AND NAMES OF VALVES .....	10-105
UNLOAD VALVE .....	10-107
PRESSURE COMPENSATION VALVE .....	10-110
HYDRAULIC TANK, FILTER .....	10-120
BREATHER .....	10-121
ACCUMULATOR .....	10-122
WORK EQUIPMENT .....	10-123
WORK EQUIPMENT .....	10-123
CUTTING EDGE AND END BIT .....	10-128
RIPPER .....	10-129
PISTON VALVE FOR ANGLE CYLINDER .....	10-130
CAB AND ITS ATTACHMENTS .....	10-131
ROPS CAB .....	10-131
CAB DAMPER MOUNT .....	10-132
AIR CONDITIONER .....	10-133
ELECTRICAL SYSTEM .....	10-135
MONITOR SYSTEM .....	10-135
ENGINE CONTROL SYSTEM .....	10-137
COOLING CONTROL SYSTEM .....	10-140
HST CONTROL SYSTEM .....	10-142
GEAR SHIFT CONTROL SYSTEM .....	10-143
PARKING BRAKE CONTROL SYSTEM .....	10-148
KOMTRAX SYSTEM .....	10-150
ICT CONTROL SYSTEM .....	10-151
ICT CONTROL FUNCTION .....	10-152
BLADE CONTROL SYSTEM .....	10-154
DOZING MODE .....	10-157
SMOOTH START FUNCTION .....	10-160
SLIP CONTROL .....	10-162
BLADE ASSIST CONTROL .....	10-164
HST SPEED RANGE CONTROL SYSTEM .....	10-166
SYSTEM COMPONENTS .....	10-168
MONITOR PANEL .....	10-168
BUZZER CANCEL SWITCH .....	10-169
MONITOR PANEL DISPLAY .....	10-170
ENGINE CONTROLLER .....	10-172
HST CONTROLLER .....	10-174
ICT CONTROLLER .....	10-176
iB MONITOR .....	10-179
GNSS RECEIVER .....	10-181
KOMTRAX TERMINAL .....	10-190
SENSORS .....	10-191
BRAKE OIL PRESSURE SENSOR .....	10-192
HYDRAULIC OIL TEMPERATURE SENSOR .....	10-193
HST CIRCUIT OIL PRESSURE SENSOR .....	10-194
AIR CLEANER CLOGGING SENSOR .....	10-195
BRAKE PEDAL POTENTIOMETER .....	10-196
FUEL CONTROL DIAL .....	10-197
FUEL LEVEL SENSOR .....	10-198
CHARGE FILTER CLOGGING SENSOR .....	10-199
COOLANT TEMPERATURE SENSOR .....	10-199
ENGINE OIL PRESSURE SWITCH .....	10-200

# 00 INDEX AND FOREWORD

## INDEX

---

ENGINE ROTATION SENSOR .....	10-200
BOOST PRESSURE AND SENSOR .....	10-201
WIF SENSOR .....	10-201
HST MOTOR SPEED SENSOR .....	10-202
IMU SENSOR .....	10-203
STROKE AND RESET SENSOR FOR LIFT CYLINDER .....	10-204
STROKE SENSOR .....	10-205
RESET SENSOR .....	10-206
STROKE SENSOR FOR TILT CYLINDER .....	10-207
STROKE SENSOR .....	10-208
STROKE AND RESET SENSOR FOR ANGLE CYLINDER .....	10-209
STROKE SENSOR .....	10-210
RESET SENSOR .....	10-211
20 STANDARD VALUE TABLES	
TABLE OF CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR CHASSIS .....	20-4
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR CHASSIS .....	20-10
STANDARD VALUE TABLE FOR ICT .....	20-15
PERFORMANCE MEASURING POSTURE AND METHOD .....	20-17
30 TESTING AND ADJUSTING	
TABLE OF CONTENTS .....	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-4
TOOLS FOR TESTING AND ADJUSTING .....	30-4
ENGINE AND COOLING SYSTEM .....	30-7
ENGINE SPEED .....	30-7
AIR INTAKE BOOST PRESSURE .....	30-8
EXHAUST TEMPERATURE .....	30-9
EXHAUST GAS COLOR .....	30-11
VALVE CLEARANCE .....	30-12
COMPRESSION PRESSURE .....	30-15
BLOW-BY PRESSURE .....	30-17
ENGINE OIL PRESSURE .....	30-18
HANDLING CONTROLLER HIGH-VOLTAGE CIRCUIT .....	30-19
FUEL SYSTEM .....	30-20
HANDLING FUEL SYSTEM PARTS .....	30-20
RELEASING RESIDUAL PRESSURE FROM FUEL SYSTEM .....	30-20
BLEEDING AIR FROM FUEL CIRCUIT .....	30-21
FUEL PRESSURE .....	30-23
FUEL RETURN RATE AND LEAKAGE .....	30-25
FUEL CIRCUIT FOR LEAKAGE .....	30-28
POWER TRAIN .....	30-29
HST OIL PRESSURE .....	30-29
TRAVEL DEVIATION .....	30-37
PARKING BRAKE LEVER .....	30-38
BRAKE PERFORMANCE .....	30-40
BRAKE PEDAL LINKAGE .....	30-41
EMERGENCY RELEASE OF PARKING BRAKE .....	30-43
DECELERATOR PEDAL .....	30-46
UNDERCARRIAGE AND FRAME .....	30-48
IDLER CLEARANCE .....	30-48
TRACK SHOE TENSION .....	30-50
HYDRAULIC SYSTEM .....	30-51
FAN (WORK EQUIPMENT) PUMP PRESSURE .....	30-51
FAN SPEED .....	30-51
FAN SPEED SENSOR .....	30-52
WORK EQUIPMENT .....	30-54
BLEEDING AIR .....	30-62

WORK EQUIPMENT .....	30-63
LOCK LEVER ADJUSTMENT .....	30-63
BLADE CENTER BALL ADJUSTMENT .....	30-64
BLADE PITCH BALL ADJUSTMENT .....	30-64
ELECTRICAL SYSTEM .....	30-65
MONITOR PANEL (EMMS) - SPECIAL FUNCTIONS .....	30-65
ERROR CODE TABLE .....	30-71
PREPARATION WORK FOR TROUBLESHOOTING FOR ELECTRICAL SYSTEM .....	30-141
SPECIAL FUNCTIONS OF iB MONITOR .....	30-142
INPUTTING WEAR AMOUNT OF BLADE EDGE AND TRACK SHOE .....	30-168
TESTING STROKE SENSOR FOR LIFT CYLINDER .....	30-176
TESTING STROKE SENSOR FOR TILT CYLINDER .....	30-178
TESTING STROKE SENSOR FOR ANGLE CYLINDER .....	30-179
TESTING AND ADJUSTING RESET SENSOR FOR LIFT CYLINDER .....	30-180
TESTING AND ADJUSTING RESET SENSOR FOR ANGLE CYLINDER .....	30-181
ELECTRIC/HYDRAULIC DEVICES ARE ADJUSTED/REPLACED .....	30-182
HST CONTROLLER ADJUSTMENT AFTER REPLACEMENT .....	30-185
MONITOR PANEL ADJUSTMENT AFTER REPLACEMENT .....	30-187
ADJUSTMENT METHOD WHEN ICT CONTROLLER HAS BEEN REPLACED .....	30-189
HANDLING VOLTAGE CIRCUIT OF ENGINE CONTROLLER .....	30-192
HANDLING BATTERY DISCONNECT SWITCH .....	30-193
TESTING DIODES .....	30-194
PM-CLINIC INSPECTION SHEET (1/2) .....	30-198
PM-CLINIC INSPECTION SHEET (2/2) .....	30-199
PM-CLINIC UNDERCARRIAGE CHECK SHEET .....	30-200
UNDERCARRIAGE TROUBLESHOOTING REPORT (NORMAL) .....	30-201
UNDERCARRIAGE TROUBLESHOOTING REPORT (IMPACT) .....	30-202
PM-CLINIC UNDERCARRIAGE CHECK SHEET .....	30-203
UNDERCARRIAGE TROUBLESHOOTING REPORT (NORMAL) .....	30-204
UNDERCARRIAGE TROUBLESHOOTING REPORT (IMPACT) .....	30-205
40 TROUBLESHOOTING .....	
TABLE OF CONTENTS .....	40-2
RELATED INFORMATION ON TROUBLESHOOTING .....	40-12
SEQUENCE OF EVENTS IN TROUBLESHOOTING .....	40-14
CHECKS BEFORE TROUBLESHOOTING .....	40-16
INSPECTION PROCEDURE BEFORE TROUBLESHOOTING .....	40-18
WALK-AROUND CHECK .....	40-18
PRECAUTIONS WHEN CARRYING OUT MAINTENANCE .....	40-19
PRECAUTIONS WHEN HANDLING ELECTRICAL EQUIPMENT .....	40-19
HANDLING ELECTRONIC CONTROL UNIT .....	40-24
POINTS TO REMEMBER WHEN TROUBLESHOOTING ELECTRICAL CIRCUITS .....	40-25
POINTS TO REMEMBER WHEN HANDLING HYDRAULIC EQUIPMENT .....	40-26
SYMPTOM AND TROUBLESHOOTING NUMBERS .....	40-28
TROUBLESHOOTING INDIVIDUAL ELECTRICAL CIRCUITS .....	40-32
CONNECTION TABLE FOR CONNECTOR PIN NUMBERS .....	40-34
T-ADAPTER TABLE .....	40-57
FAILURE CODE TABLE .....	40-61
INFORMATION IN TROUBLESHOOTING TABLE .....	40-71
TROUBLESHOOTING BY FAILURE CODE .....	40-73
ERROR CODE [6091NX] .....	40-73
ERROR CODE [AA10NX] .....	40-75
ERROR CODE [AB00MA] .....	40-77
ERROR CODE [B@BAZG] .....	40-78
ERROR CODE [B@BCNS] .....	40-79
ERROR CODE [B@CRNS] .....	40-80
ERROR CODE [B@CRZG] .....	40-81
ERROR CODE [CA111] .....	40-82
ERROR CODE [CA115] .....	40-83
ERROR CODE [CA122] .....	40-85
ERROR CODE [CA123] .....	40-87

## 00 INDEX AND FOREWORD

### INDEX

---

ERROR CODE [CA131]	40-89
ERROR CODE [CA132]	40-91
ERROR CODE [CA144]	40-93
ERROR CODE [CA145]	40-95
ERROR CODE [CA153]	40-97
ERROR CODE [CA154]	40-99
ERROR CODE [CA187]	40-101
ERROR CODE [CA221]	40-103
ERROR CODE [CA222]	40-105
ERROR CODE [CA227]	40-107
ERROR CODE [CA234]	40-109
ERROR CODE [CA238]	40-110
ERROR CODE [CA271]	40-111
ERROR CODE [CA272]	40-113
ERROR CODE [CA322]	40-115
ERROR CODE [CA323]	40-117
ERROR CODE [CA324]	40-119
ERROR CODE [CA325]	40-121
ERROR CODE [CA331]	40-123
ERROR CODE [CA332]	40-125
ERROR CODE [CA342]	40-127
ERROR CODE [CA352]	40-128
ERROR CODE [CA386]	40-129
ERROR CODE [CA428]	40-131
ERROR CODE [CA429]	40-133
ERROR CODE [CA435]	40-135
ERROR CODE [CA441]	40-137
ERROR CODE [CA442]	40-139
ERROR CODE [CA449]	40-141
ERROR CODE [CA451]	40-143
ERROR CODE [CA452]	40-145
ERROR CODE [CA488]	40-147
ERROR CODE [CA553]	40-148
ERROR CODE [CA559]	40-149
ERROR CODE [CA689]	40-151
ERROR CODE [CA731]	40-153
ERROR CODE [CA757]	40-155
ERROR CODE [CA778]	40-157
ERROR CODE [CA1633]	40-159
ERROR CODE [CA2185]	40-161
ERROR CODE [CA2186]	40-162
ERROR CODE [CA2249]	40-163
ERROR CODE [CA2311]	40-165
ERROR CODE [CA2555]	40-167
ERROR CODE [CA2556]	40-169
ERROR CODE [D130KA]	40-171
ERROR CODE [D130KB]	40-173
ERROR CODE [DAFRKR]	40-175
ERROR CODE [DAFRMC]	40-177
ERROR CODE [DAJ000]	40-179
ERROR CODE [DAJ0KK]	40-181
ERROR CODE [DAJ0KQ]	40-183
ERROR CODE [DAJ0KT]	40-184
ERROR CODE [DAJ5KK]	40-185
ERROR CODE [DAJ6KK]	40-187
ERROR CODE [DAJRKR]	40-189
ERROR CODE [DB2RKR]	40-191
ERROR CODE [DBR0KT]	40-193
ERROR CODE [DBR0MC]	40-194

ERROR CODE [DBR1KK] .....	40-195
ERROR CODE [DBR2KK] .....	40-197
ERROR CODE [DBR5KK] .....	40-199
ERROR CODE [DBR6KK] .....	40-201
ERROR CODE [DBRQKR] .....	40-203
ERROR CODE [DBTSKR] .....	40-205
ERROR CODE [DBUTKA] .....	40-207
ERROR CODE [DD12KA] .....	40-209
ERROR CODE [DD12KB] .....	40-211
ERROR CODE [DD13KA] .....	40-213
ERROR CODE [DD13KB] .....	40-215
ERROR CODE [DD14KB] .....	40-217
ERROR CODE [DD1NL4] .....	40-219
ERROR CODE [DDDCKB] .....	40-221
ERROR CODE [DDKAKA] .....	40-223
ERROR CODE [DDKAKB] .....	40-225
FAILURE CODE [DDKFL4] .....	40-227
ERROR CODE [DDKGL4] .....	40-229
ERROR CODE [DDKHKA] .....	40-231
ERROR CODE [DDKHKB] .....	40-233
ERROR CODE [DDNLKA] .....	40-235
ERROR CODE [DDNLKB] .....	40-237
ERROR CODE [DDP6KA] .....	40-239
ERROR CODE [DDP6KB] .....	40-241
ERROR CODE [DDP6MA] .....	40-243
ERROR CODE [DDQ2KA] .....	40-245
ERROR CODE [DDT0L4] .....	40-247
ERROR CODE [DDU1FS] .....	40-249
ERROR CODE [DDU1KA] .....	40-251
ERROR CODE [DDU1KY] .....	40-253
ERROR CODE [DFA4KX] .....	40-255
ERROR CODE [DFA4KZ] .....	40-256
ERROR CODE [DFA4L8] .....	40-257
ERROR CODE [DFA5KA] .....	40-258
ERROR CODE [DFA5KB] .....	40-261
ERROR CODE [DFA6KA] .....	40-263
ERROR CODE [DFA6KB] .....	40-265
ERROR CODE [DFA7KX] .....	40-267
ERROR CODE [DFA7KZ] .....	40-268
ERROR CODE [DFA7L8] .....	40-269
ERROR CODE [DFA8KA] .....	40-270
ERROR CODE [DFA8KB] .....	40-273
ERROR CODE [DFA9KA] .....	40-275
ERROR CODE [DFA9KB] .....	40-277
ERROR CODE [DGS1KA] .....	40-279
ERROR CODE [DGS1KX] .....	40-281
ERROR CODE [DH21KA] .....	40-282
ERROR CODE [DH21KB] .....	40-285
ERROR CODE [DHH5KA] .....	40-287
ERROR CODE [DHH5KB] .....	40-289
ERROR CODE [DHH6KA] .....	40-291
ERROR CODE [DHH6KB] .....	40-293
ERROR CODE [DK10KA] .....	40-295
ERROR CODE [DK10KB] .....	40-297
ERROR CODE [DK30KA] .....	40-299
ERROR CODE [DK30KB] .....	40-301
ERROR CODE [DK30KX] .....	40-303
ERROR CODE [DK30KZ] .....	40-304
ERROR CODE [DK30L8] .....	40-305
ERROR CODE [DK31KA] .....	40-307

## 00 INDEX AND FOREWORD

### INDEX

---

ERROR CODE [DK31KB]	40-309
ERROR CODE [DK40KA]	40-311
ERROR CODE [DK40KB]	40-313
ERROR CODE [DK55KX]	40-315
ERROR CODE [DK55KZ]	40-316
ERROR CODE [DK55L8]	40-317
ERROR CODE [DK56KA]	40-319
ERROR CODE [DK56KB]	40-321
ERROR CODE [DK57KA]	40-323
ERROR CODE [DK57KB]	40-325
ERROR CODE [DK80KA]	40-327
ERROR CODE [DKS0L8]	40-329
ERROR CODE [DKS1KA]	40-331
ERROR CODE [DKS1KB]	40-333
ERROR CODE [DKS2KA]	40-335
ERROR CODE [DKS2KB]	40-337
ERROR CODE [DKS3KA]	40-339
ERROR CODE [DKS3KB]	40-341
ERROR CODE [DKS3MB]	40-343
ERROR CODE [DKS4L8]	40-344
ERROR CODE [DKS5KA]	40-345
ERROR CODE [DKS5KB]	40-347
ERROR CODE [DKS6KA]	40-349
ERROR CODE [DKS6KB]	40-351
ERROR CODE [DKS7MB]	40-353
ERROR CODE [DKSCL8]	40-354
ERROR CODE [DKSDKA]	40-355
ERROR CODE [DKSDKB]	40-357
ERROR CODE [DKSEKA]	40-359
ERROR CODE [DKSEKB]	40-361
ERROR CODE [DKSFKA]	40-363
ERROR CODE [DKSFKB]	40-365
ERROR CODE [DKSFMB]	40-367
ERROR CODE [DLM0KX]	40-368
ERROR CODE [DLM1KA]	40-369
ERROR CODE [DLM1KB]	40-371
ERROR CODE [DLM1MA]	40-373
ERROR CODE [DLM2KA]	40-375
ERROR CODE [DLM2KB]	40-377
ERROR CODE [DLM2MA]	40-379
ERROR CODE [DLM3KA]	40-381
ERROR CODE [DLM3KB]	40-383
ERROR CODE [DN21FS]	40-385
ERROR CODE [DV00KB]	40-387
ERROR CODE [DV20KB]	40-388
ERROR CODE [DW4BKA]	40-389
ERROR CODE [DW4BKB]	40-391
ERROR CODE [DW4BKY]	40-393
ERROR CODE [DW7BKA]	40-394
ERROR CODE [DW7BKB]	40-395
ERROR CODE [DW7BKY]	40-396
ERROR CODE [DW7EKA]	40-397
ERROR CODE [DW7EKB]	40-401
ERROR CODE [DW7EKY]	40-403
ERROR CODE [DWN5KA]	40-405
ERROR CODE [DWN5KB]	40-407
ERROR CODE [DWN5KY]	40-409
ERROR CODE [DXA4KA]	40-411
ERROR CODE [DXA4KB]	40-413

ERROR CODE [DXA4KY] .....	40-414
ERROR CODE [DXA5KA] .....	40-415
ERROR CODE [DXA5KB] .....	40-416
ERROR CODE [DXA5KY] .....	40-417
ERROR CODE [DXA6KA] .....	40-418
ERROR CODE [DXA6KB] .....	40-419
ERROR CODE [DXA6KY] .....	40-420
ERROR CODE [DXA7KA] .....	40-421
ERROR CODE [DXA7KB] .....	40-422
ERROR CODE [DXA7KY] .....	40-423
ERROR CODE [DXHRKA] .....	40-425
ERROR CODE [DXHRKB] .....	40-427
ERROR CODE [DXHRKY] .....	40-429
ERROR CODE [DXHSKA] .....	40-431
ERROR CODE [DXHSKB] .....	40-433
ERROR CODE [DXHSKY] .....	40-435
ERROR CODE [DXHTKA] .....	40-437
ERROR CODE [DXHTKB] .....	40-439
ERROR CODE [DXHTKY] .....	40-441
ERROR CODE [DXHUKA] .....	40-443
ERROR CODE [DXHUKB] .....	40-445
ERROR CODE [DXHUKY] .....	40-447
ERROR CODE [DXJ4KA] .....	40-449
ERROR CODE [DXJ4KB] .....	40-451
ERROR CODE [DXJCKA] .....	40-453
ERROR CODE [DXJCKB] .....	40-454
ERROR CODE [DXJCKY] .....	40-455
ERROR CODE [DXJDKA] .....	40-457
ERROR CODE [DXJDKB] .....	40-458
ERROR CODE [DXJDKY] .....	40-459
ERROR CODE [DXK1KA] .....	40-461
ERROR CODE [DXK1KB] .....	40-462
ERROR CODE [DXK1KY] .....	40-463
ERROR CODE [DXK2KA] .....	40-464
ERROR CODE [DXK2KB] .....	40-465
ERROR CODE [DXK2KY] .....	40-466
TRROUBLESHOOTING OF ELECTRICAL SYSTEM (E-MODE) .....	40-467
BEFORE CARRYING OUT TROUBLESHOOTING (E-MODE) .....	40-467
INFORMATION IN TROUBLESHOOTING TABLE .....	40-469
E-1 STARTING MOTOR DOES NOT ROTATE .....	40-470
E-2 ENGINE IS NOT PRE-HEATED .....	40-473
E-3 WHEN STARTING SWITCH IS TURNED ON, ANY ITEM DOES NOT LIGHT .....	40-476
E-4 CHARGE LEVEL CAUTION FLASHES WHILE ENGINE IS RUNNING .....	40-478
E-5 EMERGENCY WARNING ITEMS FLASH WHILE ENGINE IS RUNNING .....	40-480
E-6 PRE-HEAT LAMP DOES NOT LIGHT DURING PRE-HEATING OPERATION .....	40-484
E-7 COOLANT TEMPERATURE GAUGE DOES NOT INDICATE CORRECTLY .....	40-486
E-8 HST OIL TEMPERATURE GAUGE DOES NOT INDICATE CORRECTLY .....	40-487
E-9 FUEL LEVEL GAUGE DOES NOT INDICATE PROPERLY .....	40-488
E-10 TRAVEL INDICATOR DOES NOT DISPLAY NORMALLY .....	40-489
E-11 MULTI-INFORMATION UNIT DOES NOT DISPLAY NORMALLY .....	40-489
E-12 CAUTION LAMP DOES NOT FLASH OR DOES NOT GO OFF .....	40-490
E-13 CAUTION BUZZER DOES NOT SOUND OR DOES NOT STOP .....	40-492
E-14 REVERSE TRAVEL SPEED SETTING SWITCH DOES NOT FUNCTION .....	40-494
E-15 SHIFT MODE SWITCH DOES NOT FUNCTION .....	40-496
E-16 BUZZER CANCEL SWITCH DOES NOT FUNCTION .....	40-498
E-17 INFORMATION SWITCH DOES NOT FUNCTION .....	40-500
E-18 THE FAN CLEANING DOES NOT OPERATE OR CANNOT BE RESET .....	40-502
E-19 BACKUP ALARM DOES NOT SOUND .....	40-504
E-20 THE HORN DOES NOT SOUND OR DOES NOT STOP .....	40-505
E-21 WORK EQUIPMENT DOES NOT OPERATE .....	40-507

## 00 INDEX AND FOREWORD

### INDEX

---

E-22 HEAD LAMP OR REAR LAMP DOES NOT LIGHT UP .....	40-509
E-23 FOOT HEATER DOES NOT OPERATE .....	40-513
E-24 AIR CONDITIONER DOES NOT OPERATE [CAB SPECIFICATION] .....	40-515
E-25 WIPER AND WASHER DO NOT OPERATE [CAB SPECIFICATION] .....	40-520
E-26 KOMTRAX SYSTEM DOES NOT OPERATE NORMALLY .....	40-532
E-27 iB MONITOR SHUTS DOWN AFTER DISPLAYING THE MESSAGES [GPS RECEIVER NOT CONNECTED!] AND [SLOPE SENSOR NOT CONNECTED!] .....	40-534
E-28 iB MONITOR DISPLAYS THE MESSAGES[GPS RECEIVER NOT CONECTED!] AND [SLOPE SENSOR NOT CONNECTED!] .....	40-537
E-29 iB MONITOR DISPLAYS THE MESSAGE [WAITING FOR RADIO LINK...] .....	40-540
E-30 iB MONITOR DISPLAYS THE MESSAGE [IMU SENSOR NOT CONNECTED] .....	40-541
E-31 iB MONITOR DISPLAYS THE MESSAGE [WAITING FOR SATELLITES...] .....	40-542
E-32 iB MONITOR DISPLAYS THE MESSAGE [KOMATSU CONTROLLER NOT CONNECTED] ...	40-543
E-33 iB MONITOR DISPLAYS THE MESSAGE [CYLINDER STROKE READING ABNORMAL] ...	40-545
E-34 iB MONITOR DISPLAYS THE MESSAGE [KOMATSU CAN COMMS ABNORMAL] .....	40-546
E-35 iB MONITOR DISPLAYS THE MESSAGE [KOMATSU MACHINE TROUBLE] .....	40-547
E-36 iB MONITOR DISPLAYS THE MESSAGE [WAITING TO INITIALIZE...] .....	40-548
E-37 iB MONITOR DISPLAYS THE MESSAGE [SYSTEM INITIALIZING...] .....	40-549
E-38 iB MONITOR DISPLAYS THE MESSAGE [INITIALIZING...] .....	40-550
E-39 iB MONITOR DISPLAYS THE MESSAGE [CONFIGURING GPS] .....	40-551
E-40 iB MONITOR DISPLAYS THE MESSAGE [NO GPS LOCALIZATION... ] .....	40-552
E-41 iB MONITOR DISPLAYS THE MESSAGE [LOW PRECISIONS...] .....	40-553
E-42 iB MONITOR DISPLAYS THE MESSAGE [HEADING INITIALIZING] .....	40-554
E-43 iB MONITOR DISPLAYS [OUT OF DESIGN AREA...] .....	40-555
E-44 iB MONITOR CAN NOT BE TURNED ON .....	40-556
E-45 iB MONITOR DOES NOT DISPLAY INTELLIGENT MACHINE CONTROL SCREN .....	40-557
E-46 iB MONITOR DOES NOT DISPLAY BULLDOZER IMAGE .....	40-558
E-47 iB MONITOR DOES NOT DISPLAY DESIGN SURFACE .....	40-559
E-48 iB MONITOR TOUCH PANEL DOES NOT RESPOND .....	40-560
E-49 iB MONITOR TOUCH PANEL IS INACCURATE .....	40-561
E-50 CYLINDER STROKE RESET INDICATION DOES NOT GO OUT. ....	40-562
E-51 AUTO IS NOT DISPLAYED WHEN AUTO/MANUAL SWITCH IS PRESSED (AUTO INDICATION GOES OUT) .....	40-563
E-52 BLADE AUTOMATIC RAISE CONTROL DOES NOT START WHILE AUTO IS DISPLAYED ..	40-564
E-53 BLADE AUTOMATIC LOWER CONTROL DOES NOT START WHILE AUTO IS DISPLAYED .	40-565
E-54 BLADE AUTOMATIC CONTROL FUNCTION IS NOT ACTIVATED WHILE AUTO IS DISPLAYED (BLADE AUTOMATIC CONTROL STOPS) .....	40-566
E-55 WHEN CHECKING AND ADJUSTING THE BLADE ELEVATION, THE VALUE IS DIFFERENT FROM ACTUAL MACHINE .....	40-567
E-56 FINISHED SURFACE IS INACCURATE (THE AVERAGE HEIGHT OF FINISHED SURFACE IS LOWER THAN DESIGNED SURFACE OR BLADE DOES NOT TOUCH THE SURFACE) ...	40-568
E-57 FINISHED SURFACE IS INACCURATE (THE FINISHED IS NOT SMOOTH) .....	40-569
E-58 FINISHED SURFACE IS INACCURATE (WHEN FINISHING SLOPE HORIZONTALLY, STEPS ARE MADE IN EACH DIRECTION) .....	40-570
E-59 MACHINE CAN NOT ESCAPE FROM SHOES SLIP WHILE BLADE AUTOMATIC CONTROL IS ACTIVATED (SHOES FREQUENTLY SLIPS) .....	40-572
E-60 MACHINE SPEED DOES NOT INCREASE WHILE BLADE AUTOMATIC CONTROL IS ACTIVATED .....	40-573
E-61 BLADE TILT ANGLE DOES NOT COINCIDE WITH DESIGN SURFACE .....	40-574
E-62 BLADE TILTS BACK WHILE BLADE AUTOMATIC CONTROL IS ACTIVATED .....	40-576
TROUBLESHOOTING OF HYDRAULIC AND MECHANICAL SYSTEM (H-MODE) .....	40-579
INFORMATION IN TROUBLESHOOTING TABLE .....	40-579
H-1 RIGHT AND LEFT TRAVEL SYSTEMS INOPERABLE .....	40-580
H-2 RIGHT OR LEFT TRAVEL SYSTEM DOES NOT OPERATE .....	40-582
H-3 RIGHT OR LEFT TRAVEL SYSTEM DOES NOT OPERATE .....	40-583
H-4 SPEED OR POWER OF TRAVEL IS LOW .....	40-584
H-5 GEAR IS NOT SHIFTED .....	40-585
H-6 LARGE SHOCKS ARE MADE WHEN MACHINE STARTS AND STOPS TRAVEL .....	40-586
H-7 MACHINE DEVIATES LARGELY DURING TRAVEL .....	40-587

H-8 HYDRAULIC DRIFT OF TRAVEL IS LARGE .....	40-588
H-9 ENGINE STALLS OR SPEED LOWERS EXTREMELY DURING TRAVEL .....	40-589
H-10 ABNORMAL SOUND COMES OUT FROM AROUND HST PUMP AND MOTOR .....	40-590
H-11 WORK EQUIPMENT DOSE NOT OPERATE AT ALL .....	40-591
H-12 SPEED OR POWER OF WHOLE WORK EQUIPMENT IS LOW .....	40-592
H-13 BLADE LIFT SPEED OR POWER IS LOW .....	40-593
H-14 BLADE TILT SPEED OR POWER IS LOW .....	40-594
H-15 BLADE ANGLE SPEED OR POWER IS LOW .....	40-595
H-16 TIME LAG OF BLADE LIFT IS LARGE .....	40-596
H-17 HYDRAULIC DRIFT OF LIFTED BLADE IS LARGE .....	40-597
H-18 HYDRAULIC DRIFT OF TILTING BLADE IS LARGE .....	40-598
H-19 UNUSUAL NOISE IS HEARD FROM WORK EQUIPMENT PUMP OR CONTROL VALVE .....	40-599
H-20 HST OIL TEMPERATURE RISES TOO HIGH .....	40-600
H-21 FAN SPEED IS ABNORMAL (HIGH, LOW, OR 0 RPM) .....	40-601
TRUBLESHOOTING OF ENGINE (S-MODE) .....	40-603
METHOD OF USING TROUBLESHOOTING CHARTS .....	40-603
(S-1) ENGINE STARTING PERFORMANCE IS POOR .....	40-607
(S-2) ENGINE DOES NOT CRANK .....	40-608
ENGINE CRANKS BUT NO EXHAUST SMOKE COMES OUT OF STACK .....	40-609
SMOKE COMES OUT OF STACK BUT ENGINE DOES NOT START .....	40-610
(S-3) ENGINE DOES NOT RUN SMOOTHLY .....	40-611
(S-4) ENGINE STOPS DURING OPERATIONS .....	40-612
(S-5) ENGINE SPEED HUNTS .....	40-613
(S-6) ENGINE LACKS POWER .....	40-614
(S-7) EXHAUST SMOKE IS BLACK .....	40-616
(S-8) OIL CONSUMPTION IS EXCESSIVE OR EXHAUST SMOKE IS BLUE .....	40-617
(S-9) OIL BECOMES CONTAMINATED QUICKLY .....	40-618
(S-10) FUEL CONSUMPTION IS EXCESSIVE .....	40-619
(S-11) OIL FOUND IN COOLANT, OR COOLANT SPURTS FROM RADIATOR .....	40-620
(S-12) OIL PRESSURE CAUTION LAMP LIGHTS UP .....	40-621
(S-13) OIL LEVEL RISES (COOLANT OR FUEL FOUND IN OIL) .....	40-622
(S-14) COOLANT TEMPERATURE TOO HIGH (OVERHEATING) .....	40-623
(S-15) ABNORMAL NOISE IS HEARD WHEN ENGINE IS RUNNING .....	40-624
(S-16) EXCESSIVE VIBRATION WHEN ENGINE IS RUNNING .....	40-625
50 DISASSEMBLY AND ASSEMBLY .....	
TABLE OF CONTENTS .....	50-2
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY .....	50-5
HOW TO READ THIS MANUAL .....	50-5
SPECIAL TOOL LIST .....	50-13
SKETCH OF SPECIAL TOOLS .....	50-20
CONNECTOR REPAIR PROCEDURES .....	50-35
CONTACT TERMINAL REMOVAL (HD30 TYPE) .....	50-35
STRIPPING INSULATION .....	50-36
CRIMPING CONTACT TERMINAL (HD30 TYPE) .....	50-37
INSERTION OF CONTACT TERMINAL (HD30 TYPE) .....	50-38
CONTACT TERMINAL REMOVAL (DT TYPE) .....	50-39
STRIPPING INSULATION .....	50-40
CRIMPING CONTACT TERMINAL (DT TYPE) .....	50-41
INSERTION OF CONTACT TERMINAL (DT TYPE) .....	50-42
NOSE GUARD (HOOD) .....	50-44
REMOVAL .....	50-44
INSTALLATION .....	50-48
MUFFLER AND EXHAUST STACK .....	50-50
REMOVAL .....	50-50
INSTALLATION .....	50-51
CAB AND ITS ATTACHMENTS .....	50-52
CAB .....	50-52
MONITOR PANEL AND HST CONTROLLER .....	50-67
KOMTRAX CONTROLLER .....	50-70
REMOVAL AND INSTALLATION OF ICT SENSOR CONTROLLER ASSEMBLY .....	50-71

## 00 INDEX AND FOREWORD

### INDEX

---

REMOVAL AND INSTALLATION OF iB MONITOR .....	50-72
REMOVAL AND INSTALLATION OF GNSS RECEIVER .....	50-74
REMOVAL AND INSTALLATION OF iB GNSS ANTENNA .....	50-76
REMOVAL AND INSTALLATION OF IMU SENSOR .....	50-81
SEAT .....	50-85
AIR CONDITIONER/HEATER .....	50-86
DISASSEMBLY OF AIR CONDITIONER .....	50-86
ASSEMBLY OF AIR CONDITIONER .....	50-90
FOOT HEATER .....	50-91
REMOVAL .....	50-91
INSTALLATION .....	50-93
FOOT HEATER OVERHAUL PROCEDURES .....	50-93
ASSEMBLY PROCEDURES .....	50-95
ENGINE AND COOLING SYSTEM .....	50-97
REMOVAL .....	50-97
ENGINE AND HST PUMP .....	50-104
INSTALLATION .....	50-106
REMOVAL FROM ENGINE .....	50-108
INSTALLATION TO ENGINE .....	50-111
DRIVE DAMPENER .....	50-112
REMOVAL .....	50-112
INSTALLATION .....	50-113
HST PUMP OVERHAUL PROCEDURES .....	50-114
DISASSEMBLY PROCEDURES .....	50-114
ASSEMBLY PROCEDURES .....	50-123
WORK EQUIPMENT PUMP OVERHAUL PROCEDURES .....	50-135
DISASSEMBLY PROCEDURES .....	50-135
ASSEMBLY PROCEDURES .....	50-141
REMOVAL .....	50-148
INSTALL .....	50-149
CHARGE PUMP OVERHAUL PROCEDURES .....	50-150
DISASSEMBLY PROCEDURES .....	50-150
ASSEMBLY PROCEDURES .....	50-156
DIESEL ENGINE OVERHAUL PROCEDURES .....	50-162
DISASSEMBLY OF EXTERNAL COMPONENTS .....	50-162
DISASSEMBLY OF ENGINE TOP END .....	50-168
REMOVAL OF OIL COOLER, ENGINE CONTROLLER AND FUEL PUMP .....	50-172
DISASSEMBLY OF ENGINE LOWER END .....	50-174
ASSEMBLY OF ENGINE LOWER END .....	50-181
INSTALLATION OF OIL COOLER, ENGINE CONTROLLER AND FUEL PUMP .....	50-197
ASSEMBLY OF EXTERNAL COMPONENTS .....	50-206
WHOLE DISASSEMBLY AND ASSEMBLY OF TRACK SHOE ASSEMBLY (CONVENTIONAL TYPE TRACK SHOE) .....	50-212
WHOLE DISASSEMBLY AND ASSEMBLY OF TRACK SHOE (PLUS TYPE TRACK SHOE) .....	50-232
TRACK SYSTEM .....	50-233
SPREADING THE TRACK .....	50-233
(CONVENTIONAL TYPE TRACK SHOE) .....	50-233
EXPANSION AND INSTALLATION OF TRACK SHOE ASSEMBLY (PLUS TYPE TRACK SHOE) ...	50-235
FIELD DISASSEMBLY AND ASSEMBLY OF ONE LINK (CONVENTIONAL TYPE TRACK SHOE) ....	50-249
FIELD DISASSEMBLY AND ASSEMBLY OF ONE LINK (PLUS TYPE TRACK SHOE) .....	50-257
TRACK FRAME .....	50-264
REMOVAL OF TRACK FRAME .....	50-264
FRONT TRACK IDLER .....	50-273
REMOVING FRONT IDLER .....	50-273
INSTALLING FRONT IDLER .....	50-275
TRACK ROLLER .....	50-276
REMOVAL .....	50-276
INSTALLATION .....	50-276
TRACK ROLLER OVERHAUL PROCEDURES .....	50-277

CARRIER ROLLER OVERHAUL PROCEDURES .....	50-282
FINAL DRIVE .....	50-284
FINAL DRIVE REMOVAL .....	50-284
INSTALLING THE FINAL DRIVE .....	50-288
FINAL DRIVE OVERHAUL PROCEDURES .....	50-290
DISASSEMBLY PROCEDURES .....	50-290
ASSEMBLY OF FINAL DRIVE .....	50-296
TRAVEL MOTOR OVERHAUL PROCEDURES .....	50-304
DISASSEMBLY PROCEDURES .....	50-304
ASSEMBLY PROCEDURES .....	50-309
FAN MOTOR .....	50-322
REMOVAL PROCEDURES .....	50-322
INSTALLATION PROCEDURES .....	50-326
FAN MOTOR OVERHAUL PROCEDURES .....	50-328
DISASSEMBLY PROCEDURES .....	50-328
ASSEMBLY PROCEDURES .....	50-332
DB 12 VALVE .....	50-339
REMOVAL .....	50-339
INSTALLATION .....	50-341
COOLING PACKAGE .....	50-342
REMOVING THE GRILL AND COOLING FAN ASSEMBLY .....	50-342
REMOVING THE COOLING PACKAGE .....	50-353
INSTALLING THE COOLING PACKAGE .....	50-361
INSTALLING THE GRILL AND COOLING FAN ASSEMBLY .....	50-362
FUEL TANK .....	50-366
REMOVING THE FUEL TANK .....	50-366
INSTALLING THE FUEL TANK .....	50-371
HYDRAULIC TANK .....	50-372
REMOVING THE HYDRAULIC TANK .....	50-372
INSTALLING THE HYDRAULIC TANK .....	50-378
WORK EQUIPMENT .....	50-379
REMOVING OR INSTALLING PINS .....	50-379
FRONT BLADE, TILT AND ANGLE CYLINDERS .....	50-380
ADJUSTING BLADE CENTER BALL AND PITCH ROD PLAY .....	50-385
“C” FRAME .....	50-387
LIFT CYLINDERS .....	50-390
CYLINDER OVERHAUL PROCEDURES .....	50-392
DISASSEMBLY PROCEDURES .....	50-392
ASSEMBLY PROCEDURES .....	50-392
90 OTHERS	
TABLE OF CONTENTS .....	90-2
CONNECTOR ARRANGEMENT DRAWING AND ELECTRICAL CIRCUIT DIAGRAM .....	90-3
CONNECTOR LIST .....	90-3
CONNECTOR LOCATION VIEW .....	90-7
HYDRAULIC SYSTEM .....	90-25
SYMBOLS IN HYDRAULIC CIRCUIT DIAGRAMS .....	90-25
HYDRAULIC SYSTEM .....	90-27
ELECTRICAL SYSTEM .....	90-29
SYMBOLS IN ELECTRICAL CIRCUIT DIAGRAMS .....	90-29
CAB ELECTRICAL ACCESSORIES .....	90-31
AIR CONDITIONER AND HEATER UNIT .....	90-33
ELECTRICAL CIRCUIT DIAGRAM (VIEW 1 OF 8) .....	90-35
ELECTRICAL CIRCUIT DIAGRAM (VIEW 2 OF 8) .....	90-37
ELECTRICAL CIRCUIT DIAGRAM (VIEW 3 OF 8) .....	90-39
ELECTRICAL CIRCUIT DIAGRAM (VIEW 4 OF 8) .....	90-41
ELECTRICAL CIRCUIT DIAGRAM (VIEW 5 OF 8) .....	90-43
ELECTRICAL CIRCUIT DIAGRAM (VIEW 6 OF 8) .....	90-45
ELECTRICAL CIRCUIT DIAGRAM (VIEW 7 OF 8) .....	90-47
ELECTRICAL CIRCUIT DIAGRAM (VIEW 8 OF 8) .....	90-49



# FOREWORD, SAFETY AND GENERAL INFORMATION

## IMPORTANT SAFETY NOTICE

- Appropriate servicing and repair are extremely important to ensure safe operation of the machine. The shop manual describes the effective and safe servicing and repair methods recommended by Komatsu. Some of these methods require the use of the special tools designed by Komatsu for the specific purpose.
- The symbol mark  is used for such matters that require special cautions during the work. The work indicated by the caution mark should be performed according to the instructions with special attention to the cautions. Should hazardous situation occur or be anticipated during such work, be sure to keep safe first and take every necessary measure.

### General precautions

 **Inappropriate handling causes an extreme danger. Read and understand what is described in the operation and maintenance manual before operating the machine. Read and understand what is described in this manual before starting the work.**

- Before performing any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the operation and maintenance manual.
- Locate a place in the repair workshop to keep the tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- When performing any work, always wear the safety shoes and helmet. Do not wear loose work cloths, or clothes with buttons missing.
  1. Always wear the protective eyeglasses when hitting parts with a hammer.
  2. Always wear the protective eyeglasses when grinding parts with a grinder, etc.
- When performing any work with two or more workers, always agree on the working procedure before starting. While working, always keep conversations of the work between your fellow workers and your self on any step of the work. During the work, hang the warning tag of "UNDER WORKING" in the operator's compartment.
- Only qualified workers must perform the work and operation which require license or qualification.
- Keep the tools in good condition. And learn the correct way to use the tools, and use the proper ones among them. Before starting the work, thoroughly check the tools, lift truck, service vehicle, etc.
- If welding repairs is required, always have a trained and experienced welder with good

knowledge of welding perform the work. When performing welding work, always wear welding gloves, apron, shielding goggles, cap, etc.

- Before starting work, warm up your body thoroughly to start work under good condition.
- Avoid continuing work for long hours and take rests with proper intervals to keep your body in good condition. Take a rest in a specified safe place.

### Safety points

<b>1</b>	Good arrangement
<b>2</b>	Correct work clothes
<b>3</b>	Observance of work standard
<b>4</b>	Practice of making and checking signals
<b>5</b>	Prohibition of operation and handling by unlicensed workers
<b>6</b>	Safety check before starting work
<b>7</b>	Wearing protective goggles (for cleaning or grinding work)
<b>8</b>	Wearing shielding goggles and protectors (for welding work)
<b>9</b>	Good physical condition and preparation
<b>10</b>	Precautions against work which you are not used to or you are used to too much

### Preparation

- Before adding oil or making any repairs, place the machine on a firm and level ground, and apply the parking brake and chock the wheels or tracks to prevent the machine from moving.
- Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If it is not possible to lower the equipment to the ground, insert the lock pin or use blocks to prevent the work equipment from falling. And be sure to lock all the work equipment control levers and hang a warning tag on them.
- When performing the disassembling or assembling work, support the machine securely with blocks, jacks, or stands before starting the work.
- Remove all of mud and oil from the steps or other places used to get on and off the machine completely. Always use the handrails, ladders of

steps when getting on or off the machine. Never jump on or off the machine. When the scaffold is not provided, use steps or stepladder to secure your footing.

#### Precautions during work

- For the machine equipped with the battery disconnect switch, check that the system operating lamp is turned off before starting the work. Then, turn the battery disconnect switch to OFF (○) position and remove the switch key. For the machine not equipped with the battery disconnect switch, remove the cable from the battery before starting the work. Be sure to remove the negative end (-) of the battery cable first.
- Release the remaining pressure in the circuits completely before the work when the parts in the circuits of oil, fuel, coolant and air are disconnected or removed. When the cap of the oil filter, drain plug or oil pressure pickup plug is removed, loose them slowly to prevent the oil from spurting out.
- When removing or installing the checking plug or the piping in the fuel circuit, wait 30 seconds or longer after the engine is shut down and start the work after the remaining pressure is released from the fuel circuit.
- Immediately after the engine is shut down, the coolant and oil in the circuits are hot. Be careful not to get scalded by the hot coolant and oil. Start the work after checking that the coolant and oil are cooled down sufficiently.
- Start the work after the engine is shut down. Be sure to shut down the engine when working on or around the rotating parts in particular. When checking the machine without shutting down the engine (measuring oil pressure, rotational speed, oil or coolant temperature), take extreme care not to get caught in the rotating parts or the working equipment.
- The hoist or crane must be used to sling the components weighing 25 kg or heavier. Check the slings (wire rope, nylon sling, chain and hook) for damage before the work. Use the slings with ample capacity and install them to the proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- When removing the part which is under internal pressure or reaction force of the spring, always leave 2 bolts in diagonal positions. Loosen those 2 bolts gradually and alternately and release the pressure, then, remove the part.
- When removing the part, be careful not to break or damage the electrical wiring. The damaged wiring may cause electrical fires.
- When removing piping, prevent the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it off immediately. Fuel or oil on the floor can cause you to slip and can even cause fires.
- As a general rule, do not use gasoline to wash parts. Do not use gasoline to clean the electrical parts, in particular.
- Reinstall the parts removed to their original places. Replace the damaged parts and the parts which must not be used with new ones. When installing the hoses and wiring harnesses, be careful that they are not damaged by contacting with other parts when the machine is operated.
- When connecting the high pressure hoses and tubes, make sure that they are not twisted. The damaged high pressure hoses and tubes are very dangerous when they are installed. So, be extremely careful when connecting the high pressure pipings. In addition, check that their connections are correct.
- When assembling or installing the parts, be sure to tighten the bolts to the specified torque. When installing the protective parts such as guards, or the parts which vibrate violently or rotate at high speeds, be sure to check that they are installed correctly.
- When aligning 2 holes, never insert your fingers or hand into the holes. Align the holes with care so that your fingers are not caught in the hole.
- When measuring hydraulic pressure, check that the measuring tools are correctly installed.
- Pay attention to safety when removing and installing the tracks of the track type machines. When removing the track, it separates suddenly. The workers should not stand at either end of the track.
- If the engine is operated for a long time in a closed place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate the place well.

#### Precautions for slinging work and making signals


- Only one appointed worker must make signals and co-worker must communicate with each other frequently. The appointed signaler must make specified signals clearly at the place where the signaler is well seen from the operator's seat and where the signaler can see the working condition easily. The signaler must always stand in front of the load and guide the operator safely.
  1. Do not stand under the load.
  2. Do not step on the load.
- Check the slings before starting sling work.

- Keep putting on the gloves during sling work. (Put on the leather gloves, if available.)
- Measure the weight of the load by the eye and check its center of gravity.
- Use the proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- Do not sling a load with 1 wire rope only. If do so, the load may rotate or the sling gets loose and the sling may slip off. Install 2 or more wire ropes symmetrically.

**▲ Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original slinging position on the load, which can result in a dangerous accident.**


- Hanging angle must be 60 degrees or smaller as a rule.
- When hanging a heavy load (25kg or heavier), the hanging angle of the rope must be narrower than that of the hook.

★ When slinging a load with 2 ropes or more, the larger the hanging angle is, the larger the tension of each rope. The figure bellow shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1000kg} a load vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1000 kg} when the 2 ropes make a hanging angle of 120 degrees. If the two ropes sling a 19.6 kN {2000 kg} load at a hanging angle of 150 degrees, each rope is subjected to a force as large as 39.2 kN {4000 kg}.

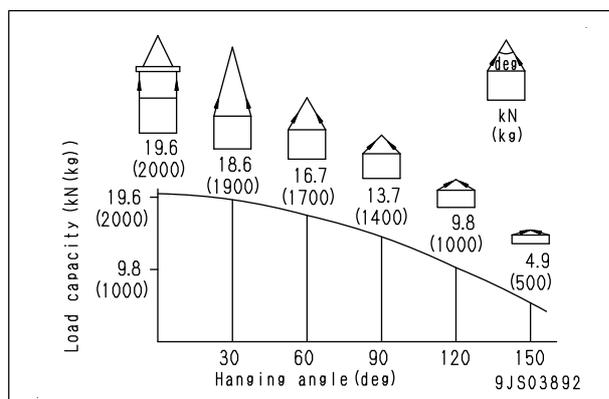

- When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.

- Use the specified eye bolts and fix wire ropes, chains, etc. to them with shackles, etc.
- Apply wire ropes to the middle part of the hook.
  - ★ Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The strength of the hook is maximum at its central part.

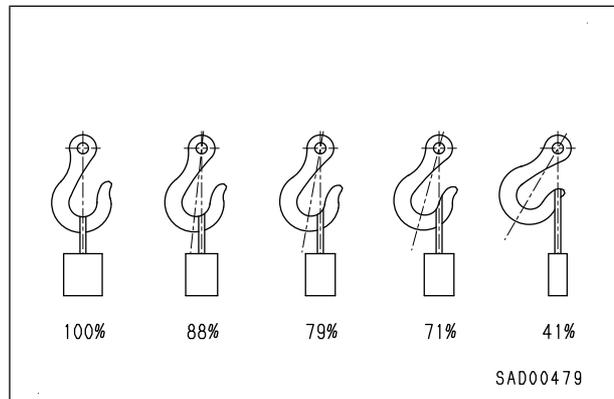

- Do not use twisted or kinked wire ropes.
- When slinging up a load, observe the following.
  1. Wind up the rope slowly until the wire rope tensions. When putting your hands on the wire ropes, do not grasp them but press them down from above. If you grasp them, your fingers may be caught.
  2. After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.
  3. If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
  4. Do not lift up the load at an angle.
- When lowering a load, pay attention to the following.
  1. When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
  2. Check that the load is stable, and then remove the sling.
  3. Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

#### Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

#### Precautions for using overhead traveling crane

- ▲ The hoist or crane must be used to sling the components weighing 25 kg or heavier. A part weighing 25 kg or heavier in "disassembly and assembly" section is indicated with the symbol of

**00 INDEX AND FOREWORD**

**FOREWORD, SAFETY AND GENERAL INFORMATION**

- Before starting work, check the wire ropes, brake, clutch, controller, rails, over winding prevention device, ground fault circuit interrupter for electric shock prevention, crane collision prevention device, and energizing warning lamp, and check the following safety items.
- Observe the signals for sling work.
- Operate the hoist at a safe place.
- Be sure to check the directions of the direction indication plate (north, south, east and west) and the operating button.
- Do not sling a load at an angle. Do not move the crane while the slung load is swinging.
- Do not raise or lower a load while the crane is moving longitudinally or laterally.
- Do not drag a sling.
- When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- Consider the travel route in advance and lift up a load to a safe height.
- Place the control switch in a position where it will not be an obstacle to work and passage.
- After operating the hoist, do not swing the control switch.
- Remember the position of the main switch so that you can turn off the power immediately in an emergency.
- Shut down the main switch when the hoist stops because of a blackout. When turning on a switch which is turned OFF by the ground fault circuit interrupter for electric shock prevention, check that the devices related to that switch are not in operating condition.
- If you find an obstacle around the hoist, stop the operation.
- After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 meters above the floor. Do not leave the sling attached to the hook.

**Selecting wire ropes**

- Select adequate ropes depending on the weight of the parts to be hoisted, referring to the table below

Wire rope (JIS G3525, 6 x 37 - Type A)

(Standard Z twist wire ropes without galvanizing)

Nominal diameter of rope	Allowable load	
	kN	ton
mm		
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4

Nominal diameter of rope	Allowable load	
	kN	ton
mm		
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is calculated as one sixth of the breaking load of the rope to be used (safety coefficient: 6).

**Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit**

**Disconnection**

**⚠ When replacing the air conditioner unit, air conditioner compressor, condenser or receiver drier, etc., collect the refrigerant (air conditioner gas: R134a) from the air conditioner circuit before disconnecting the air conditioner hoses.**

- ★ Ask a qualified person for collecting, adding and filling operations of the refrigerant (air conditioner gas: R134a). (Only registered persons can work.)
- ★ Never release the refrigerant (air conditioner gas: R134a) to the atmosphere.

**⚠ If refrigerant gas (air conditioner gas: R134a) gets in your eyes, you may lose your sight. And if it touches your skin, you may suffer from frostbite. Put on protective eyeglasses, gloves and working clothes with long sleeves while collecting the refrigerant or filling the air conditioner circuit with the refrigerant.**

- When loosening the nuts fixing air conditioner hoses and tubes, be sure to use 2 wrenches; use one wrench to fix and use the other one to loosen the nut.

**Connection**

- When installing the hose for the air conditioner circuit, take care not to allow invasion of dirt, dusts and water into the hose.
- Check that the O-rings are fitted to the joints when connecting the air conditioner piping.
- Once an O-ring is used, it is deformed and deteriorated. Accordingly, do not reuse it.
- When removing the O-rings, use a soft tool so that the piping is not damaged.
- Check that the O-ring is not damaged or deteriorated.
- Apply compressor oil for refrigerant (R134a) to the O-ring.
  - ★ However, do not apply oil to the threaded portion of a bolt, nut or union.