

# Shop Manual

BULLDOZER

***D65EX -18***

***D65PX -18***

***D65WX -18***

SERIAL NUMBERS 90001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
FOREWORD, SAFETY, BASIC INFORMATION .....	00-20
HOW TO READ THE SHOP MANUAL.....	00-20
SAFETY NOTICE FOR OPERATION.....	00-22
PRECAUTIONS TO PREVENT FIRE.....	00-28
ACTION IF FIRE OCCURS.....	00-30
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-31
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-32
PRECAUTIONS FOR AdBlue/DEF .....	00-33
STORE AdBlue/DEF .....	00-34
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT.....	00-35
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-37
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-43
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT.....	00-46
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT.....	00-47
PRACTICAL USE OF KOMTRAX.....	00-48
METHOD FOR DISCONNECTING AND CONNECTING PUSH-PULL TYPE COUPLER.....	00-49
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-52
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR.....	00-56
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR.....	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-59
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-62
HOW TO READ ELECTRICAL WIRE CODE.....	00-63
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-67
LIST OF ABBREVIATION .....	00-70
STANDARD TIGHTENING TORQUE TABLE.....	00-75
CONVERSION TABLE.....	00-82
01 SPECIFICATION.....	01-1
CONTENTS.....	01-2
SPECIFICATIONS .....	01-3
SPECIFICATION DRAWING.....	01-3
SPECIFICATIONS .....	01-9
WEIGHT TABLE .....	01-30
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-40
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS.....	10-2
UREA SCR SYSTEM.....	10-5
LAYOUT DRAWING OF UREA SCR SYSTEM.....	10-5
UREA SCR SYSTEM DIAGRAM .....	10-7
FUNCTION OF UREA SCR SYSTEM.....	10-8
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-23
BOOT-UP SYSTEM.....	10-32
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-32
SYSTEM OPERATING LAMP SYSTEM .....	10-34
BATTERY DISCONNECT SWITCH .....	10-36
ENGINE SYSTEM .....	10-38
LAYOUT DRAWING OF ENGINE RELATED PARTS .....	10-38
ENGINE CONTROL SYSTEM .....	10-40
AUTOMATIC IDLE STOP SYSTEM .....	10-45
COMPONENT PARTS OF ENGINE SYSTEM .....	10-48
COOLING SYSTEM.....	10-67
LAYOUT DRAWING OF COOLING SYSTEM.....	10-67
COMPONENT PARTS OF COOLING SYSTEM.....	10-69
CONTROL SYSTEM.....	10-86

LAYOUT DRAWING OF CONTROL SYSTEM PARTS .....	10-86
PALM COMMAND CONTROL SYSTEM .....	10-87
MACHINE MONITOR SYSTEM .....	10-91
KOMTRAX SYSTEM .....	10-92
COMPONENT PARTS OF CONTROL SYSTEM .....	10-93
HYDRAULIC SYSTEM .....	10-121
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-121
CLSS .....	10-122
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-125
POWER TRAIN SYSTEM .....	10-178
LAYOUT DRAWING OF POWER TRAIN SYSTEM .....	10-178
OPERATION OF POWER TRAIN SYSTEM .....	10-181
TRANSMISSION, STEERING, AND BRAKE CONTROL .....	10-182
HSS SYSTEM .....	10-184
CENTRALIZED PRESSURE PICKUP PORT .....	10-187
COMPONENT PARTS OF POWER TRAIN SYSTEM .....	10-188
WORK EQUIPMENT SYSTEM .....	10-257
WORK EQUIPMENT CONTROL .....	10-257
LAYOUT OF TILT DOZER, POWER TILT PITCH DOZER AND ANGLE DOZER SERIES .....	10-260
LAYOUT OF POWER ANGLE POWER TILT DOZER SERIES .....	10-261
LAYOUT OF FIXED MULTI-SHANK RIPPER .....	10-262
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM .....	10-263
UNDERCARRIAGE AND FRAME .....	10-288
MAIN FRAME .....	10-288
SUSPENSION .....	10-290
TRACK FRAME AND IDLER CUSHION .....	10-293
WORK EQUIPMENT .....	10-296
STRUCTURE OF FRONT WORK EQUIPMENT (FOR TILT DOZER AND POWER TILT PITCH DOZER SERIES) .....	10-296
STRUCTURE OF FRONT WORK EQUIPMENT (FOR POWER ANGLE POWER TILT DOZER SERIES) .....	10-297
STRUCTURE OF FRONT WORK EQUIPMENT (ANGLE DOZER SERIES) .....	10-298
STRUCTURE OF FIXED MULTI-SHANK RIPPER .....	10-299
CAB AND ITS ATTACHMENTS .....	10-300
ROPS CAB .....	10-300
CAB MOUNT .....	10-302
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR ENGINE: D65EX-18 .....	20-3
STANDARD VALUE TABLE FOR ENGINE: D65PX-18 .....	20-8
STANDARD VALUE TABLE FOR ENGINE: D65WX-18 .....	20-13
STANDARD VALUE TABLE FOR MACHINE .....	20-18
STANDARD VALUE TABLE FOR MACHINE: D65EX-18 .....	20-18
STANDARD VALUE TABLE FOR MACHINE: D65PX-18 .....	20-33
STANDARD VALUE TABLE FOR MACHINE: D65WX-18 .....	20-48
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-65
STANDARD VALUE TABLE FOR ELECTRICITY .....	20-65
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-5
TOOLS FOR TESTING AND ADJUSTING .....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....	30-11
ENGINE AND COOLING SYSTEM .....	30-12
TEST ENGINE SPEED .....	30-12
TEST BOOST PRESSURE .....	30-16
TEST EXHAUST GAS TEMPERATURE .....	30-18
TEST EXHAUST GAS COLOR .....	30-20

TEST AND ADJUST VALVE CLEARANCE .....	30-22
TEST COMPRESSION PRESSURE .....	30-25
TEST BLOWBY PRESSURE .....	30-27
TEST ENGINE OIL PRESSURE .....	30-29
TEST EGR VALVE AND KVGT OIL PRESSURE .....	30-30
TEST FUEL PRESSURE .....	30-32
TEST FUEL DISCHARGE, RETURN AND LEAKAGE .....	30-38
BLEED AIR FROM FUEL SYSTEM .....	30-43
TEST FUEL CIRCUIT FOR LEAKAGE .....	30-45
HANDLE CYLINDER CUT-OUT MODE OPERATION .....	30-47
HANDLE NO-INJECTION CRANKING OPERATION .....	30-48
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION .....	30-49
WRITE ASH IN SOOT ACCUMULATION CORRECTION TO ENGINE CONTROLLER .....	30-50
TEST SCR RELATED FUNCTIONS .....	30-51
CLEAN AdBlue/DEF TANK .....	30-73
CLEAN AdBlue/DEF TANK MOUNTING PORTION .....	30-77
ADJUST DECELERATOR PEDAL .....	30-79
POWER TRAIN .....	30-81
TEST POWER TRAIN OIL PRESSURE .....	30-81
ADJUST TRANSMISSION OUTPUT SHAFT SPEED SENSOR .....	30-93
TEST BRAKE PERFORMANCE SIMPLY .....	30-95
ADJUST BRAKE PEDAL .....	30-96
ADJUST PARKING BRAKE LEVER .....	30-98
MOVE MACHINE BY RELEASING PARKING BRAKE WHEN MACHINE DOES NOT TRAVEL .....	30-100
UNDERCARRIAGE AND FRAME .....	30-103
ADJUSTING IDLER CLEARANCE .....	30-103
TEST AND ADJUST TRACK TENSION .....	30-104
HYDRAULIC SYSTEM .....	30-105
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM .....	30-105
TEST AND ADJUST WORK EQUIPMENT AND HSS OIL PRESSURES .....	30-106
BLEED AIR FROM HSS PUMP .....	30-110
TEST OIL PRESSURE OF CONTROL CIRCUIT .....	30-111
TEST PPC VALVE OUTPUT PRESSURE .....	30-113
TEST AND ADJUST PLAY OF WORK EQUIPMENT PPC VALVE .....	30-115
CHECK COOLING FAN SPEED .....	30-117
TEST COOLING FAN CIRCUIT OIL PRESSURE .....	30-118
BLEED AIR FROM COOLING FAN PUMP .....	30-120
TEST THE PARTS CAUSING HYDRAULIC DRIFT IN WORK EQUIPMENT .....	30-121
TEST INTERNAL OIL LEAKAGE OF WORK EQUIPMENT CYLINDER .....	30-123
BLEED AIR FROM WORK EQUIPMENT CYLINDERS .....	30-125
WORK EQUIPMENT .....	30-126
ADJUST WORK EQUIPMENT LOCK LEVER .....	30-126
CAB AND ITS ATTACHMENTS .....	30-127
TEST AND ADJUST OPERATOR'S CAB .....	30-127
ELECTRICAL SYSTEM .....	30-132
SET AND OPERATE OF MACHINE MONITOR .....	30-132
METHOD FOR STARTING UP KOMTRAX .....	30-217
ADJUST WHEN POWER TRAIN CONTROLLER IS REPLACED .....	30-222
ADJUST REARVIEW CAMERA ANGLE .....	30-225
HANDLE VOLTAGE CIRCUIT OF ENGINE CONTROLLER .....	30-226
HANDLE BATTERY DISCONNECT SWITCH .....	30-227
TEST DIODES .....	30-228
Pm CLINIC .....	30-229
Pm CLINIC SERVICE .....	30-229
40 TROUBLESHOOTING .....	40-1
CONTENTS .....	40-2
RELATED INFORMATION ON TROUBLESHOOTING .....	40-12
GENERAL TROUBLESHOOTING POINTS .....	40-12

TROUBLESHOOTING POINTS FOR UREA SCR SYSTEM.....	40-13
SEQUENCE OF EVENTS IN TROUBLESHOOTING.....	40-26
CHECKS BEFORE TROUBLESHOOTING.....	40-28
CHECKS BEFORE TROUBLESHOOTING.....	40-30
TESTING IN ACCORDANCE WITH TESTING PROCEDURE.....	40-32
PREPARATION FOR TROUBLESHOOTING OF ELECTRICAL SYSTEM.....	40-40
PROCEDURE FOR TESTING AND TROUBLESHOOTING.....	40-47
SYMPTOM AND TROUBLESHOOTING NUMBERS.....	40-50
INFORMATION IN TROUBLESHOOTING TABLE.....	40-53
TROUBLESHOOTING METHOD FOR OPEN CIRCUIT IN WIRING HARNESS OF PRESSURE SENSOR SYSTEM.....	40-55
CONNECTORS LIST AND LAYOUT.....	40-57
CONNECTOR PIN NUMBERS - CONNECTION TABLE.....	40-73
T-BOXES AND T-ADAPTERS LIST.....	40-112
FUSE LOCATION TABLE.....	40-118
PRECAUTIONS FOR KDPF (KCSF, KDOC) CLEANING AND CHANGE.....	40-121
PREPARATION OF SHORT CIRCUIT ELECTRICAL CONNECTOR (FOR FAILURE CODES [CA1883] AND [CA3135]).....	40-125
FAILURE CODES TABLE.....	40-127
TROUBLESHOOTING BY FAILURE CODE (DISPLAY OF CODE).....	40-144
FAILURE CODE [1500L0] T/M Clutches Double Engagement.....	40-144
FAILURE CODE [15SAL1] ECMV Release Trouble (Forward).....	40-145
FAILURE CODE [15SALH] ECMV Engage Trouble (Forward).....	40-147
FAILURE CODE [15SBL1] ECMV Release Trouble (Reverse).....	40-149
FAILURE CODE [15SBLH] ECMV Engage Trouble (Reverse).....	40-151
FAILURE CODE [15SEL1] ECMV Release Trouble (1st).....	40-153
FAILURE CODE [15SELH] ECMV Engage Trouble (1st).....	40-155
FAILURE CODE [15SFL1] ECMV Release Trouble (2nd).....	40-157
FAILURE CODE [15SFLH] ECMV Engage Trouble (2nd).....	40-159
FAILURE CODE [15SGL1] ECMV Release Trouble (3rd).....	40-161
FAILURE CODE [15SGLH] ECMV Engage Trouble (3rd).....	40-163
FAILURE CODE [15SJL1] ECMV Release Trouble (Lock Up Clutch).....	40-165
FAILURE CODE [15SJLH] ECMV Engage Trouble (Lock Up Clutch).....	40-167
FAILURE CODE [1800MW] P/T Clutch Slip.....	40-169
FAILURE CODE [879AKA] A/C Recirculation Air Temperature Sensor Open Circuit.....	40-170
FAILURE CODE [879AKB] A/C Recirculation Air Temperature Sensor Short Circuit.....	40-171
FAILURE CODE [879BKA] A/C Fresh Air Temperature Sensor Open Circuit.....	40-172
FAILURE CODE [879BKB] A/C Fresh Air Temperature Sensor Short Circuit.....	40-174
FAILURE CODE [879CKA] Ventilating Sensor Open Circuit.....	40-176
FAILURE CODE [879CKB] Ventilating Sensor Short Circuit.....	40-177
FAILURE CODE [879DKZ] Sunlight Sensor Open Circuit or Short Circuit.....	40-178
FAILURE CODE [879EMC] Ventilation Damper Malfunction.....	40-180
FAILURE CODE [879FMC] Air Mix Damper Malfunction.....	40-181
FAILURE CODE [879GKX] Refrigerant Pressure Input Signal Out of Range.....	40-182
FAILURE CODE [989L00] Engine Controller Lock Caution 1.....	40-184
FAILURE CODE [989M00] Engine Controller Lock Caution 2.....	40-185
FAILURE CODE [989N00] Engine Controller Lock Caution 3.....	40-186
FAILURE CODE [A1U0N3] Hydrocarbon Desorb Request 1.....	40-187
FAILURE CODE [A1U0N4] Hydrocarbon Desorb Request 2.....	40-189
FAILURE CODE [A900FR] Abrupt Engine Stop by Auto Idling Stop 3.....	40-191
FAILURE CODE [A900N6] Abrupt Engine Stop by Auto Idling Stop 1.....	40-192
FAILURE CODE [A900NY] Abrupt Engine Stop by Auto Idling Stop 2.....	40-193
FAILURE CODE [AA10NX] Air Cleaner Clogging.....	40-194
FAILURE CODE [AB00KE] Charge Voltage Low.....	40-196
FAILURE CODE [AQ10N3] Manual Stationary Regeneration Request (KDOC Face Plugging)....	40-198
FAILURE CODE [AS00N3] Manual Stationary Regeneration Request (SCR).....	40-200
FAILURE CODE [AS00R2] Warning 2 (SCR Device Abnormality).....	40-202
FAILURE CODE [AS00R3] Inducement 1 (SCR Device Abnormality).....	40-203

FAILURE CODE [AS00R4] Inducement 2 (SCR Device Abnormality) .....	40-204
FAILURE CODE [AS00R5] Inducement 3 (SCR Device Abnormality) .....	40-205
FAILURE CODE [AS00R6] Temporary Recovery of Inducement.....	40-206
FAILURE CODE [AS00ZK] AdBlue/DEF Level Low Error 5.....	40-207
FAILURE CODE [AS10KM] AdBlue/DEF Injector Overheat Warning .....	40-208
FAILURE CODE [AS10NR] AdBlue/DEF Injector High Temperature Warning .....	40-209
FAILURE CODE [AS10NT] AdBlue/DEF Injector Overheat Caution.....	40-210
FAILURE CODE [B@BAZG] Engine Oil Pressure Low .....	40-211
FAILURE CODE [B@BCNS] Engine Coolant Overheat .....	40-212
FAILURE CODE [B@CENS] Power Train Oil Overheat .....	40-213
FAILURE CODE [B@HANS] Hydraulic Oil Overheat .....	40-214
FAILURE CODE [CA115] Engine NE and Backup Speed Sensor Error.....	40-215
FAILURE CODE [CA122] Charge Air Pressure Sensor High Error.....	40-216
FAILURE CODE [CA123] Charge Air Pressure Sensor Low Error.....	40-218
FAILURE CODE [CA131] Throttle Sensor High Error.....	40-220
FAILURE CODE [CA132] Throttle Sensor Low Error.....	40-222
FAILURE CODE [CA144] Coolant Temperature Sensor High Error.....	40-225
FAILURE CODE [CA145] Coolant Temperature Sensor Low Error.....	40-227
FAILURE CODE [CA153] Charge Air Temperature Sensor High Error .....	40-229
FAILURE CODE [CA154] Charge Air Temperature Sensor Low Error .....	40-232
FAILURE CODE [CA187] Sensor 2 Supply Voltage Low Error .....	40-235
FAILURE CODE [CA221] Ambient Pressure Sensor High Error.....	40-237
FAILURE CODE [CA222] Ambient Pressure Sensor Low Error .....	40-239
FAILURE CODE [CA227] Sensor 2 Supply Voltage High Error .....	40-241
FAILURE CODE [CA234] Engine Overspeed.....	40-242
FAILURE CODE [CA238] NE Speed Sensor Supply Voltage Error .....	40-243
FAILURE CODE [CA239] NE Speed Sensor Supply Voltage High Error .....	40-245
FAILURE CODE [CA249] Ambient Air Temp Sensor High Error.....	40-247
FAILURE CODE [CA256] Ambient Air Temp Sensor Low Error.....	40-249
FAILURE CODE [CA271] IMV/PCV 1 Short Circuit Error .....	40-251
FAILURE CODE [CA272] IMV/PCV 1 Open Circuit Error .....	40-253
FAILURE CODE [CA281] Supply Pump Pressure Balance Error .....	40-255
FAILURE CODE [CA322] Injector #1 (L#1) Open Circuit Error or Short Circuit Error .....	40-256
FAILURE CODE [CA323] Injector #5 (L#5) Open Circuit Error or Short Circuit Error .....	40-258
FAILURE CODE [CA324] Injector #3 (L#3) Open Circuit Error or Short Circuit Error .....	40-260
FAILURE CODE [CA325] Injector #6 (L#6) Open Circuit Error or Short Circuit Error .....	40-262
FAILURE CODE [CA331] Injector #2 (L#2) Open Circuit Error or Short Circuit Error .....	40-264
FAILURE CODE [CA332] Injector #4 (L#4) Open Circuit Error or Short Circuit Error .....	40-266
FAILURE CODE [CA343] Engine Controller Internal Failure .....	40-268
FAILURE CODE [CA351] Injectors Drive Circuit Error.....	40-269
FAILURE CODE [CA352] Sensor 1 Supply Voltage Low Error .....	40-270
FAILURE CODE [CA356] MAF Sensor High Error .....	40-273
FAILURE CODE [CA357] MAF Sensor Low Error .....	40-275
FAILURE CODE [CA386] Sensor 1 Supply Voltage High Error .....	40-277
FAILURE CODE [CA428] Water in Fuel Sensor High Error.....	40-278
FAILURE CODE [CA429] Water in Fuel Sensor Low Error.....	40-280
FAILURE CODE [CA435] Engine Oil Pressure SW Error .....	40-282
FAILURE CODE [CA441] Power Voltage Low Error .....	40-284
FAILURE CODE [CA442] Power Voltage High Error .....	40-286
FAILURE CODE [CA449] Common Rail Pressure High Error 2 .....	40-287
FAILURE CODE [CA451] Common Rail Pressure Sensor High Error .....	40-291
FAILURE CODE [CA452] Common Rail Pressure Sensor Low Error .....	40-294
FAILURE CODE [CA488] Charge Air Temperature High Torque Derate.....	40-296
FAILURE CODE [CA515] Common Rail Pressure Sensor Supply Voltage High Error.....	40-297
FAILURE CODE [CA516] Common Rail Pressure Sensor Supply Voltage Low Error.....	40-299
FAILURE CODE [CA553] Common Rail Pressure High Error 1 .....	40-301
FAILURE CODE [CA555] Crankcase Pressure High Error 2.....	40-302
FAILURE CODE [CA556] Crankcase Pressure High Error 3.....	40-303



FAILURE CODE [CA559] Common Rail Pressure Low Error 1 .....	40-304
FAILURE CODE [CA595] Turbocharger Speed High Error 2.....	40-308
FAILURE CODE [CA687] Turbocharger Speed Low Error .....	40-309
FAILURE CODE [CA689] Engine NE Speed Sensor Error .....	40-311
FAILURE CODE [CA691] Intake Air Temperature Sensor High Error .....	40-316
FAILURE CODE [CA692] Intake Air Temperature Sensor Low Error .....	40-318
FAILURE CODE [CA697] Engine Controller Internal Temperature Sensor High Error .....	40-320
FAILURE CODE [CA698] Engine Controller Internal Temperature Sensor Low Error .....	40-321
FAILURE CODE [CA731] Engine Backup Speed Sensor Phase Error .....	40-322
FAILURE CODE [CA778] Engine Backup Speed Sensor Error .....	40-324
FAILURE CODE [CA1117] Engine Controller Partial Data Lost Error .....	40-329
FAILURE CODE [CA1664] KDOC Abnormality .....	40-330
FAILURE CODE [CA1669] AdBlue/DEF Level Sensor Voltage High Error .....	40-333
FAILURE CODE [CA1673] AdBlue/DEF Level Low Error 3 .....	40-334
FAILURE CODE [CA1677] AdBlue/DEF Temperature Sensor Low Error .....	40-335
FAILURE CODE [CA1678] AdBlue/DEF Temperature Sensor High Error .....	40-336
FAILURE CODE [CA1682] AdBlue/DEF Pump Priming Error.....	40-337
FAILURE CODE [CA1683] AdBlue/DEF Tank Heating Valve Voltage High Error.....	40-339
FAILURE CODE [CA1684] AdBlue/DEF Tank Heating Valve Voltage Low Error .....	40-341
FAILURE CODE [CA1686] AdBlue/DEF Quality Sensor Voltage High Error.....	40-343
FAILURE CODE [CA1691] Defective Regeneration .....	40-344
FAILURE CODE [CA1694] SCR Outlet NOx Sensor In Range Error.....	40-347
FAILURE CODE [CA1695] Sensor 5 Supply Voltage High Error .....	40-350
FAILURE CODE [CA1696] Sensor 5 Supply Voltage Low Error .....	40-351
FAILURE CODE [CA1712] AdBlue/DEF Tank Thawing Error .....	40-353
FAILURE CODE [CA1713] AdBlue/DEF Tank Heater Valve Open Stuck Error.....	40-356
FAILURE CODE [CA1714] AdBlue/DEF Quality Sensor Out of Calibration Error .....	40-358
FAILURE CODE [CA1715] AdBlue/DEF Quality Sensor Internal Circuit Error .....	40-359
FAILURE CODE [CA1776] Sensor Supply Relay Voltage High Error .....	40-360
FAILURE CODE [CA1777] Sensor Supply Relay Voltage Low Error .....	40-363
FAILURE CODE [CA1843] Crankcase Pressure Sensor High Error.....	40-366
FAILURE CODE [CA1844] Crankcase Pressure Sensor Low Error.....	40-368
FAILURE CODE [CA1879] KDPF Differential Pressure Sensor High Error .....	40-371
FAILURE CODE [CA1881] KDPF Differential Pressure Sensor Low Error .....	40-373
FAILURE CODE [CA1883] KDPF Differential Pressure Sensor In Range Error .....	40-376
FAILURE CODE [CA1885] Turbo Outlet NOx Sensor Circuit Error .....	40-380
FAILURE CODE [CA1887] SCR Outlet NOx Sensor Circuit Error .....	40-382
FAILURE CODE [CA1921] KDPF Soot Accumulation High Error 1 .....	40-384
FAILURE CODE [CA1922] KDPF Soot Accumulation High Error 2 .....	40-387
FAILURE CODE [CA1942] Crankcase Pressure Sensor In Range Error.....	40-392
FAILURE CODE [CA1993] KDPF Differential Pressure Low Error .....	40-393
FAILURE CODE [CA2185] Throttle Sensor Supply Voltage High Error .....	40-396
FAILURE CODE [CA2186] Throttle Sensor Supply Voltage Low Error .....	40-398
FAILURE CODE [CA2249] Common Rail Pressure Low Error 2 .....	40-400
FAILURE CODE [CA2265] Fuel Feed Pump Open Circuit Error .....	40-401
FAILURE CODE [CA2266] Fuel Feed Pump Short Circuit Error.....	40-403
FAILURE CODE [CA2271] EGR Valve Position Sensor High Error .....	40-405
FAILURE CODE [CA2272] EGR Valve Position Sensor Low Error.....	40-408
FAILURE CODE [CA2288] Turbocharger Speed High Error 1 .....	40-411
FAILURE CODE [CA2311] IMV Solenoid Error.....	40-412
FAILURE CODE [CA2349] EGR Valve Solenoid Open Circuit Error.....	40-413
FAILURE CODE [CA2353] EGR Valve Solenoid Short Circuit Error.....	40-416
FAILURE CODE [CA2357] EGR Valve Servo Error .....	40-418
FAILURE CODE [CA2381] KVGT Position Sensor High Error.....	40-419
FAILURE CODE [CA2382] KVGT Position Sensor Low Error .....	40-422
FAILURE CODE [CA2383] KVGT Solenoid Open Circuit Error .....	40-425
FAILURE CODE [CA2386] KVGT Solenoid Short Circuit Error .....	40-428
FAILURE CODE [CA2387] KVGT Servo Error .....	40-430

FAILURE CODE [CA2555] Intake Air Heater Relay Open Circuit Error .....40-431

FAILURE CODE [CA2556] Intake Air Heater Relay Short Circuit Error .....40-434

FAILURE CODE [CA2637] KDOC Face Plugging .....40-437

FAILURE CODE [CA2639] Manual Stationary Regeneration Request .....40-439

FAILURE CODE [CA2771] SCR Outlet NOx Sensor Datalink Timeout Error.....40-441

FAILURE CODE [CA2777] Manual Stationary Regeneration Request but KDPF Regeneration Disable ..  
.....40-447

FAILURE CODE [CA2976] AdBlue/DEF Pump Temperature Sensor Signal Error .....40-450

FAILURE CODE [CA3133] KDPF Outlet Pressure Sensor High Error .....40-452

FAILURE CODE [CA3134] KDPF Outlet Pressure Sensor Low Error.....40-454

FAILURE CODE [CA3135] KDPF Outlet Pressure Sensor In Range Error .....40-456

FAILURE CODE [CA3142] SCR Temperature Sensor High Error.....40-461

FAILURE CODE [CA3143] SCR Temperature Sensor Low Error .....40-462

FAILURE CODE [CA3144] SCR Temperature Sensor In Range Error .....40-463

FAILURE CODE [CA3146] SCR Outlet Temperature Sensor High Error .....40-465

FAILURE CODE [CA3147] SCR Outlet Temperature Sensor Low Error .....40-466

FAILURE CODE [CA3148] SCR Outlet Temperature Sensor In Range Error .....40-467

FAILURE CODE [CA3151] SCR Catalyst Efficiency Low Error 2.....40-469

FAILURE CODE [CA3165] SCR Outlet Temperature High Error .....40-475

FAILURE CODE [CA3229] SCR Temperature High Error.....40-477

FAILURE CODE [CA3231] SCR Temperature High Error - Non Regeneration .....40-479

FAILURE CODE [CA3232] Turbo Outlet NOx Sensor Datalink Timeout Error .....40-481

FAILURE CODE [CA3235] SCR Outlet Temperature High Error - Non Regeneration.....40-485

FAILURE CODE [CA3239] AdBlue/DEF Line Heater 2 Voltage High Error.....40-487

FAILURE CODE [CA3241] AdBlue/DEF Line Heater 2 Voltage Low Error .....40-490

FAILURE CODE [CA3242] AdBlue/DEF Tank Heating Error .....40-493

FAILURE CODE [CA3251] KDOC Inlet Temperature High Error .....40-496

FAILURE CODE [CA3253] KDOC Temperature Error - Non Regeneration .....40-498

FAILURE CODE [CA3254] KDOC Outlet Temperature High Error 1.....40-501

FAILURE CODE [CA3255] KDPF Temperature Error - Non Regeneration .....40-504

FAILURE CODE [CA3256] KDPF Outlet Temperature High Error 1 .....40-506

FAILURE CODE [CA3311] KDOC Outlet Temperature High Error 2.....40-508

FAILURE CODE [CA3312] KDPF Outlet Temperature High Error 2 .....40-510

FAILURE CODE [CA3313] KDOC Inlet Temperature Sensor Low Error .....40-513

FAILURE CODE [CA3314] KDOC Inlet Temperature Sensor High Error .....40-514

FAILURE CODE [CA3315] KDOC Inlet Temperature Sensor In Range Error .....40-515

FAILURE CODE [CA3316] KDOC Outlet Temperature Sensor Low Error .....40-518

FAILURE CODE [CA3317] KDOC Outlet Temperature Sensor High Error .....40-519

FAILURE CODE [CA3318] KDOC Outlet Temperature Sensor In Range Error .....40-520

FAILURE CODE [CA3319] KDPF Outlet Temperature Sensor High Error .....40-523

FAILURE CODE [CA3321] KDPF Outlet Temperature Sensor Low Error .....40-524

FAILURE CODE [CA3322] KDPF Outlet Temperature Sensor In Range Error .....40-526

FAILURE CODE [CA3419] MAF Sensor Supply Voltage High Error.....40-529

FAILURE CODE [CA3421] MAF Sensor Supply Voltage Low Error.....40-531

FAILURE CODE [CA3497] AdBlue/DEF Level Low Error 1 .....40-533

FAILURE CODE [CA3498] AdBlue/DEF Level Low Error 2.....40-534

FAILURE CODE [CA3543] AdBlue/DEF Quality Error (SCR Catalyst Efficiency Low).....40-535

FAILURE CODE [CA3545] SCR Outlet NOx Sensor Unstable Error .....40-542

FAILURE CODE [CA3547] AdBlue/DEF Level Low Error 4 .....40-544

FAILURE CODE [CA3558] AdBlue/DEF Pump Voltage High Error.....40-545

FAILURE CODE [CA3559] AdBlue/DEF Pump Voltage Low Error .....40-547

FAILURE CODE [CA3562] AdBlue/DEF LineHeater Relay 1 Voltage High Error.....40-549

FAILURE CODE [CA3563] AdBlue/DEF LineHeater Relay 1 Voltage Low Error .....40-552

FAILURE CODE [CA3567] AdBlue/DEF Injector Open Circuit Error or Short Circuit Error .....40-555

FAILURE CODE [CA3568] AdBlue/DEF Injector Malfunction .....40-558

FAILURE CODE [CA3571] AdBlue/DEF Pump Pressure Sensor High Error .....40-562

FAILURE CODE [CA3572] AdBlue/DEF Pump Pressure Sensor Low Error.....40-564

FAILURE CODE [CA3574] AdBlue/DEF Pump Pressure Too Low Error .....40-566

FAILURE CODE [CA3575]	AdBlue/DEF Pump Pressure Too High Error.....	40-568
FAILURE CODE [CA3577]	AdBlue/DEF FCV Voltage High Error.....	40-570
FAILURE CODE [CA3578]	AdBlue/DEF FCV Voltage Low Error .....	40-572
FAILURE CODE [CA3582]	SCR Catalyst Efficiency Low Error 1.....	40-574
FAILURE CODE [CA3583]	SCR Outlet NOx Sensor Heater Warming up Error.....	40-580
FAILURE CODE [CA3596]	AdBlue/DEF Pump Pressure Unstable Error.....	40-582
FAILURE CODE [CA3649]	Turbo Outlet NOx Sensor Heater Warming up Error .....	40-584
FAILURE CODE [CA3681]	SCR Outlet NOx Sensor Power Voltage Error .....	40-586
FAILURE CODE [CA3682]	Turbo Outlet NOx Sensor Power Voltage Error.....	40-588
FAILURE CODE [CA3713]	AdBlue/DEF Line Heater 1 Voltage High Error.....	40-591
FAILURE CODE [CA3717]	SCR Outlet NOx Sensor Voltage Mismatch Error .....	40-594
FAILURE CODE [CA3718]	Turbo Outlet NOx Sensor Voltage Mismatch Error.....	40-595
FAILURE CODE [CA3725]	Turbo Outlet NOx Sensor Unstable Error.....	40-596
FAILURE CODE [CA3741]	Common Rail Pressure Valve Trip Error .....	40-599
FAILURE CODE [CA3748]	Turbo Outlet NOx Sensor Stuck In Range Error .....	40-600
FAILURE CODE [CA3751]	SCR Catalyst Degradation Error.....	40-603
FAILURE CODE [CA3755]	AdBlue/DEF Dosing Performance Degradation Error .....	40-605
FAILURE CODE [CA3866]	AdBlue/DEF Low Concentration Error 2 .....	40-607
FAILURE CODE [CA3867]	AdBlue/DEF Low Concentration Error 1 .....	40-610
FAILURE CODE [CA3868]	AdBlue/DEF Tank Sensor Datalink Timeout Error .....	40-613
FAILURE CODE [CA3899]	SCR NH3 Sensor Circuit Error.....	40-617
FAILURE CODE [CA3911]	SCR NH3 Sensor Datalink Timeout Error .....	40-619
FAILURE CODE [CA3912]	SCR NH3 Sensor Heater Warming up Error .....	40-623
FAILURE CODE [CA3932]	SCR NH3 Sensor Heater Voltage High Error.....	40-625
FAILURE CODE [CA3933]	SCR NH3 Sensor Heater Voltage Low Error.....	40-627
FAILURE CODE [CA3934]	SCR NH3 Sensor Power Interrupt Error .....	40-629
FAILURE CODE [CA3935]	SCR NH3 Sensor Trim Resistance Error .....	40-632
FAILURE CODE [CA3936]	SCR NH3 Sensor Internal Circuit Error.....	40-634
FAILURE CODE [CA4151]	KDOC and KDPF Temperature Sensor Datalink Timeout Error .....	40-636
FAILURE CODE [CA4152]	SCR Temperature Sensor Datalink Timeout Error .....	40-641
FAILURE CODE [CA4155]	AdBlue/DEF Pump Heater Relay Voltage High Error.....	40-645
FAILURE CODE [CA4156]	AdBlue/DEF Pump Heater Relay Voltage Low Error.....	40-648
FAILURE CODE [CA4157]	AdBlue/DEF FCV Malfunction .....	40-651
FAILURE CODE [CA4158]	KDOC and KDPF Temperature Sensor Internal Circuit Error .....	40-653
FAILURE CODE [CA4159]	SCR Temperature Sensor Internal Circuit Error .....	40-654
FAILURE CODE [CA4161]	KDOC and KDPF Temperature Sensor ECU Voltage High Error .....	40-655
FAILURE CODE [CA4162]	KDOC and KDPF Temperature Sensor ECU Voltage Low Error .....	40-657
FAILURE CODE [CA4163]	KDOC and KDPF Temperature Sensor ECU Over Temperature Error.....	40-660
FAILURE CODE [CA4164]	SCR Temperature Sensor ECU Voltage High Error .....	40-662
FAILURE CODE [CA4165]	SCR Temperature Sensor ECU Voltage Low Error .....	40-664
FAILURE CODE [CA4166]	SCR Temperature Sensor ECU High Temperature Error .....	40-666
FAILURE CODE [CA4168]	AdBlue/DEF Pump Heater ON Stuck Error.....	40-668
FAILURE CODE [CA4169]	AdBlue/DEF Pump Heater OFF Stuck Error .....	40-671
FAILURE CODE [CA4171]	AdBlue/DEF Pump Thawing Error .....	40-673
FAILURE CODE [CA4249]	AdBlue/DEF Pump Temperature Sensor 1 In Range Error .....	40-676
FAILURE CODE [CA4251]	AdBlue/DEF Pump Temperature Sensor 2 In Range Error .....	40-678
FAILURE CODE [CA4259]	KDOC and KDPF Temperature Sensor Power Interrupt Error.....	40-680
FAILURE CODE [CA4261]	SCR Temperature Sensor Power Interrupt Error.....	40-683
FAILURE CODE [CA4277]	AdBlue/DEF Quality Sensor Liquid Distinction Impossible Error .....	40-686
FAILURE CODE [CA4281]	SCR NH3 Sensor Stuck Response Error.....	40-689
FAILURE CODE [CA4459]	AdBlue/DEF LineHeater Relay 2 Voltage High Error.....	40-693
FAILURE CODE [CA4461]	AdBlue/DEF LineHeater Relay 2 Voltage Low Error .....	40-696
FAILURE CODE [CA4658]	AdBlue/DEF Flow Low Error.....	40-699
FAILURE CODE [CA4731]	AdBlue/DEF Temperature Sensor Transmission Data Error.....	40-703
FAILURE CODE [CA4732]	AdBlue/DEF Level Sensor Transmission Data Error.....	40-704
FAILURE CODE [CA4739]	AdBlue/DEF Level Sensor Internal Circuit Error .....	40-705
FAILURE CODE [CA4768]	Fuel in AdBlue/DEF Tank Error.....	40-706
FAILURE CODE [CA4769]	AdBlue/DEF Level Measurement Impossible.....	40-708

FAILURE CODE [CA4842] AdBlue/DEF High Concentration Error.....	40-711
FAILURE CODE [CA4952] System Operating Lamp Short Circuit (Engine Controller).....	40-714
FAILURE CODE [CA5115] AdBlue/DEF Line Heater 1 Voltage Low Error.....	40-716
FAILURE CODE [CA5383] Ash Accumulation High Error.....	40-719
FAILURE CODE [D130KA] Neutral Safety Relay Open Circuit.....	40-721
FAILURE CODE [D130KB] Neutral Safety Relay Short Circuit.....	40-724
FAILURE CODE [D19DKA] Amber Revolving Light Relay Open Circuit.....	40-726
FAILURE CODE [D19DKB] Amber Revolving Light Relay Short Circuit.....	40-728
FAILURE CODE [D19JKZ] Personal Code Relay Open or Short.....	40-730
FAILURE CODE [D811MC] KOMTRAX Malfunction.....	40-733
FAILURE CODE [D862KA] GPS Antenna Open Circuit.....	40-734
FAILURE CODE [D8ALKA] System Operating Lamp Open Circuit (KOMTRAX).....	40-735
FAILURE CODE [D8ALKB] System Operating Lamp Short Circuit (KOMTRAX).....	40-737
FAILURE CODE [D8AQKR] CAN 2 Defective Communication (KOMTRAX).....	40-739
FAILURE CODE [DAF0MB] Monitor ROM Abnormality.....	40-741
FAILURE CODE [DAF0MC] Monitor Malfunction.....	40-742
FAILURE CODE [DAF8KB] Camera Power Supply Short Circuit.....	40-743
FAILURE CODE [DAF9KQ] Model Selection Signal Mismatch (Monitor).....	40-744
FAILURE CODE [DAFGMC] GPS Module Malfunction.....	40-745
FAILURE CODE [DAFLKA] System Operating Lamp Open Circuit (Monitor).....	40-746
FAILURE CODE [DAFLKB] System Operating Lamp Short Circuit (Monitor).....	40-748
FAILURE CODE [DAFQKR] CAN 2 Defective Communication (Monitor).....	40-750
FAILURE CODE [DAQW00] T/M Neutral Overspeed.....	40-751
FAILURE CODE [DAZ9KQ] Model Selection Signal Mismatch (A/C).....	40-752
FAILURE CODE [DAZQKR] CAN 2 Defective Communication (A/C ECU).....	40-753
FAILURE CODE [DB2QKR] CAN 2 Defective Communication (Engine Controller).....	40-754
FAILURE CODE [DB2RKR] CAN 1 Defective Communication (Engine Controller).....	40-760
FAILURE CODE [DBE0KT] P/T Controller Internal Abnormality.....	40-765
FAILURE CODE [DBE1KK] P/T Controller Source Voltage Low Error.....	40-766
FAILURE CODE [DBE2KK] P/T Controller Solenoid Power Voltage Low Error.....	40-769
FAILURE CODE [DBE5KK] P/T Controller 5V Sensor 0 Power Voltage Out of Range.....	40-772
FAILURE CODE [DBE6KK] P/T Controller 24V Sensor Power Voltage Out of Range.....	40-774
FAILURE CODE [DBE7KK] P/T Controller 5V Sensor 1 Power Voltage Out of Range.....	40-776
FAILURE CODE [DBE9KQ] Model Selection Signal Mismatch (P/T Controller).....	40-778
FAILURE CODE [DBELKA] System Operating Lamp Open Circuit (P/T Controller).....	40-779
FAILURE CODE [DBELKB] System Operating Lamp Short Circuit (P/T Controller).....	40-781
FAILURE CODE [DBEQKR] CAN 2 Defective Communication (P/T Controller).....	40-783
FAILURE CODE [DBERKR] CAN 1 Defective Communication (P/T Controller).....	40-784
FAILURE CODE [DD12KA] Shift Up SW Open Circuit.....	40-786
FAILURE CODE [DD12KB] Shift Up SW Short Circuit.....	40-788
FAILURE CODE [DD13KA] Shift Down SW Open Circuit.....	40-790
FAILURE CODE [DD13KB] Shift Down SW Short Circuit.....	40-792
FAILURE CODE [DD14KA] Parking Brake Lever SW Open Circuit.....	40-794
FAILURE CODE [DD14KB] Parking Brake Lever SW Short Circuit.....	40-796
FAILURE CODE [DDKFL4] Left Angle SW Signal Mismatch.....	40-798
FAILURE CODE [DDKGL4] Right Angle SW Signal Mismatch.....	40-800
FAILURE CODE [DDKHKA] iB SW Open Circuit.....	40-802
FAILURE CODE [DDKHKB] iB SW Short Circuit.....	40-804
FAILURE CODE [DDN7KA] Blade Pitch Back SW Open Circuit.....	40-806
FAILURE CODE [DDN7KB] Blade Pitch Back SW Short Circuit.....	40-808
FAILURE CODE [DDNLKA] W/E Lock SW Open Circuit.....	40-810
FAILURE CODE [DDNLKB] W/E Lock SW Short Circuit.....	40-812
FAILURE CODE [DGS1KA] Hydraulic Oil Temperature Sensor Open Circuit.....	40-814
FAILURE CODE [DGS1KX] Hydraulic Oil Temperature Sensor Input Signal Out of Range.....	40-816
FAILURE CODE [DGT1KA] T/C Oil Temperature Sensor Open Circuit.....	40-818
FAILURE CODE [DGT1KX] T/C Oil Temperature Sensor Input Signal Out of Range.....	40-821
FAILURE CODE [DH21KA] W/E Pump Pressure Sensor Open Circuit.....	40-823
FAILURE CODE [DH21KY] W/E Pump Pressure Sensor Hot Short Circuit.....	40-825

FAILURE CODE [DHA4KA] Air Cleaner Clog Sensor Open Circuit .....	40-827
FAILURE CODE [DHAAMA] KDPF Differential Pressure Sensor Frozen .....	40-829
FAILURE CODE [DHACMA] KDPF Outlet Pressure Sensor Frozen .....	40-830
FAILURE CODE [DHTDKA] T/C Intermediate Pressure Sensor Open Circuit .....	40-831
FAILURE CODE [DHTDKY] T/C pressure sensor:Hot Short .....	40-833
FAILURE CODE [DK10KA] Fuel Control Dial Open Circuit .....	40-835
FAILURE CODE [DK10KB] Fuel Control Dial Short Circuit.....	40-838
FAILURE CODE [DK30KA] S/T Potentiometer 1 Open Circuit .....	40-840
FAILURE CODE [DK30KY] S/T Potentiometer 1 Hot Short Circuit.....	40-843
FAILURE CODE [DK30KX] S/T Potentiometer 1 and 2 Open Circuit or Hot Short Circuit .....	40-845
FAILURE CODE [DK30KZ] S/T Potentiometer 1 and 2 Open Circuit or Hot Short Circuit.....	40-846
FAILURE CODE [DK30L8] S/T Potentiometer 1 or 2 Signal Abnormality .....	40-847
FAILURE CODE [DK31KA] S/T Potentiometer 2 Open Circuit .....	40-848
FAILURE CODE [DK31KY] S/T Potentiometer 2 Hot Short Circuit.....	40-851
FAILURE CODE [DK40KA] Brake Pedal Potentiometer Open Circuit .....	40-853
FAILURE CODE [DK40KY] Brake Pedal Potentiometer Hot Short Circuit.....	40-855
FAILURE CODE [DK55KX] F/R Potentiometer 1 and 2 Open Circuit or Hot Short Circuit .....	40-857
FAILURE CODE [DK55KZ] F/R Potentiometer 1 and 2 Open Circuit or Hot Short Circuit .....	40-858
FAILURE CODE [DK55L8] F/R Potentiometer 1 or 2 Signal Abnormality .....	40-859
FAILURE CODE [DK56KA] F/R Potentiometer 1 Open Circuit .....	40-860
FAILURE CODE [DK56KY] F/R Potentiometer 1 Hot Short Circuit.....	40-862
FAILURE CODE [DK57KA] F/R Potentiometer 2 Open Circuit .....	40-864
FAILURE CODE [DK57KY] F/R Potentiometer 2 Hot Short Circuit.....	40-866
FAILURE CODE [DKH1KA] Inclination Angle Sensor Open Circuit.....	40-868
FAILURE CODE [DKH1KY] Inclination Angle Sensor Hot Short Circuit.....	40-871
FAILURE CODE [DLM3KA] Fan Speed Sensor Open Circuit.....	40-873
FAILURE CODE [DLM3MB] Fan Speed Sensor Function Deterioration .....	40-875
FAILURE CODE [DLT3KA] T/M Output Speed Sensor Open Circuit.....	40-876
FAILURE CODE [DLT3KB] T/M Output Speed Sensor Ground Fault .....	40-878
FAILURE CODE [DR21KX] Camera 2 Picture Reverse Drive Input Out of Range .....	40-880
FAILURE CODE [DR31KX] Camera 3 Picture Reverse Drive Input Out of Range .....	40-881
FAILURE CODE [DV20KB] Back Alarm Buzzer Short Circuit.....	40-882
FAILURE CODE [DW5AKA] W/E Pitch Select Solenoid Open Circuit .....	40-884
FAILURE CODE [DW5AKB] W/E Pitch Select Solenoid Short Circuit .....	40-886
FAILURE CODE [DW5AKY] W/E Pitch Select Solenoid Hot Short Circuit.....	40-888
FAILURE CODE [DW7BKA] Fan Reverse Solenoid Open Circuit .....	40-890
FAILURE CODE [DW7BKB] Fan Reverse Solenoid Short Circuit.....	40-892
FAILURE CODE [DW7BKY] Fan Reverse Solenoid Hot Short Circuit.....	40-894
FAILURE CODE [DWN1KA] S/T Control Valve Right EPC Solenoid Open Circuit .....	40-895
FAILURE CODE [DWN1KB] S/T Control Valve Right EPC Solenoid Short Circuit.....	40-897
FAILURE CODE [DWN1KY] S/T Control Valve Right EPC Solenoid Hot Short Circuit .....	40-899
FAILURE CODE [DWN2KA] S/T Control Valve Left EPC Solenoid Open Circuit.....	40-901
FAILURE CODE [DWN2KB] S/T Control Valve Left EPC Solenoid Short Circuit.....	40-903
FAILURE CODE [DWN2KY] S/T Control Valve Left EPC Solenoid Hot Short Circuit.....	40-905
FAILURE CODE [DWN5KA] Fan Control Solenoid 1 Open Circuit.....	40-907
FAILURE CODE [DWN5KB] Fan Control Solenoid 1 Short Circuit .....	40-909
FAILURE CODE [DWN5KY] Fan Control Solenoid 1 Hot Short Circuit.....	40-910
FAILURE CODE [DXA2KA] HSS Pump TVC Solenoid 1 Open Circuit .....	40-912
FAILURE CODE [DXA2KB] HSS Pump TVC Solenoid 1 Short Circuit .....	40-914
FAILURE CODE [DXA2KY] HSS Pump TVC Solenoid 1 Hot Short Circuit.....	40-916
FAILURE CODE [DXH1KA] Lockup Clutch ECMV Solenoid Open Circuit.....	40-917
FAILURE CODE [DXH1KB] Lockup Clutch ECMV Solenoid Short Circuit.....	40-919
FAILURE CODE [DXH1KY] Lockup Clutch ECMV Solenoid Hot Short Circuit .....	40-921
FAILURE CODE [DXH4KA] T/M 1st Clutch ECMV Solenoid Open Circuit .....	40-923
FAILURE CODE [DXH4KB] T/M 1st Clutch ECMV Solenoid Short Circuit.....	40-925
FAILURE CODE [DXH4KY] T/M 1st Clutch ECMV Solenoid Hot Short Circuit .....	40-927
FAILURE CODE [DXH5KA] T/M 2nd Clutch ECMV Solenoid Open Circuit .....	40-929
FAILURE CODE [DXH5KB] T/M 2nd Clutch ECMV Solenoid Short Circuit .....	40-931

FAILURE CODE [DXH5KY] T/M 2nd Clutch ECMV Solenoid Hot Short Circuit.....40-933

FAILURE CODE [DXH6KA] T/M 3rd Clutch ECMV Solenoid Open Circuit.....40-935

FAILURE CODE [DXH6KB] T/M 3rd Clutch ECMV Solenoid Short Circuit.....40-937

FAILURE CODE [DXH6KY] T/M 3rd Clutch ECMV Solenoid Hot Short Circuit.....40-939

FAILURE CODE [DXH7KA] T/M Reverse Clutch ECMV Solenoid Open Circuit.....40-941

FAILURE CODE [DXH7KB] T/M Reverse Clutch ECMV Solenoid Short Circuit.....40-943

FAILURE CODE [DXH7KY] T/M Reverse Clutch ECMV Solenoid Hot Short Circuit.....40-945

FAILURE CODE [DXH8KA] T/M Forward Clutch ECMV Solenoid Open Circuit.....40-947

FAILURE CODE [DXH8KB] T/M Forward Clutch ECMV Solenoid Short Circuit.....40-949

FAILURE CODE [DXH8KY] T/M Forward Clutch ECMV Solenoid Hot Short Circuit.....40-951

FAILURE CODE [DXJ4KA] W/E Lock Solenoid Open Circuit.....40-953

FAILURE CODE [DXJ4KB] W/E Lock Solenoid Short Circuit.....40-955

FAILURE CODE [DXJCKA] Blade Angle Left EPC Solenoid Open Circuit.....40-957

FAILURE CODE [DXJCKB] Blade Angle Left EPC Solenoid Short Circuit.....40-959

FAILURE CODE [DXJCKY] Blade Angle Left EPC Solenoid Hot Short Circuit.....40-961

FAILURE CODE [DXJDKA] Blade Angle Right EPC Solenoid Open Circuit.....40-963

FAILURE CODE [DXJDKB] Blade Angle Right EPC Solenoid Short Circuit.....40-965

FAILURE CODE [DXJDKY] Blade Angle Right EPC Solenoid Hot Short Circuit.....40-967

TROUBLESHOOTING OF ELECTRICAL SYSTEM (E-MODE).....40-969

E-1 ENGINE DOES NOT START (ENGINE DOES NOT CRANK).....40-969

E-2 MANUAL PREHEATING SYSTEM DOES NOT WORK.....40-976

E-3 AUTOMATIC PREHEATING SYSTEM DOES NOT WORK.....40-979

E-4 WHILE PREHEATING IS WORKING, PREHEATING MONITOR DOES NOT LIGHT UP.....40-981

E-5 WHEN STARTING SWITCH IS TURNED TO ON POSITION, MACHINE MONITOR DISPLAYS NOTHING.....40-983

E-6 WHEN STARTING SWITCH IS TURNED TO ON POSITION (WITH ENGINE STOPPED),BASIC CHECK MONITOR LIGHTS UP.....40-987

E-7 AIR CLEANER CLOGGING MONITOR LIGHTS UP IN YELLOW WHILE ENGINE IS RUNNING.....40-988

E-8 CHARGE LEVEL MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING.....40-989

E-9 ENGINE COOLANT TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING.....40-991

E-10 ENGINE OIL PRESSURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING.....40-992

E-11 POWER TRAIN OIL TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING.....40-993

E-12 HYDRAULIC OIL TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING.....40-994

E-13 ENGINE COOLANT TEMPERATURE GAUGE DOES NOT INDICATE CORRECT TEMPERATURE.....40-995

E-14 FUEL LEVEL GAUGE DOES NOT INDICATE CORRECT LEVEL.....40-996

E-15 POWER TRAIN OIL TEMPERATURE GAUGE DOES NOT INDICATE CORRECT TEMPERATURE.....40-999

E-16 HYDRAULIC OIL TEMPERATURE GAUGE DOES NOT INDICATE CORRECT TEMPERATURE.....40-1000

E-17 OPERATION MODE DOES NOT CHANGE.....40-1001

E-18 OPERATION MODE DOES NOT CHANGE.....40-1002

E-19 OPERATING CUSTOMIZE SWITCH DOES NOT DISPLAY CUSTOMIZE SCREEN.....40-1003

E-20 MODIFYING SETTING ON CUSTOMIZE SCREEN DOES NOT CHANGE SETTING OF MACHINE.....40-1004

E-21 SOME AREAS OF MACHINE MONITOR SCREEN ARE NOT DISPLAYED.....40-1005

E-22 REVERSE SLOW MODE DOES NOT FUNCTION PROPERLY.....40-1006

E-23 ALARM BUZZER DOES NOT SOUND OR DOES NOT STOP SOUNDING.....40-1007

E-24 SERVICE METER IS NOT DISPLAYED, WHILE STARTING SWITCH IS IN OFF POSITION.....40-1008

E-25 SERVICE MODE CANNOT BE SELECTED.....40-1009

E-26 HORN DOES NOT SOUND.....40-1010

E-27 HORN DOES NOT STOP SOUNDING.....40-1012

E-28 BACKUP ALARM DOES NOT SOUND.....40-1013

E-29 BACKUP ALARM DOES NOT STOP SOUNDING.....	40-1015
E-30 HEADLAMP DOES NOT LIGHT UP .....	40-1016
E-31 REAR LAMP DOES NOT LIGHT UP .....	40-1020
E-32 NO WIPER OPERATES CONTINUOUSLY OR INTERMITTENTLY .....	40-1023
E-33 FRONT WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1027
E-34 REAR WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1030
E-35 LEFT DOOR WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1033
E-36 RIGHT DOOR WIPER DOES NOT OPERATE (FAILED IN BOTH CONTINUOUS AND INTERMITTENT OPERATIONS).....	40-1036
E-37 FRONT WASHER DOES NOT OPERATE.....	40-1039
E-38 REAR WASHER DOES NOT OPERATE .....	40-1041
E-39 LEFT DOOR WASHER DOES NOT OPERATE.....	40-1043
E-40 RIGHT DOOR WASHER DOES NOT OPERATE .....	40-1045
E-41 KOMTRAX SYSTEM DOES NOT OPERATE NORMALLY .....	40-1047
TROUBLESHOOTING FOR HYDRAULIC AND MECHANICAL SYSTEMS (H MODE) .....	40-1048
INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (H MODE).....	40-1048
SYSTEM CHART OF HYDRAULIC AND MECHANICAL SYSTEMS .....	40-1049
FAILURE MODE AND CAUSE TABLE .....	40-1051
H-1 MACHINE LACKS POWER (INSUFFICIENT DRAWBAR PULL) .....	40-1059
H-2 MACHINE DOES NOT TRAVEL (AT 2ND OR 3RD GEAR SPEED).....	40-1061
H-3 MACHINE DOES NOT MOVE OFF AT ALL GEAR SPEEDS .....	40-1062
H-4 MACHINE TRAVELS ONLY IN ONE DIRECTION, EITHER FORWARD OR IN REVERSE .....	40-1064
H-5 LARGE TIME LAG IS IN GEAR SHIFTING OR DIRECTIONAL CHANGE .....	40-1065
H-6 MACHINE CANNOT BE STEERED (MACHINE DOES NOT TURN LEFT OR RIGHT).....	40-1067
H-7 STEERING SPEED OR POWER IS INSUFFICIENT.....	40-1068
H-8 BRAKE DOES NOT WORK.....	40-1069
H-9 TORQUE CONVERTER LOCKUP CLUTCH DOES NOT ENGAGE .....	40-1070
H-10 POWER TRAIN OIL OVERHEATS.....	40-1071
H-11 UNUSUAL NOISE IS HEARD FROM AROUND WORK EQUIPMENT AND HSS PUMP OR HSS MOTOR.....	40-1073
H-12 ALL WORK EQUIPMENTS OPERATE SLOWLY .....	40-1074
H-13 ALL WORK EQUIPMENTS DO NOT OPERATE .....	40-1075
H-14 BLADE LIFT SPEED OR POWER IS LOW .....	40-1076
H-15 BLADE TILT SPEED OR POWER IS LOW .....	40-1077
H-16 BLADE ANGLE SPEED OR POWER IS LOW.....	40-1078
H-17 RIPPER LIFT SPEED OR POWER IS LOW.....	40-1079
H-18 HYDRAULIC DRIFT OF LIFTED BLADE IS LARGE .....	40-1080
H-19 HYDRAULIC DRIFT OF TILTED BLADE IS LARGE.....	40-1081
H-20 HYDRAULIC DRIFT OF LIFTED RIPPER IS LARGE.....	40-1082
H-21 FAN SPEED IS ABNORMAL (TOO HIGH OR LOW, OR STATIONARY).....	40-1083
H-22 UNUSUAL NOISE IS HEARD FROM AROUND FAN.....	40-1085
TROUBLESHOOTING OF ENGINE (S-MODE) .....	40-1086
INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (S MODE).....	40-1086
S-1 ENGINE DOES NOT CRANK WHEN STARTING SWITCH IS TURNED TO START POSITION.....	40-1087
S-2 ENGINE CRANKS BUT NO EXHAUST GAS COMES OUT .....	40-1088
S-3 FUEL IS BEING INJECTED BUT ENGINE DOES NOT START (MISFIRING: ENGINE CRANKS BUT DOES NOT START).....	40-1089
S-4 ENGINE STARTABILITY IS POOR.....	40-1091
S-5 ENGINE DOES NOT PICK UP SMOOTHLY .....	40-1093
S-6 ENGINE STOPS DURING OPERATION .....	40-1095
S-7 ENGINE RUNS ROUGH OR IS UNSTABLE .....	40-1097
S-8 ENGINE LACKS POWER.....	40-1098
S-9 KDPF GETS CLOGGED IN A SHORT TIME .....	40-1100
S-10 ENGINE OIL CONSUMPTION IS EXCESSIVE .....	40-1102

S-11 OIL BECOMES CONTAMINATED QUICKLY .....	40-1103
S-12 FUEL CONSUMPTION IS EXCESSIVE .....	40-1104
S-13 OIL IS IN COOLANT (OR COOLANT SPURTS BACK OR COOLANT LEVEL GOES DOWN) .....	40-1105
S-14 OIL PRESSURE DROPS .....	40-1106
S-15 FUEL MIXES INTO ENGINE OIL.....	40-1108
S-16 WATER MIXES INTO ENGINE OIL (MILKY) .....	40-1109
S-17 COOLANT TEMPERATURE RISES TOO HIGH (OVERHEATING).....	40-1110
S-18 UNUSUAL NOISE IS HEARD.....	40-1111
S-19 VIBRATION IS EXCESSIVE .....	40-1112
S-20 AIR CANNOT BE BLED FROM FUEL CIRCUIT.....	40-1113
S-21 ACTIVE REGENERATION IS EXECUTED FREQUENTLY .....	40-1114
S-22 ACTIVE REGENERATION TAKES TIME.....	40-1116
S-23 WHITE SMOKE IS EXHAUSTED DURING ACTIVE REGENERATION.....	40-1117
S-24 AdBlue/DEF CONSUMPTION IS EXCESSIVE .....	40-1118
S-25 THERE IS UNUSUAL SMELL (IRRITATING ODOR).....	40-1120
S-26 FOREIGN MATERIALS ENTER AdBlue/DEF (AdBlue/DEF INCREASES).....	40-1121
50 DISASSEMBLY AND ASSEMBLY .....	50-1
CONTENTS .....	50-2
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY .....	50-7
HOW TO READ THIS MANUAL.....	50-7
COATING MATERIALS LIST.....	50-8
SPECIAL TOOLS LIST .....	50-13
SKETCHES OF SPECIAL TOOLS.....	50-34
ENGINE AND COOLING SYSTEM.....	50-55
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY .....	50-55
REMOVE AND INSTALL INJECTOR ASSEMBLY .....	50-63
REMOVE AND INSTALL CYLINDER HEAD ASSEMBLY .....	50-81
REMOVE AND INSTALL EGR VALVE ASSEMBLY.....	50-108
REMOVE AND INSTALL EGR COOLER ASSEMBLY.....	50-111
REMOVE AND INSTALL STARTING MOTOR ASSEMBLY .....	50-114
REMOVE AND INSTALL ALTERNATOR BELT .....	50-118
REMOVE AND INSTALL RADIATOR ASSEMBLY .....	50-121
REMOVE AND INSTALL HYDRAULIC OIL COOLER ASSEMBLY .....	50-128
REMOVE AND INSTALL AFTERCOOLER ASSEMBLY.....	50-133
REMOVE AND INSTALL POWER TRAIN OIL COOLER ASSEMBLY.....	50-138
REMOVE AND INSTALL COOLING FAN DRIVE ASSEMBLY .....	50-143
REMOVE AND INSTALL COOLING FAN MOTOR ASSEMBLY .....	50-147
REMOVE AND INSTALL ENGINE ASSEMBLY.....	50-151
REMOVE AND INSTALL ENGINE FRONT OIL SEAL .....	50-161
REMOVE AND INSTALL ENGINE REAR OIL SEAL.....	50-167
REMOVE AND INSTALL ENGINE HOOD ASSEMBLY .....	50-180
REMOVE AND INSTALL FUEL TANK ASSEMBLY .....	50-186
REMOVE AND INSTALL AdBlue/DEF TANK ASSEMBLY .....	50-190
REMOVE AND INSTALL AdBlue/DEF TANK SENSOR FLANGE ASSEMBLY.....	50-198
REMOVE AND INSTALL AdBlue/DEF TANK SENSOR .....	50-208
REMOVE AND INSTALL AdBlue/DEF TANK STRAINER .....	50-210
REMOVE AND INSTALL KDPF ASSEMBLY.....	50-212
DISASSEMBLE AND ASSEMBLE OF KDPF ASSEMBLY .....	50-219
REMOVE AND INSTALL SCR ASSEMBLY.....	50-229
REMOVE AND INSTALL KDPF, SCR ASSEMBLY.....	50-234
REMOVE AND INSTALL KCCV ASSEMBLY .....	50-249
REMOVE AND INSTALL AdBlue/DEF MIXING TUBE .....	50-253
REMOVE AND INSTALL AdBlue/DEF INJECTOR.....	50-259
REMOVE AND INSTALL AdBlue/DEF PUMP .....	50-262
REMOVE AND INSTALL AdBlue/DEF HOSE .....	50-267
REMOVE AND INSTALL AIR CLEANER ASSEMBLY.....	50-277
REMOVE AND INSTALL AIR CONDITIONER COMPRESSOR ASSEMBLY .....	50-281



REMOVE AND INSTALL AIR CONDITIONER CONDENSER ASSEMBLY .....	50-286
POWER TRAIN.....	50-290
REMOVE AND INSTALL DAMPER ASSEMBLY .....	50-290
REMOVE AND INSTALL POWER TRAIN UNIT ASSEMBLY .....	50-297
DISCONNECTING AND CONNECTING POWER TRAIN UNIT ASSEMBLY .....	50-308
DISASSEMBLE AND ASSEMBLE PTO ASSEMBLY .....	50-319
DISASSEMBLE AND ASSEMBLE TORQUE CONVERTER ASSEMBLY .....	50-326
DISASSEMBLE AND ASSEMBLE TRANSMISSION ASSEMBLY .....	50-342
DISASSEMBLE AND ASSEMBLE HSS ASSEMBLY .....	50-374
REMOVAL AND INSTALLATION OF HSS MOTOR .....	50-404
REMOVE AND INSTALL FINAL DRIVE ASSEMBLY .....	50-409
DISASSEMBLE AND ASSEMBLE FINAL DRIVE ASSEMBLY .....	50-414
UNDERCARRIAGE AND FRAME.....	50-433
REMOVE AND INSTALL TRACK FRAME ASSEMBLY .....	50-433
REMOVE AND INSTALL IDLER ASSEMBLY.....	50-438
DISASSEMBLE AND ASSEMBLE IDLER ASSEMBLY .....	50-441
REMOVE AND INSTALL RECOIL SPRING ASSEMBLY .....	50-447
DISASSEMBLE AND ASSEMBLE RECOIL SPRING.....	50-449
REMOVE AND INSTALL TRACK ROLLER ASSEMBLY .....	50-455
DISASSEMBLE AND ASSEMBLE TRACK ROLLER ASSEMBLY .....	50-457
REMOVE AND INSTALL CARRIER ROLLER ASSEMBLY .....	50-463
DISASSEMBLE AND ASSEMBLE CARRIER ROLLER ASSEMBLY .....	50-465
REMOVE AND INSTALL PIVOT SHAFT ASSEMBLY .....	50-470
SEPARATE AND CONNECT TRACK ASSEMBLY.....	50-473
SEPARATE AND CONNECT PLUS TYPE TRACK ASSEMBLY .....	50-477
DISASSEMBLE AND ASSEMBLE TRACK ASSEMBLY GENERALLY.....	50-479
DISASSEMBLE AND ASSEMBLE PLUS TYPE TRACK ASSEMBLY GENERALLY .....	50-494
DISASSEMBLE AND ASSEMBLE ONE LINK OF TRACK SHOE ASSEMBLY ON THE FIELD....	50-511
DISASSEMBLE AND ASSEMBLE ONE LINK OF PLUS TYPE TRACK SHOE ASSEMBLY ON THE FIELD.....	50-520
REMOVE AND INSTALL EQUALIZER BAR ASSEMBLY.....	50-528
DISASSEMBLE AND ASSEMBLE EQUALIZER BAR BUSHINGS.....	50-531
HYDRAULIC SYSTEM.....	50-533
REMOVE AND INSTALL HYDRAULIC TANK ASSEMBLY.....	50-533
REMOVE AND INSTALL HSS PUMP AND COOLING FAN PUMP ASSEMBLY .....	50-541
REMOVE AND INSTALL POWER TRAIN PUMP AND STEERING LUBRICATION PUMP ASSEMBLY .. .....	50-545
REMOVE AND INSTALL SCAVENGING PUMP ASSEMBLY.....	50-550
REMOVE AND INSTALL 5 SPOOL CONTROL VALVE ASSEMBLY .....	50-552
REMOVE AND INSTALL 4 SPOOL CONTROL VALVE ASSEMBLY .....	50-557
DISASSEMBLE AND ASSEMBLE BLADE PPC VALVE.....	50-563
DISASSEMBLE AND ASSEMBLE RIPPER PPC VALVE.....	50-565
WORK EQUIPMENT.....	50-567
REMOVE AND INSTALL STRAIGHT TILT POWER PITCH DOZER BLADE ASSEMBLY .....	50-567
REMOVE AND INSTALL POWER ANGLE POWER TILT DOZER BLADE ASSEMBLY.....	50-572
REMOVE AND INSTALL RIPPER ASSEMBLY .....	50-577
METHOD FOR DISASSEMBLING AND ASSEMBLING WORK EQUIPMENT CYLINDER ASSEMBLY .. .....	50-583
CAB AND ITS ATTACHMENTS .....	50-591
REMOVE AND INSTALL OPERATOR'S CAB ASSEMBLY .....	50-591
REMOVE AND INSTALL OPERATOR'S CAB GLASS (ADHERED GLASS).....	50-607
REMOVE AND INSTALL AIR CONDITIONER UNIT ASSEMBLY .....	50-613
REMOVE AND INSTALL OPERATOR'S SEAT .....	50-624
REMOVE AND INSTALL SEAT BELT .....	50-629
ELECTRICAL SYSTEM .....	50-631
REMOVE AND INSTALL ENGINE CONTROLLER ASSEMBLY .....	50-631
REMOVE AND INSTALL POWER TRAIN CONTROLLER ASSEMBLY .....	50-635
REMOVE AND INSTALL MACHINE MONITOR ASSEMBLY .....	50-638

REMOVE AND INSTALL MASS AIR FLOW AND TEMPERATURE SENSOR .....50-641

REMOVE AND INSTALL KCCV CRANKCASE PRESSURE SENSOR.....50-643

REMOVE AND INSTALL SCR TEMPERATURE SENSOR .....50-645

REMOVE AND INSTALL KOMTRAX TERMINAL ASSEMBLY .....50-649

60 MAINTENANCE STANDARD ..... 60-1

CONTENTS ..... 60-2

ENGINE AND COOLING SYSTEM..... 60-4

MAINTENANCE STANDARD OF DAMPER..... 60-4

MAINTENANCE STANDARD OF COOLING SYSTEM ..... 60-6

MAINTENANCE STANDARD OF COOLING FAN PUMP..... 60-8

MAINTENANCE STANDARD OF COOLING FAN MOTOR..... 60-10

POWER TRAIN..... 60-12

MAINTENANCE STANDARD OF UNIVERSAL JOINT..... 60-12

MAINTENANCE STANDARD OF POWER TRAIN MOUNT..... 60-13

MAINTENANCE STANDARD OF TORQUE CONVERTER AND PTO ..... 60-15

MAINTENANCE STANDARD OF LOCKUP CLUTCH ECMV..... 60-18

MAINTENANCE STANDARD OF TRANSMISSION ..... 60-19

MAINTENANCE STANDARD OF TRANSMISSION CONTROL VALVE..... 60-24

MAINTENANCE STANDARD OF FORWARD AND REVERSE CLUTCH ECMV AND GEAR SPEED CLUTCH ECMV ..... 60-25

MAINTENANCE STANDARD OF MAIN RELIEF VALVE AND TORQUE CONVERTER RELIEF VALVE . ..... 60-26

MAINTENANCE STANDARD OF TRANSMISSION LUBRICATION RELIEF VALVE ..... 60-27

MAINTENANCE STANDARD OF BEVEL GEAR SHAFT, HSS, AND BRAKE..... 60-28

MAINTENANCE STANDARD OF BRAKE VALVE ..... 60-33

MAINTENANCE STANDARD OF FINAL DRIVE ..... 60-35

MAINTENANCE STANDARD OF SPROCKET FOR CONVENTIONAL TYPE TRACK SHOE ..... 60-38

MAINTENANCE STANDARD OF SPROCKET FOR PLUS TYPE TRACK SHOE..... 60-39

MAINTENANCE STANDARD OF SPROCKET TOOTH PROFILE FULL-SCALE DRAWING FOR CONVENTIONAL TYPE TRACK SHOE ..... 60-40

MAINTENANCE STANDARD OF SPROCKET TOOTH PROFILE FULL-SCALE DRAWING FOR PLUS TYPE TRACK SHOE..... 60-42

UNDERCARRIAGE AND FRAME..... 60-44

MAINTENANCE STANDARD OF MAIN FRAME..... 60-44

MAINTENANCE STANDARD OF SUSPENSION..... 60-45

MAINTENANCE STANDARD OF TRACK FRAME AND IDLER CUSHION..... 60-47

MAINTENANCE STANDARD OF IDLER ..... 60-49

MAINTENANCE STANDARD OF TRACK ROLLER FOR CONVENTIONAL TYPE TRACK SHOES (SINGLE FLANGE TYPE) ..... 60-51

MAINTENANCE STANDARD OF TRACK ROLLER FOR CONVENTIONAL TYPE TRACK SHOES (DOUBLE FLANGE TYPE)..... 60-52

MAINTENANCE STANDARD OF TRACK ROLLER FOR PLUS TYPE TRACK SHOES (SINGLE FLANGE TYPE) ..... 60-53

MAINTENANCE STANDARD OF TRACK ROLLER FOR PLUS TYPE TRACK SHOES (DOUBLE FLANGE TYPE) ..... 60-54

MAINTENANCE STANDARD OF CARRIER ROLLER FOR CONVENTIONAL TYPE TRACK SHOE..... 60-55

MAINTENANCE STANDARD OF CARRIER ROLLER FOR PLUS TYPE TRACK SHOE ..... 60-56

MAINTENANCE STANDARD OF CONVENTIONAL TYPE TRACK SHOE ..... 60-57

MAINTENANCE STANDARD OF PLUS TYPE TRACK SHOE..... 60-59

MAINTENANCE STANDARD OF SINGLE SHOE ..... 60-61

MAINTENANCE STANDARD OF SWAMP SHOE..... 60-62

HYDRAULIC SYSTEM..... 60-63

MAINTENANCE STANDARD OF HYDRAULIC TANK ..... 60-63

MAINTENANCE STANDARD OF SCAVENGING PUMP ..... 60-64

MAINTENANCE STANDARD OF STEERING LUBRICATION PUMP AND POWER TRAIN PUMP..... 60-65

MAINTENANCE STANDARD OF WORK EQUIPMENT AND HSS PUMP ..... 60-66

MAINTENANCE STANDARD OF PC-EPC VALVE.....	60-67
MAINTENANCE STANDARD OF HSS MOTOR.....	60-68
MAINTENANCE STANDARD OF CONTROL VALVE.....	60-70
MAINTENANCE STANDARD OF BLADE PPC VALVE.....	60-78
MAINTENANCE STANDARD OF RIPPER PPC VALVE.....	60-80
MAINTENANCE STANDARD OF ANGLE OPERATION EPC VALVE.....	60-82
MAINTENANCE STANDARD OF QUICK DROP VALVE.....	60-83
MAINTENANCE STANDARD OF WORK EQUIPMENT LOCK SOLENOID VALVE (FOR TILT DOZER AND ANGLE DOZER SERIES).....	60-85
MAINTENANCE STANDARD OF WORK EQUIPMENT LOCK SOLENOID VALVE (FOR POWER TILT PITCH DOZER SERIES).....	60-86
MAINTENANCE STANDARD OF WORK EQUIPMENT LOCK SOLENOID VALVE (FOR POWER ANGLE POWER TILT DOZER SERIES).....	60-87
WORK EQUIPMENT.....	60-88
MAINTENANCE STANDARD OF FRONT WORK EQUIPMENT (FOR TILT DOZER AND POWER TILT PITCH DOZER SERIES).....	60-88
MAINTENANCE STANDARD OF FRONT WORK EQUIPMENT (FOR POWER ANGLE POWER TILT DOZER SERIES).....	60-91
MAINTENANCE STANDARD OF FRONT WORK EQUIPMENT (ANGLE DOZER SERIES).....	60-94
MAINTENANCE STANDARD OF CUTTING EDGE AND END BIT.....	60-97
MAINTENANCE STANDARD OF BLADE LIFT CYLINDER (FOR TILT DOZER AND POWER TILT PITCH DOZER, AND ANGLE DOZER SERIES).....	60-99
MAINTENANCE STANDARD OF BLADE LIFT CYLINDER (FOR POWER ANGLE POWER TILT DOZER SERIES).....	60-100
MAINTENANCE STANDARD OF BLADE TILT CYLINDER (FOR TILT DOZER AND POWER TILT PITCH DOZER, AND ANGLE DOZER SERIES).....	60-101
MAINTENANCE STANDARD OF BLADE TILT CYLINDER (FOR POWER ANGLE POWER TILT DOZER SERIES).....	60-102
MAINTENANCE STANDARD OF BLADE PITCH CYLINDER (FOR STRAIGHT TILT POWER PITCH DOZER SERIES).....	60-103
MAINTENANCE STANDARD OF BLADE ANGLE CYLINDER (FOR POWER ANGLE POWER TILT DOZER SERIES).....	60-104
MAINTENANCE STANDARD OF FIXED MULTI-SHANK RIPPER.....	60-105
MAINTENANCE STANDARD OF RIPPER LIFT CYLINDER.....	60-106
CAB AND ITS ATTACHMENTS.....	60-107
MAINTENANCE STANDARD OF CAB MOUNT.....	60-107
80 APPENDIX.....	80-1
CONTENTS.....	80-2
AIR CONDITIONER SYSTEM.....	80-4
PRECAUTIONS FOR REFRIGERANT.....	80-4
AIR CONDITIONER COMPONENT.....	80-5
SPECIFICATIONS OF AIR CONDITIONER.....	80-7
CONFIGURATION AND FUNCTION OF REFRIGERATION CYCLE.....	80-8
OUTLINE OF REFRIGERATION CYCLE.....	80-9
COMPONENT PARTS OF AIR CONDITIONER SYSTEM.....	80-11
AIR CONDITIONER UNIT.....	80-11
COMPONENT PARTS OF AIR CONDITIONER UNIT.....	80-15
AIR CONDITIONER CONTROLLER.....	80-19
COMPRESSOR.....	80-20
CONDENSER.....	80-22
RECEIVER DRIER.....	80-23
SENSORS FOR AIR CONDITIONER SYSTEM.....	80-24
EXPLANATION OF PROCEDURE FOR TESTING AND TROUBLESHOOTING OF AIR CONDITIONER.....	80-26
CIRCUIT DIAGRAM AND ARRANGEMENT OF CONNECTOR PINS FOR AIR CONDITIONER.....	80-28
AIR CONDITIONER SYSTEM DIAGRAM.....	80-30
INPUT AND OUTPUT SIGNALS OF AIR CONDITIONER CONTROLLER.....	80-31

INSTALLATION LOCATIONS OF AIR CONDITIONER PARTS AND ARRANGEMENT OF CONNECTORS ..	80-33
TESTING AIR LEAKAGE (DUCT).....	80-42
METHOD FOR TESTING AIR LEAKAGE (DUCT) .....	80-42
EXPLANATION FOR TESTING AIR CONDITIONER USING SELF-DIAGNOSIS FUNCTION.....	80-45
HOW TO OPEN THE ELECTRICAL SYSTEM ABNORMALITY RECORD SCREEN IN SERVICE MODE	
OF THE MACHINE MONITOR .....	80-46
TEST VENT (MODE) CHANGEOVER .....	80-47
METHOD FOR TESTING VENT (MODE) CHANGEOVER .....	80-47
TESTING FRESH/RECIRC AIR CHANGEOVER.....	80-48
METHOD FOR TESTING FRESH/RECIRC AIR CHANGEOVER .....	80-48
TEST SUNLIGHT SENSOR.....	80-49
METHOD FOR TESTING SUNLIGHT SENSOR.....	80-49
TEST (DUAL) PRESSURE SWITCH FOR REFRIGERANT.....	80-50
METHOD FOR TESTING (DUAL) PRESSURE SWITCH FOR REFRIGERANT.....	80-50
TEST RELAYS.....	80-51
METHOD FOR TESTING RELAYS.....	80-51
AIR CONDITIONER TROUBLESHOOTING CHART 1 .....	80-52
AIR CONDITIONER TROUBLESHOOTING CHART 2 .....	80-54
INFORMATION DESCRIBED IN TROUBLESHOOTING TABLE.....	80-57
FAILURE CODE [879AKA] A/C Recirculation Air Temperature Sensor Open Circuit.....	80-59
FAILURE CODE [879AKB] A/C Recirculation Air Temperature Sensor Short Circuit.....	80-60
FAILURE CODE [879BKA] A/C Fresh Air Temperature Sensor Open Circuit.....	80-61
FAILURE CODE [879BKB] A/C Fresh Air Temperature Sensor Short Circuit .....	80-63
FAILURE CODE [879CKA] Ventilating Sensor Open Circuit.....	80-65
FAILURE CODE [879CKB] Ventilating Sensor Short Circuit.....	80-66
FAILURE CODE [879DKZ] Sunlight Sensor Open Circuit or Short Circuit.....	80-67
FAILURE CODE [879EMC] Ventilation Damper Malfunction .....	80-69
FAILURE CODE [879FMC] Air Mix Damper Malfunction.....	80-70
FAILURE CODE [879GKX] Refrigerant Pressure Input Signal Out of Range .....	80-71
A-1 TROUBLESHOOTING FOR POWER SUPPLY SYSTEM (AIR CONDITIONER DOES NOT OPERATE).	
.....	80-73
A-2 TROUBLESHOOTING OF COMPRESSOR SYSTEM (AIR IS NOT COOLED).....	80-75
A-3 TROUBLESHOOTING FOR BLOWER MOTOR SYSTEM (NO AIR COMES OUT OR AIR FLOW IS	
ABNORMAL).....	80-79
A-4 TROUBLESHOOTING FOR FRESH/RECIRC AIR CHANGEOVER.....	80-81
TROUBLESHOOTING USING GAUGE PRESSURE.....	80-83
CONNECTION OF SERVICE TOOL .....	80-85
METHOD FOR CONNECTING SERVICE TOOL .....	80-85
PRECAUTIONS FOR DISCONNECTING AND CONNECTING HOSES AND TUBES IN AIR CONDITION-	
ER PIPINGS.....	80-87
HANDLE COMPRESSOR OIL .....	80-89
90 CIRCUIT DIAGRAMS .....	90-1
CONTENTS.....	90-2
HYDRAULIC CIRCUIT DIAGRAM .....	90-3
SYMBOLS USED IN HYDRAULIC CIRCUIT DIAGRAM.....	90-3
POWER TRAIN HYDRAULIC CIRCUIT DIAGRAM.....	90-7
HYDRAULIC CIRCUIT DIAGRAM (FOR STRAIGHT TILT AND SIGMA DOZER).....	90-9
HYDRAULIC CIRCUIT DIAGRAM (FOR STRAIGHT TILT POWER PITCH DOZER).....	90-11
HYDRAULIC CIRCUIT DIAGRAM (FOR POWER ANGLE POWER TILT DOZER).....	90-13
HYDRAULIC CIRCUIT DIAGRAM (FOR STRAIGHT TILT AND SIGMA DOZER) (3D MACHINE CON-	
TROL SPEC).....	90-15
HYDRAULIC CIRCUIT DIAGRAM (FOR STRAIGHT TILT POWER PITCH DOZER) (3D MACHINE	
CONTROL SPEC).....	90-17
HYDRAULIC CIRCUIT DIAGRAM (FOR POWER ANGLE POWER TILT DOZER) (3D MACHINE CON-	
TROL SPEC).....	90-19
ELECTRICAL CIRCUIT DIAGRAM.....	90-21
SYMBOLS USED IN ELECTRICAL CIRCUIT DIAGRAM.....	90-21