

Shop Manual

HYDRAULIC
EXCAVATOR

PC800 -8E0

PC800LC -8E0

PC800SE -8E0

PC850 -8E0

PC850SE -8E0

SERIAL NUMBERS 65001 and up

ecot3

KOMATSU

Notice of revision

3rd. revision

2012/02

The affected pages are indicated by the use of the following marks. It is requested that necessary actions must be taken to these pages according to the list below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

List of revised pages

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
●	1	(03)		00-34			01-21			10-34	
	2	(02)		00-35			01-22			10-35	
	3	(01)		00-36			01-23			10-36	
	4	(01)		00-37			01-24			10-37	
	5	(01)		00-38			01-25			10-38	
●	6	(03)		00-39			01-26			10-39	
●	7	(03)		00-40			01-27			10-40	
	8	(01)		00-41			01-28			10-41	
	00-1			00-42			10-1			10-42	
	00-2	(01)		00-43			10-2			10-43	
	00-3			00-44			10-3			10-44	
	00-4			00-45			10-4			10-45	
	00-5			00-46			10-5			10-46	
	00-6			00-47			10-6			10-47	
	00-7			00-48			10-7			10-48	
	00-8			00-49			10-8			10-49	
	00-9			00-50			10-9			10-50	
	00-10			00-51			10-10			10-51	
	00-11			00-52			10-11			10-52	
●	00-12	(03)		00-53			10-12			10-53	
●	00-13	(03)		00-54			10-13			10-54	
●	00-14	(03)		01-1			10-14			10-55	
●	00-15	(03)		01-2			10-15			10-56	
●	00-16	(03)		01-3			10-16			10-57	
	00-17			01-4			10-17			10-58	
	00-18			01-5			10-18			10-59	
	00-19			01-6			10-19			10-60	
	00-20			01-7			10-20			10-61	
	00-21			01-8			10-21			10-62	
	00-22			01-9			10-22			10-63	
	00-23			01-10			10-23			10-64	
	00-24			01-11			10-24			10-65	
	00-25			01-12			10-25			10-66	
	00-26			01-13			10-26			10-67	
	00-27			01-14			10-27			10-68	
	00-28			01-15			10-28			10-69	
	00-29			01-16			10-29			10-70	
	00-30			01-17			10-30			10-71	
	00-31			01-18			10-31			10-72	
	00-32			01-19			10-32			10-73	
	00-33			01-20			10-33			10-74	

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	10-75	(01)		10-127			10-179			30-19	
	10-76			10-128			10-180			30-20	
	10-77			10-129			10-181			30-21	
	10-78			10-130			10-182			30-22	
	10-79			10-131			10-183			30-23	
	10-80			10-132			10-184			30-24	
	10-81			10-133			10-185			30-25	
	10-82			10-134			10-186			30-26	
	10-83			10-135			10-187			30-27	
	10-84			10-136			10-188			30-28	
	10-85			10-137			10-189			30-29	
	10-86			10-138			10-190			30-30	
	10-87			10-139			10-191			30-31	
	10-88			10-140			10-192			30-32	
	10-89			10-141			10-193			30-33	
	10-90			10-142			10-194			30-34	
	10-91			10-143			10-195			30-35	
	10-92			10-144			10-196			30-36	
	10-93			10-145			20-1			30-37	
	10-94			10-146			20-2			30-38	
	10-95			10-147			20-3			30-39	
	10-96			10-148			20-4			30-40	
	10-97			10-149			20-5			30-41	
	10-98			10-150			20-6			30-42	
	10-99			10-151			20-7			30-43	
	10-100			10-152			20-8			30-44	
	10-101		10-153			20-9			30-45		
	10-102		10-154			20-10			30-46		
	10-103		10-155			20-11			30-47		
	10-104		10-156			20-12			30-48		
	10-105		10-157			20-13			30-49		
	10-106		10-158			20-14			30-50		
	10-107		10-159			20-15			30-51		
	10-108		10-160			20-16			30-52		
	10-109		10-161			30-1			30-53		
	10-110		10-162			30-2			30-54		
	10-111		10-163			30-3			30-55		
	10-112		10-164			30-4			30-56		
	10-113		10-165			30-5			30-57		
	10-114		10-166			30-6			30-58		
	10-115		10-167			30-7			30-59		
	10-116		10-168			30-8			30-60		
	10-117		10-169			30-9			30-61		
	10-118		10-170			30-10			30-62		
	10-119		10-171			30-11			30-63		
	10-120		10-172			30-12			30-64		
	10-121		10-173			30-13			30-65		
	10-122		10-174			30-14			30-66		
	10-123		10-175			30-15			30-67		
	10-124		10-176			30-16			30-68		
	10-125		10-177			30-17			30-69		
	10-126		10-178			30-18			30-70		

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	30-71			30-123			40-45			40-97	
	30-72			30-124			40-46			40-98	
	30-73			30-125			40-47			40-99	
	30-74			30-126			40-48			40-100	
	30-75			30-127			40-49			40-101	
	30-76			30-128			40-50			40-102	
	30-77			30-129			40-51			40-103	
	30-78			30-130			40-52			40-104	
	30-79			40-1			40-53			40-105	
	30-80			40-2			40-54			40-106	
	30-81			40-3			40-55			40-107	
	30-82			40-4			40-56			40-108	
	30-83			40-5			40-57			40-109	
	30-84			40-6			40-58			40-110	
	30-85			40-7			40-59			40-111	
	30-86			40-8			40-60			40-112	
	30-87			40-9			40-61			40-113	
	30-88			40-10			40-62			40-114	
	30-89			40-11			40-63			40-115	
	30-90			40-12			40-64			40-116	
	30-91			40-13			40-65			40-117	
	30-92			40-14			40-66			40-118	
	30-93			40-15			40-67			40-119	
	30-94			40-16			40-68			40-120	
	30-95			40-17			40-69			40-121	
	30-96			40-18			40-70			40-122	
	30-97			40-19			40-71			40-123	
	30-98			40-20			40-72			40-124	
	30-99			40-21			40-73			40-125	
	30-100			40-22			40-74			40-126	
	30-101			40-23			40-75			40-127	
	30-102			40-24			40-76			40-128	
	30-103			40-25			40-77			40-129	
	30-104			40-26			40-78			40-130	
	30-105			40-27			40-79			40-131	
	30-106			40-28			40-80			40-132	
	30-107			40-29			40-81			40-133	
	30-108			40-30			40-82			40-134	
	30-109			40-31			40-83			40-135	
	30-110			40-32			40-84			40-136	
	30-111			40-33			40-85			40-137	
	30-112			40-34			40-86			40-138	
	30-113			40-35			40-87			40-139	
	30-114			40-36			40-88			40-140	
	30-115			40-37			40-89			40-141	
	30-116			40-38			40-90			40-142	
	30-117			40-39			40-91			40-143	
	30-118			40-40			40-92			40-144	
	30-119			40-41			40-93			40-145	
	30-120			40-42			40-94			40-146	
	30-121			40-43			40-95			40-147	
	30-122			40-44			40-96			40-148	

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	40-149			40-201			40-253			40-305	
	40-150			40-202			40-254			40-306	
	40-151			40-203			40-255			40-307	
	40-152			40-204			40-256			40-308	
	40-153			40-205			40-257			40-309	
	40-154			40-206			40-258			40-310	
	40-155			40-207			40-259			40-311	
	40-156			40-208			40-260			40-312	
	40-157			40-209			40-261			40-313	
	40-158			40-210			40-262			40-314	
	40-159			40-211			40-263			40-315	
	40-160			40-212			40-264			40-316	
	40-161			40-213			40-265			40-317	
	40-162			40-214			40-266			40-318	
	40-163			40-215			40-267			40-319	
	40-164			40-216			40-268			40-320	
	40-165			40-217			40-269			40-321	
	40-166			40-218			40-270			40-322	
	40-167			40-219			40-271			40-323	
	40-168			40-220			40-272			40-324	
	40-169			40-221			40-273			40-325	
	40-170			40-222			40-274			40-326	
	40-171			40-223			40-275			40-327	
	40-172			40-224			40-276			40-328	
	40-173			40-225			40-277			40-329	
	40-174			40-226			40-278			40-330	
	40-175			40-227			40-279			40-331	
	40-176			40-228			40-280			40-332	
	40-177			40-229			40-281			40-333	
	40-178			40-230			40-282			40-334	
	40-179			40-231			40-283			40-335	
	40-180			40-232			40-284			40-336	
	40-181			40-233			40-285			40-337	
	40-182			40-234			40-286			40-338	
	40-183			40-235			40-287			40-339	
	40-184			40-236			40-288			40-340	
	40-185			40-237			40-289			40-341	
	40-186			40-238			40-290			40-342	
	40-187			40-239			40-291			40-343	
	40-188			40-240			40-292			40-344	
	40-189			40-241			40-293			40-345	
	40-190			40-242			40-294			40-346	
	40-191			40-243			40-295			40-347	
	40-192			40-244			40-296			40-348	
	40-193			40-245			40-297			40-349	
	40-194			40-246			40-298			40-350	
	40-195			40-247			40-299			40-351	
	40-196			40-248			40-300			40-352	
	40-197			40-249			40-301			40-353	
	40-198			40-250			40-302			40-354	
	40-199			40-251			40-303			40-355	
	40-200			40-252			40-304			40-356	

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	40-357			40-409			40-461			50-35	
	40-358			40-410			40-462			50-36	
	40-359			40-411			40-463			50-37	
	40-360			40-412			40-464			50-38	
	40-361			40-413			40-465			50-39	
	40-362			40-414			40-466			50-40	
	40-363			40-415			40-467			50-41	
	40-364			40-416			40-468			50-42	
	40-365			40-417			40-469			50-43	
	40-366			40-418			40-470			50-44	
	40-367			40-419			40-471			50-45	
	40-368			40-420			40-472			50-46	
	40-369			40-421			40-473			50-47	
	40-370			40-422			40-474			50-48	
	40-371			40-423			40-475			50-49	
	40-372			40-424			40-476			50-50	
	40-373			40-425			40-477			50-51	
	40-374			40-426			40-478			50-52	
	40-375			40-427			50-1			50-53	
	40-376			40-428			50-2			50-54	
	40-377			40-429			50-3			50-55	
	40-378			40-430			50-4			50-56	
	40-379			40-431			50-5			50-57	
	40-380			40-432			50-6			50-58	
	40-381			40-433			50-7			50-59	
	40-382			40-434			50-8			50-60	
	40-383			40-435			50-9			50-61	
	40-384			40-436			50-10			50-62	
	40-385			40-437			50-11			50-63	
	40-386			40-438			50-12			50-64	
	40-387			40-439			50-13			50-65	
	40-388			40-440			50-14			50-66	
	40-389			40-441			50-15			50-67	
	40-390			40-442			50-16			50-68	
	40-391			40-443			50-17			50-69	
	40-392			40-444			50-18			50-70	
	40-393			40-445			50-19			50-71	
	40-394			40-446			50-20			50-72	
	40-395			40-447			50-21			50-73	
	40-396			40-448			50-22			50-74	
	40-397			40-449			50-23			50-75	
	40-398			40-450			50-24			50-76	
	40-399			40-451			50-25			50-77	
	40-400			40-452			50-26			50-78	
	40-401			40-453			50-27			50-79	
	40-402			40-454			50-28			50-80	
	40-403			40-455			50-29			50-81	
	40-404			40-456			50-30			50-82	
	40-405			40-457			50-31			50-83	
	40-406			40-458			50-32			50-84	
	40-407			40-459			50-33			50-85	
	40-408			40-460			50-34			50-86	

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	50-87			50-137			50-189			60-3	
	50-88			50-138			50-190			60-4	
	50-89			50-139			50-191			60-5	
	50-90			50-140			50-192			60-6	
	50-91			50-141			50-193			60-7	
	50-92			50-142			50-194			60-8	
	50-93			50-143			50-195			60-9	
	50-94			50-144			50-196			60-10	
	50-95			50-145			50-197			60-11	
	50-96			50-146			50-198			60-12	
	50-97			50-147			50-199			60-13	
	50-98			50-148			50-200			60-14	
	50-99			50-149			50-201			60-15	
	50-100			50-150			50-202			60-16	
	50-101			50-151			50-203			60-17	
	50-102			50-152			50-204			60-18	
	50-103			50-153			50-205			60-19	
	50-104			50-154			50-206			60-20	
	50-105			50-155			50-207			60-21	
	50-106			50-156			50-208			60-22	
	50-107			50-157			50-209			60-23	
	50-108			50-158			50-210			60-24	
	50-109			50-159			50-211			60-25	
	50-110			50-160			50-212			60-26	
	50-111			50-161			50-213			60-27	
	50-112			50-162			50-214			60-28	
	50-113			50-163			50-215			60-29	
	50-114			50-164			50-216			60-30	
	50-115			50-165			50-217			60-31	
	50-116			50-166			50-218			60-32	
	50-117			50-167			50-219			60-33	
	50-118			50-168			50-220			60-34	
	50-119			50-169			50-221			60-35	
	50-120			50-170			50-222			60-36	
	50-121			50-171			50-223			60-37	
	50-122			50-172			50-224			60-38	
	50-123			50-173			50-225			60-39	
	50-124			50-174			50-226			60-40	
	50-125			50-175			50-227			60-41	
	50-126			50-176			50-228			60-42	
	50-127			50-177			50-229			60-43	
	50-128			50-178			50-230			60-44	
	50-129			50-179			50-231			60-45	
	50-130			50-180			50-232			60-46	
	50-131			50-181			50-233			60-47	
	50-132			50-182			50-234			60-48	
	50-133			50-183			50-235			60-49	
	50-134			50-184			50-236			60-50	
	50-135			50-185			50-237			60-51	
	50-136			50-186			50-238			60-52	
	50-136-1	(02)		50-187			60-1			60-53	
	50-136-2	(02)		50-188			60-2			60-54	

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	80-1			80-53			90-31				
	80-2			80-54			90-33				
	80-3			80-55			90-35				
	80-4			80-56			90-37				
	80-5			80-57			90-39				
	80-6			80-58			90-41				
	80-7			80-59			90-43				
	80-8			80-60			90-45				
	80-9			80-61			90-47				
	80-10			80-62			1				
	80-11			80-63			2				
	80-12			80-64			3				
	80-13			80-65			4				
	80-14			80-66			5				
	80-15			80-67			6				
	80-16			80-68		●	Colophon	(03)			
	80-17			80-69							
	80-18			80-70							
	80-19			80-71							
	80-20			80-72							
	80-21			80-73							
	80-22			80-74							
	80-23			80-75							
	80-24			80-76							
	80-25			80-77							
	80-26			80-78							
	80-27			80-79							
	80-28			80-80							
	80-29			80-81							
	80-30			80-82							
	80-31			80-83							
	80-32			80-84							
	80-33			90-1							
	80-34			90-2							
	80-35			90-3							
	80-36			90-4							
	80-37			90-5							
	80-38			90-6							
	80-39			90-7							
	80-40			90-9							
	80-41			90-11							
	80-42			90-12							
	80-43			90-13							
	80-44			90-14							
	80-45			90-15							
	80-46			90-17							
	80-47			90-19							
	80-48			90-21							
	80-49			90-23							
	80-50			90-25							
	80-51			90-27							
	80-52			90-29							

SHOP MANUAL

HYDRAULIC EXCAVATOR

PC800-8E0

PC850SE-8E0

PC800LC-8E0

PC800SE-8E0

PC850-8E0

Machine model	Serial number	Machine model	Serial number
PC800-8E0	65001 and up	PC850SE-8E0	65001 and up
PC800LC-8E0	65001 and up		
PC800SE-8E0	65001 and up		
PC850-8E0	65001 and up		

00 Index and foreword

Table of contents

Notice of revision.....	1
00 Index and foreword	
Table of contents	00 - 2
Table of contents	00 - 2
Foreword and general information	00- 12
Safety notice	00- 12
How to read the shop manual	00- 17
Explanation of terms for maintenance standard	00- 19
Handling of hydraulic components.....	00- 21
Method of disconnecting and connecting push-pull type coupler	00- 23
Handling of electric equipment.....	00- 26
How to read electric wire code.....	00- 36
Precautions when performing work.....	00- 39
Standard tightening torque table.....	00- 42
List of abbreviation.....	00- 46
Conversion table	00- 50
01 Specification	
Specifications.....	01- 4
Specifications drawing	01- 4
Specifications.....	01- 8
Table of weight.....	01- 18
Table of fuel, coolant and lubricants	01- 26
10 Structure and function	
Engine and cooling system	10- 3
Coupling.....	10- 3
Coupling lubrication system	10- 4
Cooling system	10- 6
Power train system	10- 8
Power train.....	10- 8
Swing circle.....	10- 10
Swing machinery.....	10- 11
Final drive	10- 13
Undercarriage and frame	10- 14
Track frame.....	10- 14
Idler cushion.....	10- 16
Hydraulic system.....	10- 18
Hydraulic component layout.....	10- 18
Hydraulic tank and filter	10- 20
Hydraulic pump	10- 22
Pump control system	10- 30
Servo valve	10- 32
Self-pressure reducing valve	10- 41
Cooling fan pump.....	10- 44
Cooling fan motor.....	10- 53
Electrical grease pump	10- 59
Control valve	10- 60
Straight-travel valve	10- 69
Swing motor	10- 72

PPC valve	10- 87
Solenoid valve	10- 95
Accumulator.....	10- 103
Quick return valve.....	10- 104
Return oil filter.....	10- 107
Line oil filter.....	10- 108
Pilot oil filter	10- 109
Drain oil filter.....	10- 110
Electrical system	10- 111
Engine control.....	10- 111
Electric control system.....	10- 121
Monitor system	10- 160
Sensors.....	10- 190
KOMTRAX system.....	10- 194
20 Standard value table	
Standard value table	20- 3
Standard value table for engine.....	20- 3
Standard value table for machine	20- 4
30 Testing and adjusting	
Tool for testing, adjusting and troubleshooting	30- 3
Tools for testing, adjusting, and troubleshooting	30- 3
Engine and cooling system.....	30- 7
Testing engine speed	30- 7
Testing intake air pressure (boost pressure)	30- 8
Testing exhaust gas temperature	30- 9
Testing exhaust gas color.....	30- 10
Adjusting valve clearance	30- 12
Testing compression pressure.....	30- 13
Testing blowby pressure.....	30- 15
Testing engine oil pressure.....	30- 16
Testing EGR valve and bypass valve drive pressure	30- 17
Handling fuel system parts	30- 18
Releasing remaining pressure from fuel system.....	30- 19
Testing fuel pressure	30- 20
Testing fuel return rate and leakage	30- 21
Bleeding air from fuel circuit	30- 24
Testing fuel circuit for leakage	30- 26
Testing and adjusting alternator belt tension	30- 27
Testing and adjusting air conditioner compressor belt tension.....	30- 28
Undercarriage and frame.....	30- 29
Testing swing circle bearing clearance	30- 29
Checking and adjusting track tension	30- 30
Hydraulic system	30- 31
Testing and adjusting oil pressure in work equipment, swing, and travel circuits.....	30- 31
Testing and adjusting control circuit oil pressure (output pressure of self-pressure reducing valve)	
.....	30- 37
Testing and adjusting control signal of main pump.....	30- 39
Testing PPC valve output pressure	30- 46
Measuring outlet pressure of solenoid valve, swing PPC shuttle valve, and swing priority selector valve	
.....	30- 50
Adjusting play of work equipment and swing PPC valves	30- 55
Testing and adjusting travel deviation	30- 56

Inspecting locations of hydraulic drift in work equipment.....	30- 58
Measuring fan speed	30- 59
Measuring fan circuit oil pressure	30- 60
Measuring fan pump EPC current.....	30- 61
Measuring fan pump EPC solenoid valve outlet pressure	30- 62
Measuring oil leakage	30- 63
Releasing remaining pressure from hydraulic circuit	30- 67
Bleeding air from various parts	30- 68
Inspection procedures for diode.....	30- 71
Adjusting mirrors	30- 72
Electrical system	30- 73
Special functions of machine monitor	30- 73
Handling voltage circuit of engine controller	30-117
Preparatory work for troubleshooting of electrical system	30-118
Pm Clinic.....	30-122
Pm clinic service	30-122
UNDERCARRIAGE INSPECTION REPORT	30-129
40 Troubleshooting	
General information on troubleshooting.....	40- 7
Points to remember when troubleshooting	40- 7
Sequence of events in troubleshooting.....	40- 8
Checks before troubleshooting	40- 9
Classification and procedures for troubleshooting	40- 35
Failure codes table.....	40- 38
Symptom and troubleshooting numbers	40- 43
Information in troubleshooting table.....	40- 46
Troubleshooting method for open circuit in wiring harness of pressure sensor system	40- 48
Connector list and layout	40- 50
Connection table for connector pin numbers	40- 61
T- branch box and T- branch adapter table	40- 97
Fuse locations.....	40-100
Troubleshooting by failure code.....	40-103
Failure code [989L00] Engine Controller Lock Caution 1	40-103
Failure code [989M00] Engine Controller Lock Caution 2	40-104
Failure code [989N00] Engine Controller Lock Caution 3.....	40-104
Failure code [AA10NX] Air Cleaner Clogging	40-105
Failure code [AB00KE] Charge Voltage Low	40-106
Failure code [B@BAZG] Eng Oil Press Low.....	40-108
Failure code [B@BAZK] Eng Oil Level Low.....	40-109
Failure code [B@BCNS] Eng Water Overheat	40-110
Failure code [B@BCZK] Eng Water Level Low	40-112
Failure code [B@HANS] Hyd Oil Overheat.....	40-114
Failure code [CA111] ECM Critical Internal Failure	40-116
Failure code [CA115] Eng Ne and Bkup Speed Sens Error	40-118
Failure code [CA122] Chg Air Press Sensor High Error	40-120
Failure code [CA123] Chg Air Press Sensor Low Error	40-122
Failure code [CA131] Throttle Sensor High Error	40-124
Failure code [CA132] Throttle Sensor Low Error	40-126
Failure code [CA135] Eng Oil Press Sensor High Error	40-128
Failure code [CA141] Eng Oil Press Sensor Low Error	40-130
Failure code [CA144] Coolant Temp Sens High Error	40-132
Failure code [CA145] Coolant Temp Sens Low Error.....	40-134
Failure code [CA153] Chg Air Temp Sensor High Error	40-136

Failure code [CA154] Chg Air Temp Sensor Low Error	40- 138
Failure code [CA187] Sens Supply 2 Volt Low Error	40- 140
Failure code [CA221] Ambient Press Sens High Error	40- 142
Failure code [CA222] Ambient Press Sens Low Error	40- 144
Failure code [CA227] Sens Supply 2 Volt High Error	40- 146
Failure code [CA234] Eng Overspeed	40- 147
Failure code [CA238] Ne Speed Sens Supply Volt Error.....	40- 148
Failure code [CA263] Fuel Temp Sensor High Error	40- 150
Failure code [CA265] Fuel Temp Sensor Low Error	40- 152
Failure code [CA271] IMV/PCV1 Short Error.....	40- 154
Failure code [CA272] IMV/PCV1 Open Error	40- 155
Failure code [CA273] PCV2 Short Error	40- 156
Failure code [CA274] PCV2 Open Error.....	40- 157
Failure code [CA322] Inj #1(L#1) Open/Short Error	40- 158
Failure code [CA323] Inj #5 (L#5) Open/Short Error	40- 160
Failure code [CA324] Inj #3(L#3) Open/Short Error	40- 162
Failure code [CA325] Inj #6 (L#6) Open/Short Error	40- 164
Failure code [CA331] Inj #2(L#2) Open/Short Error	40- 166
Failure code [CA332] Inj #4 (L#4) Open/Short Error	40- 168
Failure code [CA342] Calibration Code Incompatibility	40- 170
Failure code [CA351] Injectors Drive Circuit Error.....	40- 171
Failure code [CA352] Sens Supply 1 Volt Low Error.....	40- 172
Failure code [CA386] Sens Supply 1 Volt High Error	40- 174
Failure code [CA441] Battery Voltage Low Error.....	40- 174
Failure code [CA442] Battery Voltage High Error	40- 175
Failure code [CA449] Rail Press Very High Error.....	40- 175
Failure code [CA451] Rail Press Sensor High Error.....	40- 176
Failure code [CA452] Rail Press Sensor Low Error.....	40- 178
Failure code [CA553] Rail Press High Error	40- 180
Failure code [CA554] Rail Press Sensor In Range Error.....	40- 181
Failure code [CA559] Supply Pump Press Low Error 1	40- 182
Failure code [CA689] Eng Ne Speed Sensor Error	40- 186
Failure code [CA731] Eng Bkup Speed Sens Phase Error.....	40- 188
Failure code [CA757] All Continuous Data Lost Error	40- 189
Failure code [CA778] Eng Bkup Speed Sensor Error.....	40- 190
Failure code [CA1228] EGR Valve Servo Error 1	40- 192
Failure code [CA1625] EGR Valve Servo Error 2.....	40- 193
Failure code [CA1626] BP Valve Sol Current High Error.....	40- 194
Failure code [CA1627] BP Valve Sol Current Low Error	40- 196
Failure code [CA1628] Bypass Valve Servo Error 1	40- 198
Failure code [CA1629] Bypass Valve Servo Error 2.....	40- 199
Failure code [CA1631] BP Valve Pos Sens High Error	40- 200
Failure code [CA1632] BP Valve Pos Sens Low Error	40- 202
Failure code [CA1633] KOMNET Datalink Timeout Error.....	40- 204
Failure code [CA2185] Throt Sens Sup Volt High Error	40- 206
Failure code [CA2186] Throt Sens Sup Volt Low Error	40- 208
Failure code [CA2249] Rail Press Very Low Error.....	40- 209
Failure code [CA2271] EGR Valve Pos Sens High Error	40- 210
Failure code [CA2272] EGR Valve Pos Sens Low Error	40- 212
Failure code [CA2351] EGR Valve Sol Current High Error.....	40- 214
Failure code [CA2352] EGR Valve Sol Current Low Error	40- 216
Failure code [CA2555] Grid Htr Relay Open Circuit Error	40- 218
Failure code [CA2556] Grid Htr Relay Short Circuit Error	40- 220
Failure code [D110KB] Battery Relay Drive Short Circuit.....	40- 222

Failure code [D163KB] Flash Light Relay Short Circuit	40- 224
Failure code [D195KA] Step Light Relay Open Circuit	40- 226
Failure code [D195KB] Step Light Relay Short Circuit.....	40- 228
Failure code [D19JKZ] Personal Code Relay Abnormality	40- 230
Failure code [D862KA] GPS Antenna Open Circuit.....	40- 232
Failure code [DA22KK] Pump Solenoid Power Low Error	40- 234
Failure code [DA25KP] 5V Sensor1 Power Abnormality	40- 236
Failure code [DA29KQ] Model Selection Abnormality	40- 238
Failure code [DA2RMC] CAN Discon (Pump Con Detected).....	40- 240
Failure code [DA80MA] Auto. Lub. Abnormal.	40- 244
Failure code [DAF8KB] Camera Power Supply Short Circuit	40- 246
Failure code [DAFGMC] GPS Module Error	40- 248
Failure code [DAFRMC] CAN Discon (Monitor Detected)	40- 249
Failure code [DGE5KB] Ambi. Temp Sensor Short Circuit.....	40- 254
Failure code [DGH2KB] Hyd Oil Sensor Short.....	40- 256
Failure code [DH25KA] L Jet Sensor Open Circuit	40- 258
Failure code [DH25KB] L Jet Sensor Short Circuit	40- 260
Failure code [DH26KA] R Jet Sensor Open Circuit	40- 262
Failure code [DH26KB] R Jet Sensor Short Circuit.....	40- 264
Failure code [DHPEKA] F Pump P. Sensor Open Circuit.....	40- 266
Failure code [DHPEKB] F Pump P. Sensor Short Circuit	40- 268
Failure code [DHPFKA] R Pump P. Sensor Open Circuit.....	40- 270
Failure code [DHPFKB] R Pump P. Sensor Short Circuit.....	40- 272
Failure code [DV20KB] Travel alarm short circuit.....	40- 274
Failure code [DW41KA] Swing Priority Sol Open Circuit	40- 276
Failure code [DW41KB] Swing Priority Sol Short Circuit	40- 278
Failure code [DW43KA] Travel Speed Sol Open Circuit.....	40- 280
Failure code [DW43KB] Travel Speed Sol Short Circuit	40- 282
Failure code [DW45KA] Swing Brake Sol Open Circuit	40- 284
Failure code [DW45KB] Swing Brake Sol Short Circuit	40- 286
Failure code [DW7BKA] Fan Reverse Sol Open Circuit	40- 288
Failure code [DW7BKB] Fan Reverse Sol Short Circuit	40- 290
Failure code [DW7JKA] Bottom Dump Priority Sol Open Circuit	40- 292
Failure code [DW7JKB] Bottom Dump Priority Sol Short Circuit	40- 294
Failure code [DW91KA] Travel Junction Sol Open Circuit.....	40- 296
Failure code [DW91KB] Travel Junction Sol Short Circuit.....	40- 298
Failure code [DWK0KA] 2-stage Relief Sol Open Circuit.....	40- 300
Failure code [DWK0KB] 2-stage Relief Sol Short Circuit.....	40- 302
Failure code [DX16KA] Fan Pump EPC Sol Open Circuit	40- 304
Failure code [DX16KB] Fan Pump EPC Sol Short Circuit	40- 306
Failure code [DXAACA] F Pump EPC Sol Open Circuit	40- 308
Failure code [DXAACK] F Pump EPC Sol Short Circuit.....	40- 310
Failure code [DXABKA] R Pump EPC Sol Open Circuit	40- 312
Failure code [DXABKB] R Pump EPC Sol Short Circuit	40- 314
Failure code [DY20KA] Wiper Working Abnormality	40- 316
Failure code [DY20MA] Wiper Parking Abnormality	40- 320
Failure code [DY2CKA] Washer Drive Open Circuit	40- 322
Failure code [DY2CKB] Washer Drive Short Circuit	40- 324
Failure code [DY2DKB] Wiper Drive (Fwd) Short Circuit.....	40- 326
Failure code [DY2EKB] Wiper Drive (Rev) Short Circuit.....	40- 330
Failure code [DY2FMA] Upper Wiper Working Abnormality	40- 334
Failure code [DY2GKM] Wiper Select Abnormality.....	40- 336
Troubleshooting of electrical system (E-mode).....	40- 339
E-1 Engine does not start (Engine does not crank)	40- 339

E-2 Preheater does not operate	40- 344
E-3 When starting switch is turned to ON position, machine monitor displays nothing	40- 348
E-4 When starting switch is turned to ON position (before starting engine), basic check monitor lights up.	40- 351
E-5 Precaution item lights up while engine is running	40- 352
E-6 Emergency stop item lights up while engine is running	40- 354
E-7 Engine coolant temperature gauge does not indicate properly	40- 355
E-8 Fuel gauge does not indicate properly	40- 356
E-9 Hydraulic oil temperature gauge does not indicate properly	40- 358
E-10 Displays on machine monitor are different from those for actual machine	40- 360
E-11 Some areas of machine monitor screen are not displayed	40- 360
E-12 Function switch does not operate	40- 360
E-13 Automatic warm-up system does not operate (in cold season)	40- 361
E-14 Auto-decelerator does not operate properly	40- 362
E-15 Working mode does not change	40- 363
E-16 Travel speed does not change	40- 364
E-17 Alarm buzzer cannot be canceled	40- 365
E-18 When starting switch is turned OFF, service meter is not displayed.....	40- 365
E-19 Service mode cannot be selected	40- 365
E-20 Any of work equipment, swing and travel do not operate or cannot be locked	40- 366
E-21 Machine push-up function does not operate or cannot be canceled.....	40- 368
E-22 Boom shockless function does not operate properly	40- 370
E-23 Swing brake does not operate properly	40- 372
E-24 Windshield wiper and window washer do not operate	40- 374
E-25 Travel alarm does not sound or does not stop sounding	40- 378
E-26 Boom RAISE indicator is not displayed properly with monitoring function.....	40- 380
E-27 Boom LOWER indicator is not displayed properly with monitoring function	40- 382
E-28 Arm IN indicator is not displayed properly with monitoring function	40- 384
E-29 Arm OUT indicator is not displayed properly with monitoring function	40- 386
E-30 Bucket CURL indicator is not displayed properly with monitoring function	40- 388
E-31 Bucket DUMP indicator is not displayed properly with monitoring function	40- 390
E-32 Swing indicator is not displayed properly with monitoring function	40- 392
E-33 "L.H. travel" is not displayed properly with monitoring function.....	40- 394
E-34 "R.H. travel" is not displayed properly with monitoring function	40- 396
E-35 "Attachment" is not displayed properly with monitoring function	40- 398
E-36 Electric grease gun does not operate	40- 400
E-37 KOMTRAX system does not operate properly	40- 402
E-38 Horn does not sound or does not stop sounding	40- 403
E-39 Step light does not light up or go off.....	40- 406
Troubleshooting of hydraulic and mechanical system (H-mode).....	40- 410
Before starting troubleshooting for hydraulic and mechanical systems.....	40- 410
Information in troubleshooting table (H-mode)	40- 414
H-1 All of work equipment, swing and travel work slow or lack power	40- 416
H-2 Engine speed lowers significantly or engine stalls.....	40- 418
H-3 Any of work equipment, swing and travel does not work	40- 420
H-4 Unusual noise is heard from around hydraulic pump.....	40- 422
H-5 Boom operation lacks speed or power.....	40- 423
H-6 Arm operation lacks speed or power	40- 425
H-7 Bucket operation lacks speed or power	40- 426
H-8 Boom does not move	40- 427
H-9 Arm does not move.....	40- 427
H-10 Bucket does not move	40- 427
H-11 Hydraulic drift of work equipment is large	40- 428
H-12 Time lag of work equipment is large	40- 430

H-13 Heavy lift function does not work or is not released.....	40- 431
H-14 Machine push-up function does not work or is not released.....	40- 431
H-15 Boom shockless function does not work or is not canceled.....	40- 431
H-16 Machine deviates in one direction against operator's intention when travelling.....	40- 432
H-17 Machine deviates significantly at start.....	40- 435
H-18 Machine deviates significantly during combined operation.....	40- 436
H-19 Travel works slow or lack power.....	40- 437
H-20 One of tracks does not run.....	40- 438
H-21 Travel speed does not change.....	40- 439
H-22 Upper structure does not swing.....	40- 440
H-23 Swing speed is low or swing acceleration is poor.....	40- 441
H-24 In combined operation with work equipment, swing speed is low or swing acceleration is poor.....	40- 442
H-25 Upper structure overruns excessively when it stops swinging.....	40- 444
H-26 Shock is large when upper structure stops swinging.....	40- 445
H-27 Large unusual noise is heard when upper structure stops swinging.....	40- 446
H-28 Swing drift on a slope is large.....	40- 447
H-29 Fan revolution is abnormal (Fan sound/vibration is abnormally large or engine overheats).....	40- 448
Troubleshooting of engine (S-mode).....	40- 450
Method of using troubleshooting chart.....	40- 450
S-1 Startability is poor.....	40- 454
S-2 Engine does not start.....	40- 456
S-3 Engine does not pick up smoothly.....	40- 460
S-4 Engine stops during operation.....	40- 461
S-5 Engine runs rough or is unstable.....	40- 462
S-6 Engine lacks power.....	40- 464
S-7 Exhaust smoke is black (incomplete combustion).....	40- 466
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	40- 468
S-9 Oil becomes contaminated early.....	40- 469
S-10 Fuel consumption is excessive.....	40- 470
S-11 Oil is in coolant (or coolant spurts or coolant level goes down).....	40- 471
S-12 Oil pressure drops.....	40- 472
S-13 Oil level rises (coolant or fuel in oil).....	40- 474
S-14 Coolant temperature rises too high (overheating).....	40- 476
S-15 Unusual noise is made.....	40- 477
S-16 Vibration is excessive.....	40- 478
50 Disassembly and assembly	
General information on disassembly and assembly.....	50- 4
How to read Disassembly and Assembly.....	50- 4
Coating materials list.....	50- 6
Special tools list.....	50- 9
Sketches of special tools.....	50- 16
Engine and cooling system.....	50- 21
Removal and installation of engine, PTO and hydraulic pump assembly.....	50- 21
Removal and installation of cooling assembly.....	50- 29
Removal and installation of aftercooler assembly.....	50- 35
Removal and installation of fuel cooler and air condenser assembly.....	50- 37
Removal and installation of fan motor assembly.....	50- 39
Removal and installation of fuel tank assembly.....	50- 44
Engine.....	50- 46
Removal and installation of fuel supply pump assembly.....	50- 46
Removal and installation of cylinder head assembly.....	50- 51

Removal and installation of fuel injector assembly	50- 67
Removal and installation of engine front seal	50- 70
Removal and installation of engine rear seal	50- 72
Power train	50- 77
Removal and installation of PTO assembly	50- 77
Disassembly and assembly of PTO assembly	50- 84
Removal and installation of swing motor and swing machinery assembly	50- 86
Disassembly and assembly of swing machinery assembly	50- 89
Removal and installation of swing circle assembly	50- 96
Disassembly and assembly of final drive assembly	50- 97
Undercarriage and frame	50-109
Separation and connection of track shoe assembly	50-109
Disassembly and assembly of one link in field	50-111
Removal and installation of idler assembly	50-115
Disassembly and assembly of idler assembly	50-116
Disassembly and assembly of idler adjustment cylinder assembly	50-119
Removal and installation of recoil spring assembly	50-120
Disassembly and assembly of recoil spring assembly	50-122
Removal and installation of carrier roller assembly	50-124
Disassembly and assembly of carrier roller assembly	50-125
Removal and installation of track roller assembly	50-128
Disassembly and assembly of track roller assembly	50-129
Removal and installation of revolving frame assembly	50-132
Removal and installation of counterweight assembly	50-134
Removal and installation of counterweight remover assembly	50-135
Hydraulic system	50-137
Removal and installation of hydraulic tank assembly	50-137
Removal and installation of main pump assembly	50-139
Removal and installation of main pump input shaft oil seal	50-146
Removal and installation of cooling fan pump assembly	50-147
Removal and installation of control valve assembly	50-150
Assembly of control valve assembly	50-153
Removal and installation of swing motor assembly	50-159
Removal and installation of center swivel joint assembly	50-160
Disassembly and assembly of center swivel joint assembly	50-162
Removal and installation of travel motor assembly	50-164
Removal and installation of solenoid valve assembly	50-165
Removal and installation of boom damping valve assembly	50-167
Disassembly and assembly of work equipment PPC valve assembly	50-168
Disassembly and assembly of travel PPC valve assembly	50-170
Disassembly and assembly of hydraulic cylinder assembly	50-173
Disassembly and assembly of grease gun assembly	50-180
Work equipment	50-181
Removal and installation of bucket cylinder assembly	50-181
Removal and installation of arm cylinder assembly	50-185
Removal and installation of boom cylinder assembly	50-189
Removal and installation of bottom dump cylinder assembly	50-193
Removal and installation of bucket assembly	50-195
Removal and installation of arm assembly	50-198
Removal and installation of boom assembly	50-202
Removal and installation of work equipment assembly	50-206
Cab and its attachments	50-210
Removal and installation of operator's cab assembly	50-210
Removal and installation of operator's cab glass (adhered window glass)	50-213

Removal and installation of front window assembly	50-222
Electrical system	50-229
Removal and installation of air conditioner unit assembly	50-229
Removal and installation of engine controller assembly	50-232
Removal and installation of monitor assembly.....	50-234
Removal and installation of pump controller assembly.....	50-236
Removal and installation of KOMTRAX terminal assembly	50-238
60 Maintenance standard	
Engine and cooling system	60- 3
Coupling.....	60- 3
Power train.....	60- 4
Swing circle.....	60- 4
Swing machinery.....	60- 5
Final drive	60- 8
Sprocket.....	60-10
Undercarriage and frame	60-12
Track frame and idler cushion.....	60-12
Idler	60-14
Carrier roller	60-16
Track roller	60-18
Track shoe	60-20
Hydraulic system.....	60-24
Cooling fan motor.....	60-24
Control valve	60-26
Swing motor	60-32
Center swivel joint.....	60-34
PPC valve	60-35
Work equipment.....	60-38
Work equipment.....	60-38
Work equipment dimension	60-44
Hydraulic cylinder.....	60-48
80 Appendix	
Air conditioner	80- 3
Precautions for refrigerant	80- 3
Air conditioner component	80- 4
Configuration and function of refrigeration cycle.....	80- 6
Outline of refrigeration cycle	80- 7
Air conditioner unit	80-10
Air conditioner controller	80-15
Compressor	80-16
Condenser	80-17
Receiver drier.....	80-18
Procedure for testing and troubleshooting	80-20
Circuit diagram and arrangement of connector pins	80-22
System diagram	80-24
Detail of air conditioner unit	80-26
Parts and connectors layout	80-28
Testing air leakage (duct)	80-31
Testing with self-diagnosis function	80-32
Testing temperature control	80-35
Testing vent (mode) changeover	80-37
Testing FRESH/RECIRC air changeover	80-40