

SEBE6120A05

SHOP MANUAL

KOMATSU 155-4 SERIES DIESEL ENGINE

LIST OF REVISED PAGES

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are those previously revised or made additions.

LIST OF REVISED PAGES

Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
●	00-1	(5)		01-106	(4)		01-411	(2)		11-214	(4)		11-406	(4)
●	00-2	(5)		01-107	(4)					11-215	(4)		11-407	(3)
●	00-2-1	(5)		01-108	(4)		11-001			11-216	(4)		11-407-1	(3)
●	00-2-2	(5)		01-109	(4)		11-003	(3)		11-217	(4)		11-407-2	(3)
	00-2-3	(3)		01-201			11-004			11-218	(4)		11-407-3	(3)
	00-3			01-202			11-005	(4)		11-219	(2)		11-408	(4)
	00-4			01-203			11-006	(4)		11-220	(2)		11-408-1	(3)
	00-5			01-204			11-007			11-221	(2)		11-408-2	(3)
	00-6			01-205			11-102			11-302	(4)		11-408-3	(3)
	00-7			01-206			11-103			11-303	(3)		11-408-4	(3)
	00-8			01-207			11-104			11-304	(2)		11-408-5	(3)
	00-9			01-208			11-105			11-305	(2)		11-408-6	(3)
	00-10			01-209			11-106			11-306	(2)		11-408-7	(3)
				01-210			11-107			11-307	(2)		11-409	(3)
	01-001	(2)		01-211			11-108			11-308	(4)		11-409-1	(3)
	01-003	(3)		01-212			11-201	(4)		11-309	(2)		11-409-2	(4)
	01-004	(3)		01-213			11-202			11-310	(4)		11-409-3	(3)
	01-005	(3)		01-302	(4)		11-203			11-311	(4)		11-410	
	01-006	(3)		01-401	(2)		11-204	(4)		11-312	(2)		11-411	(4)
	01-007	(3)		01-402	(2)		11-205			11-313	(3)		11-411-1	(3)
	01-008	(3)		01-403	(2)		11-206			11-314	(3)		11-412	
	01-009	(2)		01-404	(2)		11-207			11-315	(3)		11-413	
	01-010	(3)		01-405	(2)		11-208	(2)		11-316	(3)		11-502	(4)
	01-101			01-406	(2)		11-209	(2)		11-401	(4)		11-503	(2)
	01-102	(2)		01-407	(3)		11-210	(2)		11-402	(3)		11-504	(2)
	01-103	(2)		01-408	(3)		11-211	(2)		11-403			11-505-1	(2)
	01-104	(4)		01-409	(2)		11-212	(2)		11-404			11-505-2	(2)
	01-105	(4)		01-410	(2)		11-213	(4)		11-405	(3)		11-506	(2)

LIST OF REVISED PAGES

Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
	11-507	(2)		12-705	(4)		13-024			13-206			14-009	(3)
	11-508	(2)		12-706	(4)		13-025			13-207			14-010	(2)
	11-509			12-707	(4)		13-102			13-208			14-011	(2)
	11-602	(3)		12-708	(4)		13-103			13-209			14-012	(2)
	11-602-1	(4)		12-709	(4)		13-104			13-210			14-013	(2)
	11-602-2	(4)		12-710	(4)		13-105			13-211		●	14-014	(5)
	11-603	(2)		12-711	(4)		13-106	(2)		13-212	(4)		14-015	(4)
	11-604			12-712	(4)		13-107			13-213			14-016	(2)
	11-604-1	(4)		12-713	(4)		13-107-1	(2)		13-214			14-017	(4)
	11-605			12-901	(3)		13-107-2	(2)		13-215			14-018	(4)
	11-606			12-902	(4)		13-108	(2)		13-216			14-019	(2)
	11-607	(2)		12-903	(4)		13-109	(2)		13-218	(2)		14-020	(4)
	11-608			12-904	(4)		13-110	(2)		13-219	(2)		14-021	(4)
	11-609			12-905	(4)		13-111	(3)		13-220	(2)		14-022	(2)
	11-610			12-906	(4)		13-112	(2)		13-221	(2)		14-023	(2)
	11-611	(2)		12-907	(4)		13-113	(3)		13-222	(4)		14-024	(2)
	11-612			12-908	(4)		13-114	(4)		13-223	(4)		14-025	(2)
	11-613			12-909	(4)		13-114-1	(4)		13-224	(4)		14-026	(4)
	11-614	(2)					13-115	(2)		13-225	(3)		14-027	(4)
	11-615	(2)		13-001			13-116	(2)		13-226	(3)		14-028	(2)
	11-616	(2)		13-003	(3)		13-117	(2)		13-227	(3)		14-029	(4)
	11-617	(2)		13-004			13-118	(2)		13-228	(3)		14-030	(2)
	11-618	(3)		13-005			13-119	(2)		13-229	(3)		14-031	(4)
	11-619	(3)		13-006			13-120	(2)		13-230	(3)		14-032	(4)
	11-620	(3)		13-007			13-121	(2)		13-231	(3)		14-033	(2)
	11-621	(3)		13-008	(2)		13-122	(2)		13-232	(3)		14-034	(2)
	11-622	(3)		13-009			13-123	(2)		13-233	(3)		14-035	(2)
				13-010			13-124	(2)		13-234	(3)		14-036	(2)
	12-001			13-011			13-125	(2)		13-235	(3)		14-037	(2)
	12-003	(3)		13-012			13-126	(2)		13-236	(3)		14-038	(2)
	12-402	(3)		13-013			13-127	(2)		13-237	(3)		14-039	(2)
	12-403	(3)		13-014	(4)		13-128	(2)		13-238	(3)		14-040	(2)
	12-404	(3)		13-015			13-129	(2)		13-239	(3)		14-042	(2)
	12-405	(3)		13-016			13-130	(2)					14-043	(2)
	12-406	(4)		13-017			13-131			14-001			14-044	(2)
	12-407	(3)		13-018			13-132	(2)		14-003	(3)		14-045	(4)
	12-408	(4)		13-019			13-133	(4)		14-004	(2)		14-046	(2)
	12-409	(4)		13-020			13-202	(2)		14-005	(2)			
	12-702	(4)		13-021			13-203	(2)		14-006			15-001	(3)
	12-703	(4)		13-022			13-204	(2)		14-007			15-003	(3)
	12-704	(4)		13-023			13-205			14-008			15-004	(3)

LIST OF REVISED PAGES

Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
	15-005	(3)		15-046	(3)									
	15-006	(3)		15-047	(3)									
	15-007	(3)		15-048	(3)									
	15-008	(3)		15-049	(3)									
	15-009	(3)		15-050	(3)									
	15-010	(3)												
	15-011	(3)												
	15-012	(3)												
	15-013	(3)												
	15-014	(3)												
	15-015	(3)												
	15-016	(3)												
	15-017	(3)												
	15-018	(3)												
	15-019	(3)												
	15-020	(3)												
	15-021	(3)												
	15-022	(3)												
	15-023	(3)												
	15-024	(3)												
	15-025	(3)												
	15-026	(3)												
	15-027	(3)												
	15-028	(3)												
	15-029	(3)												
	15-030	(3)												
	15-031	(3)												
	15-032	(3)												
	15-033	(3)												
	15-034	(3)												
	15-035	(3)												
	15-036	(3)												
	15-037	(3)												
	15-038	(3)												
	15-039	(3)												
	15-040	(3)												
	15-041	(3)												
	15-042	(4)												
	15-043	(3)												
	15-044	(3)												
	15-045	(3)												



CONTENTS

	No. of page
01 GENERAL	01-001
11 STRUCTURE AND FUNCTION	
GENERAL STRUCTURE	11-004
INTAKE AND EXHAUST SYSTEM	11-102
ENGINE	11-201
LUBRICATION SYSTEM	11-302
FUEL SYSTEM	11-401
COOLING SYSTEM	11-502
ACCESSORY	11-602
12 TESTING AND ADJUSTING	
FUEL SYSTEM	12-402
PERFORMANCE TEST	12-701
TESTING AND ADJUSTING TOOL LIST	12-901
TESTING AND ADJUSTING, TROUBLESHOOTING CRITERIA	12-902
13 DISASSEMBLY AND ASSEMBLY	
OVERALL DISASSEMBLY	13-004
OVERALL ASSEMBLY	13-102
DISASSEMBLY AND ASSEMBLY OF ASSEMBLY PART	13-202
14 MAINTENANCE STANDARD	
INTAKE AND EXHAUST SYSTEM	14-004
ENGINE	14-008
LUBRICATION SYSTEM	14-030
COOLING SYSTEM	14-036
ACCESSORY	14-037
15 REPAIR AND REPLACEMENT	15-001



IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for the safe operation of your machine. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe methods of operation. Some of these operations require the use of tools specially designed by Komatsu for the purpose.

To prevent injury to workers, the symbols  and  are used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.



SAFETY

GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, glasses, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.

6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

PREPARATIONS FOR WORK

7. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

PRECAUTIONS DURING WORK

11. When removing the oil filler cap, drain plug or hydraulic pressure measuring plugs, loosen them slowly to prevent the oil from spurting out.
Before disconnecting or removing components of the oil, water or air circuits, first remove the pressure completely from the circuit.
12. The water and oil in the circuits are hot when the engine is stopped, so be careful not to get burned.
Wait for the oil and water to cool before carrying out any work on the oil or water circuits.
13. Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
14. When raising heavy components, use a hoist or crane.
Check that the wire rope, chains and hooks are free from damage.
Always use lifting equipment which has ample capacity.
Install the lifting equipment at the correct places. Use a hoist or crane and operate slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
15. When removing covers which are under internal pressure or under pressure from a spring, always leave two bolts in position on opposite sides. Slowly release the pressure, then slowly loosen the bolts to remove.
16. When removing components, be careful not to break or damage the wiring. Damaged wiring may cause electrical fires.
17. When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip, or can even start fires.
18. As a general rule, do not use gasoline to wash parts. In particular, use only the minimum of gasoline when washing electrical parts.
19. Be sure to assemble all parts again in their original places.
Replace any damaged parts with new parts.
 - When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is being operated.
20. When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. Also, check that connecting parts are correctly installed.
21. When assembling or installing parts, always use the specified tightening torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
22. When aligning two holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
23. When measuring hydraulic pressure, check that the measuring tool is correctly assembled before taking any measurements.
24. Take care when removing or installing the tracks of track-type machines.
When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.

FOREWORD

GENERAL

This shop manual has been prepared as an aid to improve the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This shop manual mainly contains the necessary technical information for operations performed in a service workshop. For ease of understanding, the manual is divided into the following chapters; these chapters are further divided into the each main group of components.

STRUCTURE AND FUNCTION

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

TESTING AND ADJUSTING

This section explains checks to be made before and after performing repairs, as well as adjustments to be made at completion of the checks and repairs.

Troubleshooting charts correlating "Problems" to "Causes" are also included in this section.

DISASSEMBLY AND ASSEMBLY

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

MAINTENANCE STANDARD

This section gives the judgement standards when inspecting disassembled parts.

NOTICE

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Use the specifications given in the book with the latest date.

HOW TO READ THE SHOP MANUAL

VOLUMES

Shop manuals are issued as a guide to carrying out repairs. They are divided as follows:

- Chassis volume:** Issued for every machine model
- Engine volume:** Issued for each engine series
- Electrical volume:** Each issued as one volume to cover all models
- Attachments volume:** Each issued as one volume to cover all models

These various volumes are designed to avoid duplicating the same information. Therefore, to deal with all repairs for any model, it is necessary that chassis, engine, electrical and attachment volumes be available.


DISTRIBUTION AND UPDATING

Any additions, amendments or other changes will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.


FILING METHOD

1. See the page number on the bottom of the page. File the pages in correct order.
2. Following examples show how to read the page number.

Example 1 (Chassis volume):

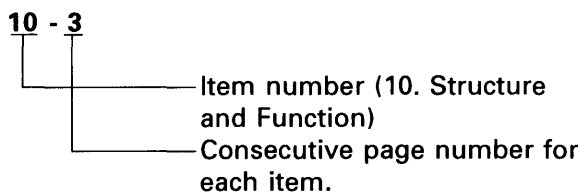

Example 2 (Engine volume):

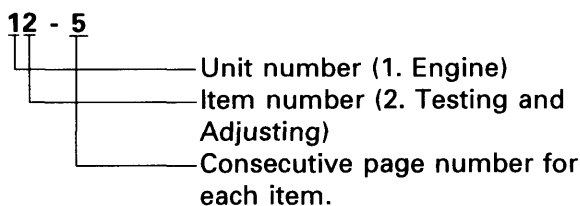

3. Additional pages: Additional pages are indicated by a hyphen (-) and number after the page number. File as in the example.

Example:



REVISED EDITION MARK

When a manual is revised, an edition mark (①②③....) is recorded on the bottom of the pages.

REVISIONS

Revised pages are shown in the LIST OF REVISED PAGES next to the CONTENTS page.


SYMBOLS

So that the shop manual can be of ample practical use, important safety and quality portions are marked with the following symbols.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing the work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing the work.
	Weight	Weight of parts of systems. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for the tightening torque during assembly.
	Coat	Places to be coated with adhesives and lubricants, etc.
	Oil, water	Places where oil, water or fuel must be added, and the capacity.
	Drain	Places where oil or water must be drained, and quantity to be drained.

HOISTING INSTRUCTIONS

 HOISTING

Heavy parts (25 kg or more) must be lifted with a hoist, etc. In the **DISASSEMBLY AND ASSEMBLY** section, every part weighing 25 kg or more is indicated clearly with the symbol 

- If a part cannot be smoothly removed from the machine by hoisting, the following checks should be made:
 - 1) Check for removal of all bolts fastening the part to the relative parts.
 - 2) Check for existence of another part causing interference with the part to be removed.

WIRE ROPES


- 1) Use adequate ropes depending on the weight of parts to be hoisted, referring to the table below:

Wire ropes (Standard "Z" or "S" twist ropes without galvanizing)		
Rope diameter	Allowable load	
	mm	kN tons
10	9.8	1.0
11.2	13.7	1.4
12.5	15.7	1.6
14	21.6	2.2
16	27.5	2.8
18	35.3	3.6
20	43.1	4.4
22.4	54.9	5.6
30	98.1	10.0
40	176.5	18.0
50	274.6	28.0
60	392.2	40.0

★ The allowable load value is estimated to be one-sixth or one-seventh of the breaking strength of the rope used.


- 2) Sling wire ropes from the middle portion of the hook.

Slinging near the edge of the hook may cause the rope to slip off the hook during hoisting, and a serious accident can result. Hooks have maximum strength at the middle portion.

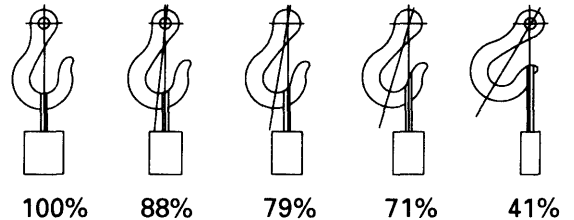


SAD00479

- 3) Do not sling a heavy load with one rope alone, but sling with two or more ropes symmetrically wound onto the load.

 Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.







- 4) Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with two or more ropes, the force subjected to each rope will increase with the hanging angles. The table below shows the variation of allowable load kN {kg} when hoisting is made with two ropes, each of which is allowed to sling up to 9.8 kN {1000 kg} vertically, at various hanging angles.



When two ropes sling a load vertically, up to 19.6 kN {2000 kg} of total weight can be suspended. This weight becomes 9.8 kN {1000 kg} when two ropes make a 120° hanging angle. On the other hand, two ropes are subjected to an excessive force as large as 39.2 kN {4000 kg} if they sling a 19.6 kN {2000 kg} load at a lifting angle of 150°.

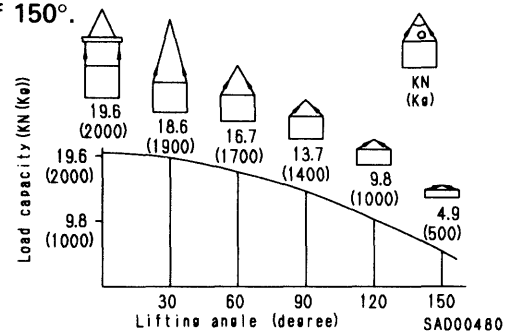

METHOD OF DISASSEMBLING, CONNECTING PUSH-PULL TYPE COUPLER

★ There are 2 types of push-pull type coupler. The method of disassembling and connecting is different, so see the table below when disassembling and connecting the coupler.

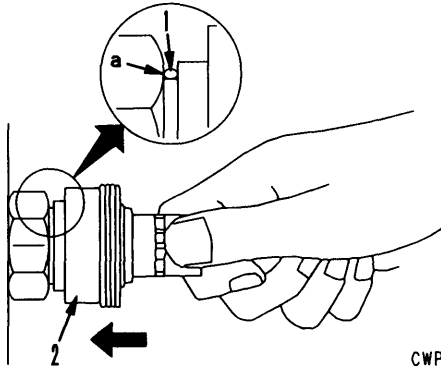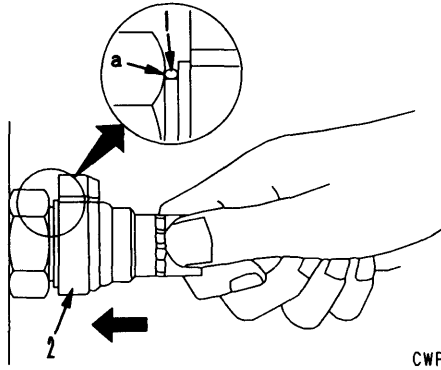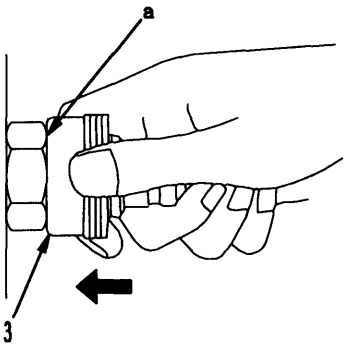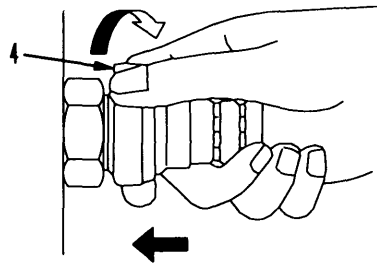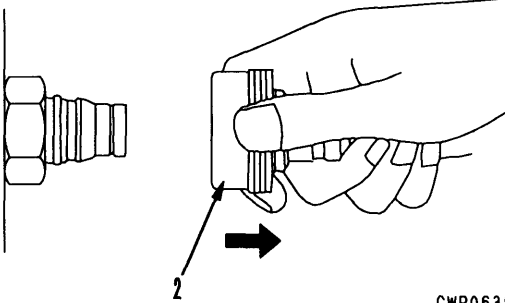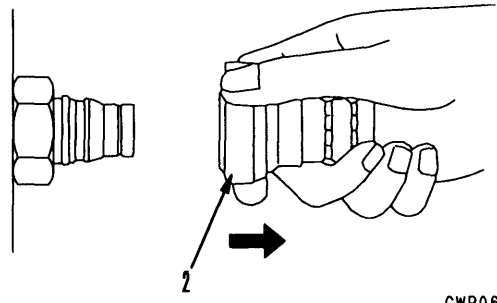	Type 1	Type 2
Disassembly	<p>1) Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end.</p>  <p style="text-align: right;">CWP06391</p>	<p>1) Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end.</p>  <p style="text-align: right;">CWP06392</p>
	<p>2) Hold in the condition in Step 1), and push until cover (3) contacts contact surface a of the hexagonal portion at the male end.</p>  <p style="text-align: right;">CWP06393</p>	<p>2) Hold in the condition in Step 1), and turn lever (4) to the right (clockwise).</p>  <p style="text-align: right;">CWP06394</p>
	<p>3) Hold in the condition in Steps 1) and 2), and pull out whole body (2) to disconnect it.</p>  <p style="text-align: right;">CWP06395</p>	<p>3) Hold in the condition in Steps 1) and 2), and pull out whole body (2) to disconnect it.</p>  <p style="text-align: right;">CWP06396</p>

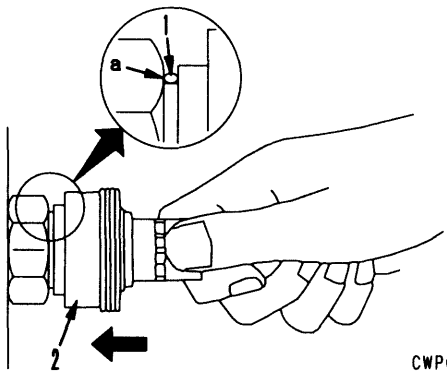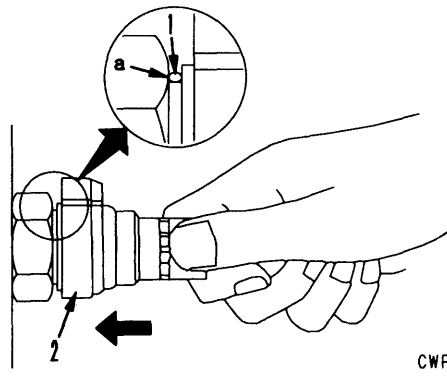	Type 1	Type 2
Connection	<ul style="list-style-type: none"> Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end to connect it.  <p>The diagram shows a hand holding a coupling component. A sliding prevention ring (1) is being pushed towards a contact surface 'a' on a hexagonal portion. A push body (2) is also shown being pushed towards the same area. An inset circular diagram provides a magnified view of the contact point between the ring and the hexagonal surface.</p> <p style="text-align: right;">CWP06391</p>	<ul style="list-style-type: none"> Hold the mouthpiece of the tightening portion and push body (2) in straight until sliding prevention ring (1) contacts contact surface a of the hexagonal portion at the male end to connect it.  <p>The diagram shows a hand holding a coupling component. A sliding prevention ring (1) is being pushed towards a contact surface 'a' on a hexagonal portion. A push body (2) is also shown being pushed towards the same area. An inset circular diagram provides a magnified view of the contact point between the ring and the hexagonal surface.</p> <p style="text-align: right;">CWP06392</p>



ELECTRIC WIRE CODE

In the wiring diagrams, various colors and symbols are employed to indicate the thickness of wires. This wire code table will help you understand WIRING DIAGRAMS.

Example: 5WB indicates a cable having a nominal number 5 and white coating with black stripe.

CLASSIFICATION BY THICKNESS

Nominal number	Copper wire			Cable O.D. (mm)	Current rating (A)	Applicable circuit
	Number strands	Dia. of strands (mm)	Cross section (mm ²)			
0.85	11	0.32	0.88	2.4	12	Starting, lighting, signal etc.
2	26	0.32	2.09	3.1	20	Lighting, signal etc.
5	65	0.32	5.23	4.6	37	Charging and signal
15	84	0.45	13.36	7.0	59	Starting (Glow plug)
40	85	0.80	42.73	11.4	135	Starting
60	127	0.80	63.84	13.6	178	Starting
100	217	0.80	109.1	17.6	230	Starting

CLASSIFICATION BY COLOR AND CODE

Priority	Circuits		Charging	Ground	Starting	Lighting	Instrument	Signal	Other
	Classification								
1	Primary	Code	W	B	B	R	Y	G	L
		Color	White	Black	Black	Red	Yellow	Green	Blue
2	Auxiliary	Code	WR	—	BW	RW	YR	GW	LW
		Color	White & Red	—	Black & White	Red & White	Yellow & Red	Green & White	Blue & White
Code		WB	—	BY	RB	YB	GR	LR	
Color		White & Black	—	Black & Yellow	Red & Black	Yellow & Black	Green & Red	Blue & Red	
Code		WL	—	BR	RY	YG	GY	LY	
Color		White & Blue	—	Black & Red	Red & Yellow	Yellow & Green	Green & Yellow	Blue & Yellow	
Code		WG	—	—	RG	YL	(GB)	(LB)	
Color		White & Green	—	—	Red & Green	Yellow & Blue	(Green & Black)	(Blue & Black)	
Code		—	—	—	RL	YW	(GL)	—	
Color		—	—	—	Red & Blue	Yellow & White	(Green & Blue)	—	


SHOP MANUAL

55-4 SERIES

Engine Serial No. 10011 and up

LINE

GENERAL

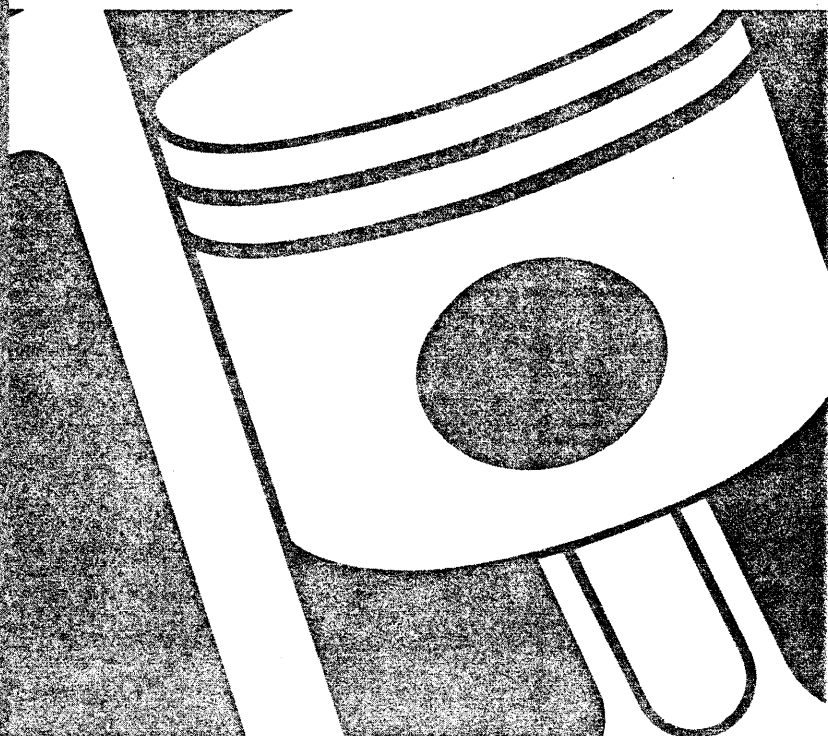


GENERAL

GENERAL VIEW	01-004
SPECIFICATIONS	01-102
GENERAL ASSEMBLY DRAWING	01-202
WEIGHT TABLE	01-302
PERFORMANCE CURVES	01-401


GENERAL VIEW

S4D155-4

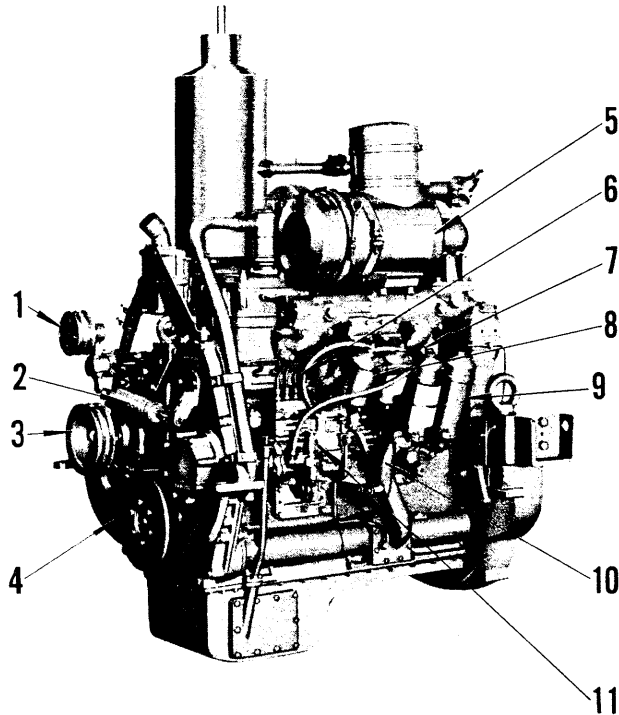

- 1. Tension pulley
- 2. Tension spring
- 3. Accessory drive pulley
- 4. Front support
- 5. Air cleaner
- 6. Fuel injection pipe
- 7. Cam shaft lubrication pipe
- 8. Fuel filter
- 9. Fullflow filter
- 10. Oil filler
- 11. Fuel injection pump


6127P001

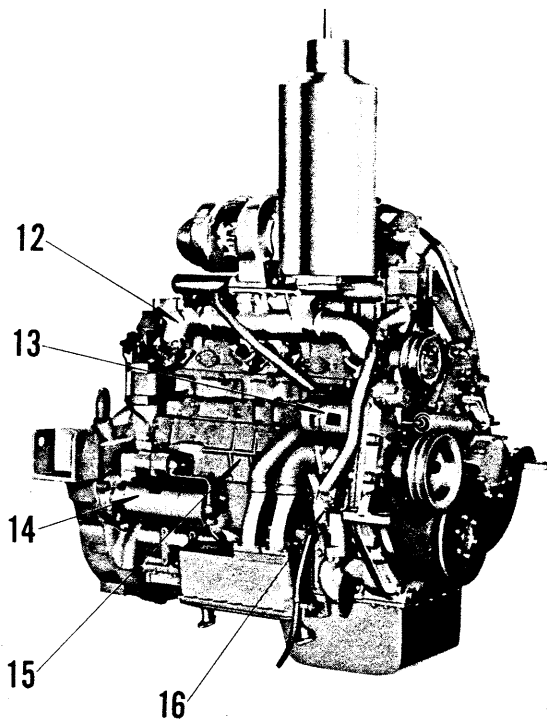

- 12. Exhaust manifold
- 13. Generator
- 14. Starting motor
- 15. Oil cooler
- 16. Water pump


6127P002

S6D155-4 (WITH STARTING MOTOR)
ENGINE SERIAL No. 10011 ~ 19999

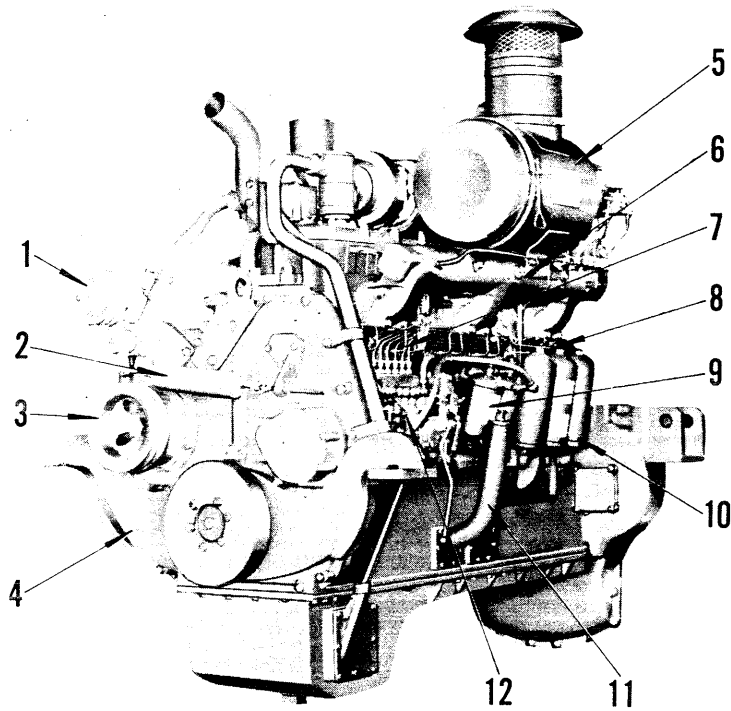

- 1. Tension pulley
- 2. Tension spring
- 3. Accessory drive pulley
- 4. Front support
- 5. Air cleaner
- 6. Thermostat
- 7. Fuel pipe
- 8. Cam lubricating pipe
- 9. Fuel filter
- 10. Fullflow filter
- 11. Oil filler
- 12. Fuel injection pump


6127P003

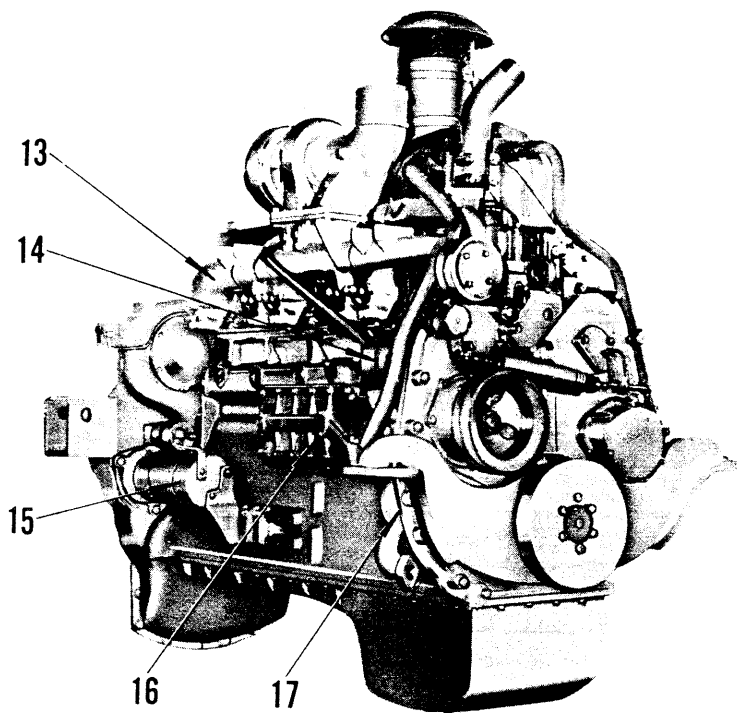

- 13. Exhaust manifold
- 14. Generator
- 15. Starting motor
- 16. Oil cooler
- 17. Water pump


6127P004

S6D155-4 (WITH 2G84 STARTING ENGINE)
ENGINE SERIAL No. 10011 ~ 19999 (OPTION)

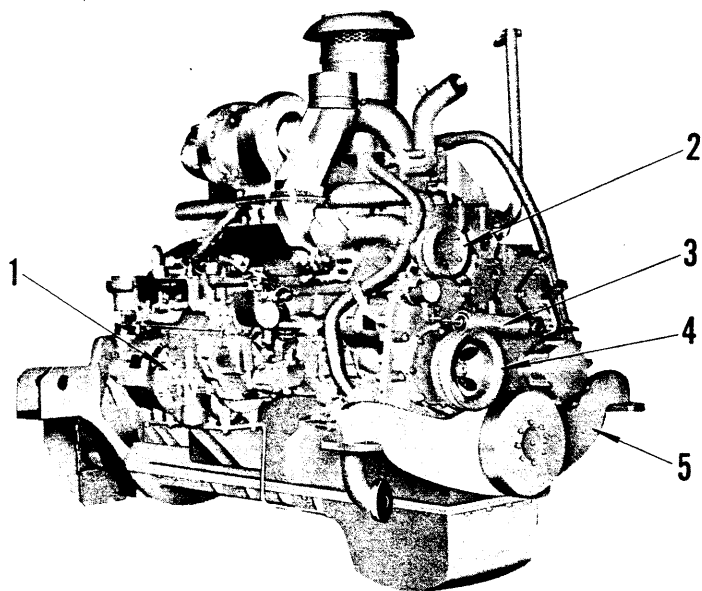

- 1. Starting engine
- 2. Tension pulley
- 3. Tension spring
- 4. Accessory drive pulley
- 5. Front support

6127P005

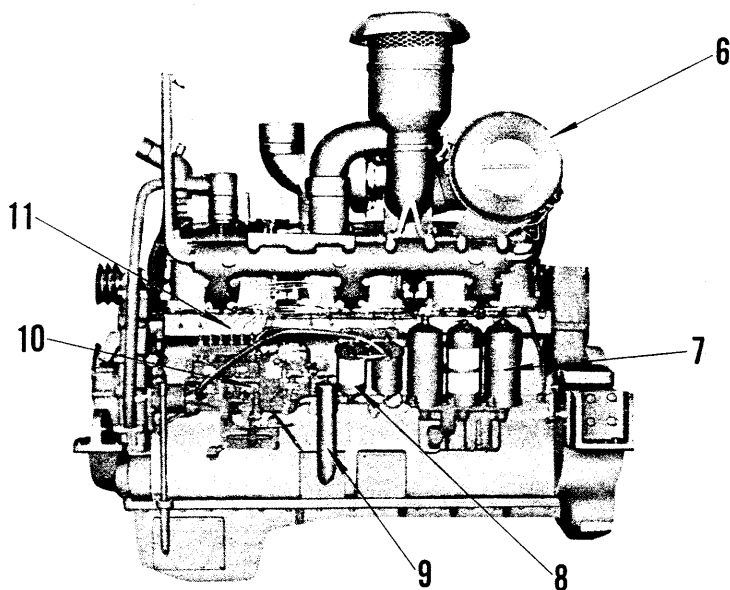

- 6. Air cleaner
- 7. Fullflow filter
- 8. Fuel filter
- 9. Oil filler
- 10. Fuel injection pump
- 11. Fuel injection pipe

6127P006