

Operation & Maintenance Manual

UEAM001603

PC290LC-7K

PC290NLC-7K

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC290LC-7K - K40001 and up

PC290NLC-7K - K40001 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

KOMATSU

FOREWORD

FOREWORD

This manual provides rules and guidelines which will help you use this machine safely and effectively. The precautions in this manual must be followed at all times while operating or performing maintenance. Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines. Accidents can be prevented by knowing beforehand conditions that may cause a hazard when performing operation and maintenance.

⚠ WARNING

Operators and maintenance personnel must always do as follows before beginning operation or maintenance.

- Always be sure to read and understand this manual thoroughly before performing operation and maintenance.
- Read the safety messages given in this manual and the safety labels affixed to the machine thoroughly and be sure that you understand them fully.

Keep this manual in the storage location for the Operation and Maintenance Manual given below, and have all personnel read it periodically.


If this manual has been lost or has become dirty and cannot be read, request a replacement manual immediately from Komatsu or your Komatsu distributor.

If you sell the machine, be sure to give this manual to the new owners together with the machine.

Komatsu delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country or purchased from someone in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies with the applicable standards and regulations of your country, consult Komatsu or your Komatsu distributor before operating the machine.

Storage location for the Operation and Maintenance Manual:

Storage box on the left side of the operator's seat.

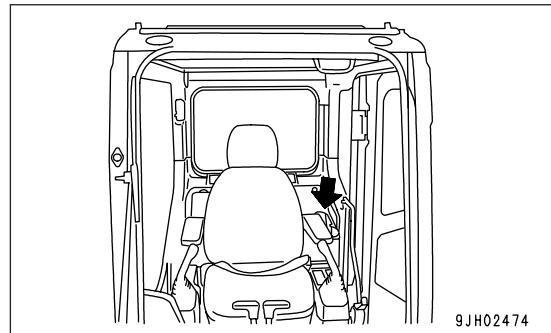

SAFETY INFORMATION

To enable you to use this machine safely, safety precautions and labels are given in this manual and affixed to the machine to give explanations of situations involving potential hazards and of the methods of avoiding such situations.

Signal words

The following signal words are used to inform you that there is a potentially hazardous situation that may lead to personal injury or damage.

In this manual and on machine labels, the following signal words are used to express the potential level of hazard.



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. This word is used also to alert against unsafe practices that may cause property damage.

Example of safety message using signal word



WARNING

**To avoid hitting unlocked operation levers, lower equipment to ground and move SAFETY LOCK LEVER (located near seat) to LOCK position before getting up from the operator's seat.
Sudden and unwanted machine movement can cause serious injury or death.**

Other signal words

In addition to the above, the following signal words are used to indicate precautions that should be followed to protect the machine or to give information that is useful to know.

NOTICE

This word is used for precautions that must be taken to avoid actions which could shorten the life of the machine.

REMARKS

This word is used for information that is useful to know.

Safety labels

Safety labels are affixed to the machine to inform the operator or maintenance worker on the spot when carrying out operation or maintenance of the machine that may involve hazard.

This machine uses "Safety labels using pictograms" to indicate safety procedures.

Safety labels using pictogram

Safety pictograms use a picture to express a level of hazardous condition equivalent to the signal word. These safety pictograms use pictures in order to let the operator or maintenance worker understand the level and type of hazardous condition at all times. Safety pictograms show the type of hazardous condition at the top or left side, and the method of avoiding the hazardous condition at the bottom or right side. In addition, the type of hazardous condition is displayed inside a triangle and the method of avoiding the hazardous condition is shown inside a circle.



Part No.

09653-A0481

Komatsu cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore, the safety messages in this manual and on the machine may not include all possible safety precautions. If any procedures or actions not specifically recommended or allowed in this manual are used, it is your responsibility to take the necessary steps to ensure safety.


In no event should you engage in prohibited uses or actions described in this manual.

The explanations, values, and illustrations in this manual were prepared based on the latest information available at that time. Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information of your machine or for questions regarding information in this manual.


The numbers in circles in the illustrations correspond to the numbers in () in the text. (For example: ① → (1))

NOISE

- Sound pressure level at the operator's station, measured according to ISO6396 (Dynamic test method, simulated working cycle).

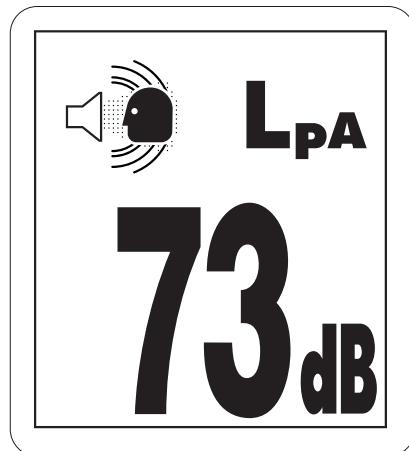

- Sound power level emitted. This is the guaranteed value as specified in the European directive 2000/14/EC

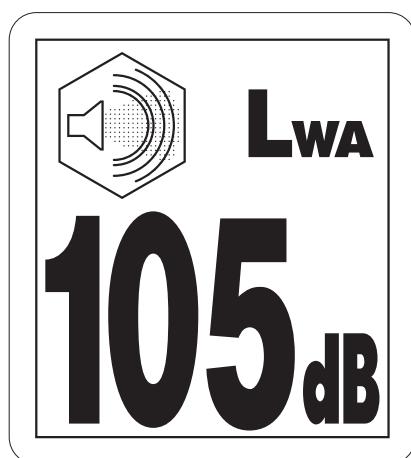

VIBRATION

The weighted root mean square acceleration value to which the operator's arms are subjected does not exceed 2.5 m/s^2

The weighted root mean square acceleration value to which the operator's body is subjected does not exceed 0.5 m/s^2

These results were obtained by accelerometers during trench digging.


INTRODUCTION

This Komatsu HYDRAULIC EXCAVATOR is designed to be used mainly for the following works:

- Digging work
- Leveling work
- Ditching work
- Loading work
- Demolition work

See the section "RECOMMENDED APPLICATIONS (PAGE 164)" for further details.

DIRECTIONS OF MACHINE

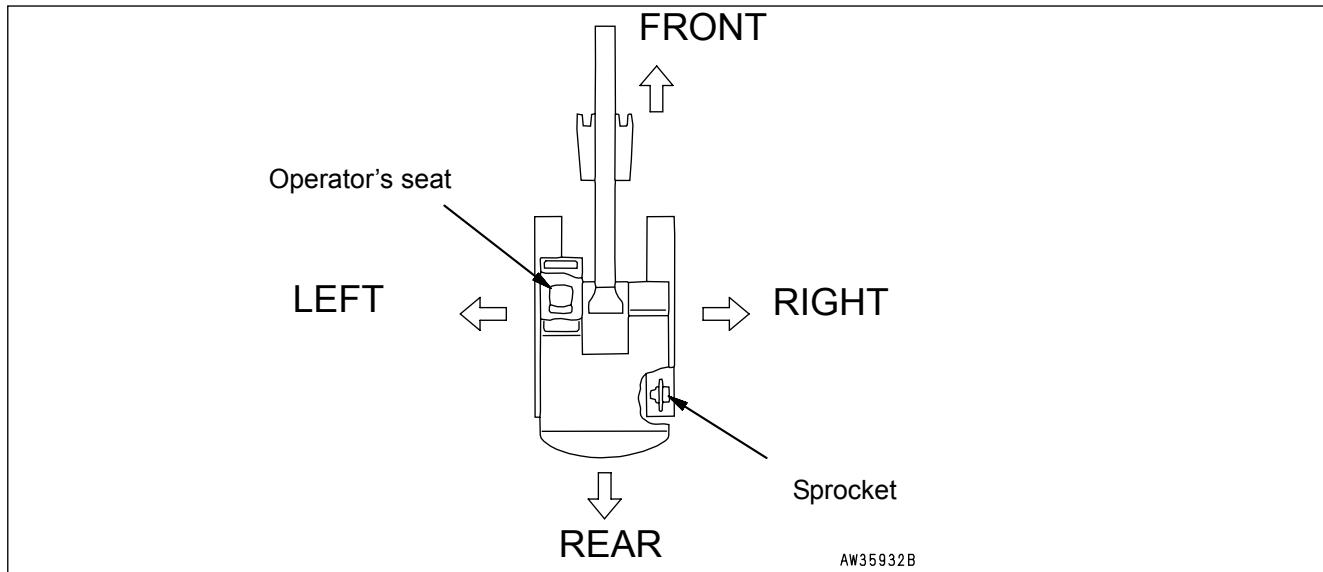


In this manual, the terms front, rear, left, and right refer to the travel direction as seen from the operator's cab when the operator's cab is facing the front and the sprocket is at the rear of the machine.

PRODUCT INFORMATION

When requesting service or ordering replacement parts, please inform your Komatsu distributor of the following items.


MACHINE SERIAL NUMBER PLATE AND ITS LOCATION

On the bottom right of the operator's cab

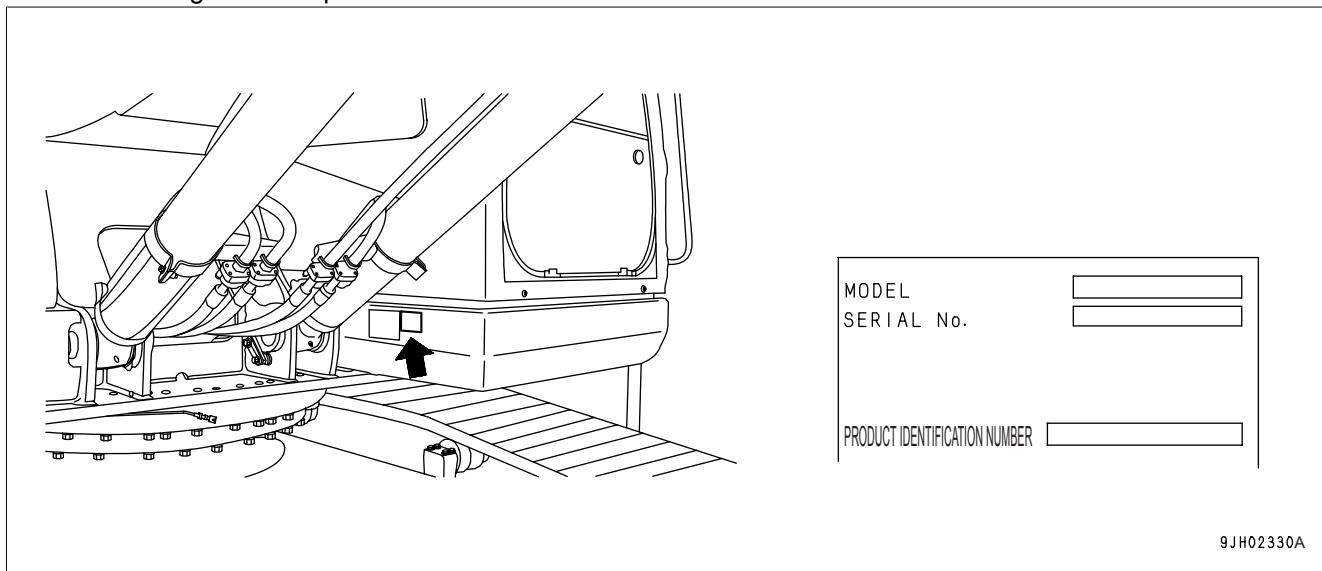

ENGINE SERIAL NUMBER PLATE AND ITS LOCATION

On the top of the No.1 cylinder head cover (The EPA auxiliary nameplate is on the top of the No. 5 cylinder head cover.)

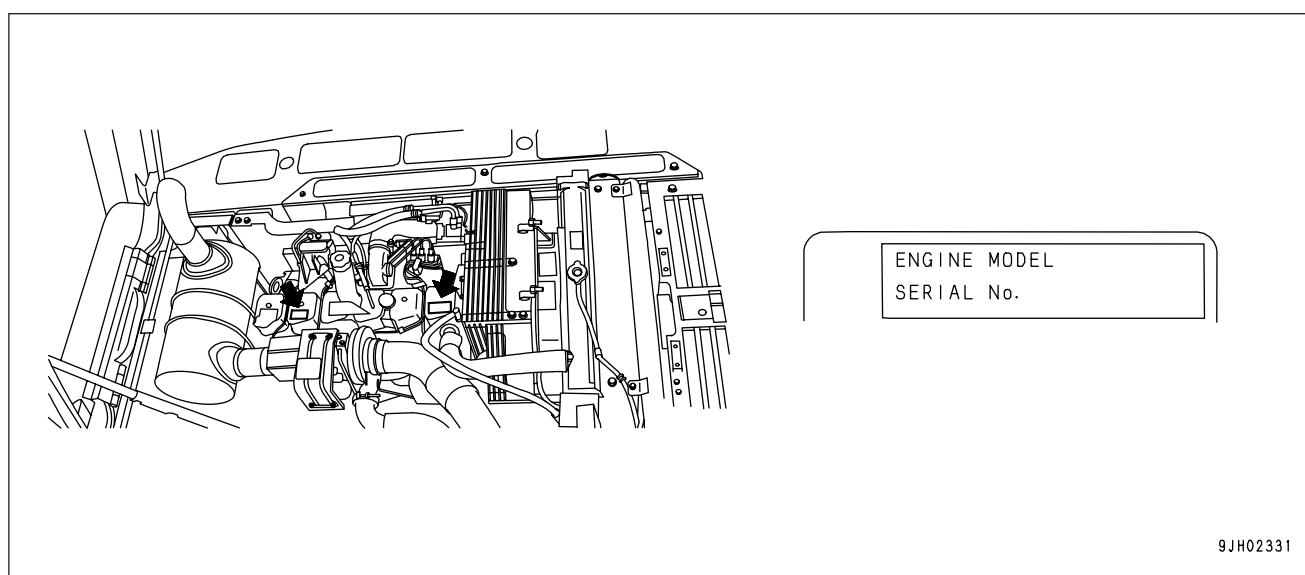

EPA: Environmental Protection Agency, U.S.A.

SERVICE METER LOCATION

On top of the machine monitor

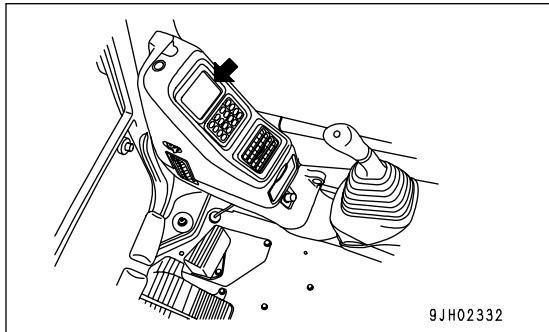


TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR

Machine serial No.

Engine serial No.

Product Identification Number


Manufacturers name: KOMATSU UK Ltd.
Address: Durham Road
Birtley
Chester-Le street
County Durham DH32QX
United Kingdom

Distributor
Address


Phone

MACHINE SERIAL PLATE

Valid until 31 December 2003

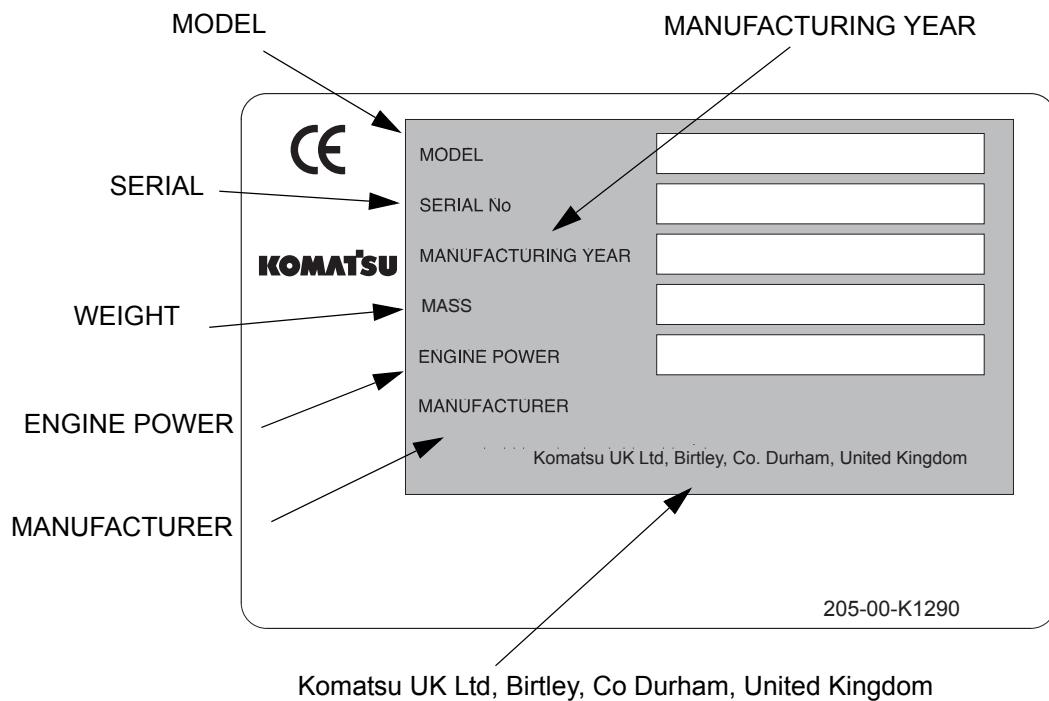

Valid as of 1 January 2004

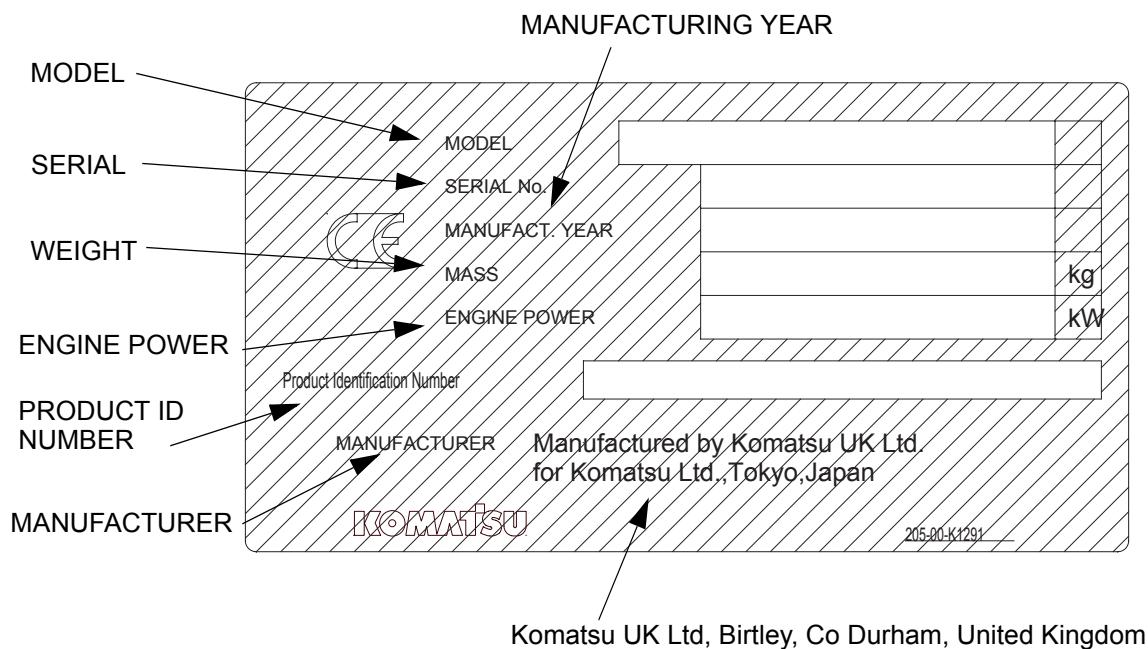

CONTENTS

FOREWORD	2
SAFETY INFORMATION.....	3
NOISE	5
VIBRATION.....	5
INTRODUCTION.....	6
DIRECTIONS OF MACHINE	6
PRODUCT INFORMATION	7
MACHINE SERIAL NUMBER PLATE AND ITS LOCATION	7
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION.....	7
SERVICE METER LOCATION	8
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR	8
.....	9
SAFETY INFORMATION.....	16
POSITION FOR ATTACHING SAFETY LABELS.....	18
POSITION FOR ATTACHING SAFETY LABELS	18
SAFETY LABELS	19
SAFETY INFORMATION.....	26
SAFETY MACHINE OPERATION.....	35
STARTING ENGINE	35
OPERATION	37
TRANSPORTATION.....	43
BATTERY	44
TOWING	46
LIFTING OBJECTS WITH BUCKET	47
SAFETY MAINTENANCE INFORMATION	48
GENERAL VIEW	58
GENERAL VIEW OF MACHINE	58
GENERAL VIEW CONTROLS AND GAUGES.....	59
EXPLANATION OF COMPONENTS.....	60
MACHINE MONITOR	60
BASIC CHECK ITEMS.....	63
CONTROL LEVERS, PEDALS	91
CEILING WINDOW.....	94
FRONT WINDOW.....	95
EMERGENCY EXIT FROM OPERATOR'S CAB.....	100
DOOR LOCK	100
CAP, COVER WITH LOCK.....	101
HOT AND COOL BOX	102

CAB RADIO	102
ASHTRAY	103
HANDLING AIR CONDITIONER	104
CAR RADIO	117
FUSE	118
FUSIBLE LINK	119
CONTROLLER (COMPUTER)	120
TOOLBOX.....	120
GREASE GUN HOLDER.....	120
REFUELING PUMP	121
HANDLING THE ACCUMULATOR	121
MACHINE OPERATIONS AND CONTROLS.....	123
BEFORE STARTING ENGINE	123
STARTING ENGINE	136
AFTER STARTING ENGINE	140
IN COLD AREAS (AUTOMATIC WARMING-UP OPERATION)	144
STOPPING THE ENGINE	148
CHECK AFTER SHUTTING OFF ENGINE	148
MACHINE OPERATION	149
STEERING THE MACHINE.....	153
SWINGING	155
WORK EQUIPMENT CONTROLS AND OPERATIONS	156
OPERATING WORKING MODE	157
PROHIBITED OPERATIONS	158
GENERAL OPERATION INFORMATION	160
TRAVELLING ON SLOPES.....	161
ESCAPE FROM MUD.....	163
RECOMMENDED APPLICATIONS.....	164
REPLACEMENT AND INVERSION OF BUCKET	166
PARKING MACHINE	169
CHECK AFTER FINISHING WORK	170
LOCKING.....	171
TRANSPORTATION.....	172
TRANSPORTATION PROCEDURE.....	172
LOADING AND UNLOADING WITH TRAILER	173
LIFTING MACHINE.....	180
COLD WEATHER OPERATION	182
COLD WEATHER OPERATION INFORMATION.....	182
AFTER DAILY WORK COMPLETION.....	184
AFTER COLD WEATHER SEASON	185
LONG TERM STORAGE.....	186
BEFORE STORAGE.....	186
DURING STORAGE	186
AFTER STORAGE.....	187

TROUBLESHOOTING	188
AFTER RUNNING OUT OF FUEL	188
PHENOMENA THAT ARE NOT FAILURES	188
TOWING THE MACHINE	189
LIGHTWEIGHT TOWING HOOK	189
PRECAUTIONS ON PARTICULAR JOBSITES	190
DISCHARGED BATTERY	191
OTHER TROUBLE	195
MAINTENANCE INFORMATION	204
LUBRICANTS, COOLANT AND FILTERS	207
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC	207
EXPLANATION OF LUBRICATION CHART DECAL	211
ELECTRIC SYSTEM MAINTENANCE	212
HANDLING HYDRAULIC SYSTEM	213
WEAR PARTS LIST	214
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE	215
PROPER SELECTION OF FUEL, COOLANT AND LUBRICANTS	215
TIGHTENING TORQUE SPECIFICATIONS	218
TIGHTENING TORQUE LIST	218
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS	219
SAFETY CRITICAL PARTS	219
MAINTENANCE SCHEDULE	220
MAINTENANCE SCHEDULE CHART	220
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER	223
MAINTENANCE PROCEDURE	224
INITIAL 250 HOURS MAINTENANCE (ONLY AFTER THE FIRST 250 HOURS)	224
WHEN REQUIRED	225
CHECK BEFORE STARTING	247
EVERY 100 HOURS MAINTENANCE	248
EVERY 250 HOURS MAINTENANCE	249
EVERY 500 HOURS MAINTENANCE	256
EVERY 1000 HOURS MAINTENANCE	264
EVERY 2000 HOURS MAINTENANCE	267
EVERY 4000 HOURS MAINTENENCE	269
EVERY 5000 HOURS MAINTENANCE	270
SPECIFICATIONS	272
WORKING RANGE 2 PIECE BOOM	274
EXPLANATION OF LIFTING CAPACITY CHART	275
EXPLANATION OF LIFTING CAPACITY CHART (PC290LC,NLC-7K 2 PIECE BOOM)	278
GENERAL PRECAUTIONS	282

PRECAUTIONS RELATED TO SAFETY	282
PRECAUTIONS WHEN INSTALLING ATTACHMENTS	284
HANDLING BUCKET WITH HOOK	285
CHECKING FOR DAMAGE TO BUCKET WITH HOOK	285
PROHIBITED OPERATIONS	285
MACHINES READY FOR ATTACHMENTS	286
EXPLANATION OF COMPONENTS	286
HYDRAULIC CIRCUIT	289
ATTACHMENT MOUNTING/DISMOUNTING PROCEDURE	292
OPERATION	294
LONG-TERM STORAGE	296
SPECIFICATIONS	296
ATTACHMENT GUIDE	297
COMBINATIONS OF WORK EQUIPMENT	297
SELECTION OF TRACK SHOES	299
SELECTION OF BUCKET TEETH	300
STANDARDS FOR SELECTING VERTICAL PIN TYPE AND HORIZONTAL PIN TYPE TEETH	300
HANDLING OF RUBBER PAD SHOE AND ROAD LINER	301
HANDLING TRAPEZOIDAL BUCKET	303
HANDLING EXTENSION ARM	304
HANDLING CLAMSHELL BUCKET	305
RECOMMENDED ATTACHMENT OPERATIONS	306
HYDRAULIC BREAKER	306
2-PC BOOM	311
FEATURES OF 2-PIECE BOOM & ARM	311
OPERATION	312
TRANSPORTATION	315

SAFETY

WARNING

Please read and make sure that you fully understand precautions described in this manual and the safety labels on the machine. When operating or servicing the machine, always follow these precautions strictly.

SAFETY INFORMATION

SAFETY INFORMATION	16
POSITION FOR ATTACHING SAFETY LABELS	18
POSITION FOR ATTACHING SAFETY LABELS	18
SAFETY LABELS.....	19
SAFETY INFORMATION	26
SAFETY RULES	26
IF ABNORMALITIES ARE FOUND	26
WORKING WEAR AND PERSONAL PROTECTIVE ITEMS	26
FIRE EXTINGUISHER AND FIRST AID KIT	26
SAFETY EQUIPMENT.....	27
KEEP MACHINE CLEAN	27
KEEP OPERATOR'S COMPARTMENT CLEAN	27
LEAVING OPERATOR'S SEAT WITH LOCK.....	27
HANDRAILS AND STEPS	28
MOUNTING AND DISMOUNTING	29
NO PERSONS ON ATTACHMENTS.....	29
BURN PREVENTION	29
FIRE PREVENTION AND EXPLOSION PREVENTION.....	30
ACTION IF FIRE OCCURS	31
WINDSHIELD WASHER FLUID	31
FALLING OBJECTS, FLYING OBJECTS AND INTRUDING OBJECTS PREVENTION.....	31
ATTACHMENT INSTALLATION.....	31
ATTACHMENT COMBINATIONS.....	32
CAB WIDOW GLASSES.....	32
UNAUTHORIZED MODIFICATIONS	32
SAFETY AT JOBSITE	32
WORKING ON LOOSE GROUND.....	32
DISTANCE TO HIGH VOLTAGE CABLES.....	33
ENSURE GOOD VISIBILITY	33
VENTILATION FOR ENCLOSED AREA	34
SIGNALMAN'S SIGNAL AND SIGNS	34
EMERGENCY EXIT FROM OPERATOR'S CAB.....	34
ASBESTOS DUST HAZARD PREVENTION.....	34
SAFETY MACHINE OPERATION	35
STARTING ENGINE	35
CHECKS BEFORE STARTING ENGINE	35
SAFETY RULES FOR STARTING ENGINE	36
STARTING ENGINE IN COLD WEATHER	36
OPERATION	37
CHECKS AFTER STARTING ENGINE	37
SAFETY RULES FOR CHANGING MACHINE DIRECTIONS	37
SAFETY RULES FOR TRAVELLING	38
TRAVELLING ON SLOPES.....	39
OPERATIONS ON SLOPES.....	39
PROHIBITED OPERATIONS	40
OPERATIONS ON SNOW.....	41
PARKING MACHINE	42
TRANSPORTATION	43
SHIPPING THE MACHINE	43

BATTERY	44
BATTERY HAZARD PREVENTION	44
STARTING ENGINE WITH BOOSTER CABLES.....	45
TOWING	46
SAFETY RULES FOR TOWING.....	46
LIFTING OBJECTS WITH BUCKET	47
SAFETY RULES FOR LIFTING OBJECTS	47
SAFETY MAINTENANCE INFORMATION.....	48
WARNING TAG	48
KEEP WORK PLACE CLEAN AND TIDY.....	48
APPOINT LEADER WHEN WORKING WITH OTHERS	48
STOP ENGINE BEFORE CARRYING OUT MAINTENANCE.....	49
TWO WORKERS FOR MAINTENANCE WHEN ENGINE IS RUNNING	50
PROPER TOOLS.....	50
ACCUMULATOR	51
PERSONNEL	51
ATTACHMENTS	51
WORK UNDER THE MACHINE	51
NOISE.....	52
WHEN USING HAMMER.....	52
WELDING WORKS.....	52
REMOVING BATTERY TERMINALS	52
SAFETY FIRST WHEN USING HIGH-PRESSURE GREASE TO ADJUST TRACK TENSION	53
DO NOT DISASSEMBLE RECOIL SPRINGS	53
SAFETY RULES FOR HIGH-PRESSURE OIL.....	53
SAFETY HANDLING HIGH-PRESSURE HOSES	54
WASTE MATERIALS	54
AIR CONDITIONER MAINTENANCE.....	54
COMPRESSED AIR	54
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS	55

POSITION FOR ATTACHING SAFETY LABELS

The following warning signs and safety labels are used on this machine.

Be sure that you fully understand the correct position and content of labels.

To ensure that the content of labels can be read properly. Be sure that they are in the correct place and always keep them clean. When cleaning them, do not use organic solvents or gasoline, there may cause the labels to peel off.

There are also other labels in addition to the warning signs and safety labels. Handle those labels in the same way.

If the labels are damaged, lost, or cannot be read properly, replace them with new ones. For details of the part numbers for the labels, see this manual or the actual label, and place an order with Komatsu distributor.

POSITION FOR ATTACHING SAFETY LABELS

