

Shop Manual

PC490LC-11

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC490LC-11 A41001 and up

ENGINE 6D125E-7

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2014 Komatsu
Printed in U.S.A.
Komatsu America Corp.

September 2014

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-19
HOW TO READ THE SHOP MANUAL	00-19
SAFETY NOTICE FOR OPERATION	00-21
ACTION IF FIRE OCCURS	00-27
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-28
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-29
PRECAUTIONS FOR AdBlue/DEF	00-30
STORE AdBlue/DEF	00-31
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-32
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-34
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-40
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-43
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-44
PRACTICAL USE OF KOMTRAX	00-45
METHOD FOR DISCONNECTING AND CONNECTING PUSH-PULL TYPE COUPLER	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-49
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-53
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-54
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-56
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-59
HOW TO READ ELECTRICAL WIRE CODE	00-60
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-64
LIST OF ABBREVIATION	00-67
STANDARD TIGHTENING TORQUE TABLE	00-72
CONVERSION TABLE	00-79
01 SPECIFICATION	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-9
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-11
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-5
LAYOUT DRAWING OF UREA SCR SYSTEM	10-5
UREA SCR SYSTEM DIAGRAM	10-9
FUNCTION OF UREA SCR SYSTEM	10-10
COMPONENT PARTS OF UREA SCR SYSTEM	10-25
BOOT-UP SYSTEM	10-34
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-34
SYSTEM OPERATING LAMP SYSTEM	10-36
BATTERY DISCONNECT SWITCH	10-37
ENGINE SYSTEM	10-38
LAYOUT DRAWING OF ENGINE RELATED PARTS	10-38
ENGINE CONTROL SYSTEM	10-41
AUTO-DECELERATION SYSTEM	10-44
ENGINE AUTOMATIC WARM-UP SYSTEM	10-46
OVERHEAT PREVENTION SYSTEM	10-48
TURBOCHARGER PROTECTION SYSTEM	10-51
AUTOMATIC IDLE STOP SYSTEM	10-53
COMPONENT PARTS OF ENGINE SYSTEM	10-56

COOLING SYSTEM.....	10-71
LAYOUT DRAWING OF COOLING SYSTEM	10-71
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-74
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-76
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-79
COMPONENT PARTS OF COOLING SYSTEM.....	10-80
CONTROL SYSTEM.....	10-94
LAYOUT DRAWING OF ELECTRICAL CONTROL SYSTEM	10-94
MACHINE MONITOR SYSTEM	10-97
KOMTRAX SYSTEM.....	10-98
COMPONENT PARTS OF CONTROL SYSTEM.....	10-99
HYDRAULIC SYSTEM.....	10-129
LAYOUT DRAWING OF HYDRAULIC COMPONENT.....	10-129
CLSS	10-131
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-150
PUMP AND VALVE CONTROL SYSTEM	10-157
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-160
WORK EQUIPMENT SYSTEM	10-247
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-247
STRUCTURE OF VALVE CONTROL.....	10-252
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-253
MACHINE PUSH-UP SYSTEM.....	10-255
PPC LOCK SYSTEM	10-257
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-258
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-260
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-262
SWING CONTROL SYSTEM.....	10-278
LAYOUT DRAWING OF SWING SYSTEM	10-278
SWING CONTROL SYSTEM DIAGRAM	10-284
COMPONENT PARTS OF SWING SYSTEM.....	10-288
TRAVEL SYSTEM.....	10-303
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-303
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-307
COMPONENT PARTS OF TRAVEL SYSTEM	10-309
UNDERCARRIAGE AND FRAME.....	10-330
LAYOUT DRAWING OF UNDERCARRIAGE	10-330
WORK EQUIPMENT.....	10-331
STRUCTURE OF WORK EQUIPMENT	10-331
FUNCTION OF WORK EQUIPMENT	10-332
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-333
BUCKET CLEARANCE ADJUSTMENT SHIM	10-334
CAB AND ITS ATTACHMENTS	10-335
ROPS CAB	10-335
CAB MOUNT	10-336
CAB TIPPING STOPPER	10-337
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC490LC-11	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-6
STANDARD VALUE TABLE FOR MACHINE: PC490LC-11	20-6
STANDARD VALUE TABLE FOR ELECTRICAL	20-26
STANDARD VALUE TABLE FOR ELECTRICAL	20-26
30 TESTING AND ADJUSTING.....	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-11

ENGINE AND COOLING SYSTEM.....	30-12
TEST ENGINE SPEED	30-12
TEST BOOST PRESSURE	30-14
TEST EXHAUST GAS COLOR.....	30-16
TEST AND ADJUST VALVE CLEARANCE	30-18
TEST COMPRESSION PRESSURE.....	30-21
TEST BLOWBY PRESSURE	30-24
TEST ENGINE OIL PRESSURE.....	30-26
TEST EGR VALVE AND KVGT OIL PRESSURE	30-28
TEST FUEL PRESSURE	30-30
TEST FUEL RETURN RATE AND LEAKAGE	30-32
BLEED AIR FROM FUEL SYSTEM	30-35
TEST FUEL CIRCUIT FOR LEAKAGE	30-37
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-39
HANDLE NO-INJECTION CRANKING OPERATION	30-40
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION	30-41
CLEAN FUEL DOSER	30-43
WRITE INJECTOR COMPENSATION VALUE TO ENGINE CONTROLLER.....	30-45
WRITE ASH IN SOOT ACCUMULATION CORRECTION TO ENGINE CONTROLLER	30-51
TEST SCR RELATED FUNCTIONS.....	30-52
CLEAN AdBlue/DEF TANK	30-74
POWER TRAIN.....	30-78
TEST SWING CIRCLE BEARING CLEARANCE	30-78
UNDERCARRIAGE AND FRAME.....	30-79
TEST AND ADJUST TRACK TENSION.....	30-79
HYDRAULIC SYSTEM.....	30-81
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM.....	30-81
TEST AND ADJUST OIL PRESSURE IN WORK EQUIPMENT, SWING, AND TRAVEL CIRCUITS.....	30-82
TEST OIL PRESSURE OF CONTROL CIRCUIT	30-93
TEST AND ADJUST OIL PRESSURE IN PUMP PC CONTROL CIRCUIT	30-95
TEST AND ADJUST OIL PRESSURE IN PUMP LS CONTROL CIRCUIT.....	30-98
TEST OUTLET PRESSURE OF SOLENOID VALVE	30-103
TEST PPC VALVE OUTLET PRESSURE	30-106
ADJUST WORK EQUIPMENT AND SWING PPC VALVES	30-108
TEST PUMP SWASH PLATE SENSOR.....	30-109
TEST COOLING FAN SPEED	30-110
TEST OIL PRESSURE IN FAN PUMP CIRCUIT.....	30-111
TEST FAN PUMP EPC ELECTRIC CURRENT.....	30-113
TEST FAN PUMP EPC SOLENOID VALVE OUTLET PRESSURE	30-114
TEST THE PARTS CAUSING HYDRAULIC DRIFT IN WORK EQUIPMENT	30-115
TEST OIL LEAKAGE	30-117
BLEED AIR FROM HYDRAULIC CIRCUIT	30-120
CAB AND ITS ATTACHMENTS	30-124
TEST CAB TIPPING STOPPER	30-124
METHOD FOR ADJUSTING MIRRORS	30-125
ELECTRICAL SYSTEM	30-130
SETTING AND OPERATION OF MACHINE MONITOR.....	30-130
METHOD FOR STARTING UP KOMTRAX.....	30-208
ADJUST REARVIEW CAMERA ANGLE	30-213
HANDLING VOLTAGE CIRCUIT OF ENGINE CONTROLLER	30-216
HANDLE BATTERY DISCONNECT SWITCH	30-217
TEST DIODES	30-218
Pm CLINIC.....	30-219
Pm CLINIC SERVICE	30-219
40 TROUBLESHOOTING	40-1
CONTENTS	40-2
RELATED INFORMATION ON TROUBLESHOOTING	40-13

GENERAL TROUBLESHOOTING POINTS	40-13
TROUBLESHOOTING POINTS FOR UREA SCR SYSTEM	40-14
SEQUENCE OF EVENTS IN TROUBLESHOOTING	40-27
CHECKS BEFORE TROUBLESHOOTING	40-29
CHECKS BEFORE TROUBLESHOOTING	40-31
TESTING IN ACCORDANCE WITH TESTING PROCEDURE	40-33
ELECTRICAL SYSTEM TROUBLESHOOTING - PREPARATION	40-54
PROCEDURE FOR TESTING AND TROUBLESHOOTING	40-64
SYMPTOMS OF FAILURE AND TROUBLESHOOTING NUMBERS	40-67
INFORMATION IN TROUBLESHOOTING TABLE	40-71
CONNECTOR LIST AND LAYOUT	40-73
CONNECTOR PIN NUMBERS - CONNECTION TABLE	40-86
T-BOXES AND T-ADAPTERS LIST	40-125
FUSE LOCATION TABLE	40-131
PRECAUTIONS FOR KDPF (KCSF, KDOC) CLEANING AND CHANGE	40-133
PREPARATION OF SHORT CIRCUIT ELECTRICAL CONNECTOR (FOR FAILURE CODES [CA1883] AND [CA3135])	40-137
FAILURE CODES TABLE	40-139
TROUBLESHOOTING BY FAILURE CODE (DISPLAY OF CODE)	40-157
FAILURE CODE [879AKA] A/C Recirculation Air Temperature Sensor Open Circuit	40-157
FAILURE CODE [879AKB] A/C Recirculation Air Temperature Sensor Short Circuit	40-158
FAILURE CODE [879BKA] A/C Fresh Air Temperature Sensor Open Circuit	40-159
FAILURE CODE [879BKB] A/C Fresh Air Temperature Sensor Short Circuit	40-161
FAILURE CODE [879CKA] Ventilating Sensor Open Circuit	40-163
FAILURE CODE [879CKB] Ventilating Sensor Short Circuit	40-164
FAILURE CODE [879DKZ] Sunlight Sensor Open Circuit or Short Circuit	40-165
FAILURE CODE [879EMC] Ventilation Damper Malfunction	40-167
FAILURE CODE [879FMC] Air Mix Damper Malfunction	40-168
FAILURE CODE [879GKX] Refrigerant Pressure Input Signal Out of Range	40-169
FAILURE CODE [989L00] Engine Controller Lock Caution 1	40-171
FAILURE CODE [989M00] Engine Controller Lock Caution 2	40-172
FAILURE CODE [989N00] Engine Controller Lock Caution 3	40-173
FAILURE CODE [A1U0N3] HC Desorb Request 1	40-174
FAILURE CODE [A1U0N4] HC Desorb Request 2	40-176
FAILURE CODE [A900FR] Abrupt Engine Stop by Auto Idling Stop 3	40-178
FAILURE CODE [A900N6] Abrupt Engine Stop by Auto Idling Stop 1	40-179
FAILURE CODE [A900NY] Abrupt Engine Stop by Auto Idling Stop 2	40-180
FAILURE CODE [AA10NX] Air Cleaner Clogging	40-181
FAILURE CODE [AB00KE] Charge Voltage Low	40-183
FAILURE CODE [AQ10N3] Manual Stationary Regeneration Request (KDOC Face Plugging)	40-186
FAILURE CODE [AS00N3] Manual Stationary Regeneration Request (SCR)	40-188
FAILURE CODE [AS00R2] Warning 2 (SCR Device Abnormality)	40-190
FAILURE CODE [AS00R3] Inducement 1 (SCR Device Abnormality)	40-191
FAILURE CODE [AS00R4] Inducement 2 (SCR Device Abnormality)	40-192
FAILURE CODE [AS00R5] Inducement 3 (SCR Device Abnormality)	40-193
FAILURE CODE [AS00R6] Temporary Recovery of Inducement	40-194
FAILURE CODE [AS00ZK] AdBlue/DEF Level Low Error 5	40-195
FAILURE CODE [AS10KM] AdBlue/DEF Injector Overheat Warning	40-196
FAILURE CODE [AS10NR] AdBlue/DEF Injector High Temperature Warning	40-197
FAILURE CODE [AS10NT] AdBlue/DEF Injector Overheat Caution	40-198
FAILURE CODE [B@BAZG] Eng Oil Press Low	40-199
FAILURE CODE [B@BAZK] Eng Oil Level Low	40-200
FAILURE CODE [B@BCNS] Eng Water Overheat	40-202
FAILURE CODE [B@BCZK] Eng Water Level Low	40-203
FAILURE CODE [B@HANS] Hyd Oil Overheat	40-205
FAILURE CODE [CA115] Engine NE and Backup Speed Sensor Error	40-206
FAILURE CODE [CA122] Charge Air Pressure Sensor High Error	40-207
FAILURE CODE [CA123] Charge Air Pressure Sensor Low Error	40-209

FAILURE CODE [CA131] Throttle Sensor High Error	40-211
FAILURE CODE [CA132] Throttle Sensor Low Error.....	40-213
FAILURE CODE [CA135] Engine Oil Pressure Sensor High Error	40-215
FAILURE CODE [CA141] Engine Oil Pressure Sensor Low Error	40-217
FAILURE CODE [CA144] Coolant Temperature Sensor High Error	40-219
FAILURE CODE [CA145] Coolant Temperature Sensor Low Error.....	40-221
FAILURE CODE [CA153] Charge Air Temperature Sensor High Error	40-223
FAILURE CODE [CA154] Charge Air Temperature Sensor Low Error	40-226
FAILURE CODE [CA187] Sensor 2 Supply Voltage Low Error	40-229
FAILURE CODE [CA221] Ambient Pressure Sensor High Error.....	40-231
FAILURE CODE [CA222] Ambient Pressure Sensor Low Error	40-233
FAILURE CODE [CA227] Sensor 2 Supply Voltage High Error	40-235
FAILURE CODE [CA234] Engine Overspeed.....	40-236
FAILURE CODE [CA238] NE Speed Sensor Supply Voltage Error	40-237
FAILURE CODE [CA239] NE Speed Sensor Supply Voltage High Error	40-239
FAILURE CODE [CA249] Ambient Air Temp Sensor High Error.....	40-241
FAILURE CODE [CA256] Ambient Air Temp Sensor Low Error.....	40-243
FAILURE CODE [CA271] IMV/PCV 1 Short Circuit Error	40-245
FAILURE CODE [CA272] IMV/PCV 1 Open Circuit Error	40-247
FAILURE CODE [CA273] PCV 2 Short Circuit Error.....	40-248
FAILURE CODE [CA274] PCV 2 Open Circuit Error	40-250
FAILURE CODE [CA322] Injector #1 (L#1) Open Circuit Error or Short Circuit Error	40-251
FAILURE CODE [CA323] Injector #5 (L#5) Open Circuit Error or Short Circuit Error	40-253
FAILURE CODE [CA324] Injector #3 (L#3) Open Circuit Error or Short Circuit Error	40-255
FAILURE CODE [CA325] Injector #6 (L#6) Open Circuit Error or Short Circuit Error	40-257
FAILURE CODE [CA331] Injector #2 (L#2) Open Circuit Error or Short Circuit Error	40-259
FAILURE CODE [CA332] Injector #4 (L#4) Open Circuit Error or Short Circuit Error	40-261
FAILURE CODE [CA343] Engine Controller Internal Failure	40-263
FAILURE CODE [CA351] Injectors Drive Circuit Error.....	40-264
FAILURE CODE [CA352] Sensor 1 Supply Voltage Low Error	40-265
FAILURE CODE [CA356] MAF Sensor High Error	40-268
FAILURE CODE [CA357] MAF Sensor Low Error	40-270
FAILURE CODE [CA386] Sensor 1 Supply Voltage High Error	40-272
FAILURE CODE [CA441] Battery Voltage Low Error.....	40-273
FAILURE CODE [CA442] Battery Voltage High Error	40-275
FAILURE CODE [CA449] Common Rail Pressure High Error 2	40-276
FAILURE CODE [CA451] Common Rail Pressure Sensor High Error	40-277
FAILURE CODE [CA452] Common Rail Pressure Sensor Low Error	40-279
FAILURE CODE [CA515] Common Rail Pressure Sensor Supply Voltage High Error.....	40-281
FAILURE CODE [CA516] Common Rail Pressure Sensor Supply Voltage Low Error.....	40-283
FAILURE CODE [CA553] Common Rail Pressure High Error 1	40-285
FAILURE CODE [CA555] Crankcase Pressure High Error 1	40-286
FAILURE CODE [CA556] Crankcase Pressure High Error 2.....	40-287
FAILURE CODE [CA559] Common Rail Pressure Low Error 1	40-288
FAILURE CODE [CA595] Turbocharger Speed High Error 2.....	40-293
FAILURE CODE [CA687] Turbocharger Speed Low Error	40-294
FAILURE CODE [CA689] Engine NE Speed Sensor Error.....	40-296
FAILURE CODE [CA691] Intake Air Temperature Sensor High Error	40-298
FAILURE CODE [CA692] Intake Air Temperature Sensor Low Error.....	40-300
FAILURE CODE [CA697] Engine Controller Internal Temperature Sensor High Error.....	40-302
FAILURE CODE [CA698] Engine Controller Internal Temperature Sensor Low Error.....	40-303
FAILURE CODE [CA731] Engine Backup Speed Sensor Phase Error	40-304
FAILURE CODE [CA778] Engine Backup Speed Sensor Error	40-305
FAILURE CODE [CA1117] Engine Controller Partial Data Lost Error	40-308
FAILURE CODE [CA1664] KDOC Abnormality	40-309
FAILURE CODE [CA1669] AdBlue/DEF Level Sensor Voltage High Error	40-312
FAILURE CODE [CA1673] AdBlue/DEF Level Low Error 3.....	40-313
FAILURE CODE [CA1677] AdBlue/DEF Temperature Sensor Low Error	40-314

FAILURE CODE [CA1678] AdBlue/DEF Temperature Sensor High Error	40-315
FAILURE CODE [CA1682] AdBlue/DEF Pump Priming Error.....	40-316
FAILURE CODE [CA1683] AdBlue/DEF Tank Heating Valve Voltage High Error.....	40-318
FAILURE CODE [CA1684] AdBlue/DEF Tank Heating Valve Voltage Low Error	40-320
FAILURE CODE [CA1686] AdBlue/DEF Quality Sensor Voltage High Error.....	40-322
FAILURE CODE [CA1691] Defective Regeneration	40-323
FAILURE CODE [CA1694] SCR Outlet NOx Sensor In Range Error.....	40-326
FAILURE CODE [CA1695] Sensor 5 Supply Voltage High Error	40-329
FAILURE CODE [CA1696] Sensor 5 Supply Voltage Low Error	40-330
FAILURE CODE [CA1712] AdBlue/DEF Tank Thawing Error	40-332
FAILURE CODE [CA1713] AdBlue/DEF Tank Heater Valve Open Stuck Error.....	40-335
FAILURE CODE [CA1714] AdBlue/DEF Quality Sensor Out of Calibration Error	40-337
FAILURE CODE [CA1715] AdBlue/DEF Quality Sensor Internal Circuit Error.....	40-338
FAILURE CODE [CA1776] Sensor Supply Relay Voltage High Error	40-339
FAILURE CODE [CA1777] Sensor Supply Relay Voltage Low Error.....	40-342
FAILURE CODE [CA1843] Crankcase Pressure Sensor High Error.....	40-345
FAILURE CODE [CA1844] Crankcase Pressure Sensor Low Error.....	40-347
FAILURE CODE [CA1879] KDPF Differential Pressure Sensor High Error	40-350
FAILURE CODE [CA1881] KDPF Differential Pressure Sensor Low Error	40-353
FAILURE CODE [CA1883] KDPF Differential Pressure Sensor In Range Error	40-355
FAILURE CODE [CA1885] Turbo Outlet NOx Sensor Circuit Error	40-358
FAILURE CODE [CA1887] SCR Outlet NOx Sensor Circuit Error	40-360
FAILURE CODE [CA1921] KDPF Soot Accumulation High Error 1	40-362
FAILURE CODE [CA1922] KDPF Soot Accumulation High Error 2	40-365
FAILURE CODE [CA1923] Fuel Doser Solenoid 1 High Error.....	40-370
FAILURE CODE [CA1924] Fuel Doser Solenoid 1 Low Error.....	40-372
FAILURE CODE [CA1925] Fuel Doser Solenoid 1 In Range Error.....	40-374
FAILURE CODE [CA1927] Dosing Fuel Pressure Sensor High Error.....	40-376
FAILURE CODE [CA1928] Dosing Fuel Pressure Sensor Low Error.....	40-378
FAILURE CODE [CA1942] Crankcase Pressure Sensor In Range Error.....	40-380
FAILURE CODE [CA1963] Fuel Doser Solenoid 1 Servo Error	40-381
FAILURE CODE [CA1977] Fuel Doser Open Error or Short Error.....	40-384
FAILURE CODE [CA1993] KDPF Differential Pressure Low Error	40-387
FAILURE CODE [CA2185] Throttle Sensor Supply Voltage High Error	40-390
FAILURE CODE [CA2186] Throttle Sensor Supply Voltage Low Error.....	40-392
FAILURE CODE [CA2249] Common Rail Pressure Low Error 2	40-394
FAILURE CODE [CA2265] Fuel Feed Pump Open Error	40-395
FAILURE CODE [CA2266] Fuel Feed Pump Short Error.....	40-397
FAILURE CODE [CA2271] EGR Valve Position Sensor High Error.....	40-399
FAILURE CODE [CA2272] EGR Valve Position Sensor Low Error.....	40-401
FAILURE CODE [CA2349] EGR Valve Solenoid Open Circuit Error.....	40-403
FAILURE CODE [CA2353] EGR Valve Solenoid Short Circuit Error.....	40-405
FAILURE CODE [CA2357] EGR Valve Servo Error.....	40-407
FAILURE CODE [CA2381] KVGT Position Sensor High Error.....	40-408
FAILURE CODE [CA2382] KVGT Position Sensor Low Error	40-410
FAILURE CODE [CA2383] KVGT Solenoid Open Circuit Error	40-412
FAILURE CODE [CA2386] KVGT Solenoid Short Circuit Error	40-414
FAILURE CODE [CA2387] KVGT Servo Error	40-416
FAILURE CODE [CA2555] Intake Air Heater Relay Open Circuit Error.....	40-417
FAILURE CODE [CA2556] Intake Air Heater Relay Short Circuit Error	40-420
FAILURE CODE [CA2637] KDOC Face Plugging	40-422
FAILURE CODE [CA2639] Manual Stationary Regeneration Request	40-424
FAILURE CODE [CA2732] Fuel Doser Solenoid 2 High Error.....	40-427
FAILURE CODE [CA2733] Fuel Doser Solenoid 2 Low Error.....	40-429
FAILURE CODE [CA2741] Fuel Dozer Solenoid Valve Swap Error.....	40-431
FAILURE CODE [CA2765] Injector Trim Data Mismatch.....	40-432
FAILURE CODE [CA2771] SCR Outlet NOx Sensor Datalink Timeout Error.....	40-433

FAILURE CODE [CA2777] Manual Stationary Regeneration Request but KDPF Regeneration Disable ..	40-439
FAILURE CODE [CA2878] Fuel Doser Solenoid 2 Servo Error	40-442
FAILURE CODE [CA2881] Dosing Fuel Pressure Low Error 1.....	40-445
FAILURE CODE [CA2976] AdBlue/DEF Pump Temperature Sensor Signal Error.....	40-448
FAILURE CODE [CA3133] KDPF Outlet Pressure Sensor High Error.....	40-450
FAILURE CODE [CA3134] KDPF Outlet Pressure Sensor Low Error.....	40-452
FAILURE CODE [CA3135] KDPF Outlet Pressure Sensor In Range Error.....	40-454
FAILURE CODE [CA3142] SCR Temperature Sensor High Error.....	40-457
FAILURE CODE [CA3143] SCR Temperature Sensor Low Error	40-458
FAILURE CODE [CA3144] SCR Temperature Sensor In Range Error	40-459
FAILURE CODE [CA3146] SCR Outlet Temperature Sensor High Error	40-461
FAILURE CODE [CA3147] SCR Outlet Temperature Sensor Low Error.....	40-462
FAILURE CODE [CA3148] SCR Outlet Temperature Sensor In Range Error	40-463
FAILURE CODE [CA3151] SCR Catalyst Efficiency Low Error 2.....	40-465
FAILURE CODE [CA3165] SCR Outlet Temperature High Error	40-471
FAILURE CODE [CA3167] Fuel Doser Degradation.....	40-473
FAILURE CODE [CA3229] SCR Temperature High Error.....	40-476
FAILURE CODE [CA3231] SCR Temperature High Error - Non Regeneration	40-478
FAILURE CODE [CA3232] Turbo Outlet NOx Sensor Datalink Timeout Error	40-480
FAILURE CODE [CA3235] SCR Outlet Temperature High Error - Non Regeneration.....	40-484
FAILURE CODE [CA3239] AdBlue/DEF Line Heater 2 Voltage High Error.....	40-486
FAILURE CODE [CA3241] AdBlue/DEF Line Heater 2 Voltage Low Error	40-489
FAILURE CODE [CA3242] AdBlue/DEF Tank Heating Error	40-492
FAILURE CODE [CA3251] KDOC Inlet Temperature High Error	40-495
FAILURE CODE [CA3253] KDOC Temperature Error - Non Regeneration	40-497
FAILURE CODE [CA3254] KDOC Outlet Temperature High Error 1.....	40-500
FAILURE CODE [CA3255] KDPF Temperature Error - Non Regeneration	40-503
FAILURE CODE [CA3256] KDPF Outlet Temperature High Error 1	40-506
FAILURE CODE [CA3311] KDOC Outlet Temperature High Error 2.....	40-508
FAILURE CODE [CA3312] KDPF Outlet Temperature High Error 2	40-510
FAILURE CODE [CA3313] KDOC Inlet Temperature Sensor Low Error.....	40-513
FAILURE CODE [CA3314] KDOC Inlet Temperature Sensor High Error	40-515
FAILURE CODE [CA3315] KDOC Inlet Temperature Sensor In Range Error	40-516
FAILURE CODE [CA3316] KDOC Outlet Temperature Sensor Low Error	40-519
FAILURE CODE [CA3317] KDOC Outlet Temperature Sensor High Error	40-520
FAILURE CODE [CA3318] KDOC Outlet Temperature Sensor In Range Error	40-521
FAILURE CODE [CA3319] KDPF Outlet Temperature Sensor High Error	40-523
FAILURE CODE [CA3321] KDPF Outlet Temperature Sensor Low Error.....	40-524
FAILURE CODE [CA3322] KDPF Outlet Temperature Sensor In Range Error	40-526
FAILURE CODE [CA3419] MAF Sensor Supply Voltage High Error.....	40-529
FAILURE CODE [CA3421] MAF Sensor Supply Voltage Low Error.....	40-531
FAILURE CODE [CA3497] AdBlue/DEF Level Low Error 1	40-533
FAILURE CODE [CA3498] AdBlue/DEF Level Low Error 2.....	40-534
FAILURE CODE [CA3543] AdBlue/DEF Quality Error (SCR Catalyst Efficiency Low).....	40-535
FAILURE CODE [CA3545] SCR Outlet NOx Sensor Unstable Error	40-541
FAILURE CODE [CA3547] AdBlue/DEF Level Low Error 4.....	40-543
FAILURE CODE [CA3558] AdBlue/DEF Pump Voltage High Error.....	40-544
FAILURE CODE [CA3559] AdBlue/DEF Pump Voltage Low Error	40-546
FAILURE CODE [CA3562] AdBlue/DEF LineHeater Relay 1 Voltage High Error.....	40-548
FAILURE CODE [CA3563] AdBlue/DEF LineHeater Relay 1 Voltage Low Error	40-550
FAILURE CODE [CA3567] AdBlue/DEF Injector Open Circuit Error or Short Circuit Error	40-553
FAILURE CODE [CA3568] AdBlue/DEF Injector Malfunction	40-556
FAILURE CODE [CA3571] AdBlue/DEF Pump Pressure Sensor High Error	40-560
FAILURE CODE [CA3572] AdBlue/DEF Pump Pressure Sensor Low Error.....	40-562
FAILURE CODE [CA3574] AdBlue/DEF Pump Pressure Too Low Error	40-564
FAILURE CODE [CA3575] AdBlue/DEF Pump Pressure Too High Error.....	40-566
FAILURE CODE [CA3577] AdBlue/DEF FCV Voltage High Error.....	40-568

FAILURE CODE [CA3578]	AdBlue/DEF FCV Voltage Low Error	40-570
FAILURE CODE [CA3582]	SCR Catalyst Efficiency Low Error 1.....	40-572
FAILURE CODE [CA3583]	SCR Outlet NOx Sensor Heater Warming up Error.....	40-578
FAILURE CODE [CA3596]	AdBlue/DEF Pump Pressure Unstable Error.....	40-580
FAILURE CODE [CA3649]	Turbo Outlet NOx Sensor Heater Warming up Error	40-582
FAILURE CODE [CA3681]	SCR Outlet NOx Sensor Power Voltage Error	40-584
FAILURE CODE [CA3682]	Turbo Outlet NOx Sensor Power Voltage Error.....	40-589
FAILURE CODE [CA3713]	AdBlue/DEF Line Heater 1 Voltage High Error.....	40-595
FAILURE CODE [CA3717]	SCR Outlet NOx Sensor Voltage Mismatch Error	40-598
FAILURE CODE [CA3718]	Turbo Outlet NOx Sensor Voltage Mismatch Error.....	40-599
FAILURE CODE [CA3725]	Turbo Outlet NOx Sensor Unstable Error.....	40-600
FAILURE CODE [CA3748]	Turbo Outlet NOx Sensor Stuck In Range Error	40-603
FAILURE CODE [CA3751]	SCR Catalyst Degradation Error.....	40-605
FAILURE CODE [CA3755]	AdBlue/DEF Dosing Performance Degradation Error	40-607
FAILURE CODE [CA3866]	AdBlue/DEF Low Concentration Error 2	40-609
FAILURE CODE [CA3867]	AdBlue/DEF Low Concentration Error 1	40-612
FAILURE CODE [CA3868]	AdBlue/DEF Tank Sensor Datalink Timeout Error	40-615
FAILURE CODE [CA3899]	SCR NH3 Sensor Circuit Error.....	40-619
FAILURE CODE [CA3911]	SCR NH3 Sensor Datalink Timeout Error	40-621
FAILURE CODE [CA3912]	SCR NH3 Sensor Heater Warming up Error	40-625
FAILURE CODE [CA3932]	SCR NH3 Sensor Heater Voltage High Error.....	40-627
FAILURE CODE [CA3933]	SCR NH3 Sensor Heater Voltage Low Error.....	40-629
FAILURE CODE [CA3934]	SCR NH3 Sensor Power Interrupt Error	40-631
FAILURE CODE [CA3935]	SCR NH3 Sensor Trim Resistance Error	40-634
FAILURE CODE [CA3936]	SCR NH3 Sensor Internal Circuit Error.....	40-636
FAILURE CODE [CA4151]	KDOC and KDPF Temperature Sensor Datalink Timeout Error	40-638
FAILURE CODE [CA4152]	SCR Temperature Sensor Datalink Timeout Error	40-643
FAILURE CODE [CA4155]	AdBlue/DEF Pump Heater Relay Voltage High Error	40-647
FAILURE CODE [CA4156]	AdBlue/DEF Pump Heater Relay Voltage Low Error.....	40-650
FAILURE CODE [CA4157]	AdBlue/DEF FCV Malfunction	40-653
FAILURE CODE [CA4158]	KDOC and KDPF Temperature Sensor Internal Circuit Error	40-655
FAILURE CODE [CA4159]	SCR Temperature Sensor Internal Circuit Error	40-656
FAILURE CODE [CA4161]	KDOC and KDPF Temperature Sensor ECU Voltage High Error	40-657
FAILURE CODE [CA4162]	KDOC and KDPF Temperature Sensor ECU Voltage Low Error	40-660
FAILURE CODE [CA4163]	KDOC and KDPF Temperature Sensor ECU Over Temperature Error.....	40-663
FAILURE CODE [CA4164]	SCR Temperature Sensor ECU Voltage High Error	40-666
FAILURE CODE [CA4165]	SCR Temperature Sensor ECU Voltage Low Error	40-668
FAILURE CODE [CA4166]	SCR Temperature Sensor ECU High Temperature Error	40-670
FAILURE CODE [CA4168]	AdBlue/DEF Pump Heater ON Stuck Error.....	40-672
FAILURE CODE [CA4169]	AdBlue/DEF Pump Heater OFF Stuck Error	40-675
FAILURE CODE [CA4171]	AdBlue/DEF Pump Thawing Error	40-677
FAILURE CODE [CA4249]	AdBlue/DEF Pump Temperature Sensor 1 In Range Error	40-680
FAILURE CODE [CA4251]	AdBlue/DEF Pump Temperature Sensor 2 In Range Error	40-682
FAILURE CODE [CA4259]	KDOC and KDPF Temperature Sensor Power Interrupt Error.....	40-684
FAILURE CODE [CA4261]	SCR Temperature Sensor Power Interrupt Error.....	40-686
FAILURE CODE [CA4277]	AdBlue/DEF Quality Sensor Liquid Distinction Impossible Error	40-689
FAILURE CODE [CA4281]	SCR NH3 Sensor Stuck Response Error.....	40-692
FAILURE CODE [CA4459]	AdBlue/DEF LineHeater Relay 2 Voltage High Error.....	40-695
FAILURE CODE [CA4461]	AdBlue/DEF LineHeater Relay 2 Voltage Low Error	40-698
FAILURE CODE [CA4658]	AdBlue/DEF Flow Low Error.....	40-701
FAILURE CODE [CA4731]	AdBlue/DEF Temperature Sensor Transmission Data Error.....	40-705
FAILURE CODE [CA4732]	AdBlue/DEF Level Sensor Transmission Data Error	40-706
FAILURE CODE [CA4739]	AdBlue/DEF Level Sensor Internal Circuit Error	40-707
FAILURE CODE [CA4768]	Fuel in AdBlue/DEF Tank Error.....	40-708
FAILURE CODE [CA4769]	AdBlue/DEF Level Measurement Impossible.....	40-710
FAILURE CODE [CA4842]	AdBlue/DEF High Concentration Error.....	40-713
FAILURE CODE [CA4952]	System Operating Lamp Short Circuit (Engine Controller).....	40-716
FAILURE CODE [CA5115]	AdBlue/DEF Line Heater 1 Voltage Low Error.....	40-718

FAILURE CODE [CA5179] Engine Room Temperature Sensor High Error.....40-721

FAILURE CODE [CA5181] Engine Room Temperature Sensor Low Error40-723

FAILURE CODE [CA5383] Ash Accumulation High Error.....40-725

FAILURE CODE [D110KB] Battery Relay Output Short Circuit.....40-727

FAILURE CODE [D19JKZ] Personal Code Relay Open Circuit or Short Circuit.....40-729

FAILURE CODE [D811MC] KOMTRAX Malfunction.....40-732

FAILURE CODE [D862KA] GPS Antenna Open Circuit40-733

FAILURE CODE [D8ALKA] System Operating Lamp Open Circuit (KOMTRAX).....40-734

FAILURE CODE [D8ALKB] System Operating Lamp Short Circuit (KOMTRAX).....40-736

FAILURE CODE [D8AQKR] CAN 2 Defective Communication (KOMTRAX).....40-738

FAILURE CODE [DA20MC] Pump Controller Malfunction40-740

FAILURE CODE [DA22KK] Pump Controller Solenoid Power Voltage Low Error40-741

FAILURE CODE [DA25KP] 5V Sensor 1 Power Voltage Low Error40-744

FAILURE CODE [DA29KQ] Model Selection Signal Mismatch (Pump Controller)40-747

FAILURE CODE [DA2LKA] System Operating Lamp Open Circuit (Pump Controller).....40-749

FAILURE CODE [DA2LKB] System Operating Lamp Short Circuit (Pump Controller).....40-751

FAILURE CODE [DA2QKR] Controller Area Network 2 Defective Communication (Pump Controller).....
.....40-753

FAILURE CODE [DA2RKR] Controller Area Network 1 Defective Communication (Pump Controller).....
.....40-756

FAILURE CODE [DAF0MB] Monitor ROM Abnormality40-757

FAILURE CODE [DAF0MC] Monitor Malfunction40-758

FAILURE CODE [DAF8KB] Camera Power Supply Short Circuit40-759

FAILURE CODE [DAF9KQ] Model Selection Signal Mismatch (Monitor).....40-761

FAILURE CODE [DAFGMC] GPS Module Malfunction40-762

FAILURE CODE [DAFLKA] System Operating Lamp Open Circuit (Monitor)40-763

FAILURE CODE [DAFLKB] System Operating Lamp Short Circuit (Monitor)40-765

FAILURE CODE [DAFQKR] CAN 2 Defective Communication (Monitor)40-767

FAILURE CODE [DAZ9KQ] Model Selection Signal Mismatch (A/C)40-768

FAILURE CODE [DAZQKR] CAN 2 Defective Communication (A/C ECU).....40-769

FAILURE CODE [DB2QKR] CAN 2 Defective Communication (Engine Controller)40-774

FAILURE CODE [DB2RKR] CAN 1 Defective Communication (Engine Controller)40-779

FAILURE CODE [DDNRKA] W/E Lever Lock SW Open Circuit.....40-783

FAILURE CODE [DDNRKY] W/E Lever Lock SW Short Circuit.....40-785

FAILURE CODE [DDNS00] Lock Lever Auto Lock Release SW On.....40-787

FAILURE CODE [DGH2KA] Hydraulic Oil Temperature Sensor Open Circuit.....40-789

FAILURE CODE [DGH2KB] Hydraulic Oil Temperature Sensor Ground Fault.....40-791

FAILURE CODE [DHA4KA] Air Cleaner Clog Sensor Open Circuit.....40-793

FAILURE CODE [DHAAMA] KDPF Differential Pressure Sensor Frozen40-795

FAILURE CODE [DHACMA] KDPF Outlet Pressure Sensor Frozen40-796

FAILURE CODE [DHPAMA] Front Pump Pressure Sensor Defective Function40-797

FAILURE CODE [DHPBMA] Rear Pump Pressure Sensor Defective Function40-800

FAILURE CODE [DHS3MA] Arm IN PPC Pressure Sensor Defective Function40-803

FAILURE CODE [DHS4MA] Bucket CURL PPC Pressure Sensor Defective Function40-806

FAILURE CODE [DHS8MA] Boom RAISE PPC Pressure Sensor Defective Function.....40-809

FAILURE CODE [DHS9MA] Boom LOWER PPC Pressure Sensor Defective Function40-812

FAILURE CODE [DHSAMA] Swing Right PPC Pressure Sensor Defective Function40-815

FAILURE CODE [DHSBMA] Swing Left PPC Pressure Sensor Defective Function40-818

FAILURE CODE [DHSCMA] Arm OUT PPC Pressure Sensor Defective Function.....40-821

FAILURE CODE [DHSDMA] Bucket DUMP PPC Pressure Sensor Defective Function.....40-824

FAILURE CODE [DHSFMA] Travel Forward Left PPC Pressure Sensor Defective Function.....40-827

FAILURE CODE [DHSGMA] Travel Forward Right PPC Pressure Sensor Defective Function.....40-830

FAILURE CODE [DHSJMA] Travel Reverse Left PPC Pressure Sensor Defective Function40-833

FAILURE CODE [DHSJMA] Travel Reverse Right PPC Pressure Sensor Defective Function.....40-836

FAILURE CODE [DKR0MA] Front Pump Swash Plate Sensor Defective Function.....40-839

FAILURE CODE [DKR1MA] Rear Pump Swash Plate Sensor Defective Function40-842

FAILURE CODE [DKULKKA] PPC Lock Relay Open Circuit40-845

FAILURE CODE [DKULKKB] PPC Lock Relay Short Circuit.....40-847

FAILURE CODE [DKULKY] PPC Lock Relay Hot Short Circuit	40-849
FAILURE CODE [DLM3KA] Fan Speed Sensor Open Circuit.....	40-850
FAILURE CODE [DLM3KB] Fan Speed Sensor Short Circuit.....	40-852
FAILURE CODE [DLM3MB] Fan control:Mismatch	40-854
FAILURE CODE [DR21KX] Camera 2 Picture Reverse Drive Input Out of Range	40-855
FAILURE CODE [DR31KX] Camera 3 Picture Reverse Drive Input Out of Range	40-857
FAILURE CODE [DV20KB] Travel Alarm Short Circuit.....	40-859
FAILURE CODE [DW43KA] Travel Speed Solenoid Open Circuit	40-861
FAILURE CODE [DW43KB] Travel Speed Solenoid Short Circuit	40-863
FAILURE CODE [DW43KY] Travel Speed Solenoid Hot Short Circuit.....	40-865
FAILURE CODE [DW45KA] Swing Parking Brake Solenoid Open Circuit	40-867
FAILURE CODE [DW45KB] Swing Parking Brake Solenoid Short Circuit	40-870
FAILURE CODE [DW45KY] Swing Parking Brake Solenoid Hot Short Circuit.....	40-873
FAILURE CODE [DW4CKY] PPC Lock Solenoid Hot Short Circuit	40-875
FAILURE CODE [DW7BKA] Fan Reverse Solenoid Open Circuit	40-876
FAILURE CODE [DW7BKB] Fan Reverse Solenoid Short Circuit.....	40-878
FAILURE CODE [DW7BKY] Fan Reverse Solenoid Hot Short Circuit.....	40-880
FAILURE CODE [DW91KA] Travel Junction Solenoid Open Circuit	40-881
FAILURE CODE [DW91KB] Travel Junction Solenoid Short Circuit	40-883
FAILURE CODE [DW91KY] Travel Junction Solenoid Hot Short Circuit.....	40-885
FAILURE CODE [DWA2KA] Attachment Single or 2-Way Change Solenoid Open Circuit.....	40-887
FAILURE CODE [DWA2KB] Attachment Single or 2-Way Change Solenoid Short Circuit.....	40-889
FAILURE CODE [DWA2KY] Attachment Single or 2-Way Change Solenoid Hot Short Circuit	40-891
FAILURE CODE [DWK0KA] 2-Stage Relief Solenoid Open Circuit	40-893
FAILURE CODE [DWK0KB] 2-Stage Relief Solenoid Open Circuit	40-895
FAILURE CODE [DWK0KY] 2-Stage Relief Solenoid Hot Short Circuit.....	40-897
FAILURE CODE [DWK2KA] Variable Back Pressure Solenoid Open Circuit.....	40-899
FAILURE CODE [DWK2KB] Variable Back Pressure Solenoid Short Circuit	40-901
FAILURE CODE [DWK2KY] Variable Back Pressure Solenoid Hot Short Circuit.....	40-903
FAILURE CODE [DWK8KA] Swing Pressure Cutoff Solenoid Open Circuit	40-905
FAILURE CODE [DWK8KB] Swing Pressure Cutoff Solenoid Short Circuit.....	40-907
FAILURE CODE [DWK8KY] Swing Pressure Cutoff Solenoid Hot Short Circuit	40-909
FAILURE CODE [DX16KA] Fan Pump EPC Solenoid Open Circuit	40-911
FAILURE CODE [DX16KB] Fan Pump EPC Solenoid Short Circuit.....	40-913
FAILURE CODE [DXA8KA] Front Pump PC-EPC Solenoid Open Circuit.....	40-915
FAILURE CODE [DXA8KB] Front Pump PC-EPC Solenoid Short Circuit.....	40-917
FAILURE CODE [DXA9KA] Rear Pump PC-EPC Solenoid Open Circuit	40-919
FAILURE CODE [DXA9KB] Rear Pump PC-EPC Solenoid Short Circuit.....	40-921
FAILURE CODE [DXE0KA] LS-EPC Solenoid Open Circuit.....	40-923
FAILURE CODE [DXE0KB] LS-EPC Solenoid Short Circuit.....	40-925
FAILURE CODE [DXE4KA] Attachment Flow Regulating EPC Solenoid Open Circuit	40-927
FAILURE CODE [DXE4KB] Attachment Flow Regulating EPC Solenoid Short Circuit	40-929
FAILURE CODE [DXE4KY] Attachment Flow EPC Hot Short Circuit	40-931
FAILURE CODE [DXE5KA] Merge-divider Main Solenoid Open Circuit	40-933
FAILURE CODE [DXE5KB] Merge-divider Main Solenoid Short Circuit	40-935
FAILURE CODE [DXE6KA] Merge-divider LS Solenoid Open Circuit.....	40-937
FAILURE CODE [DXE6KB] Merge-divider LS Solenoid Short Circuit.....	40-939
FAILURE CODE [DXE7KA] Attachment Flow Regulating EPC 2 Solenoid Open Circuit	40-941
FAILURE CODE [DXE7KB] Attachment Flow Regulating EPC 2 Solenoid Short Circuit	40-943
FAILURE CODE [DXE7KY] Attachment Flow Regulating EPC 2 Hot Short Circuit.....	40-945
FAILURE CODE [DXE8KA] Attachment Flow Regulating EPC 3 Solenoid Open Circuit	40-947
FAILURE CODE [DXE8KB] Attachment Flow Regulating EPC 3 Solenoid Short Circuit	40-949
FAILURE CODE [DXE8KY] Attachment Flow Regulating EPC 3 Hot Short Circuit.....	40-951
FAILURE CODE [DXE9KA] Attachment Flow Regulating EPC 4 Solenoid Open Circuit	40-953
FAILURE CODE [DXE9KB] Attachment Flow Regulating EPC 4 Solenoid Short Circuit	40-955
FAILURE CODE [DXE9KY] Attachment Flow Regulating EPC 4 Hot Short Circuit.....	40-957
FAILURE CODE [DXEAKA] Attachment Flow Regulating EPC 5 Solenoid Open Circuit.....	40-959
FAILURE CODE [DXEAKB] Attachment Flow Regulating EPC 5 Solenoid Short Circuit	40-961

FAILURE CODE [DXEAKY] Attachment Flow Regulating EPC 1 Hot Short Circuit40-963

FAILURE CODE [DY20KA]Wiper Motor Open Circuit40-965

FAILURE CODE [DY20MA] Wiper Motor Defective Function40-967

FAILURE CODE [DY2CKB] Washer Motor Short Circuit40-969

FAILURE CODE [DY2DKB] Wiper Motor (Normal Rotation) Short Circuit40-972

FAILURE CODE [DY2EKB] Wiper Motor (Reverse Rotation) Short Circuit.....40-974

TROUBLESHOOTING OF ELECTRICAL SYSTEM (E-MODE)40-976

E-1 ENGINE DOES NOT START (ENGINE DOES NOT CRANK)40-976

E-2 MANUAL PREHEATING SYSTEM DOES NOT WORK.....40-982

E-3 AUTOMATIC PREHEATING SYSTEM DOES NOT WORK40-985

E-4 WHILE PREHEATING IS WORKING, PREHEATING MONITOR DOES NOT LIGHT UP40-987

E-5 WHEN STARTING SWITCH IS TURNED TO ON POSITION, MACHINE MONITOR DISPLAYS NOTHING.....40-989

E-6 WHILE STARTING SWITCH IS TURNED TO ON POSITION (WITH ENGINE STOPPED), ENGINE OIL LEVEL MONITOR LIGHTS UP IN YELLOW40-992

E-7 WHILE STARTING SWITCH IS TURNED TO ON POSITION (WITH ENGINE STOPPED), RADIATOR COOLANT LEVEL MONITOR LIGHTS UP IN YELLOW40-993

E-8 ENGINE COOLANT TEMPERATURE MONITOR LIGHTS UP IN WHITE WHILE ENGINE IS RUNNING40-994

E-9 HYDRAULIC OIL TEMPERATURE MONITOR LIGHTS UP IN WHITE WHILE ENGINE IS RUNNING40-995

E-10 AIR CLEANER CLOGGING MONITOR LIGHTS UP IN YELLOW WHILE ENGINE IS RUNNING...40-996

E-11 CHARGE LEVEL MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING.....40-997

E-12 FUEL LEVEL MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING.....40-998

E-13 ENGINE COOLANT TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING40-999

E-14 ENGINE OIL PRESSURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING 40-1000

E-15 HYDRAULIC OIL TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING40-1001

E-16 FUEL GAUGE DISPLAY DOES NOT MOVE FROM MINIMUM OR MAXIMUM40-1002

E-17 DISPLAY OF FUEL GAUGE DIFFERS FROM ACTUAL FUEL LEVEL.....40-1004

E-18 ENGINE COOLANT TEMPERATURE GAUGE DISPLAY DOES NOT MOVE FROM MINIMUM OR MAXIMUM.....40-1005

E-19 DISPLAY OF ENGINE COOLANT TEMPERATURE GAUGE DIFFERS FROM ACTUAL COOLANT TEMPERATURE.....40-1006

E-20 HYDRAULIC OIL TEMPERATURE GAUGE DISPLAY DOES NOT MOVE FROM MINIMUM OR MAXIMUM.....40-1007

E-21 DISPLAY OF HYDRAULIC OIL TEMPERATURE GAUGE DIFFERS FROM ACTUAL OIL TEMPERATURE40-1009

E-22 SOME AREAS OF MACHINE MONITOR SCREEN ARE NOT DISPLAYED40-1010

E-23 FUNCTION SWITCH DOES NOT OPERATE40-1011

E-24 AUTOMATIC WARM-UP SYSTEM DOES NOT WORK (IN COLD WEATHER).....40-1012

E-25 WHEN AUTO-DECELERATOR SWITCH IS OPERATED, AUTO-DECELERATOR MONITOR DOES NOT LIGHT UP OR DOES NOT GO OFF40-1013

E-26 AUTO-DECELERATOR IS NOT OPERATED OR CANCELED WITH LEVER40-1014

E-27 WHEN WORKING MODE SWITCH IS OPERATED, WORKING MODE SELECTION SCREEN IS NOT DISPLAYED40-1015

E-28 WHEN WORKING MODE IS CHANGED, SETTING OF ENGINE AND HYDRAULIC PUMP IS NOT CHANGED.....40-1016

E-29 WHEN TRAVEL SPEED SWITCH IS OPERATED, TRAVEL SPEED MONITOR DOES NOT CHANGE40-1017

E-30 WHEN TRAVEL SPEED SELECTION IS CHANGED, ACTUAL TRAVEL SPEED DOES NOT CHANGE40-1018

E-31 ALARM BUZZER CANNOT BE CANCELED40-1020

E-32 SERVICE METER IS NOT DISPLAYED, WHILE STARTING SWITCH IS IN OFF POSITION.....40-1021

E-33 SERVICE MODE CANNOT BE SELECTED40-1022

E-34 ALL OF WORK EQUIPMENTS, SWING, AND TRAVEL MECHANISM DO NOT MOVE	40-1023
E-35 ALL OF WORK EQUIPMENT, SWING, AND TRAVEL MECHANISM DO NOT LOCK.....	40-1025
E-36 WHEN SWING BRAKE CANCEL SWITCH IS SET TO CANCEL POSITION, MACHINE CANNOT SWING	40-1026
E-37 WHEN SWING BRAKE CANCEL SWITCH IS SET TO NORMAL POSITION, SWING HOLDING BRAKE DOES NOT OPERATE	40-1029
E-38 ONE-TOUCH POWER MAXIMIZING FUNCTION DOES NOT OPERATE PROPERLY, OR INDICATOR NOT DISPLAYED ON MONITOR	40-1031
E-39 ONE-TOUCH POWER MAXIMIZING FUNCTION IS NOT CANCELLED	40-1034
E-40 ALARM DOES NOT SOUND DURING TRAVEL	40-1035
E-41 ALARM DOES NOT STOP SOUNDING WHILE MACHINE IS STOPPED.....	40-1037
E-42 HORN DOES NOT SOUND.....	40-1038
E-43 HORN DOES NOT STOP SOUNDING.....	40-1042
E-44 WHEN WIPER SWITCH IS OPERATED, WIPER MONITOR DOES NOT LIGHT UP OR GO OFF .	40-1044
E-45 WHEN WIPER SWITCH IS OPERATED, WINDSHIELD WIPER DOES NOT OPERATE..	40-1045
E-46 WHEN WINDOW WASHER SWITCH IS OPERATED, WINDOW WASHER DOES NOT OPERATE	40-1047
E-47 BOOM RAISE INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION ...	40-1048
E-48 BOOM LOWER INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION .	40-1049
E-49 ARM OUT INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION.....	40-1050
E-50 ARM IN INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION	40-1051
E-51 BUCKET DUMP INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION	40-1052
E-52 BUCKET CURL INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION .	40-1053
E-53 SWING INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION.	40-1054
E-54 TRAVEL INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION	40-1055
E-55 SERVICE INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION	40-1056
E-56 ATTACHMENT HYDRAULIC CIRCUIT CANNOT BE CHANGED.....	40-1058
E-57 KOMTRAX SYSTEM DOES NOT OPERATE NORMALLY	40-1059
E-58 MACHINE PUSH-UP FUNCTION CANNOT BE CANCELED	40-1060
E-59 MACHINE PUSH-UP FUNCTION DOES NOT OPERATE.....	40-1062
TROUBLESHOOTING FOR HYDRAULIC AND MECHANICAL SYSTEMS (H MODE)	40-1063
INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (H MODE).....	40-1063
SYSTEM CHART OF HYDRAULIC AND MECHANICAL SYSTEMS	40-1064
FAILURE MODE AND CAUSE TABLE.....	40-1066
H-1 All of work equipments, swing and travel operation lack speed or power.....	40-1074
H-2 Engine speed lowers significantly or engine stalls	40-1076
H-3 Any of work equipment, swing and travel does not work.....	40-1078
H-4 Unusual sound is heard from around hydraulic pump	40-1079
H-5 Fine control performance or response is poor	40-1080
H-6 Speed or power of boom is low	40-1081
H-7 Speed or power of arm is low	40-1086
H-8 Speed or power of bucket is low	40-1090
H-9 Work equipment does not move in single operation	40-1093
H-10 Hydraulic drift of boom is large	40-1094
H-11 Hydraulic drift of arm is large	40-1096
H-12 Hydraulic drift of bucket is large.....	40-1098
H-13 Other work equipment moves when one of work equipment is relieved	40-1099
H-14 In combined operation of work equipment , equipment having heavier load moves slower.	40-1100
H-15 Time lag of work equipment is large	40-1101
H-16 Machine does not travel straight.....	40-1102
H-17 Machine is hard to steer or travel power is low	40-1104

H-18 Travel speed is low	40-1107
H-19 One of tracks does not run	40-1109
H-20 Travel speed does not change, or travel speed is too low or high.....	40-1110
H-21 Upper structure does not swing in both right and left directions	40-1111
H-22 Upper structure does not swing in only one direction.....	40-1112
H-23 Swing acceleration or swing speed of upper structure is low in both right and left directions.....	40-1113
H-24 Swing acceleration or swing speed is low in only one direction	40-1114
H-25 Overrun of upper structure is large in both right and left directions	40-1115
H-26 Upper structure overruns excessively when it stops swing in only one direction	40-1116
H-27 Shock is large when upper structure stops swinging	40-1117
H-28 Large unusual noise is heard when upper structure stops swinging	40-1118
H-29 Swing drift on a slope is large (while swing parking brake is applied)	40-1119
H-30 Swing drift on a slope is large (while swing parking brake is released)	40-1120
H-31 Travel speed drops largely in combined operation of swing and trave	40-1121
H-32 In combined operation of swing and boom RAISE, boom rising speed is low	40-1122
H-33 One-touch power maximizing function does not work.....	40-1123
H-34 Machine push-up function does not work.....	40-1124
H-35 FAN SPEED IS ABNORMAL (TOO HIGH OR LOW, OR STATIONARY)	40-1125
H-36 UNUSUAL NOISE IS HEARD FROM AROUND FAN	40-1126
H-37 Attachment circuit cannot be changed.....	40-1127
H-38 Oil flow in attachment circuit cannot be controlled	40-1128
TROUBLESHOOTING OF ENGINE (S-MODE)	40-1129
INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (S MODE).....	40-1129
S-1 ENGINE DOES NOT CRANK WHEN STARTING SWITCH IS TURNED TO START POSITION.....	40-1130
.....	40-1130
S-2 ENGINE CRANKS BUT NO EXHAUST GAS COMES OUT	40-1131
S-3 FUEL IS BEING INJECTED BUT ENGINE DOES NOT START (MISFIRING: ENGINE CRANKS BUT DOES NOT START)	40-1132
S-4 ENGINE STARTABILITY IS POOR.....	40-1133
S-5 ENGINE DOES NOT PICK UP SMOOTHLY	40-1135
S-6 ENGINE STOPS DURING OPERATION	40-1137
S-7 ENGINE RUNS ROUGH OR IS UNSTABLE	40-1139
S-8 ENGINE LACKS POWER.....	40-1140
S-9 KDPF GETS CLOGGED IN A SHORT TIME.....	40-1142
S-10 ENGINE OIL CONSUMPTION IS EXCESSIVE	40-1144
S-11 OIL BECOMES CONTAMINATED QUICKLY	40-1145
S-12 FUEL CONSUMPTION IS EXCESSIVE	40-1146
S-13 OIL IS IN COOLANT (OR COOLANT SPURTS BACK OR COOLANT LEVEL GOES DOWN)	40-1147
.....	40-1147
S-14 OIL PRESSURE DROPS	40-1148
S-15 FUEL MIXES INTO ENGINE OIL.....	40-1150
S-16 WATER MIXES INTO ENGINE OIL (MILKY)	40-1151
S-17 COOLANT TEMPERATURE RISES TOO HIGH (OVERHEATING).....	40-1152
S-18 UNUSUAL NOISE IS HEARD.....	40-1153
S-19 VIBRATION IS EXCESSIVE	40-1154
S-20 AIR CANNOT BE BLED FROM FUEL CIRCUIT.....	40-1155
S-21 ACTIVE REGENERATION IS EXECUTED FREQUENTLY	40-1156
S-22 ACTIVE REGENERATION TAKES TIME.....	40-1158
S-23 WHITE SMOKE IS EXHAUSTED DURING ACTIVE REGENERATION.....	40-1159
S-24 AdBlue/DEF CONSUMPTION IS EXCESSIVE	40-1160
S-25 THERE IS UNUSUAL SMELL (IRRITATING ODOR).....	40-1162
S-26 FOREIGN MATERIALS ENTER AdBlue/DEF (AdBlue/DEF INCREASES).....	40-1163
50 DISASSEMBLY AND ASSEMBLY	50-1
CONTENTS	50-2
RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY	50-6
HOW TO READ THIS MANUAL.....	50-6
COATING MATERIALS LIST.....	50-7
SPECIAL TOOLS LIST	50-12

SKETCHES OF SPECIAL TOOLS	50-24
ENGINE AND COOLING SYSTEM.....	50-30
REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY	50-30
REMOVE AND INSTALL INJECTOR ASSEMBLY	50-45
REMOVE AND INSTALL FUEL DOSER ASSEMBLY	50-61
REMOVE AND INSTALL CYLINDER HEAD ASSEMBLY	50-64
REMOVE AND INSTALL EGR VALVE ASSEMBLY	50-87
REMOVE AND INSTALL EGR COOLER ASSEMBLY	50-91
REMOVE AND INSTALL STARTER ASSEMBLY	50-100
REMOVE AND INSTALL ALTERNATOR BELT	50-103
REMOVE AND INSTALL RADIATOR ASSEMBLY	50-111
REMOVE AND INSTALL HYDRAULIC OIL COOLER ASSEMBLY	50-116
REMOVE AND INSTALL AFTERCOOLER ASSEMBLY.....	50-120
REMOVE AND INSTALL COOLING FAN AND FAN MOTOR ASSEMBLY.....	50-126
REMOVE AND INSTALL ENGINE AND MAIN PUMP ASSEMBLY	50-135
REMOVE AND INSTALL ENGINE FRONT OIL SEAL	50-172
REMOVE AND INSTALL ENGINE REAR OIL SEAL.....	50-179
REMOVE AND INSTALL ENGINE HOOD ASSEMBLY	50-189
REMOVE AND INSTALL FUEL TANK ASSEMBLY	50-206
REMOVE AND INSTALL AdBlue/DEF TANK ASSEMBLY	50-214
REMOVE AND INSTALL AdBlue/DEF TANK SENSOR FLANGE ASSEMBLY.....	50-224
REMOVE AND INSTALL KDPF ASSEMBLY.....	50-236
DISASSEMBLE AND ASSEMBLE OF KDPF ASSEMBLY	50-245
REMOVE AND INSTALL SCR ASSEMBLY.....	50-257
REMOVE AND INSTALL KDPF, SCR ASSEMBLY.....	50-264
REMOVE AND INSTALL KDPF, SCR ASSEMBLY BRACKET	50-274
REMOVE AND INSTALL KCCV ASSEMBLY	50-288
REMOVE AND INSTALL AdBlue/DEF MIXING TUBE	50-293
REMOVE AND INSTALL AdBlue/DEF INJECTOR.....	50-304
REMOVE AND INSTALL AdBlue/DEF PUMP	50-312
REMOVE AND INSTALL AdBlue/DEF HOSE	50-315
REMOVE AND INSTALL AIR CLEANER ASSEMBLY.....	50-329
REMOVE AND INSTALL AIR CONDITIONER COMPRESSOR ASSEMBLY	50-333
REMOVE AND INSTALL AIR CONDITIONER CONDENSER ASSEMBLY	50-340
POWER TRAIN.....	50-343
REMOVE AND INSTALL TRAVEL MOTOR AND FINAL DRIVE ASSEMBLY	50-343
DISASSEMBLE AND ASSEMBLE FINAL DRIVE ASSEMBLY.....	50-345
REMOVE AND INSTALL SWING MOTOR AND SWING MACHINERY ASSEMBLY.....	50-356
DISASSEMBLE AND ASSEMBLE SWING MACHINERY ASSEMBLY	50-359
REMOVE AND INSTALL SWING CIRCLE ASSEMBLY	50-369
UNDERCARRIAGE AND FRAME.....	50-371
SEPARATION AND CONNECTION OF TRACK ASSEMBLY.....	50-371
REMOVE AND INSTALL SPROCKET	50-376
REMOVE AND INSTALL IDLER AND IDLER CUSHION ASSEMBLY.....	50-378
DISASSEMBLE AND ASSEMBLE IDLER ASSEMBLY	50-381
DISASSEMBLE AND ASSEMBLE OF IDLER CUSHION ASSEMBLY	50-388
DISASSEMBLE AND ASSEMBLE TRACK ROLLER ASSEMBLY	50-394
DISASSEMBLE AND ASSEMBLE CARRIER ROLLER ASSEMBLY	50-400
REMOVE AND INSTALL REVOLVING FRAME ASSEMBLY	50-405
REMOVE AND INSTALL COUNTERWEIGHT ASSEMBLY.....	50-410
HYDRAULIC SYSTEM.....	50-413
REMOVE AND INSTALL CENTER SWIVEL JOINT ASSEMBLY	50-413
DISASSEMBLE AND ASSEMBLE CENTER SWIVEL JOINT ASSEMBLY	50-417
REMOVE AND INSTALL HYDRAULIC TANK ASSEMBLY.....	50-420
REMOVE AND INSTALL MAIN PUMP ASSEMBLY	50-431
REMOVE AND INSTALL CONTROL VALVE ASSEMBLY	50-441
DISASSEMBLE AND ASSEMBLE CONTROL VALVE ASSEMBLY	50-452
DISASSEMBLE AND ASSEMBLE WORK EQUIPMENT PPC VALVE ASSEMBLY	50-459

DISASSEMBLE AND ASSEMBLE TRAVEL PPC VALVE ASSEMBLY	50-462
WORK EQUIPMENT.....	50-465
REMOVE AND INSTALL WORK EQUIPMENT ASSEMBLY	50-465
DISASSEMBLE AND ASSEMBLE WORK EQUIPMENT CYLINDER ASSEMBLY	50-473
CAB AND ITS ATTACHMENTS	50-480
REMOVE AND INSTALL OPERATOR'S CAB ASSEMBLY	50-480
REMOVE AND INSTALL OPERATOR CAB GLASS (ADHERED GLASS)	50-493
REMOVE AND INSTALL FRONT WINDOW ASSEMBLY	50-505
REMOVE AND INSTALL FLOOR FRAME ASSEMBLY.....	50-514
REMOVE AND INSTALL AIR CONDITIONER UNIT ASSEMBLY	50-529
REMOVE AND INSTALL OPERATOR'S SEAT	50-540
REMOVE AND INSTALL SEAT BELT	50-545
REMOVE AND INSTALL FRONT WIPER ASSEMBLY	50-547
ELECTRICAL SYSTEM	50-560
REMOVE AND INSTALL ENGINE CONTROLLER ASSEMBLY	50-560
REMOVE AND INSTALL PUMP CONTROLLER ASSEMBLY	50-563
REMOVE AND INSTALL MACHINE MONITOR ASSEMBLY	50-571
REMOVE AND INSTALL PUMP SWASH PLATE SENSOR.....	50-578
REMOVE AND INSTALL MASS AIR FLOW AND TEMPERATURE SENSOR	50-580
REMOVE AND INSTALL KCCV CRANKCASE PRESSURE SENSOR.....	50-583
REMOVE AND INSTALL SCR TEMPERATURE SENSOR.....	50-586
REMOVE AND INSTALL KOMTRAX TERMINAL ASSEMBLY.....	50-590
60 MAINTENANCE STANDARD.....	60-1
CONTENTS	60-2
ENGINE AND COOLING SYSTEM.....	60-3
MAINTENANCE STANDARD OF ENGINE MOUNT	60-3
MAINTENANCE STANDARD OF COOLING SYSTEM	60-4
MAINTENANCE STANDARD OF COOLING FAN PUMP.....	60-5
MAINTENANCE STANDARD OF COOLING FAN MOTOR.....	60-7
POWER TRAIN.....	60-8
MAINTENANCE STANDARD OF SWING CIRCLE	60-8
MAINTENANCE STANDARD OF SWING MACHINERY.....	60-9
MAINTENANCE STANDARD OF FINAL DRIVE	60-11
MAINTENANCE STANDARD OF SPROCKET	60-13
MAINTENANCE STANDARD OF SPROCKET TOOTH PROFILE FULL-SCALE DRAWING.....	60-14
UNDERCARRIAGE AND FRAME.....	60-16
MAINTENANCE STANDARD OF TRACK FRAME AND IDLER CUSHION.....	60-16
MAINTENANCE STANDARD OF IDLER	60-18
MAINTENANCE STANDARD OF TRACK ROLLER.....	60-20
MAINTENANCE STANDARD OF CARRIER ROLLER.....	60-22
MAINTENANCE STANDARD OF TRACK SHOE.....	60-23
MAINTENANCE STANDARD OF TRIPLE SHOE.....	60-26
HYDRAULIC SYSTEM.....	60-27
MAINTENANCE STANDARD OF MAIN PUMP.....	60-27
MAINTENANCE STANDARD OF SWING MOTOR.....	60-29
MAINTENANCE STANDARD OF TRAVEL MOTOR	60-32
MAINTENANCE STANDARD OF CONTROL VALVE.....	60-35
MAINTENANCE STANDARD OF WORK EQUIPMENT AND SWING PPC VALVE	60-46
MAINTENANCE STANDARD OF TRAVEL PPC VALVE	60-49
MAINTENANCE STANDARD OF 1ST-LINE ATTACHMENT PPC VALVE (WITH EPC VALVE).....	60-52
MAINTENANCE STANDARD OF SOLENOID VALVE.....	60-55
MAINTENANCE STANDARD OF ATTACHMENT CIRCUIT SELECTOR VALVE	60-56
MAINTENANCE STANDARD OF CENTER SWIVEL JOINT.....	60-57
WORK EQUIPMENT.....	60-58
MAINTENANCE STANDARD OF WORK EQUIPMENT LINKAGE.....	60-58
MAINTENANCE STANDARD OF BOOM CYLINDER	60-67
MAINTENANCE STANDARD OF ARM CYLINDER	60-68
MAINTENANCE STANDARD OF BUCKET CYLINDER.....	60-69

80 APPENDIX.....	80-1
CONTENTS	80-2
AIR CONDITIONER SYSTEM	80-4
PRECAUTIONS FOR REFRIGERANT	80-4
AIR CONDITIONER COMPONENT	80-5
SPECIFICATIONS OF AIR CONDITIONER.....	80-7
CONFIGURATION AND FUNCTION OF REFRIGERATION CYCLE	80-8
OUTLINE OF REFRIGERATION CYCLE.....	80-9
COMPONENT PARTS OF AIR CONDITIONER SYSTEM	80-11
AIR CONDITIONER UNIT.....	80-11
COMPONENT PARTS OF AIR CONDITIONER UNIT.....	80-15
AIR CONDITIONER CONTROLLER.....	80-18
COMPRESSOR.....	80-19
CONDENSER.....	80-21
RECEIVER DRIER.....	80-22
SENSORS FOR AIR CONDITIONER SYSTEM.....	80-23
EXPLANATION OF PROCEDURE FOR TESTING AND TROUBLESHOOTING OF AIR CONDITIONER.....	80-25
CIRCUIT DIAGRAM AND ARRANGEMENT OF CONNECTOR PINS FOR AIR CONDITIONER	80-27
AIR CONDITIONER SYSTEM DIAGRAM	80-29
INPUT AND OUTPUT SIGNALS OF AIR CONDITIONER CONTROLLER	80-30
INSTALLATION LOCATIONS OF AIR CONDITIONER PARTS AND ARRANGEMENT OF CONNECTORS ..	80-32
TESTING AIR LEAKAGE (DUCT).....	80-36
METHOD FOR TESTING AIR LEAKAGE (DUCT)	80-36
EXPLANATION FOR TESTING AIR CONDITIONER USING SELF-DIAGNOSIS FUNCTION.....	80-38
HOW TO OPEN THE ELECTRICAL SYSTEM ABNORMALITY RECORD SCREEN IN SERVICE MODE	
OF THE MACHINE MONITOR	80-39
TEST VENT (MODE) CHANGEOVER	80-40
METHOD FOR TESTING VENT (MODE) CHANGEOVER	80-40
TESTING FRESH/RECIRC AIR CHANGEOVER.....	80-42
METHOD FOR TESTING FRESH/RECIRC AIR CHANGEOVER	80-42
TEST SUNLIGHT SENSOR.....	80-43
METHOD FOR TESTING SUNLIGHT SENSOR.....	80-43
TEST (DUAL) PRESSURE SWITCH FOR REFRIGERANT.....	80-44
METHOD FOR TESTING (DUAL) PRESSURE SWITCH FOR REFRIGERANT	80-44
TEST RELAYS.....	80-45
METHOD FOR TESTING RELAYS.....	80-45
AIR CONDITIONER TROUBLESHOOTING CHART 1	80-46
AIR CONDITIONER TROUBLESHOOTING CHART 2	80-48
INFORMATION DESCRIBED IN TROUBLESHOOTING TABLE.....	80-51
FAILURE CODE [879AKA] A/C Recirculation Air Temperature Sensor Open Circuit.....	80-54
FAILURE CODE [879AKB] A/C Recirculation Air Temperature Sensor Short Circuit.....	80-55
FAILURE CODE [879BKA] A/C Fresh Air Temperature Sensor Open Circuit.....	80-56
FAILURE CODE [879BKB] A/C Fresh Air Temperature Sensor Short Circuit	80-58
FAILURE CODE [879CKA] Ventilating Sensor Open Circuit.....	80-60
FAILURE CODE [879CKB] Ventilating Sensor Short Circuit.....	80-61
FAILURE CODE [879DKZ] Sunlight Sensor Open Circuit or Short Circuit.....	80-62
FAILURE CODE [879EMC] Ventilation Damper Malfunction	80-64
FAILURE CODE [879FMC] Air Mix Damper Malfunction	80-65
FAILURE CODE [879GKX] Refrigerant Pressure Input Signal Out of Range	80-66
A-1 TROUBLESHOOTING FOR POWER SUPPLY SYSTEM (AIR CONDITIONER DOES NOT OPERATE).	
.....	80-68
A-2 TROUBLESHOOTING OF COMPRESSOR SYSTEM (AIR IS NOT COOLED).....	80-70
A-3 TROUBLESHOOTING FOR BLOWER MOTOR SYSTEM (NO AIR COMES OUT OR AIR FLOW IS	
ABNORMAL).....	80-74
A-4 TROUBLESHOOTING FOR FRESH/RECIRC AIR CHANGEOVER.....	80-76
TROUBLESHOOTING USING GAUGE PRESSURE.....	80-78

CONNECTION OF SERVICE TOOL	80-80
METHOD FOR CONNECTING SERVICE TOOL	80-80
PRECAUTIONS FOR DISCONNECTING AND CONNECTING HOSES AND TUBES IN AIR CONDITION- ER PIPINGS	80-82
HANDLE COMPRESSOR OIL	80-84
90 CIRCUIT DIAGRAMS	90-1
CONTENTS	90-2
HYDRAULIC CIRCUIT DIAGRAM	90-3
SYMBOLS USED IN HYDRAULIC CIRCUIT DIAGRAM	90-3
HYDRAULIC CIRCUIT DIAGRAM (1/2)	90-7
HYDRAULIC CIRCUIT DIAGRAM (2/2)	90-9
ELECTRICAL CIRCUIT DIAGRAM	90-11
SYMBOLS USED IN ELECTRICAL CIRCUIT DIAGRAM.....	90-11
ELECTRICAL CIRCUIT DIAGRAM (1/8).....	90-15
ELECTRICAL CIRCUIT DIAGRAM (2/8).....	90-17
ELECTRICAL CIRCUIT DIAGRAM (3/8).....	90-19
ELECTRICAL CIRCUIT DIAGRAM (4/8).....	90-21
ELECTRICAL CIRCUIT DIAGRAM (5/8).....	90-23
ELECTRICAL CIRCUIT DIAGRAM (6/8).....	90-25
ELECTRICAL CIRCUIT DIAGRAM (7/8).....	90-27
ELECTRICAL CIRCUIT DIAGRAM (8/8).....	90-29
INDEX.....	1