

Operation & Maintenance Manual

EEAM006011

PC210, PC210LC-6K PC240LC,PC240NLC-6K

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC210-6K	- K34552 and up
PC210LC-6K	- K34552 and up
PC240LC-6K	- K34227 and up
PC240NLC-6K	- K34227 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

KOMATSU

FOREWORD

This manual provides rules and guidelines which will help you use this machine safely and effectively. Keep this manual handy and have all personnel read it periodically. If this manual has been lost or has become dirty and can not be read, request a replacement manual from Komatsu or your Komatsu distributor.

If you sell the machine, be sure to give this manual to the new owners.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information for your machine or for questions regarding information in this manual.

WARNING

- This operation & maintenance manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you require.
 - This machine complies with EC directive (89/392/EEC). Machines complying with this directive display the CE mark
 - Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.
 - Operators and maintenance personnel should read this manual thoroughly before beginning operation or maintenance.
 - Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.
 - The procedures and precautions given in this manual apply only to intended uses of the machine. If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses or actions as described in this manual.
 - Komatsu delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country or purchased from someone in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies with the applicable standards and regulations of your country, consult Komatsu or your Komatsu distributor before operating the machine.
 - The description of safety is given in see "SAFETY INFORMATION" on page 2. and in "SAFETY" from page 17.
-

SAFETY INFORMATION

SAFETY MESSAGES

Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines.

To avoid accidents, read, understand and follow all precautions and warnings in this manual and on the machine before performing operation and maintenance.

To identify hazards on the machine pictorial decals are used (see "POSITION FOR ATTACHING SAFETY LABELS" on page 49).

⚠ RED WARNING TRIANGLE - This is used on safety labels where there is a high probability of serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage to the machine.

⚠ ORANGE WARNING TRIANGLE - This is used on safety labels where there is a potentially dangerous situation which could result in serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage of the machine

⚠ YELLOW SAFETY TRIANGLE - This is used on safety labels for hazards which could result in minor or moderate injury if the hazard is not avoided. This word might also be used for a hazard where the only result could be damage to the machine.

NOTICE

This word is used for precautions that must be taken to avoid actions which could shorten the life of the machine.


Safety precautions are described in "SAFETY" from page 17.

Komatsu cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore the safety message in this manual and on the machine may not include all possible safety precautions. If any procedures or actions not specifically recommended or allowed in this manual are used, you must be sure that you and others can do such procedures and actions safely and without damaging the machine. If you are unsure about the safety of some procedures, contact Komatsu or your Komatsu distributor.

NOISE PC210, PC210LC-6K

Valid until 31 December 2001

- Operator ears noise value (Sound pressure level)

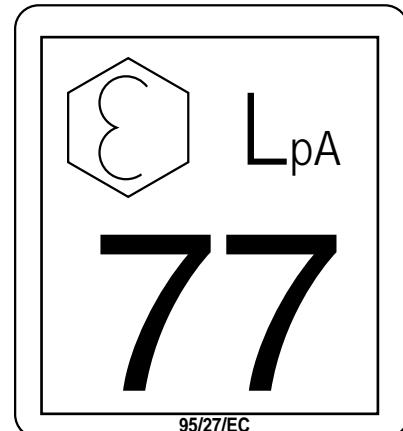


- Ambient noise value (Sound power level)




Noise level indicated is the guaranteed value as specified in the directive 86/662/EEC as amended by 95/27/EC

Valid as of 1 January 2002

- Sound pressure level at the operator's station, measured according to ISO6396 (Dynamic test method, simulated working cycle)

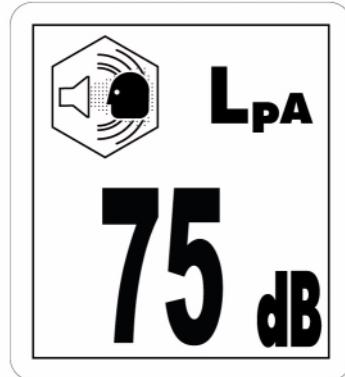


- Sound power level emitted. This is the guaranteed value as specified in European directive 2000/14/EC.

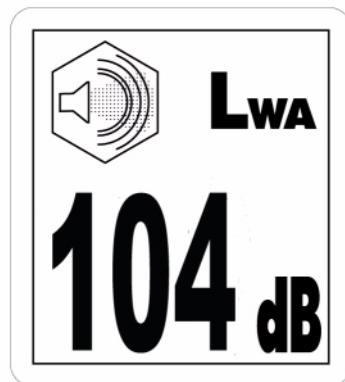

NOISE PC240LC, PC240NLC-6K**Valid until 31 December 2001**

- Operator ears noise value (Sound pressure level)

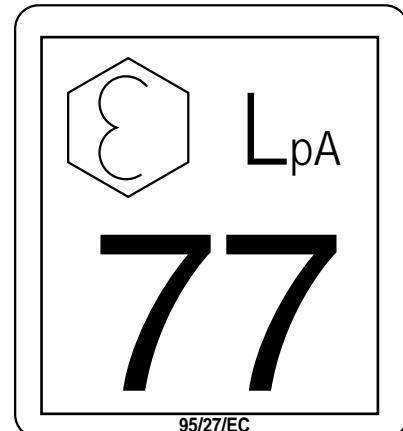


- Ambient noise value (Sound power level)




Noise level indicated is the guaranteed value as specified in the directive 86/662/EEC as amended by 95/27/EC

Valid as of 1 January 2002

- Sound pressure level at the operator's station, measured according to ISO6396 (Dynamic test method, simulated working cycle)

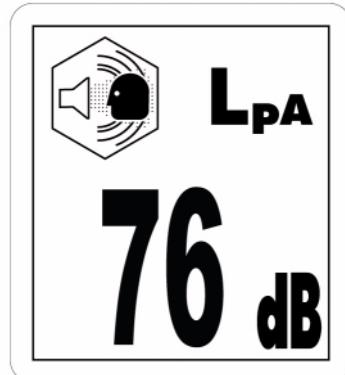

- Sound power level emitted. This is the guaranteed value as specified in European directive 2000/14/EC.

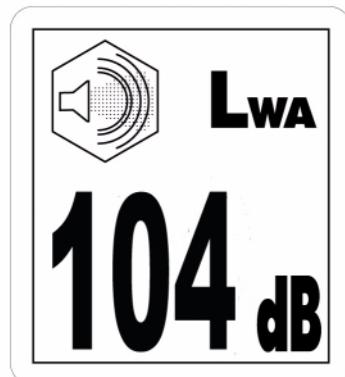

VIBRATION

The weighted root mean square acceleration value to which the operator's arms are subjected does not exceed 2.5 m/s²

The weighted root mean square acceleration value to which the operator's body is subjected does not exceed 0.5 m/s²

These results were obtained by accelerometers during trench digging.

INTRODUCTION

INTENDED USE

This Komatsu HYDRAULIC EXCAVATOR is designed to be used mainly for the following work:

- Digging
- Smoothing work
- Ditching work
- Loading work

See the section “WORK POSSIBLE USING HYDRAULIC EXCAVATOR” on page 129 for further details

FEATURES

- This Komatsu HYDRAULIC EXCAVATOR is equipped with various controls based on an advanced electronics system.
- The monitor panel greatly facilitates daily maintenance and self-diagnosis.
- Working mode, travel speed and swing priority are selectable.
- Digging and lifting force can be increased by light-touch control. (For details, see operation section.)
- Adjustable wrist control levers make operations smooth and easy.
- Fresh filtered air conditioner assures comfortable operation.
- Low noise level and smart urban style design and colouring.
- Superb operation performance provided by powerful engine and high-performance hydraulic pumps.
- Low fuel consumption controlled by an electronic control system provides an environment-friendly machine.

BREAKING IN YOUR NEW MACHINE

Your Komatsu machine has been thoroughly adjusted and tested before shipment.

However, operating the machine under severe conditions at the beginning can adversely affect the performance and shorten the machine life.

Be sure to break in the machine for the initial 100 hours (as indicated by the hour meter.)

During breaking in:

- Idle the engine for 5 minutes after starting it up.
- Avoid operation with heavy loads or at high speeds.
- Sudden starting or acceleration, unnecessarily abrupt braking and sharp turning should be avoided except in cases of emergency.

Additionally for the first 20 hours

- Avoid operating engine for prolonged periods at constant speed (including idle.)
- Avoid high speed travelling for periods of more than 5 minutes.

Pay particular attention to oil pressure and temperature indicators & check coolant and oil levels frequently during breaking in.


The precautions given in this manual for operating, maintenance, and safety procedures are only those that apply when this product is used for the specified purpose. If the machine is used for a purpose that is not listed in this manual, Komatsu cannot bear any responsibility for safety. All consideration of safety in such operations is the responsibility of the user.

Operations that are prohibited in this manual must never be carried out under any circumstances.

LOCATION OF PLATES, TABLES TO ENTER SERIAL NO. AND DISTRIBUTOR

MACHINE SERIAL NO. PLATE POSITION

On the front bottom right of the operator's cab

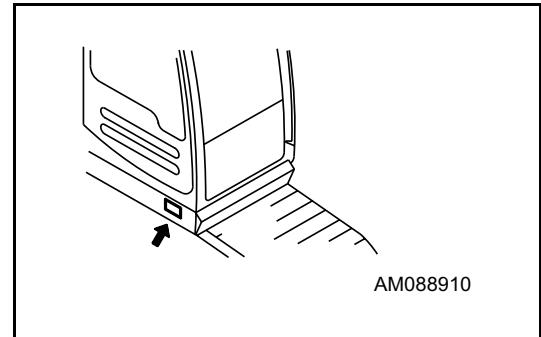

ENGINE SERIAL NO. PLATE POSITION

On the upper side of the engine cylinder head cover.

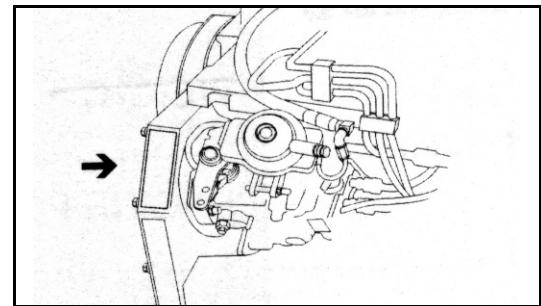


TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR

Machine serial No.

Engine serial No.

Manufacturers name: KOMATSU UK Ltd.
Address: Durham Road
Birtley
Chester-Le street
County Durham DH32QX
United Kingdom

Distributor
Address

Phone

MACHINE SERIAL PLATE.



KOMATSU

MODEL

SERIAL No

MANUFACTURING YEAR

MASS

ENGINE POWER

MANUFACTURER

Komatsu UK Ltd, Birtley, Co. Durham, United Kingdom

205-00-K1290

CONTENTS

FOREWORD	1
SAFETY INFORMATION	2
SAFETY MESSAGES	2
NOISE PC210, PC210LC-6K	3
NOISE PC240LC, PC240NLC-6K	5
VIBRATION	6
INTRODUCTION	7
INTENDED USE	7
FEATURES	7
BREAKING IN YOUR NEW MACHINE	8
LOCATION OF PLATES, TABLES TO ENTER SERIAL NO. AND DISTRIBUTOR	9
MACHINE SERIAL NO. PLATE POSITION	9
ENGINE SERIAL NO. PLATE POSITION	9
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR	9
MACHINE SERIAL PLATE	10
SAFETY.....	17
GENERAL PRECAUTIONS	18
PRECAUTIONS DURING OPERATION	26
BEFORE STARTING ENGINE	26
OPERATING MACHINE	28
TRANSPORTATION	35
BATTERY	36
TOWING	37
BUCKET WITH HOOK	38
PRECAUTIONS FOR MAINTENANCE	41
BEFORE CARRYING OUT MAINTENANCE	41
DURING MAINTENANCE	44
POSITION FOR ATTACHING SAFETY LABELS	49
POSITION FOR ATTACHING SAFETY LABELS	49
OPERATION.....	55
GENERAL VIEW	56
GENERAL VIEW OF MACHINE	56
GENERAL VIEW OF CONTROLS AND GAUGES	57

EXPLANATION OF COMPONENTS	59
MACHINE MONITOR	59
METERS	65
SWITCHES	70
CONTROL LEVERS, PEDALS	76
AIR CONDITIONER	87
CAB RADIO	90
FUSE	91
FUSIBLE LINK	92
CONTROLLERS	92
TOOL BOX	92
REFUELING PUMP	93
HANDLING THE ACCUMULATOR	94
OPERATION	95
CHECK BEFORE STARTING ENGINE	95
STARTING ENGINE	106
OPERATIONS AND CHECKS AFTER STARTING ENGINE	108
MOVING MACHINE OFF	114
STEERING MACHINE	117
STOPPING MACHINE	119
SWINGING	120
OPERATION OF WORK EQUIPMENT	121
HANDLING ACTIVE MODE	122
WORKING MODE SELECTION	123
PROHIBITIONS FOR OPERATION	125
PRECAUTIONS FOR OPERATION	127
PRECAUTIONS WHEN TRAVELLING UP OR DOWN HILLS	128
HOW TO ESCAPE FROM MUD	129
WORK POSSIBLE USING HYDRAULIC EXCAVATOR	129
REPLACEMENT AND INVERSION OF BUCKET	131
PARKING THE MACHINE	133
CHECK AFTER FINISHING WORK	134
STOPPING ENGINE	134
CHECK AFTER STOPPING ENGINE	135
TRANSPORTATION	137
LOADING, UNLOADING WORK	137
COLD WEATHER OPERATION	142
PRECAUTIONS FOR LOW TEMPERATURE	142
PRECAUTIONS AFTER COMPLETION OF WORK	143
LONG-TERM STORAGE	145
BEFORE STORAGE	145
DURING STORAGE	145
AFTER STORAGE	146
STARTING MACHINE AFTER LONG-TERM STORAGE	146

TROUBLESHOOTING	147
PHENOMENA THAT ARE NOT FAILURES	147
METHOD OF TOWING MACHINE	147
USING METHOD FOR LIGHT-WEIGHT TOWING HOLE	148
PRECAUTIONS ON PARTICULAR JOBSITES	148
IF BATTERY IS DISCHARGED	149
OTHER TROUBLE	152
OPERATION INSTRUCTIONS FOR HIGH REACH WORK EQUIPMENT FOR PC240-6	157
PRECAUTIONS WHEN OPERATING	157
CHECK BEFORE STARTING	163
OPERATION	164
RAISING WORK EQUIPMENT	165
WORKING RANGE AND USING RANGE OF BOOM	165
WORKING RANGE AND RANGE OF USE OF BOOM	166
TRANSPORTATION (HIGH REACH DEMOLITION)	167
MAINTENANCE	169
GUIDES TO MAINTENANCE	170
OUTLINES OF SERVICE	173
OUTLINE OF OIL, FUEL, COOLANT	173
EXPLANATION OF LUBRICATION CHART DECAL	176
OUTLINE OF ELECTRICAL SYSTEM	178
OUTLINE OF HYDRAULIC SYSTEM	178
WEAR PARTS LIST	180
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE	181
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS	185
LIST OF NECESSARY TOOLS	185
TORQUE LIST	186
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS	187
MAINTENANCE SCHEDULE CHART	190
MAINTENANCE SCHEDULE CHART	190
MAINTENANCE WHEN USING HYDRAULIC BREAKER	193
SERVICE PROCEDURE	194
INITIAL 250 HOURS SERVICE	194
WHEN REQUIRED	194
CHECK BEFORE STARTING	206
EVERY 100 HOURS SERVICE	211
EVERY 250 HOURS SERVICE	214
EVERY 500 HOURS SERVICE	218

EVERY 1000 HOURS SERVICE	224
EVERY 2000 HOURS SERVICE	227
EVERY 4000 HOURS SERVICE	229
EVERY 5000 HOURS SERVICE	229
SPECIFICATIONS.....	233
SPECIFICATIONS	234
PC210-6K, PC210LC-6K	234
SPECIFICATIONS	238
PC240LC-6K, PC240NLC-6K	238
explanation of LIFTING CAPACITY CHART	241
OPTIONS, ATTACHMENTS	251
PRECAUTIONS RELATED TO SAFETY	252
PRECAUTIONS WHEN INSTALLING ATTACHMENTS	253
HANDLING BUCKET WITH HOOK	254
CHECKING FOR DAMAGE TO BUCKET WITH HOOK	254
PROHIBITED OPERATIONS	254
PRECAUTIONS DURING OPERATIONS	254
MACHINES READY FOR ATTACHMENTS	255
EXPLANATION OF COMPONENTS	255
ATTACHMENT MOUNTING/DISMOUNTING PROCEDURE	259
INTRODUCTION OF ATTACHMENTS	264
SPECIFICATION, USE	264
ATTACHMENT INSTALLATION COMBINATION TABLE	266
SELECTION OF TRACK SHOES	268
SELECTION OF BUCKET TEETH	270
HANDLING TRAPEZOIDAL BUCKET	270
USING THE EXTENSION ARM	272
HANDLING THE CLAMSHELL BUCKET	272
EXTENDING MACHINE SERVICE LIFE	273
HYDRAULIC BREAKER	273
POWER RIPPER	277
MAIN FIELDS OF APPLICATIONS	277
FORK GRAB	278
GRAPPLE BUCKET	280
SCRAP GRAPPLER	281
CRUSHER & SMASHER	283
HYDRAULIC PILE DRIVER	284
HYDRAULIC EXCAVATOR WITH MULTIPURPOSE CRANE	286

2-PC BOOM	288
6.4 M STRAIGHT BOOM	293
FRONT DOZER BLADE	298

SAFETY

⚠ WARNING

Read and follow all safety precautions. Failure to do so may result in serious injury or death.

This safety section also contains precautions for optional equipment and attachments.

⚠ WARNING: For reasons of safety, always follow these safety precautions.

GENERAL PRECAUTIONS

SAFETY RULES

- ONLY trained and authorised personnel can operate and maintain the machine.
- Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.
- When working with another operator or a person on worksite traffic duty, be sure all personnel understand all hand signals that are to be used.
- A seat belt must be worn at all times when operating machinery.

SAFETY LABELS

- Please read and understand the safety labels stuck to the machine.
- Always keep the safety labels clean.
- If the safety label comes off or is lost or damaged, stick it on again or contact your Komatsu distributor and replace it with a new part.

SAFETY FEATURES

- Be sure all guards and covers are in their proper position. Have guards and covers repaired if damaged.
- Use safety features such as safety lock lever properly.
- NEVER remove any safety features. ALWAYS keep them in good operating condition.

Safety lever, see “PARKING THE MACHINE” on page 133.

Seat belt → see “USING THE SEAT BELT” on page 103.

- Improper use of safety features could result in serious bodily injury or death.

