

Shop Manual

HYDRAULIC
EXCAVATOR

GALEO

PC800 -8

PC800LC -8

SERIAL NUMBERS	PC800-	50001	and up
	PC800LC-	50001	

KOMATSU

HYDRAULIC EXCAVATOR

PC800-8

PC800LC-8

Machine model	Serial number
PC800-8	50001 and up
PC800LC-8	50001 and up

00 Index and foreword

Index

Index	
Organization list of the shop manual	2
Table of contents	4

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00373-01
00 Index and foreword	
Index	UEN00375-01
Foreword and general information	UEN00376-00
01 Specification	
Specification and technical data	UEN00378-00
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00380-00
Power train	UEN00381-00
Undercarriage and frame	UEN00382-00
Hydraulic system, Part 1	UEN00383-00
Hydraulic system, Part 2	UEN00384-00
Work equipment	UEN00385-00
Cab and its attachments	UEN00396-00
Electrical system	UEN00386-00
20 Standard value table	
Standard service value table	UEN00784-00 ○
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00786-00 ○
Testing and adjusting, Part 2	UEN00788-00 ○
Testing and adjusting, Part 3	UEN00912-00 ○
Testing and adjusting, Part 4	UEN00913-00 ○
Testing and adjusting, Part 5	UEN00914-00 ○
40 Troubleshooting	
General information on troubleshooting	UEN00789-00 ○
Troubleshooting by failure code (Display of code), Part 1	UEN00790-00 ○
Troubleshooting by failure code (Display of code), Part 2	UEN00791-00 ○
Troubleshooting by failure code (Display of code), Part 3	UEN00792-00 ○
Troubleshooting of electrical system (E-mode)	UEN00793-00 ○
Troubleshooting of hydraulic and mechanical system (H-mode)	UEN00794-00 ○
Troubleshooting of engine (S-mode)	UEN00795-00 ○

90 Diagrams and drawings

Hydraulic diagrams and drawings

UEN00392-00

Electrical diagrams and drawings

UEN00393-00

Table of contents

00 Index and foreword	
Index	UEN00375-01
Organization list of the shop manual	2
Table of contents.....	4
Foreword and general information	UEN00376-00
Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard	8
Handling electric equipment and hydraulic component	10
How to read electric wire code.....	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table	24
Conversion table	28
01 Specification	
Specification and technical data	UEN00378-00
Specification and technical data	2
Specification drawings	2
Working range drawing	3
Specifications	4
Weight table	10
Table of fuel, coolant and lubricants	13
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00380-00
Engine and cooling system	2
Coupling.....	2
Coupling lubrication system	3
Power train	UEN00381-00
Power train	2
Power train.....	2
Swing machinery	4
Swing circle.....	6
Final drive	8
Sprocket.....	10
Undercarriage and frame	UEN00382-00
Undercarriage and frame	2
Track frame and recoil spring	2
Idler.....	4
Carrier roller	6
Track roller	8
Track shoe	10
Double shoe.....	13
Hydraulic system, Part 1	UEN00383-00
Hydraulic system, Part 1	2
Hydraulic tank, hydraulic filter	4
Hydraulic pump.....	6
Operation of pump control mechanism.....	12
EPC valve	14
Self pressure reducing valve	17
Cooling fan pump.....	21
Cooling fan motor	30

Hydraulic system, Part 2	UEN00384-00
Hydraulic system, Part 2	3
Motor grease pump	3
Return oil filter	4
Line oil filter	5
Drain oil filter	6
L.H. 5-Spool control valve	8
R.H. 4-Spool control valve	14
Straight-travel valve	21
Swing motor	24
Center swivel joint	29
Travel motor	30
PPC accumulator	40
Work equipment, swing PPC valve	41
Travel PPC valve	46
Solenoid valve	50
Hydraulic cylinder	56
Work equipment	UEN00385-00
Work equipment	2
Work equipment	2
Dimensions of work equipment	4
Cab and its attachments	UEN00396-00
Cab and its attachments	2
Air conditioner piping	2
Electrical system	UEN00386-00
Electrical system	2
Engine control	2
Electric control system	11
Monitor system	45
Sensors	63
20 Standard value table	
Standard service value table	UEN00784-00
Standard service value table for engine	2
Standard service value table for chassis	3
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00786-00
Testing and adjusting, Part 1	2
Tools for testing, adjusting and troubleshooting	2
Measuring engine speed	4
Measuring intake air pressure (Boost pressure)	5
Measuring exhaust gas temperature	6
Measuring exhaust gas color	7
Adjusting valve clearance	8
Measuring compression pressure	9
Measuring blow-by pressure	10
Measuring engine oil pressure	11
Handling of fuel system equipment	12
Remaining pressure relief from fuel system equipment	12
Measuring fuel pressure	13
Testing fuel return rate and leakage	14
Bleeding air from fuel circuit	16
Testing and adjusting alternator belt tension	17
Testing and adjusting air conditioner compressor belt	18

Testing and adjusting, Part 2	UEN00788-00
Testing and adjusting, Part 2	2
Inspection of swing circle bearing clearance	2
Testing and adjusting track shoe tension	3
Testing and adjusting work equipment, swing, and travel circuit oil pressures	4
Testing and adjusting control circuit oil pressure (self pressure reducing valve)	9
Testing and adjusting main pump control pressure	10
Testing and adjusting, Part 3	UEN00912-00
Testing and adjusting, Part 3	2
Measuring PPC valve output pressure	2
Measuring outlet pressures of solenoid valve, swing PPC shuttle valve, and swing priority selector valve	6
Adjusting work equipment, swing PPC valve	10
Testing and adjusting travel deviation	11
Inspection of locations of hydraulic drift of work equipment	13
Measuring fan speed	14
Measuring fan circuit oil pressure	14
Measuring fan pump EPC current	15
Measuring fan pump EPC solenoid valve output pressure	15
Measuring oil leakage	16
Release of residual pressure from hydraulic circuit	20
Bleeding air from each part	21
Inspection procedures for diode	24
Testing and adjusting, Part 4	UEN00913-00
Testing and adjusting, Part 4	2
Special function of machine monitor	2
Handling engine controller high voltage circuit	33
Testing and adjusting, Part 5	UEN00914-00
Testing and adjusting, Part 5	2
Procedure for turning on KOMTRAX terminal	2
KOMTRAX terminal lamp indications	5
Preparation work for troubleshooting electrical system	8
Pm-clinic service	11
40 Troubleshooting	
General information on troubleshooting	UEN00789-00
General information on troubleshooting	2
Points to remember when troubleshooting	2
Sequence of events in troubleshooting	3
Checks before troubleshooting	4
Classification and troubleshooting steps	5
Connection table for connector pin numbers	9
T-boxes and T-adapters table	32
Troubleshooting by failure code (Display of code), Part 1	UEN00790-00
Troubleshooting by failure code (Display of code), Part 1	3
Failure codes table	3
Information in troubleshooting table	8
Failure code [A000N1] Eng. Hi Out of Std	10
Failure code [AA10NX] Aircleaner Clogging	12
Failure code [AB00KE] Charge Voltage Low	14
Failure code [B@BAZG] Eng. Oil Press. Low	16
Failure code [B@BAZK] Eng. Oil Level Low	18
Failure code [B@BCNS] Eng. Water Overheat	20
Failure code [B@BCZK] Eng. Water Lvl Low	22
Failure code [B@HANS] Hydr. Oil Overheat	24
Failure code [CA111] ECM Critical Internal Failure	26
Failure code [CA115] Eng Ne and Bkup Speed Sens Error	28
Failure code [CA122] Chg Air Press Sensor High Error	30

Failure code [CA123] Chg Air Press Sensor Low Error	33
Failure code [CA131] Throttle Sensor High Error	34
Failure code [CA132] Throttle Sensor Low Error	36
Failure code [CA135] Eng Oil Press Sensor High Error	38
Failure code [CA141] Eng Oil Press Sensor Low Error	40
Failure code [CA144] Coolant Temp Sens High Error	42
Failure code [CA145] Coolant Temp Sens Low Error	44
Failure code [CA153] Chg Air Temp Sensor High Error	46
Failure code [CA154] Chg Air Temp Sensor Low Error	48
Failure code [CA187] Sens Supply 2 Volt Low Error	49
Failure code [CA221] Ambient Press Sens High Error	50
Failure code [CA222] Ambient Press Sens Low Error	52
Failure code [CA227] Sens Supply 2 Volt High Error	54
Failure code [CA234] Eng Overspeed	56
Failure code [CA238] Ne Speed Sens Supply Volt Error	58
Failure code [CA263] Fuel Temp Sensor High Error	60
Failure code [CA265] Fuel Temp Sensor Low Error	62
Failure code [CA271] IMV/PCV1 Short Error	63
Failure code [CA272] IMV/PCV1 Open Error	64
Failure code [CA273] PCV2 Short Error	65
Failure code [CA274] PCV2 Open Error	66
Failure code [CA322] Inj #1 (L#1) Open/Short Error	67
Failure code [CA323] Inj #5 (L#5) Open/Short Error	68
Failure code [CA324] Inj #3 (L#3) Open/Short Error	69
Failure code [CA325] Inj #6 (L#6) Open/Short Error	70
Failure code [CA331] Inj #2 (L#2) Open/Short Error	71
Failure code [CA332] Inj #4 (L#4) Open/Short Error	72
Failure code [CA351] Injectors Drive Circuit Error	74
Failure code [CA352] Sens Supply 1 Volt Low Error	76
Failure code [CA386] Sens Supply 1 Volt High Error	78
Troubleshooting by failure code (Display of code), Part 2	UEN00791-00
Troubleshooting by failure code (Display of code), Part 2	3
Failure code [CA441] Battery Voltage Low Error	3
Failure code [CA442] Battery Voltage High Error	3
Failure code [CA449] Rail Press Very High Error	4
Failure code [CA451] Rail Press Sensor High Error	6
Failure code [CA452] Rail Press Sensor Low Error	8
Failure code [CA553] Rail Press High Error	8
Failure code [CA554] Rail Press Sensor In Range Error	9
Failure code [CA559] Rail Press Low Error	10
Failure code [CA689] Eng Ne Speed Sensor Error	14
Failure code [CA731] Eng Bkup Speed Sens Phase Error	16
Failure code [CA757] All Persistent Data Lost Error	17
Failure code [CA778] Eng Bkup Speed Sensor Error	18
Failure code [CA1228] EGR Valve Servo Error 1	20
Failure code [CA1625] EGR Valve Servo Error 2	21
Failure code [CA1626] BP Valve Sol Current High Error	22
Failure code [CA1627] BP Valve Sol Current Low Error	24
Failure code [CA1628] Bypass Valve Servo Error 1	25
Failure code [CA1629] Bypass Valve Servo Error 2	26
Failure code [CA1631] BP Valve Pos Sens High Error	28
Failure code [CA1632] BP Valve Pos Sens Low Error	30
Failure code [CA1633] KOMNET Datalink Timeout Error	31
Failure code [CA1642] EGR Inter Press Sens Low Error	33
Failure code [CA2185] Throt Sens Sup Volt High Error	36
Failure code [CA2186] Throt Sens Sup Volt Low Error	38
Failure code [CA2249] Rail Press Very Low Error	39
Failure code [CA2271] EGR Valve Pos Sens High Error	40

Failure code [CA2272] EGR Valve Pos Sens Low Error.....	42
Failure code [CA2351] EGR Valve Sol Current High Error.....	44
Failure code [CA2352] EGR Valve Sol Current Low Error.....	46
Failure code [CA2555] Grid Htr Relay Volt Low Error.....	47
Failure code [CA2556] Grid Htr Relay Volt High Error.....	48
Failure code [D110KB] Battery Relay Drive S/C.....	50
Failure code [D163KB] Flash Light Relay S/C.....	52
Failure code [D195KB] Step Light Relay S/C.....	54
Failure code [DA25KP] Press. Sensor Power Abnormality.....	56
Failure code [DA2SKQ] Model Selection Abnormality.....	58
Failure code [DA80MA] Auto. Lub. Abnormal.....	60
Failure code [DA2RMC] Pump Comm. Abnormality.....	62
Failure code [DAFRMC] Monitor Comm. Abnormality.....	64
Failure code [DGE5KY] Ambi. Temp. Sensor S/C.....	66
Failure code [DGH2KB] Hydr. Oil Temp. Sensor S/C.....	68
Troubleshooting by failure code (Display of code), Part 3	UEN00792-00
Troubleshooting by failure code (Display of code), Part 3.....	4
Failure code [DH25KA] L Jet Sensor Disc.....	4
Failure code [DH25KB] L Jet Sensor S/C.....	6
Failure code [DH26KA] R Jet Sensor Disc.....	8
Failure code [DH26KB] R Jet Sensor S/C.....	10
Failure code [DHPEKA] F Pump P. Sensor Disc.....	12
Failure code [DHPEKB] F Pump P. Sensor S/C.....	14
Failure code [DHPFKA] R Pump P. Sensor Disc.....	16
Failure code [DHPFKB] R Pump P. Sensor S/C.....	18
Failure code [DV20KB] Travel Alarm S/C.....	20
Failure code [DW41KA] Swing Priority Sol. Disc.....	22
Failure code [DW41KB] Swing Priority Sol. S/C.....	24
Failure code [DW43KA] Travel Speed Sol. Disc.....	26
Failure code [DW43KB] Travel Speed Sol. S/C.....	28
Failure code [DW45KA] Swing Brake Sol. Disc.....	30
Failure code [DW45KB] Swing Brake Sol. S/C.....	32
Failure code [DW7BKA] Fan Reverse Sol. Disc.....	34
Failure code [DW78KB] Fan Reverse Sol. S/C.....	36
Failure code [DWK0KA] 2-stage Relief Sol. Disc.....	38
Failure code [DWK0KB] 2-stage Relief Sol. S/C.....	40
Failure code [DX16KA] Fan Pump EPC Sol. Disc.....	42
Failure code [DX16KB] Fan Pump EPC Sol. S/C.....	44
Failure code [DXAAKA] F Pump EPC Sol. Disc.....	46
Failure code [DXAAKB] F Pump EPC Sol. S/C.....	48
Failure code [DXABKA] R Pump EPC Sol. Disc.....	50
Failure code [DXABKB] R Pump EPC Sol. S/C.....	52
Failure code [DY20KA] Wiper Working Abnormality.....	54
Failure code [DY20MA] Wiper Parking Abnormality.....	56
Failure code [DY2CKB] Washer Drive S/C.....	60
Failure code [DY2DKB] Wiper Drive (For) S/C.....	62
Failure code [DY2EKB] Wiper Drive (Rev) S/C.....	66
Troubleshooting of electrical system (E-mode)	UEN00793-00
Troubleshooting of electrical system (E-mode).....	3
Before carrying out troubleshooting of electrical system.....	3
Information contained in troubleshooting table.....	5
E-1 Engine does not start (Engine does not rotate).....	6
E-2 Preheater does not operate.....	9
E-3 Auto engine warm-up device does not work.....	14
E-4 Auto-decelerator does not operate.....	15
E-5 All work equipment, swing and travel do not move.....	16
E-6 Machine push-up function does not operate normally.....	18
E-7 Boom shockless function does not operate normally.....	20

E-8 Any item is not displayed on machine monitor	22
E-9 Part of display on machine monitor is missing	23
E-10 Machine monitor displays contents irrelevant to the model	23
E-11 Fuel level monitor red lamp lights up while engine is running	24
E-12 Engine coolant thermometer does not display normally	26
E-13 Hydraulic oil temperature gauge does not display correctly	28
E-14 Fuel gauge does not display correctly	29
E-15 Swing lock monitor does not display correctly	30
E-16 When monitor switch is operated, nothing is displayed	32
E-17 Windshield wiper and window washer do not work	34
E-18 "Boom RAISE" is not correctly displayed in monitor function	42
E-19 "Boom LOWER" is not correctly displayed in monitor function	43
E-20 "Arm IN" is not correctly displayed in monitor function	44
E-21 "Arm OUT" is not correctly displayed in monitor function	45
E-22 "Bucket CURL" is not correctly displayed in monitor function	46
E-23 "Bucket DUMP" is not correctly displayed in monitor function	47
E-24 "SWING" is not correctly displayed in monitor function	48
E-25 "Left travel" is not displayed normally in monitoring function	50
E-26 "Right travel" is not displayed normally in monitoring function	52
E-27 "Service" is not correctly displayed in monitor function	54
E-28 KOMTRAX system does not operate normally	56
E-29 Air conditioner does not work	58
E-30 Step light does not light up or go off	59
E-31 Electric grease gun does not operate	62
E-32 Travel alarm does not sound or does not stop sounding	64
Troubleshooting of hydraulic and mechanical system (H-mode)	UEN00794-00
Troubleshooting of hydraulic and mechanical system (H-mode)	3
Information in troubleshooting table	3
H-1 Speed or power of all work equipment, travel, and swing is low	4
H-2 Engine speed lowers remarkably or engine stalls	6
H-3 All work equipment, travel, and swing systems do not work	7
H-4 Abnormal sound is heard from around pump	8
H-5 Boom speed or power is low	9
H-6 Speed or power of arm is low	11
H-7 Speed or power of bucket is low	12
H-8 Boom does not move	13
H-9 Arm does not move	13
H-10 Bucket does not move	13
H-11 Hydraulic drift of work equipment is large	14
H-12 Time lag of work equipment is large	16
H-13 Heavy lift function does not operate or stop	17
H-14 Machine push-up function does not operate or stop	17
H-15 Boom shockless function cannot be turned ON or OFF	17
H-16 Machine deviates in one direction	18
H-17 Machine deviates largely at start	20
H-18 Machine deviates largely during compound operation	21
H-19 Travel speed or power is low	21
H-20 Machine does not travel (only one track)	22
H-21 Travel speed does not change	23
H-22 Upper structure does not swing	24
H-23 Swing speed or acceleration is low	26
H-24 Swing speed or acceleration is low during compound operation of swing and work equipment	27
H-25 Upper structure overruns excessively when it stops swinging	29
H-26 Large shock is made when upper structure stops swinging	30
H-27 Large abnormal sound is made when upper structure stops swinging	31
H-28 Hydraulic drift of swing is large	32
Troubleshooting of engine (S-mode)	UEN00795-00
Troubleshooting of engine (S-mode)	3

Method of using troubleshooting chart.....	3
S-1 Starting performance is poor	6
S-2 Engine does not start	8
S-3 Engine does not pick up smoothly	12
S-4 Engine stops during operations.....	13
S-6 Engine lacks output (or lacks power)	15
S-7 Exhaust gas color is black (incomplete combustion)	16
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	18
S-9 Oil becomes contaminated quickly.....	19
S-10 Fuel consumption is excessive	20
S-11 Oil is in coolant (or coolant spurts back or coolant level goes down).....	21
S-12 Oil pressure drops.....	22
S-13 Oil level rises (Entry of coolant/fuel).....	23
S-14 Coolant temperature becomes too high (overheating).....	25
S-15 Abnormal noise is made.....	26
S-16 Vibration is excessive.....	27
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00392-00
Hydraulic diagrams and drawings	3
Hydraulic circuit diagram	3
Electrical diagrams and drawings	UEN00393-00
Electrical diagrams and drawings.....	3
Electrical circuit diagram (1/5)	3
Electrical circuit diagram (2/5)	5
Electrical circuit diagram (3/5)	7
Electrical circuit diagram (4/5)	9
Electrical circuit diagram (5/5)	11

PC800-8, PC800LC-8 Hydraulic excavator

Form No. UEN00375-01

©2006 KOMATSU
All Rights Reserved
Printed in Belgium 04-06 (01)

HYDRAULIC EXCAVATOR

PC800-8

PC800LC-8

Machine model	Serial number
PC800-8	50001 and up
PC800LC-8	50001 and up

00 Index and foreword

Foreword and general information

Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard.....	8
Handling electric equipment and hydraulic component.....	10
How to read electric wire code	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table	24
Conversion table	28

Foreword and general information

(Rev. 2005/11)

Safety notice

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **▲** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

▲ Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine.

- 1) Before carrying out any greasing or repairs, read all the safety plates stuck to the machine. For the locations of the safety plates and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.

- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.

- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (–) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is seen well from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

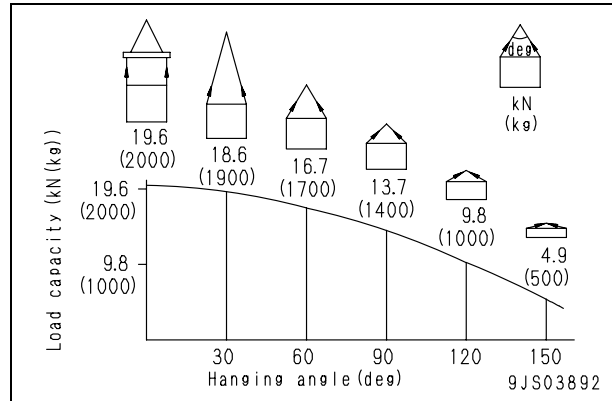

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
 - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

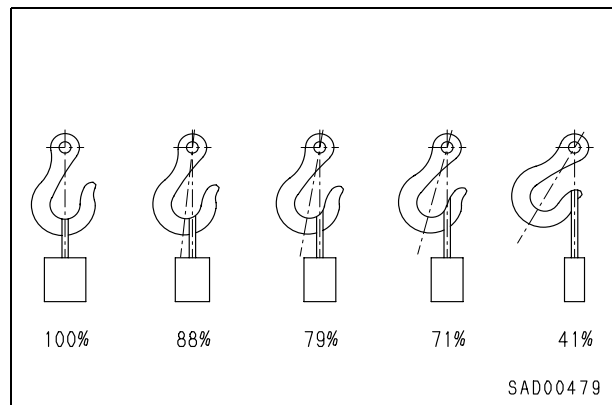


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
 - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope	Allowable load	
	kN	ton
mm		
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

01. Specification

This section explains the specifications of the machine.

10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume
This section explains the method of reproducing, repairing, and replacing parts.

2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.