

## 9. REPLACEMENT OF PARTS

### Initialization of VHMS System

When installing the system for the first time, or when replacing the VHMS controller or any component (transmission, engine, etc.), you are requested to initialize the system.

- For the initialization,
  - 1) PC (Personal Computer),
  - 2) Download software (799-608-3210) and
  - 3) Cable (799-608-3220)are necessary.
- A person, who accomplished the necessary education, shall execute the initialization under the guidance of a responsible person. Otherwise, contact Komatsu Ltd.

### <Precautions at the time of Replacing VHMS and ORB Controller>

#### 9-1 WHEN THE VHMS CONTROLLER IS REPLACED

- 1) It is necessary to initialize the VHMS controller.
  - Follow the instruction of a responsible person or contact Komatsu Ltd.

#### 9-2 WHEN COMMUNICATION CONTROLLER IS REPLACED

In the following cases, important procedures are necessary such as opening or closing station of the communication controller. So, follow instructions of the responsible person or contact Komatsu Ltd.

- A) When a controller already installed to the machine is replaced with a different controller.
- B) When a controller already installed to the machine is reinstalled to another machine.
- C) When a controller is disposed of.
- D) When a machine to which a controller has been installed is transferred or sold.
- E) When a machine to which a controller has been installed is disposed of ? ?.