

Field Assembly Instruction

WHEEL LOADER

WA470-7

SERIAL NUMBERS 10001 and up

KOMATSU

CONTENTS

0010	Setting of machine monitor	1
0020	Deletion of electrical system abnormality record (1/4) to (4/4)	2
0030	Selection of options (1/5) to (5/5)	6
0040	Adjustment of work equipment controller boom angle (1/4) to (4/4)	11
0050	Adjustment of work equipment EPC lever detent position (1/5) to (5/5)	15
0060	Adjustment of work equipment EPC starting current (1/6) to (6/6)	20
0070	Adjustment of bucket positioner (1/4) to (4/4)	26
0080	Adjustment of rear view monitor guide line position (1/9) to (9/9)	30

Assembly procedure

NO.0010

Setting of machine monitor

1. Operating method of machine monitor (Items common to all settings and adjustments)

When implementing the initial setting or option setting of the sensor, you must access the service mode of the machine monitor before starting the operation.

1-1. How to enter "Service Menu"

 

1-1-1. Operating method

Turn on the starting switch of the machine to turn on the machine monitor power. While the machine monitor's LCD unit is showing the standard service meter screen or the alarm screen, the screen moves to the service mode screen by pushing the "▲1", "▲2", and "AUTO3" numeral keys in order while holding down the DOWN (▼) switch.

Standard screen



Switch box

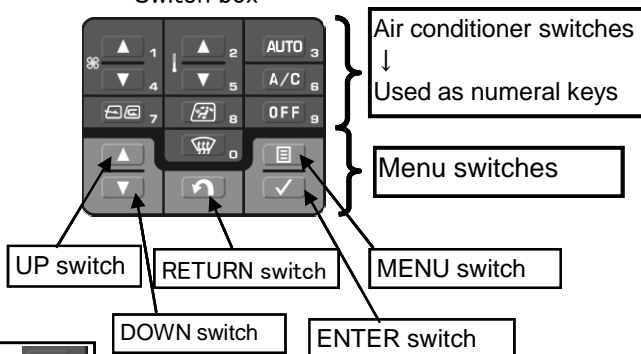

Service Menu



Remarks:
If the starting switch is turned OFF while the machine monitor is in the "Service Menu", the screen returns to the normal service meter screen or warning screen when the starting switch is turned ON next time.

Precautions

Tools to be used

Facilities to be used

Name	Q'ty	Name	Q'ty

Others