

Shop Manual

VEBM950201

WA65-3

WA65-3 Parallel Lift

WA75-3

WA85-3

WA90-3

WA95-3

WHEEL LOADER

SERIAL NUMBER

WA65-3	HA940051 AND UP
WA65-3 PARALLEL LIFT	HA050051 AND UP
WA75-3	HA950051 AND UP
WA85-3	HA960051 AND UP
WA90-3	HA970051 AND UP
WA95-3	HA980051 AND UP

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local KOMATSU distributor for those items you may require. Materials and specifications are subject to change without notice.
- For details of these engines see Engine Shop Manual, P/N: YMHINSHI-H8013.

CONTENTS

	No. of page
00 SAFETY	00-3
01 GENERAL	01-1
10 STRUCTURE AND FUNCTION	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
90 APPENDIX	90-1

SUPPLEMENT

The affected pages are indicated by the use of the following marks.

It is requested that necessary actions must be taken to these pages according to the list below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced (new)	Replace
()	Page to be deleted	Discard

Pages having no marks are not revised at this time.

Mark	Page	Revision-number	Mark	Page	Revision-number	Mark	Page	Revision-number	Mark	Page	Revision-number
●	00-1	①		01-25			10-41			10-95	
●	00-2	①		01-26			10-42			10-96	
●	00-2.1	①		01-27			10-43			10-97	
●	00-2.2	①		01-28			10-44			10-98	
●	00-2.3	①		01-29			10-45			10-99	
●	00-2.4	①		01-30			10-46			10-100	
	00-3			01-31			10-47			10-101	
	00-4			01-32			10-48			10-102	
	00-5			01-33			10-49			10-103	
	00-6			01-34			10-50			10-104	
	00-7		●	10-1	①		10-51			10-105	
	00-8		●	10-2	①		10-52			10-106	
●	01-1	①		10-3			10-53			10-107	
●	01-2	①		10-4			10-54			10-108	
●	01-3	①		10-5			10-55			10-109	
	01-4			10-6			10-56			10-110	
	01-5			10-7			10-61			10-111	
	01-6			10-8			10-62			10-112	
	01-7			10-9			10-63			10-113	
	01-8			10-10			10-64			10-114	
	01-9			10-11			10-65			10-115	
	01-10			10-12			10-66			10-116	
	01-11			10-13			10-81		○	10-117	①
	01-12			10-14			10-82		○	10-118	①
	01-13			10-15			10-83		○	10-119	①
	01-14			10-16			10-84		○	10-120	①
	01-15			10-31			10-85			10-127	
	01-16			10-32			10-86			10-128	
	01-17			10-33			10-87			10-129	
	01-18			10-34			10-88			10-130	
	01-19			10-35			10-89			10-131	
	01-20			10-36			10-90			10-132	
	01-21			10-37			10-91			10-133	
	01-22			10-38			10-92			10-134	
	01-23			10-39			10-93			10-135	
	01-24			10-40			10-94			10-136	

List of revised pages

Mark	Page	Revision-number	Mark	Page	Revision-number	Mark	Page	Revision-number	Mark	Page	Revision-number
	10-137		○	10-182	①		20-51			30-42	
	10-138			20-1			20-52			30-43	
	10-149			20-2			20-53			30-44	
	10-150			20-3			20-54			30-45	
	10-151			20-4			20-55			30-46	
	10-152			20-5			20-56			30-47	
	10-153			20-6			30-1			30-48	
	10-154			20-7			30-2			30-49	
	10-155			20-8			30-3			30-50	
	10-156		●	20-9	①		30-4			30-51	
	10-157			20-10			30-5			30-52	
	10-158			20-11			30-6			30-53	
○	10-158.1	①		20-12			30-7			30-54	
○	10-158.2	①		20-13			30-8			30-55	
○	10-158.3	①		20-14			30-9			30-56	
○	10-158.4	①		20-15			30-10		●	30-57	①
○	10-158.5	①		20-16			30-11			30-58	
○	10-158.6	①		20-17			30-12			30-59	
○	10-158.7	①		20-18			30-13			30-60	
○	10-158.8	①		20-19			30-14			30-61	
○	10-158.9	①		20-20			30-15			30-62	
○	10-158.10	①		20-21			30-16			30-63	
○	10-158.11	①		20-22			30-17			30-64	
○	10-158.12	①		20-23			30-18			30-65	
○	10-159	①		20-24			30-19			30-66	
○	10-160	①		20-25			30-20			30-67	
○	10-161	①		20-26			30-21			30-68	
○	10-162	①		20-31			30-22			30-69	
○	10-163	①		20-32			30-23			30-70	
○	10-164	①		20-33			30-24			30-71	
○	10-165	①		20-34			30-25			30-72	
○	10-166	①		20-35			30-26			30-73	
○	10-167	①		20-36			30-27			30-74	
○	10-168	①		20-37			30-28			30-75	
○	10-169	①		20-38			30-29			30-76	
○	10-170	①		20-39			30-30			30-77	
○	10-171	①		20-40			30-31			30-78	
○	10-172	①		20-41			30-32			30-79	
○	10-173	①		20-42			30-33			30-80	
○	10-174	①		20-43			30-34			30-81	
○	10-175	①		20-44			30-35			30-82	
○	10-176	①		20-45			30-36			30-83	
○	10-177	①		20-46			30-37			30-84	
○	10-178	①		20-47			30-38			30-85	
○	10-179	①		20-48			30-39			30-86	
○	10-180	①		20-49			30-40			30-87	
○	10-181	①		20-50			30-41			30-88	

Mark	Page	Revision-number	Mark	Page	Revision-number	Mark	Page	Revision-number	Mark	Page	Revision-number
	30-89			30-135							
	30-90			30-136							
	30-91			30-137							
	30-92			30-138							
	30-93			30-139							
	30-94			30-140							
	30-95			30-141							
	30-96			30-142							
	30-97			30-143							
	30-98			30-144							
	30-99			30-145							
	30-100			30-146							
	30-101			30-147							
	30-102			30-148							
	30-103			30-149							
	30-104			30-150							
	30-105			30-151							
	30-106			30-152							
	30-107			30-153							
	30-108			30-154							
	30-109			30-155							
	30-110			30-156							
	30-111			30-157							
	30-112			30-158							
	30-113			30-159							
	30-114			30-160							
	30-115			30-161							
	30-116			30-162							
	30-117		●	90-1	①						
	30-118		●	90-2	①						
	30-119										
	30-120										
	30-121										
	30-122										
	30-123										
	30-123										
	30-124										
	30-125										
	30-126										
	30-127										
	30-128										
	30-129										
	30-130										
	30-131										
	30-132										
	30-133										
	30-134										

Blank for technical reason

00 SAFETY


Safety notice	00-4
Foreword	00-8
How to read the shop manual	00-9
Volumes	00-9
Distribution and updating	00-9
Filing method	00-9
Symbols	00-10
Hoisting instructions	00-11

Safety notice



Important Safety Notice

Proper service and repair is extremely important for safe machine operation. Some of the described service and repair techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols must always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.



General Precautions

Mistakes in operation are extremely dangerous. Read the **OPERATION AND MAINTENANCE MANUAL** carefully before operating the machine! Always follow the safety rules valid in your country carefully!

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, glasses, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang **UNDER REPAIR** signs on the controls in the operator's compartment.

5. Keep all tools in good condition and learn the correct way to use them.
6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Never smoke while working. Smoke only in the areas provided for smoking.

Preparations for work

1. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
2. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground and install the safety bar on the frame. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
3. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
4. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

Precautions during work

1. When measuring hydraulic pressure, check that the measuring tool is correctly assembled before taking any measurements.
2. When removing the oil filler cap, drain plug or hydraulic pressure measuring plugs, loosen them slowly to prevent the oil from spurting out.
Before disconnecting or removing components of the oil, water or air circuits, first remove the pressure completely from the circuit.
3. The water and oil in the circuits are hot when the engine is stopped, so be careful not to get burned.
Wait for the oil and water to cool before carrying out any work on the oil or water circuits.
4. Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
5. When raising heavy components, use a hoist or crane.
Check that the wire rope, chains and hooks are free from damage.
Always use lifting equipment which has ample capacity.
Install the lifting equipment at the correct places. Use a hoist or crane and operate slowly to prevent the component from hitting any other part.
Do not work with any part still raised by the hoist or crane.
6. When removing covers which are under internal pressure or under pressure from a spring, always leave two bolts in position on opposite sides. Slowly release the pressure, then slowly loosen the bolts to remove.
7. When removing components, be careful not to break or damage the wiring. Damaged wiring may cause electrical fires.
8. When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip, or can even start fires.
9. As a general rule, do not use gasoline to wash parts. In particular, use only the minimum of gasoline when washing electrical parts. Do not smoke!
10. Be sure to assemble all parts again in their original places.

Replace any damaged parts with new parts.

When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is being operated.

11. When installing high pressure hoses, make sure that they are not twisted.

Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. Also, check that connecting parts are correctly installed.

12. When aligning two holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
13. When assembling or installing parts, always use the specified tightening torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.

Foreword

General

This shop manual has been prepared as an aid to improve the quality of repairs by giving the service personnel an accurate understanding of the product and by showing them the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every opportunity.

This shop manual mainly contains the necessary technical information for operations performed in a service workshop. For ease of understanding, the manual is divided into the following chapters; these chapters are further divided into the each main group of components:

Structure and function

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting.

Testing and adjusting

This section explains checks to be made before and after performing repairs, as well as adjustments to be made at completion of the checks and repairs. Troubleshooting charts correlating "Problems" to "Causes" are also included in this section.

Disassembly and assembly

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations.

Maintenance standard

This section gives the judgement standards when inspecting disassembled parts.

NOTE

The specifications contained in this shop manual are subject to change at any time and without any advance notice. Use the specifications given in the book with the latest date.

How to read the shop manual

Volumes

Shop manuals are issued as a guide to carrying out repairs.

Distribution and updating


Any additions, amendments or other changes will be sent to Komatsu distributors.

Get the most up-to-date information before you start any work.

Filing method


1. See the page number on the bottom of the page. File the pages in correct order.
2. Following examples show how to read the page number.

Example 1 (Chassis volume):

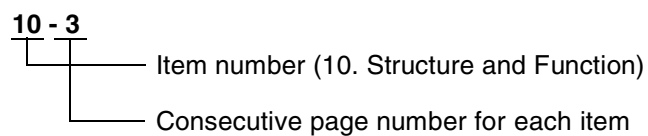






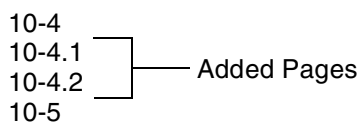

3. Additional pages: Additional pages are indicated by a point (.) and number after the page number. File as in the example.

 Example:



Symbols

So that the shop manual can be of ample practical use, important safety and quality portions are marked with the following symbols:

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing the work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing the work.
	Weight	Weight of parts of systems. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for the tightening torque during assembly.
	Coat	Places to be coated with adhesives and lubricants, etc.
	Oil, water	Places where oil, water or fuel must be added, and the capacity.
	Drain	Places where oil or water must be drained, and quantity to be drained.

Hoisting instructions



Heavy parts (25kg or more) must be lifted with a hoist, etc. In the DISASSEMBLY AND ASSEMBLY section, every part weighing 25 kg or more is indicated clearly with the symbol:



If a part cannot be smoothly removed from the machine by hoisting, the following checks should be made:

1. Check for removal of all bolts fastening the part to the relative parts.
2. Check for existence of another part causing interference with the part to be removed.


Wire ropes

1. Use adequate ropes depending on the weight of parts to be hoisted, referring to the table below:
 - The allowable load in tons, is given by vertical tensible force.
 - The allowable load value is estimated to be one-sixth or one-seventh of the breaking strength of the rope used.

Wire ropes: (Standard "Z" or "S" twist ropes without galvanizing)	
Rope diameter (mm)	Allowable load (tons)
10	1.0
11.2	1.4
12.5	1.6
14	2.2
16	2.8
18	3.6
20	4.4
22.4	5.6
30	10.0
40	18.0
50	28.0
60	40.0

2. Sling wire ropes from the middle portion of the hook.

Slings near the edge of the hook may cause the rope to slip off the hook during hoisting, and a serious accident can result. Hooks have maximum strength at the middle portion.

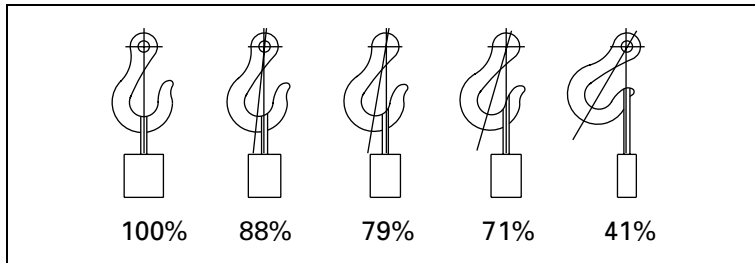

3. Do not sling a heavy load with one rope alone, but sling with two or more ropes symmetrically wound onto the load.




Slings with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

4. Do not sling a heavy load with ropes forming a wide hanging angle from the hook.

When hoisting a load with two or more ropes, the force subjected to each rope will increase with the hanging angles.

The table below shows the variation of allowable load (kg) when hoisting is made with two ropes, each of which is allowed to sling up to 1000 kg vertically, at various hanging angles.

When two ropes sling a load vertically, up to 2000 kg of total weight can be suspended. This weight becomes 1000 kg when two ropes make a 120° hanging angle. On the other hand, two ropes are subjected to an excessive force as large as 4000 kg if they sling a 2000 kg load at a lifting angle of 150°.

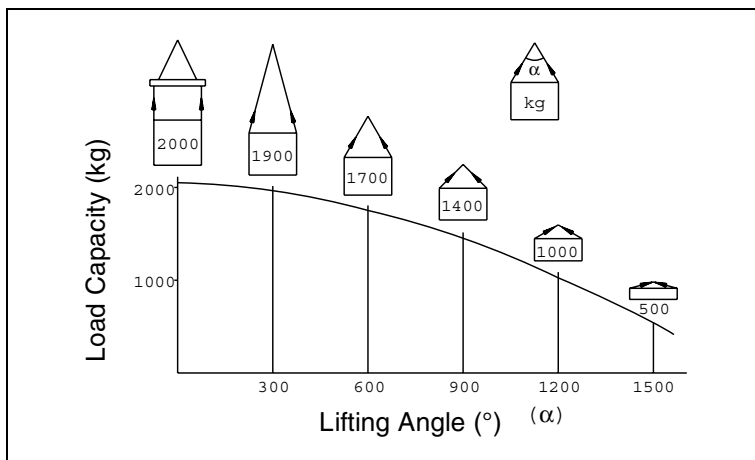


01 GENERAL

Dimensions, weights and operating data – WA65-3	01-4
Dimensions, weights and operating data – WA65-3 Parallel Lift	01-5
Specifications – WA65-3/WA65-3 Parallel Lift	01-6
Dimensions, weights and operating data – WA75-3	01-9
Specifications – WA75-3	01-10
Dimensions, weights and operating data – WA85-3	01-13
Specifications – WA85-3	01-14
Dimensions, weights and operating data – WA90-3	01-17
Specifications – WA90-3	01-18
Dimensions, weights and operating data – WA95-3	01-21
Specifications – WA95-3	01-22
Weight table – WA65-3/WA65-3 Parallel Lift	01-24
Deviating weights for WA65-3 Parallel Lift	01-24
Weight table – WA75-3/WA85-3	01-25
Weight table – WA90-3/95-3	01-26
Lubricants and operating mediums – WA65-3	01-27
Lubricants and operating mediums – WA75-3/WA85-3	01-28
Lubricants and operating mediums – WA90-3/WA95-3	01-29
Basic procedures of maintenance	01-30
Oil	01-30
Fuel	01-30
Coolant	01-31
Grease	01-31
Storing oil and fuel	01-31
Filters	01-32
Biodegradable hydraulic oils and lubricants	01-32
Outline of electric system	01-32
Torque list – screws and nuts	01-33

Blank for technical reason

Blank for technical reason

Dimensions, weights and operating data – WA65-3

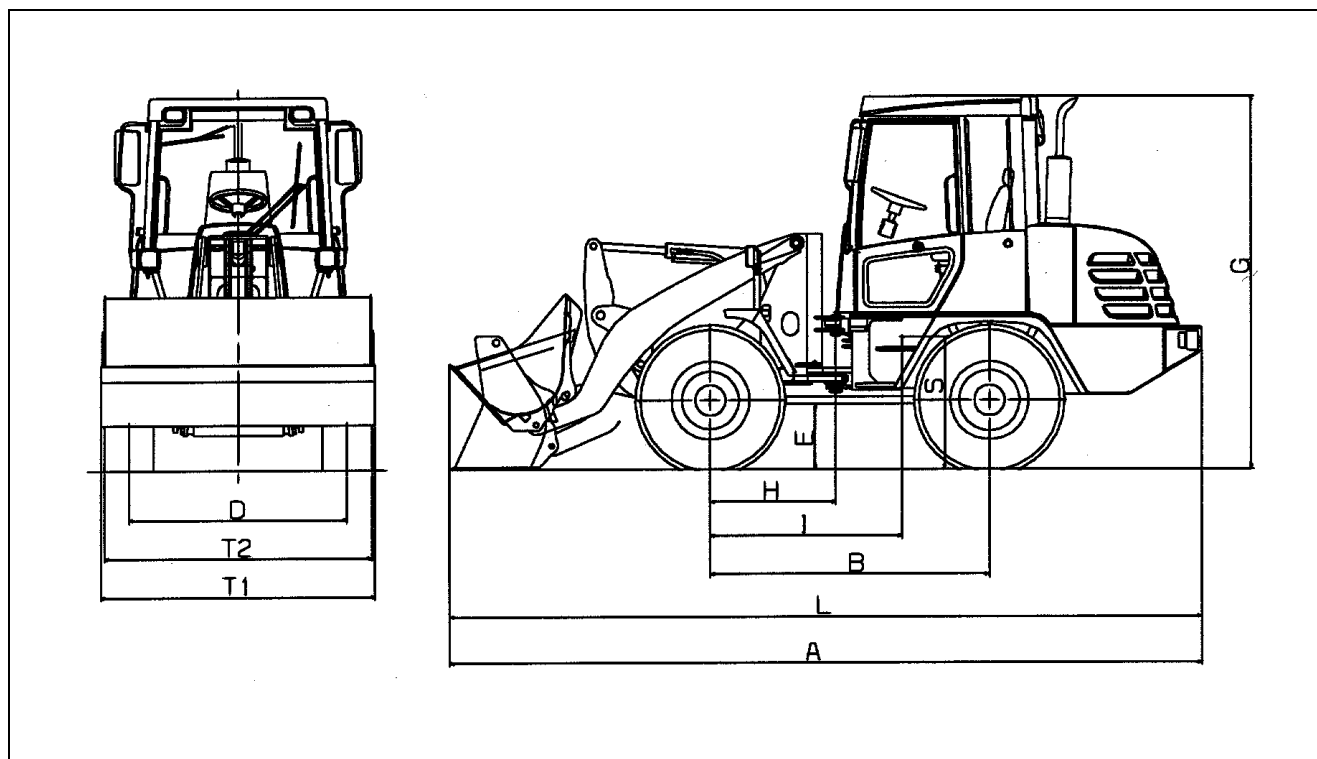

Dimensions, operating data				
	Bucket capacity as per ISO 7546	m ³	0.7	
	Material density	t/m ³	1.8	
	Static tipping weight, straight	kg	3500	
	Static tipping weight, articulated 40°	kg	3050	
	Operating load, forklift *)	kg	1700	
	Breakout force	kN	39.8	
	Lifting capacity on ground	kN	33.3	
	Operating weight *)	kg	4260	
	Turning radius over bucket	mm	4020	
L	Length, bucket in carry-position	mm	5140	
A	Length, bucket on ground	mm	5120	
T1	Width, with bucket	mm	1850	The 0.7 m ³ bucket given in the table is also available with blade attachment.
T2	Width, without bucket (over tires)	mm	1780	
G	Height, including ROPS	mm	2600	Special buckets: 1.0 m ³ light weight material bucket 0.55 m ³ multi purpose bucket
D	Tread, front	mm	1450	
	Tread, rear	mm	1450	
B	Wheel base	mm	1950	These value apply to machines with 335/80R18 tires.
H	Distance, pivot center - front axle	mm	900	
E	Ground clearance, axle/distributor gear	mm	300	
	Ground clearance, drive shaft	mm	430	
S	Center of gravity, height over axle-center	mm	420	*) Machine without additional counterweight.
I	Center of gravity, distance to front axle	mm	1340	